 




# Pyramid Range Hood

*User's Manual*

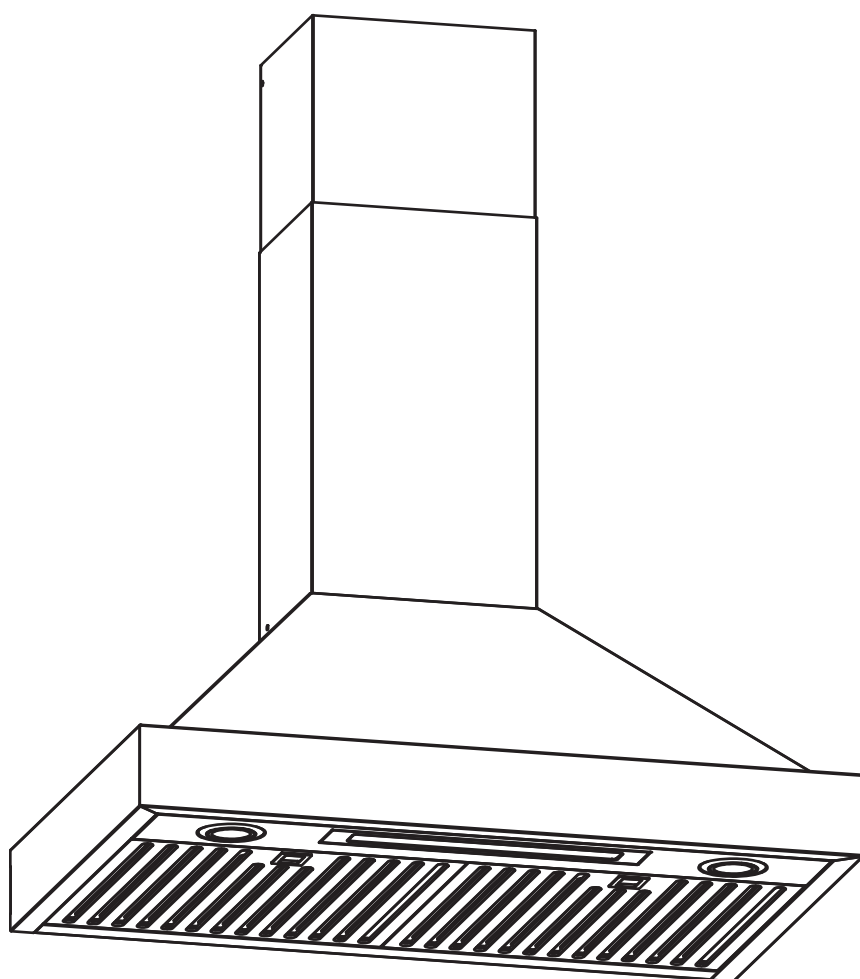

Model MCSRH30PS MCSRH36PS

**PLEASE READ THIS MANUAL CAREFULLY BEFORE USING YOUR PYRAMID RANGE HOOD AND KEEP IT FOR FUTURE REFERENCE.**



## PRODUCT REGISTRATION

Thank you for purchasing a Magic Chef® product. The first step to protect your new product is to complete the product registration on our website: [www.mcappliance.com/register](http://www.mcappliance.com/register). The benefits of registering your product include the following:

1. Registering your product will allow us to contact you regarding a safety notification or product update.
2. Registering your product will allow for more efficient warranty service processing if warranty service is required.
3. Registering your product could act as your proof of purchase in the event of insurance loss.

Once again, thank you for purchasing a Magic Chef® product.

**⚠ WARNING:** This product can expose you to chemicals including nickel, which is known to the State of California to cause cancer. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

TABLE OF CONTENTS

WALL HOOD INSTALLATION ..... 4

 
DUCTING ..... 6

MOUNTING DIRECTIONS ..... 7





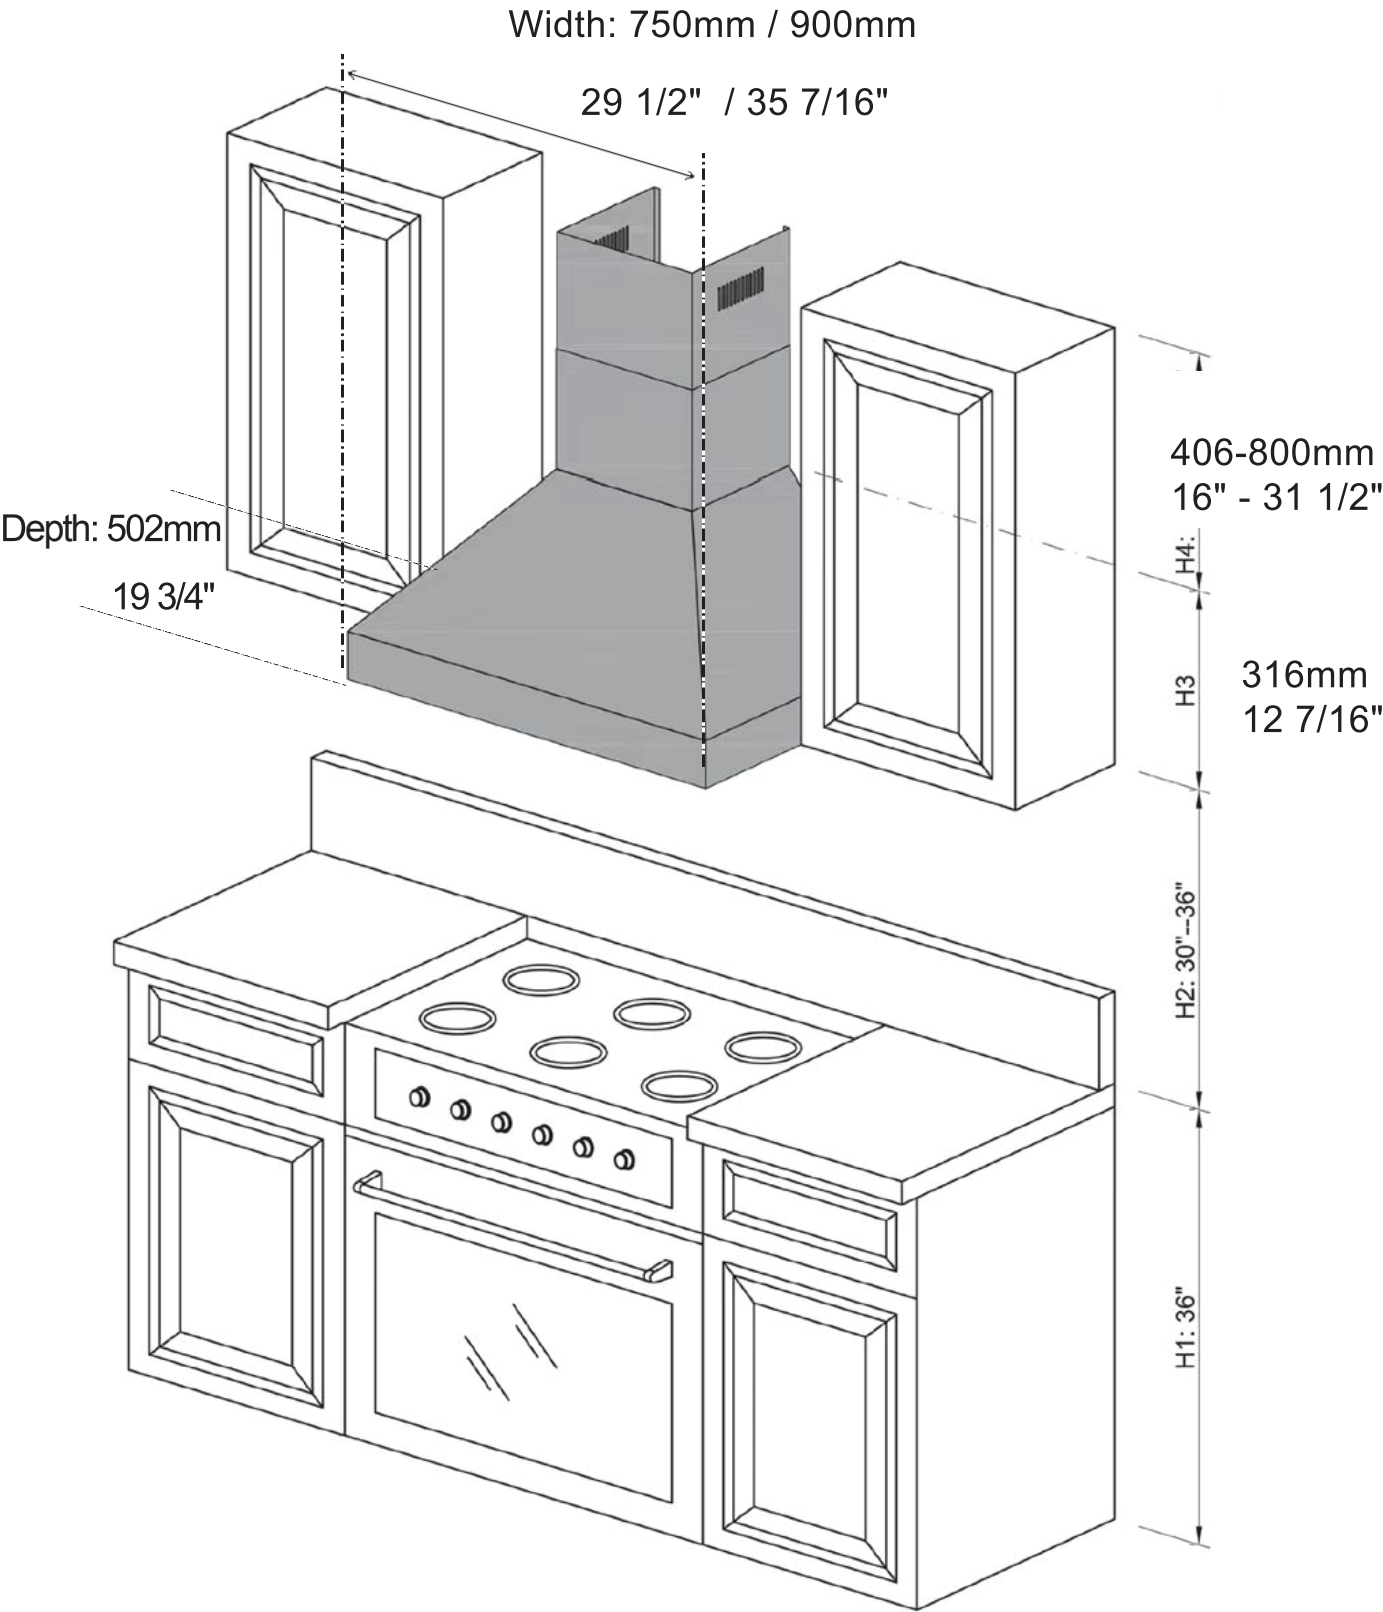


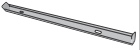
OPERATION ..... 9

LIMITED WARRANTY .....10

# WALL HOOD INSTALLATION




Unpack your range hood upon delivery and inspect to ensure all parts are included:

Main hood with lights and button panel pre-installed	
Adjustable chimney covers (two 16" telescoping pieces)	
Anchor x 2 (B)	
Screw x 2 (C)	
Washer x 2 (D)	
Screw x 4 (E)	
Soft telescoping ducting (length 200mm- 1500mm) x 1	
Upper Chimney Bracket	


## DUCTING

- A soft telescoping ducting (length 200mm- 1500mm) is provided with your range hood. But it's recommended to use solid ducting made of galvanized steel for the lowest noise and highest flow.
- Use a maximum of 40' of ductwork. Try to minimize the use of elbows.
- You must establish a minimum of 12" of vertical airflow from the top of the hood before executing any 90° turn. No more than 3 elbows are allowed; each 90° turn you make equates to 5' lost when accounting for the maximum 40'.
- Do not use any reducers on ducting smaller than the appropriate diameter (6" or 8").
- Any existing or additional dampers should be inspected for proper operation.

### EXAMPLES OF PROPER AND IMPROPER DUCTING:

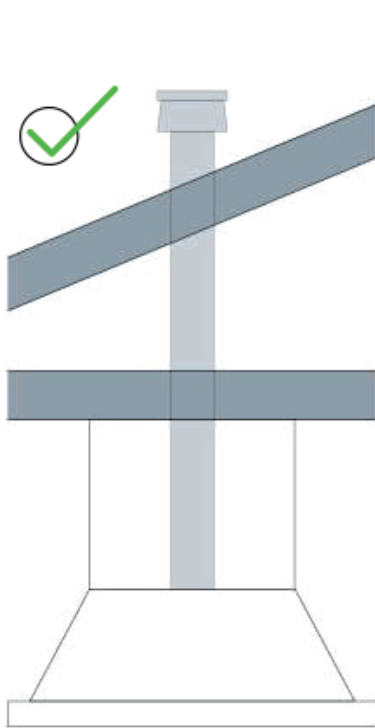


Direct unobstructed path

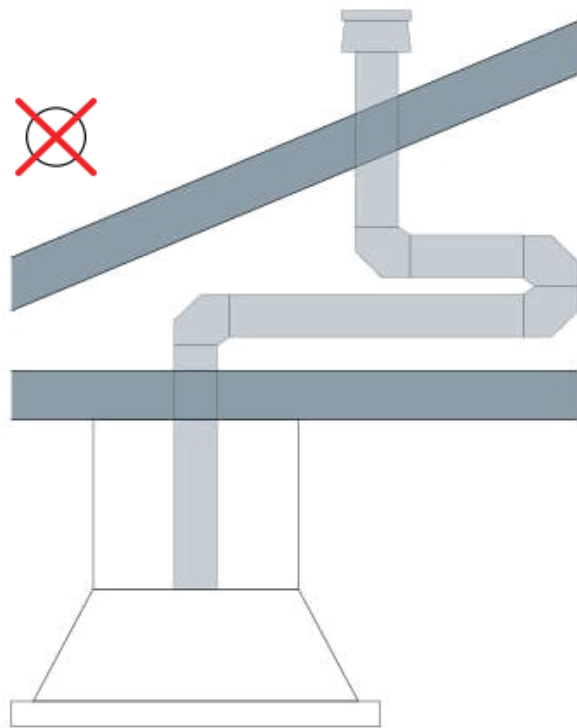


Indirect path with too many elbows

## MOUNTING DIRECTIONS


1. Based on the width of your hood, measure to find the center of the wall. Mark a line and measure to the left and right to find your two mounting points. Make sure the mounting points are level and mark the two points with a pen. It is recommended to install the hood into wood supports to hold the weight of the hood. *Figure 1*
2. Drill holes into each mounting point with a suitable sized bit. Tap 2 anchors (B) into the holes, then fasten 2 mounting screws (C) and washers (D), making sure to leave the screw heads out roughly 1/4" in order to mount the hood. *Figure 2*
3. Using at least two people, mount the main body of the hood onto the two screws and slide into place. *Figure 2*
4. Mount the top chimney mounting bracket near the ceiling by drilling two holes, tapping 2 anchors (B) into the wall and then securing with 2 screws (E). Make sure the chimney bracket is centered and level above the hood. *Figure 3*

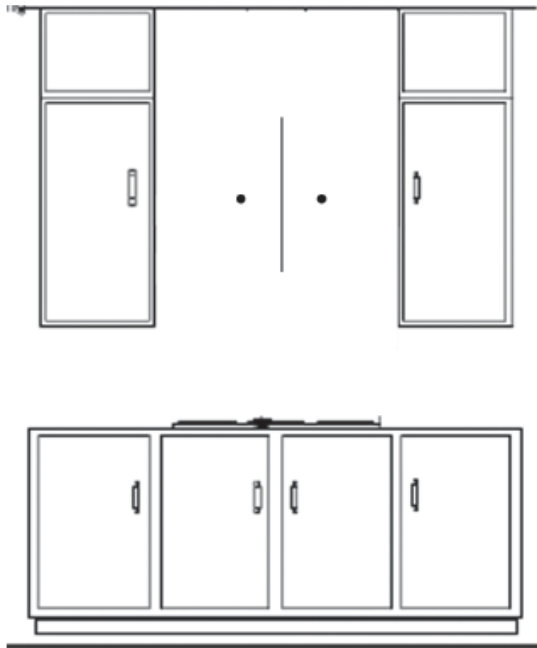

*Figure 1*

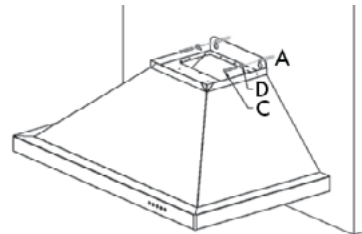


*Figure 2*

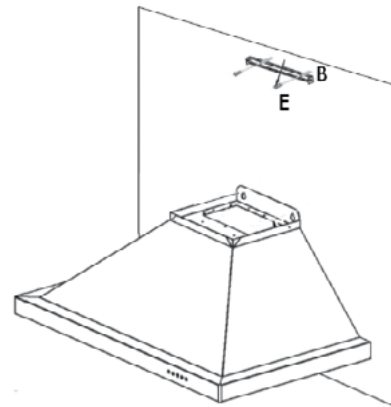


*Figure 3*

5. Secure your ducting connection to the transition piece using foil-backed tape to hold into place at the top of the hood. Minimize the use of elbows; more elbows and longer runs create higher static pressure.
6. The hood comes with a grounded 3-prong plug that must be plugged into a dedicated 15-amp circuit. The cord is 36" long. *Figure 5*

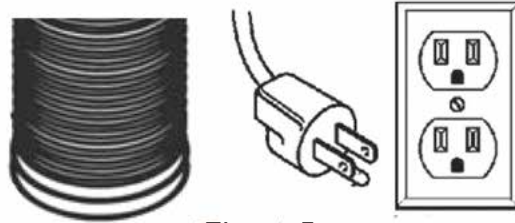


*Figure 5*

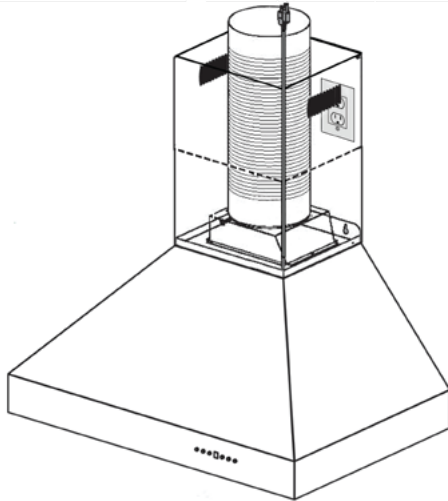

**NOTE:** Run the electrical cord up the chimney, outside of the ducting, and plug into a dedicated power outlet on the wall or in the attic. An outlet behind the chimney, to either the left or right, is ideal. *Figure 6*

7. Install the two-part telescoping chimney on top the hood. Slide the inside section up until the vertical vent slots are visible, then attach the top portion to the mounting bracket with 2 screws (E).

**NOTE:** Screw (E) noted below was installed earlier in step 4. *Figure 7*

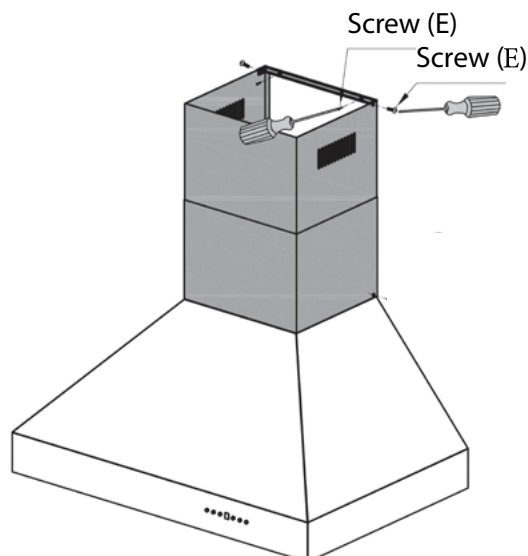


*Figure 7*

**NOTE:** Some existing home installations may already have an external damper at the exit point of the home. In this case, the damper in the transition piece of your range hood needs to be removed, as these two dampers work against each other and will reduce the performance of the range hood.



# OPERATION

## BUTTON FUNCTIONS

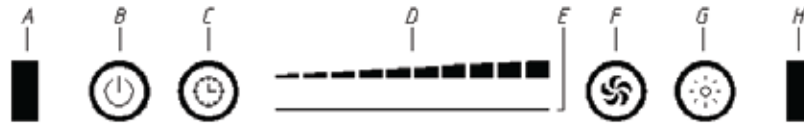

- A - H: Infrared sensing zone
- B: Power On/Off
- C: Delay Timer
- D: Fan Speed Display
- E: Fan Speed Adjustment
- F: Fan
- G: Light

Infrared sensing: Motioning your hand from A to H (infrared sensing zone) will activate the control panel. When activated the control panel will flip down and the motor will turn on automatically. The speed by default will be on level two and the LED lights will also turn on.

Motion from H to A to turn the range off. The control panel will automatically flip up when turned off or in stand by mode.

Power: Turn ON/OFF the range hood

Delay Timer: Turn the hood on at any speed and press the Delay Timer Button, then swipe fan speed adjustment area to set the time. Each bar equates to 5 minutes(Max time can be set is 50 minutes). When the set time is reached, the fan will turn off.

Fan: Press Fan Button then swipe gear adjustment area to set the speed. The gear display will indicate speed of fan.


### 600CFM Max Airflow Switch

Within 10 seconds after powering on, press and hold the Fan button (F) for 3 seconds, the gear display will display 6 gears for 2 seconds, indicating a 600CFM fan speed.

Default is 600CFM

Light: Turn ON/OFF

Note: The infrared sensing function is enabled by default. In the shutdown state, pressing and holding the Delay Timer button (C) for 3 seconds can turn off and on the infrared sensing function. If the Delay Timer button (C) light stays on for 3 seconds and turns off, the infrared sensing function will be turned on. If the Delay Timer button (C) light flashes 3 times, the infrared sensing function will be turned off.

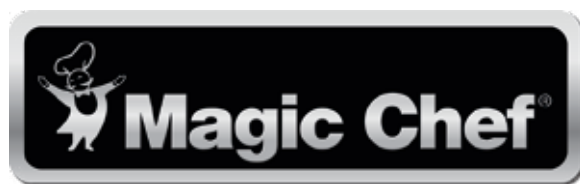

## LIMITED WARRANTY

MC Appliance Corporation warrants each new Pyramid Range Hood to be free from defects in material and workmanship, and agrees to remedy any such defect or to furnish a new part(s), at the company's option, for any part(s) of the unit that has failed during the warranty period. Parts and labor expenses are covered on this unit for a period of one year from the date of purchase. A copy of the dated sales receipt/invoice is required to receive warranty service, replacement or refund.

This warranty covers appliances in use within the contiguous United States, Alaska, Hawaii and Puerto Rico. This warranty does not cover the following:

- Damages due to shipping damage or improper installation.
- Damages due to misuse or abuse.
- Content losses due to failure of the unit.
- Repairs performed by unauthorized service agents.
- Service calls that do not involve defects in material and workmanship such as instructions on proper use of the product or improper installation.
- Replacement or resetting of house fuses or circuit breakers.
- Failure of this product if used for other purposes than its intended purpose.
- Disposal costs for any failed unit not returned to our factory.
- Any delivery/installation costs incurred as the result of a unit that fails to perform as specified.
- Expenses for travel and transportation for product service if your appliance is located in a remote area where service by an authorized service technician is not available.
- The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.
- Refunds for non repairable products are limited to the price paid for the unit per the sales receipt.
- This warranty is non transferable. This warranty applies only to the original purchaser and does not extend to any subsequent owner(s).


### Limitations of Remedies and Exclusions:

Product repair in accordance with the terms herein, is your sole and exclusive remedy under this limited warranty. Any and all implied warranties including merchantability and fitness for a particular purpose are hereby limited to one year or the shortest period allowed by law. MC Appliance Corporation is not liable for incidental or consequential damages and no representative or person is authorized to assume for us any other liability in connection with the sale of this product. Under no circumstances is the consumer permitted to return this unit to the factory without the prior written consent of MC Appliance Corporation.

Some states prohibit the exclusion or limitation of incidental or consequential damages, or limitations on implied warranties. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Model	Parts	Labor	Type of Service
MCSRH30PS MCSRH36PS	One Year	One Year	At Home / Carry-In

For Service or Assistance please call **888-775-0202** or visit us on the web at **[www.mcappliance.com](http://www.mcappliance.com)** to request warranty service or order parts.

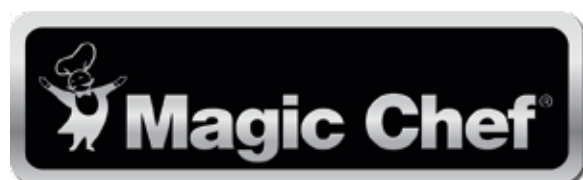

**CNA International, Inc. d/b/a MC appliance Corporation. all rights reserved.  
Magic Chef® logo is a registered trademark of CNA International, Inc.**