

99761

INSTRUCTIONS

READ AND UNDERSTAND INSTRUCTIONS BEFORE ATTEMPTING TO OPERATE OR SERVICE CORD REEL.

CAUTION:

For indoor use only. Fully extend cord before using light. Do not allow plug/lamp to lay on floor. Do not use this device where explosion proof cord reels and/or lamps are required. Do not use this device under or around vehicles where explosive fumes and/or liquids may be present. Do not immerse reel, cord or plug/lamp into water or other liquids. Do not allow cord to retract by itself, as damage to cord end fitting may occur from excessive rewind speed. Do not use solvents (gasoline, paint thinner etc.) to clean any part of this device, reference how to clean in "maintenance" section.

MOUNTING INSTRUCTIONS (HOOK FOR CEILING-MOUNT):

- 1. Make sure the hook is anchored into a stud or a solid surface
- 2. Hang the reel by putting the hook thru the eye bolt on the top side of the cord reel.
- 3. Close the hook with pliers to prevent reel from sliding off the hook
- 4. Test the rigidity of the hook before using.

MOUNTING INSTRUCTIONS (BRACKET FOR CEILING-MOUNT OR WALL-MOUNT):

- 1. Make sure the bracket is anchored into a stud or a solid surface with the supplied screws
- Put the cord reel mount in between the bracket and line up the hole on each side of the bracket to the hole on each side of the cord reel mount.
 Push the straight portion of the rod all the way thru the holes on the bracket and the cord reel mount, the cord reel should be held in place by the rod.
- 4. Guide the metal locking wire thru the small pin hole on the end of the rod to prevent the rod from backing out.
- 5. Test the rigidity of the bracket before using.

SLIM LITE INSTALLATION / REMOVAL / OPERATING INSTRUCTIONS:

- 1. Fully insert 5.5mm plug into power port at bottom of Slim Lite. 2. Twist silver locking collet on cord relief clockwise until tightened (~3.5 turns)
- 3. Ensure plug is securely tightened before using. Check tightness of collet periodically.
- Slide switch forward toward LED side to turn light on. Slide switch backwards toward handle side to turn light off.
 Align key way and insert hook base over tip of Slim Lite, the tabs should pop into mounting holes. Rotate and adjust hook direction during use.

CORD RETRACTION INSTRUCTIONS:

CAUTION: To avoid injury to the bystanders, damage to the surrounding objects or the locking outlet, DO NOT let go of the cord when retracting back into the cord reel housing. Always guide the cord back into the cord reel housing slowly with one hand holding the locking outlet. It is recommended to unplug the light or any electrical device from the outlet before retraction of the cord after each use. Pull slightly on the cord to unlock the locking mechanism, when the cord starts to retract, guide the cord slowly with one hand holding the locking outlet feeding it back into the cord reel housing

MAINTENANCE

- 1. Remove dirt and grime as soon as it accumulates on reel and cord by using a soft, damp cloth, being careful not to wet the receptacles on plug. Never immerse any part of the unit in any solution to clean. DO NOT USE solvents such as gasoline, paint, thinner, etc. to clean unit.
- 2. Keep cord clean to assure smooth automatic retraction. Simply pull the cord to its full length and allow the cord to retract through a dampened cloth. Operation can also be enhanced by sprinkling the cord talcum powder.

HARDWARE KIT INCLUDED:

- (1) Ceiling mounting hook (1) U-mounting bracket (1) Locking pin (1) Retainer ring
- (2) Screws

REPLACEMENT COMPONENTS:

99762 Replacement Steelman Slim Lite 60295 Replacement Hook

LIMITED WARRANTY

This product is backed by a one year limited warranty. This warranty covers manufacturer defects and workmanship. The warranty excludes misuse or abuse and normal wear and tear. Exclusion is not allowed in some states and may not apply. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.



MANUFACTURER - JS PRODUCTS

CUSTOMER SERVICE: 1-800-255-7011