Assembly Guide








If you're having any difficulty during assembly of this product, don't hesitate to call us at 1-800-950-4782.

Our customer service experts are trained to provide step-by-step instruction and can easily replace any missing or damaged parts.

Representatives are available Monday-Friday from 8:30 a.m. to 7:30 p.m. (ET)

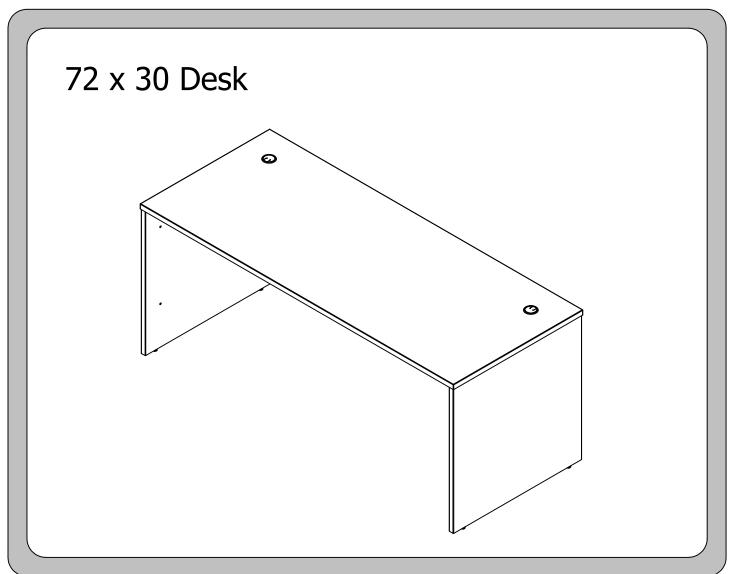

Lot Code #

For best results, keep these tips in mind:

- 1 We know you want to finish this assembly as quickly as possible, but trust us: you'll have a better experience if you take it one step at a time.
- Q Give yourself some room to work near where you want the fully assembled product.
- If your floor isn't carpeted, assemble this product on the empty carton to avoid scratching.
- 4 Do you have a friend who owes you a favor? Some steps may go a little easier with a second set of hands.

DOs

- Use a #2 Phillips head screwdriver (or other handheld tools as indicated)
- Wear safety glasses at all times during assembly
- Carefully follow the instructions in this guide and complete all steps in order
- Give us a call if you're having trouble with a particularly tricky step

DON'Ts

- We know power tools are quick and easy, but you shouldn't use them when assembling this product (unless otherwise specified)
- Never move your furniture with items inside or resting on the surface
- Do not attempt to use this product before all steps have been completed



Watch assembly videos right on your phone or computer!





Some steps include QR codes that link to helpful videos. Watch out for the icon below! Simply open up your smartphone camera to scan the code.

(Users of older smartphones may need to install a QR Reader.)

SCAN HERE



FOR VIDEOS

Or visit https://www.bushbusinessfurniture.com/ CustomerService/HowtoAssemble.aspx

IMPORTANT SAFETY INFORMATION




PLEASE READ WARNINGS

Improper use can cause safety hazards, or damage to your furniture and household items.

Warning	Do	Don't	Why it's important
Serious injury may occur.	Assemble following all instructions using all indicated parts and hardware provided.	 Do not move unit when loaded. Do not load with a television or other heavy equipment. Do not exceed the maximum load limits stated in the instructions. 	Improper assembly, use or loading can lead to product instability, tipover, or collapse.

Advertencia	Hacer	No	Por qué es importante
Pueden producirse lesiones graves.	Realice el montaje siguiendo todas las instrucciones y utilizando todas las piezas indicadas y los herrajes suministrados.	 No mueva la unidad cuando esté cargada. No cargue el mueble con un televisor u otro equipo pesado. No supere los límites máximos de carga indicados en las instrucciones. 	El montaje, uso o carga inadecuados pueden provocar inestabilidad, vuelco o colapso del producto.


Avertissement	À faire	À ne pas faire	Pourquoi c'est important
Peut entraîner des blessures graves.	Assembler en suivant toutes les instructions et en utilisant toutes les pièces et la quincaillerie incluses.	 Ne pas déplacer le meuble lorsqu'il est chargé. Ne pas charger le meuble avec un téléviseur ou tout autre équipement lourd. Ne pas dépasser les limites de poids maximales indiquées dans les instructions. 	Un assemblage, une utilisation ou un chargement incorrects peuvent entraîner l'instabilité, le basculement ou l'effondrement du produit.

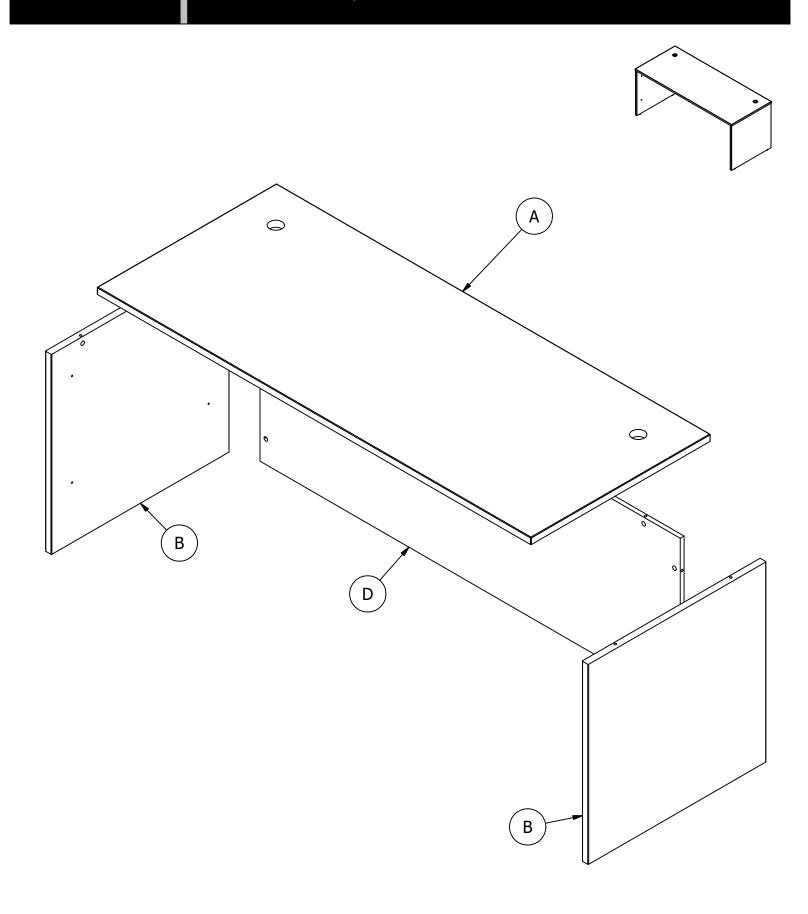


Fasteners are shown actual size.






 


 



Hardware not to scale.

 





 


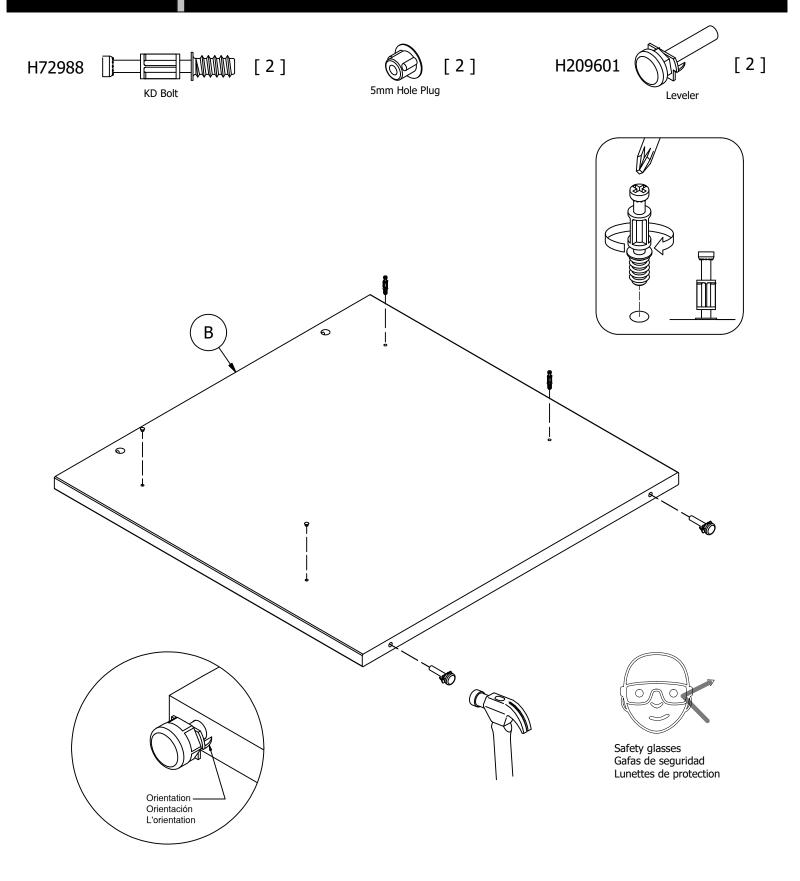


 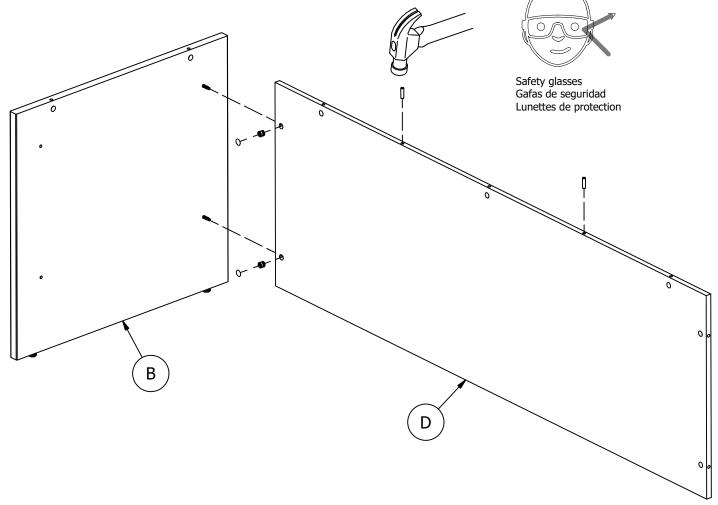


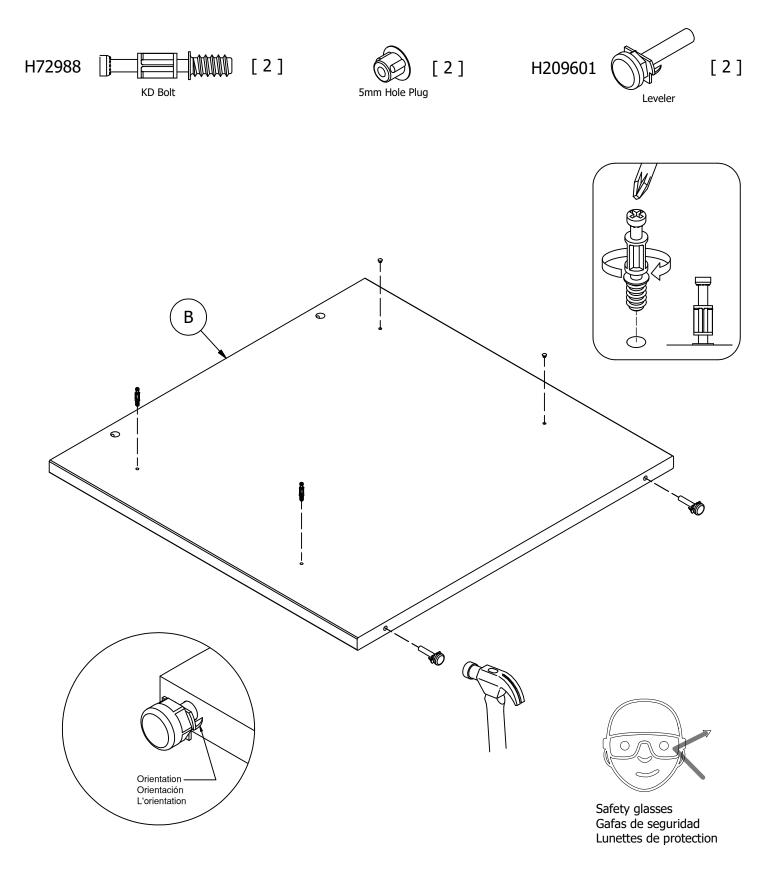



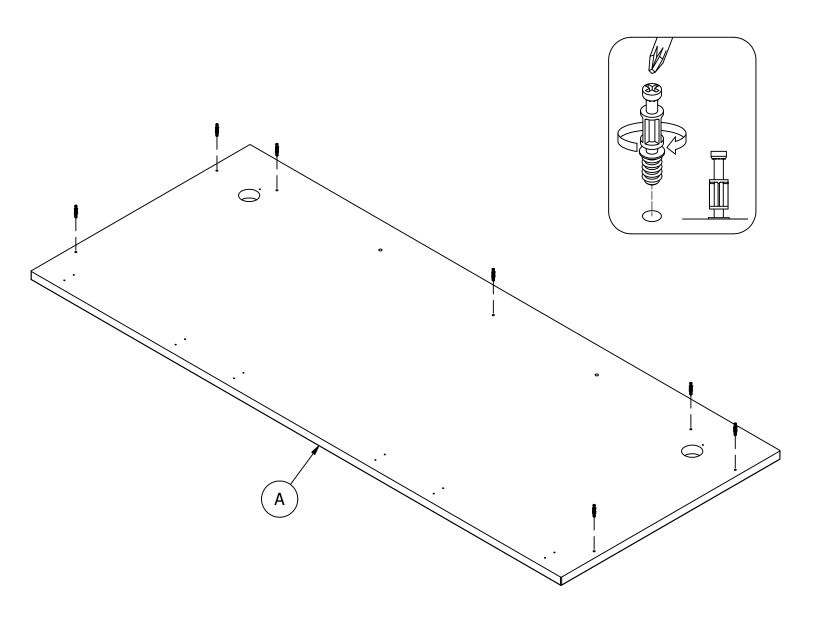

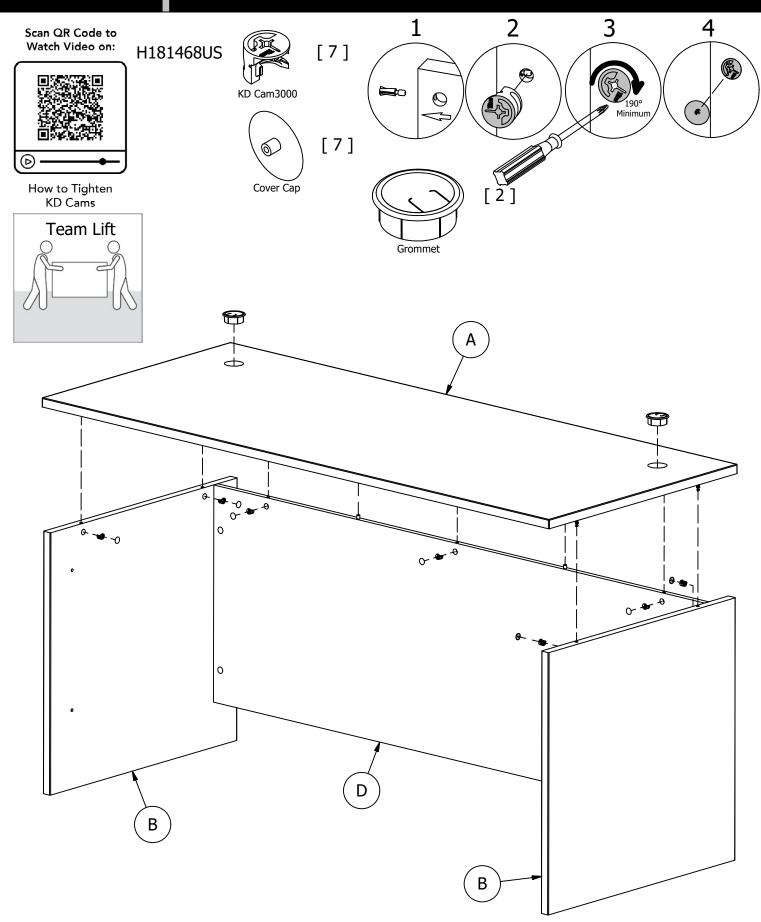

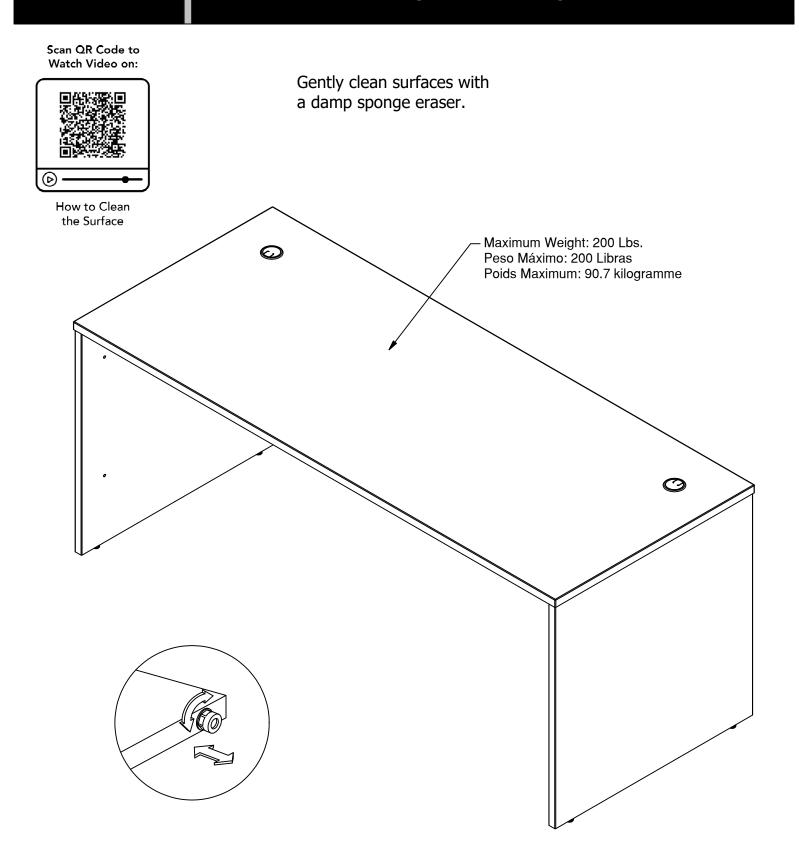

Congratulations! You are all done. If you have any questions or concerns, please call.

WC12936

[1] W206129 Α

[2] W206134 В

W177064 [1] D

H63904

5mm Hole Plug

[4]

H118700



Cover Cap

[11]

WC24436

W206124 [1] Α

[2] W206135 В

W177066 [1] D

H92523

[4]

H118700



[2]

H92521

H73621

[11] Cover Cap

WC36736

5mm Hole Plug

W206131 [1] Α

[2] W206136 В

W177068 [1] D

H107309

H118700 [4]



[2]

H107306





5mm Hole Plug

WC72436

[1] W206133 Α

[2] W206135 В

W177066 [1] D

H92521



[11]

[11]

H92523



[4]

5mm Hole Plug

H118700



[2]

SCD272HC

- A [1] W206124
- B [2] W206139
- D [1] W176084

H95137 (6)



H96110



[4]

H118700 [2]

SCD272WH

A [1] W206128

 
B [2] W206143

D [1] W191873

H184428



H184440



H73619

H92521



[11]

Cover Cap

SCD272SG

A [1] W206126

B [2] W206141

D [1] W189320

H92523



[4]



[2]

SCD272BW

[1] W205518 Α

[2] W205519 В

W191812 [1]D

[11] H191633

Cover Cap

H63904



H118700



SCD272MH

[1] W205520

[2] W205521 В

[1] W193108 D

H83021

Cover Cap

[11]

H112099



5mm Hole Plug

H151406



[2]

SCD272NE

[1] W216001 Α

[2] W215994 В

[1] W215998 D

H216046



[11]

H216047



[4]

H216048



[2]

SCD272PG

[1] W206125 Α

[2] W206140 В

[1] W191639 D

H83021



 
H112099



[4]

5mm Hole Plug

H151407



[2]