


Dresser

IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

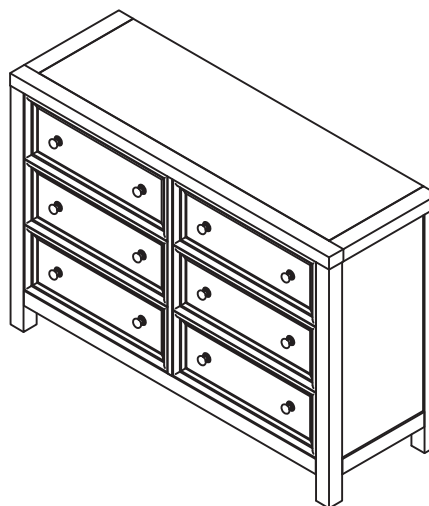

Part List

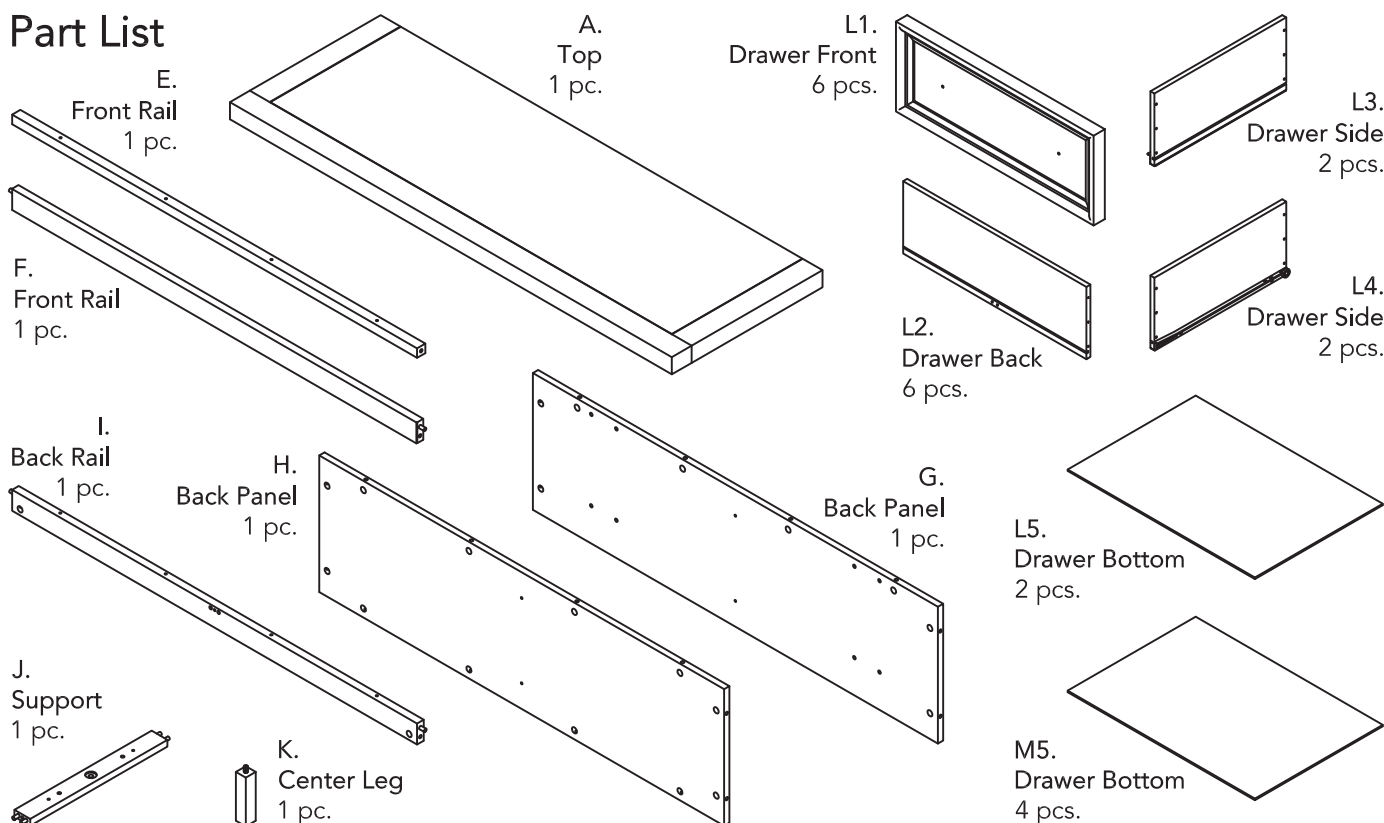


Hardware List



Cam Lock Screw
40 pcs. (+4 extra)



 Cam Lock
40 pcs. (+4 extra)



1 1/4" Round Head
Screw (M4x32)
6 pcs. (+1 extra)



1 1/4" Flat Head
Screw (M3x32)
90 pcs. (+1 extra)



3/4" Flat Head
Screw (M3x19)
36 pcs. (+1 extra)



Handle
12 pcs.



Machine Screw
(M4"x1")
12 pcs.



Wooden Dowel
2 pcs. (+1 extra)


Carton 20 05420 0432 is also needed for assembly.

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/10

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.

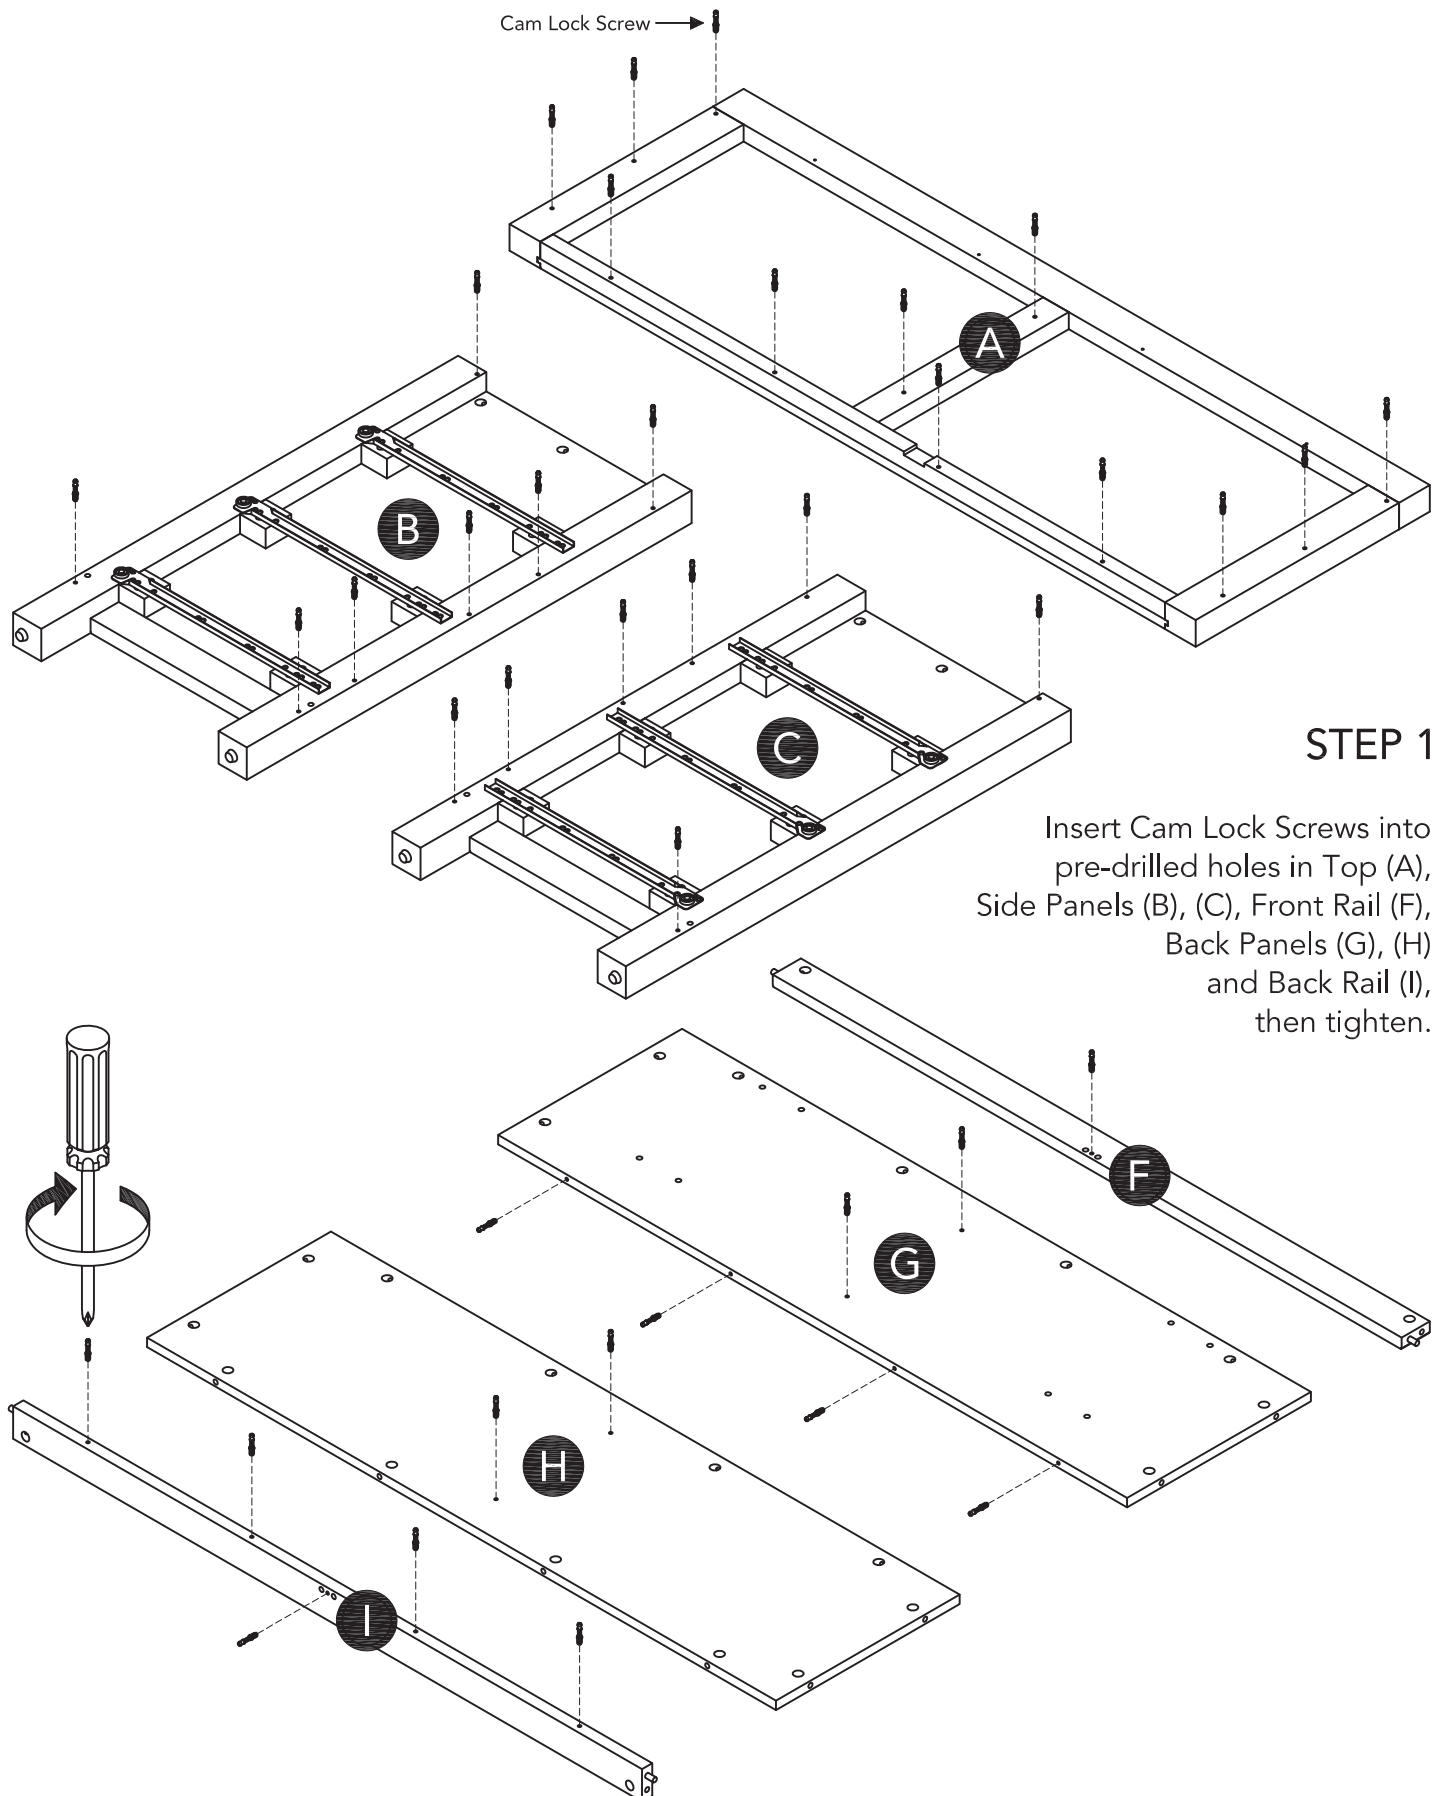

STEP 2

Attach Back Panel (G) and Back Rail (I) to Back Panel (H) with Cam Locks. (See Figure 1)



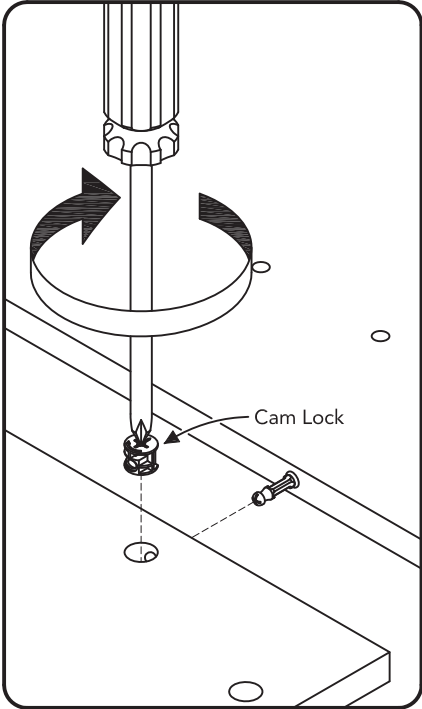


Figure 1

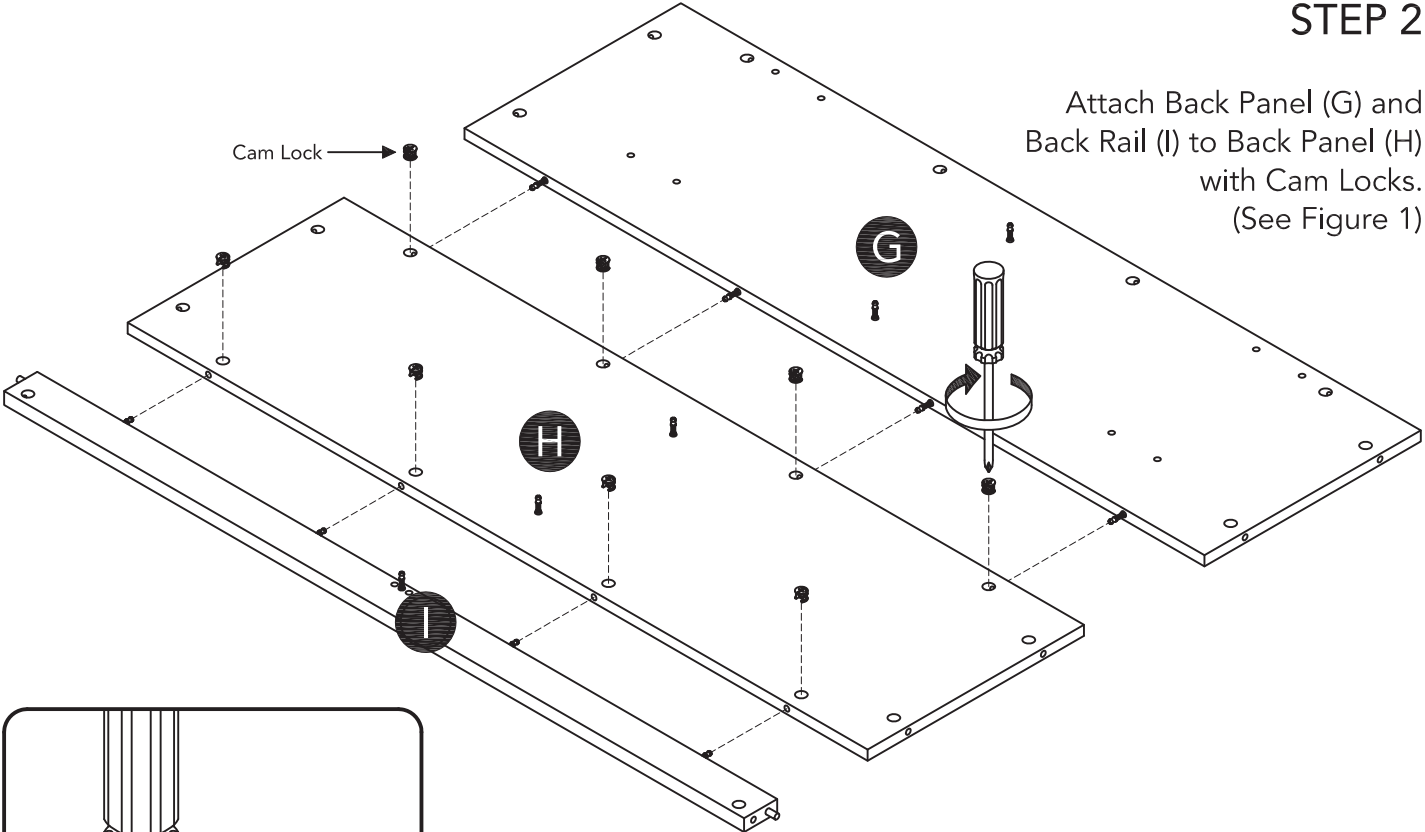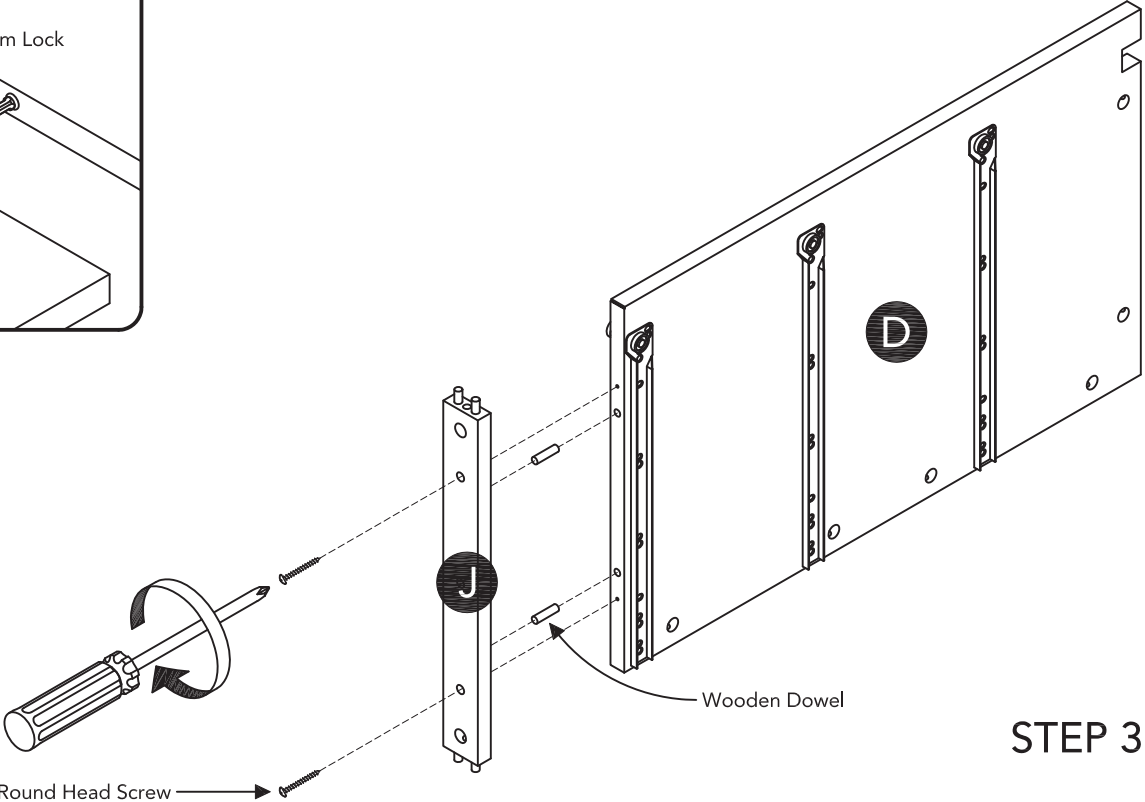

STEP 3


Attach Support (J) to Middle Panel (D) with 1 1/4" Round Head Screws and Wooden Dowels.

Assembly Instructions 4/10

STEP 4

Attach unit from Step 3 to unit from Step 2 with Cam Locks.

Attach Front Rail (F) to unit with Cam Lock.

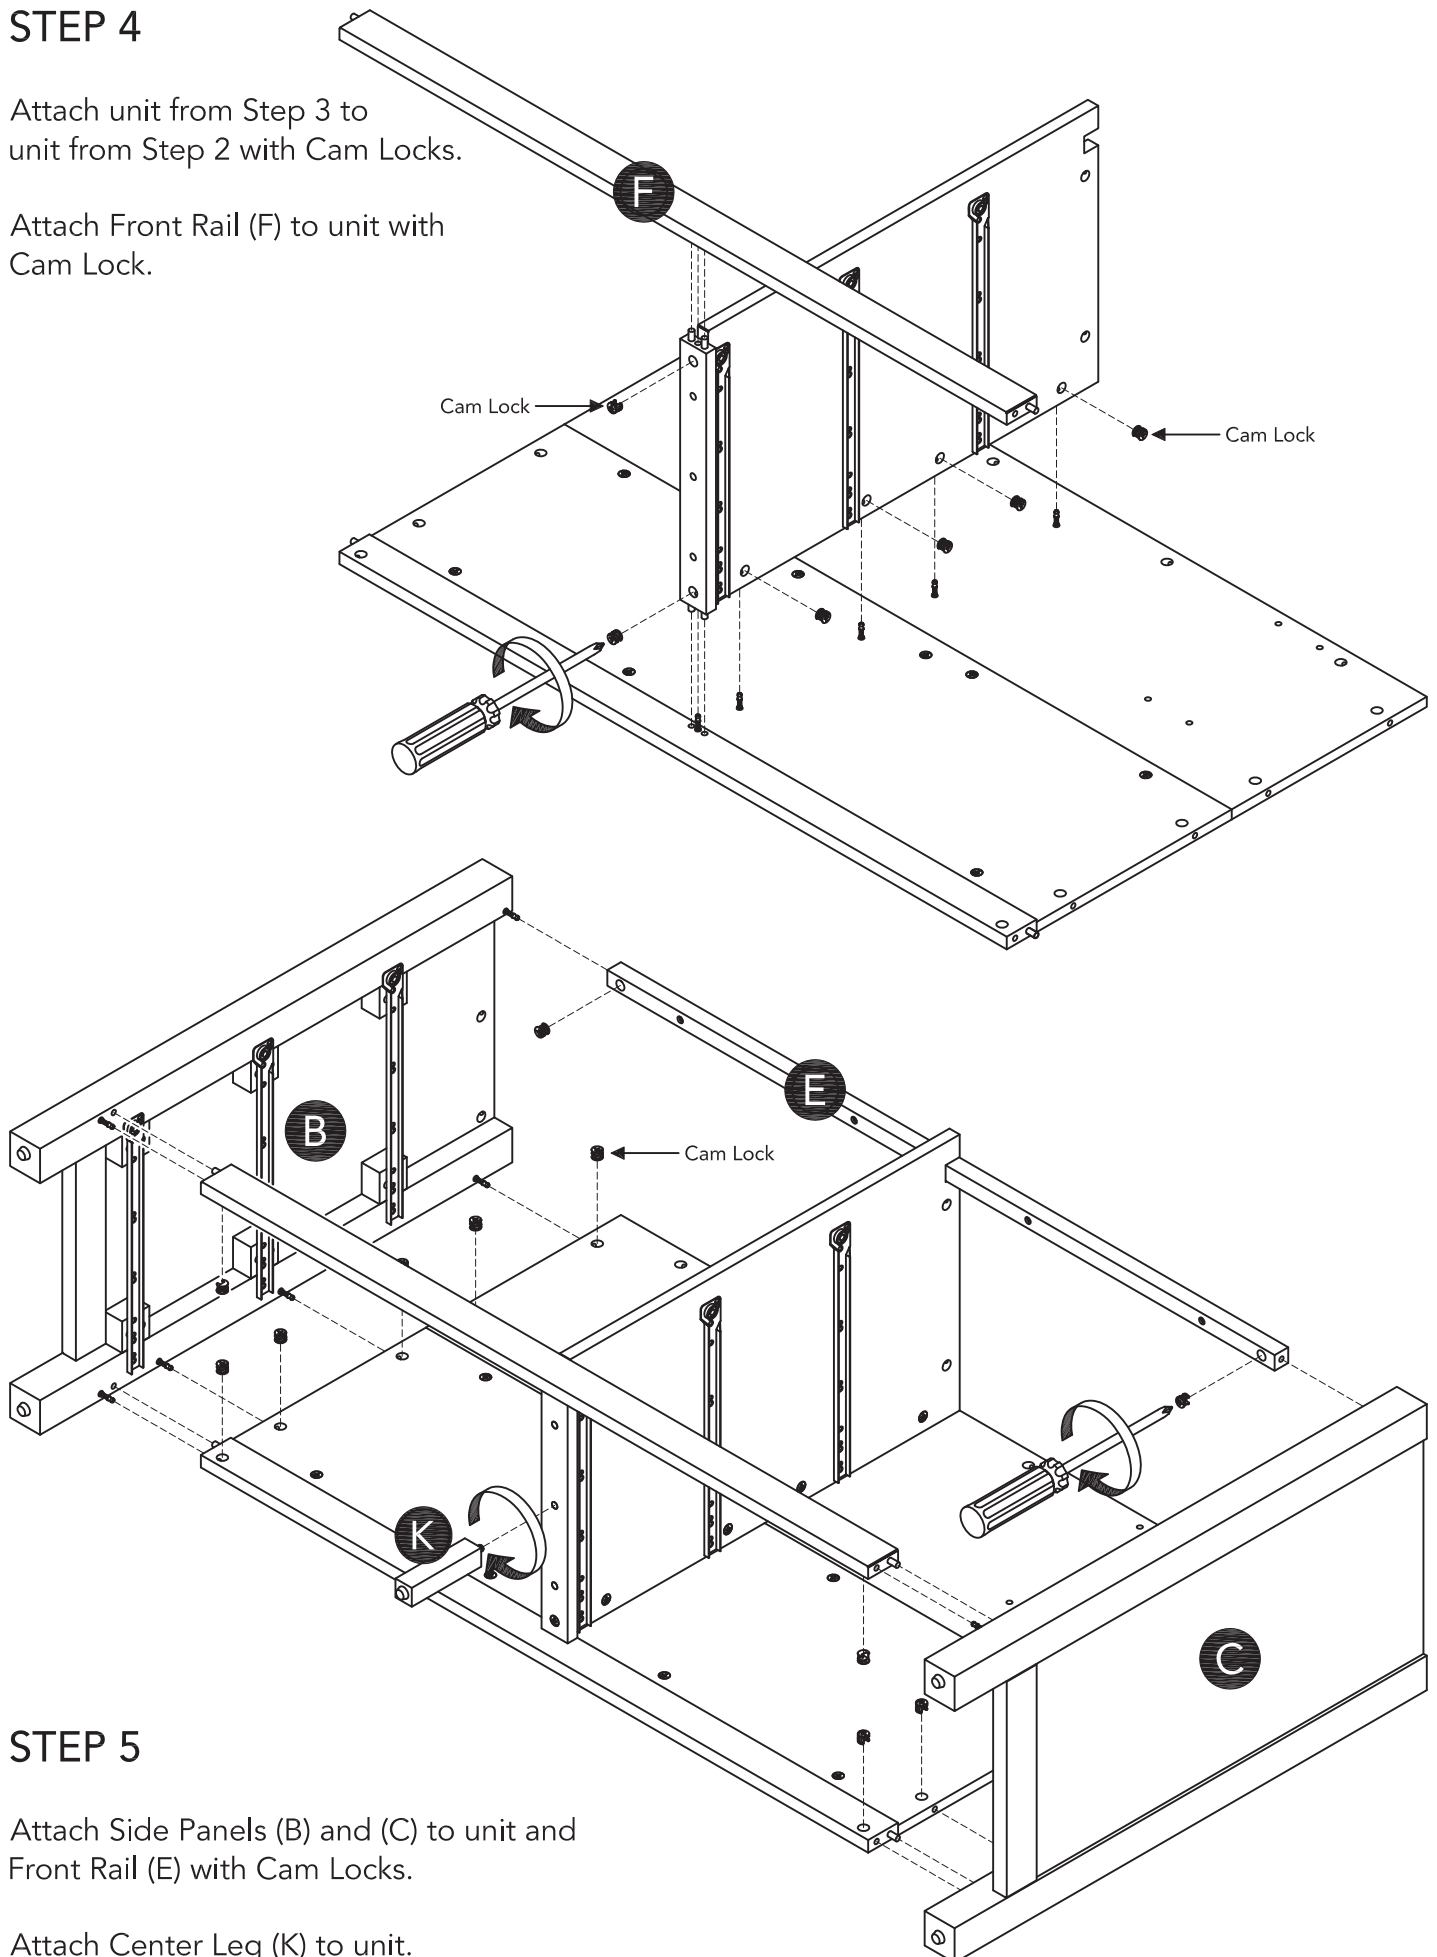

STEP 5

Attach Side Panels (B) and (C) to unit and Front Rail (E) with Cam Locks.

Attach Center Leg (K) to unit.

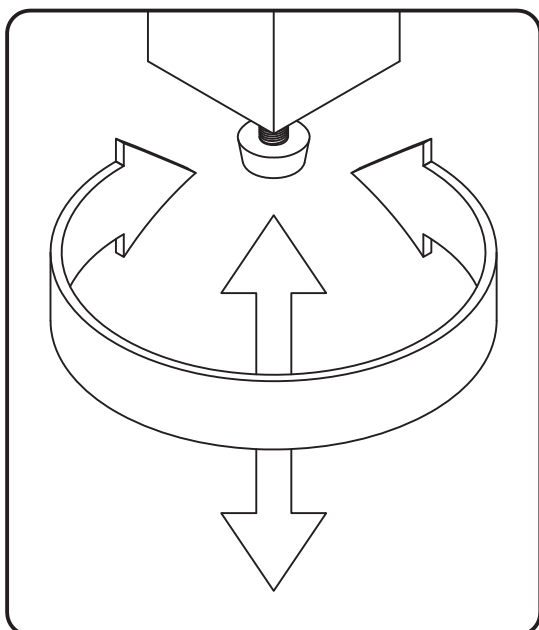
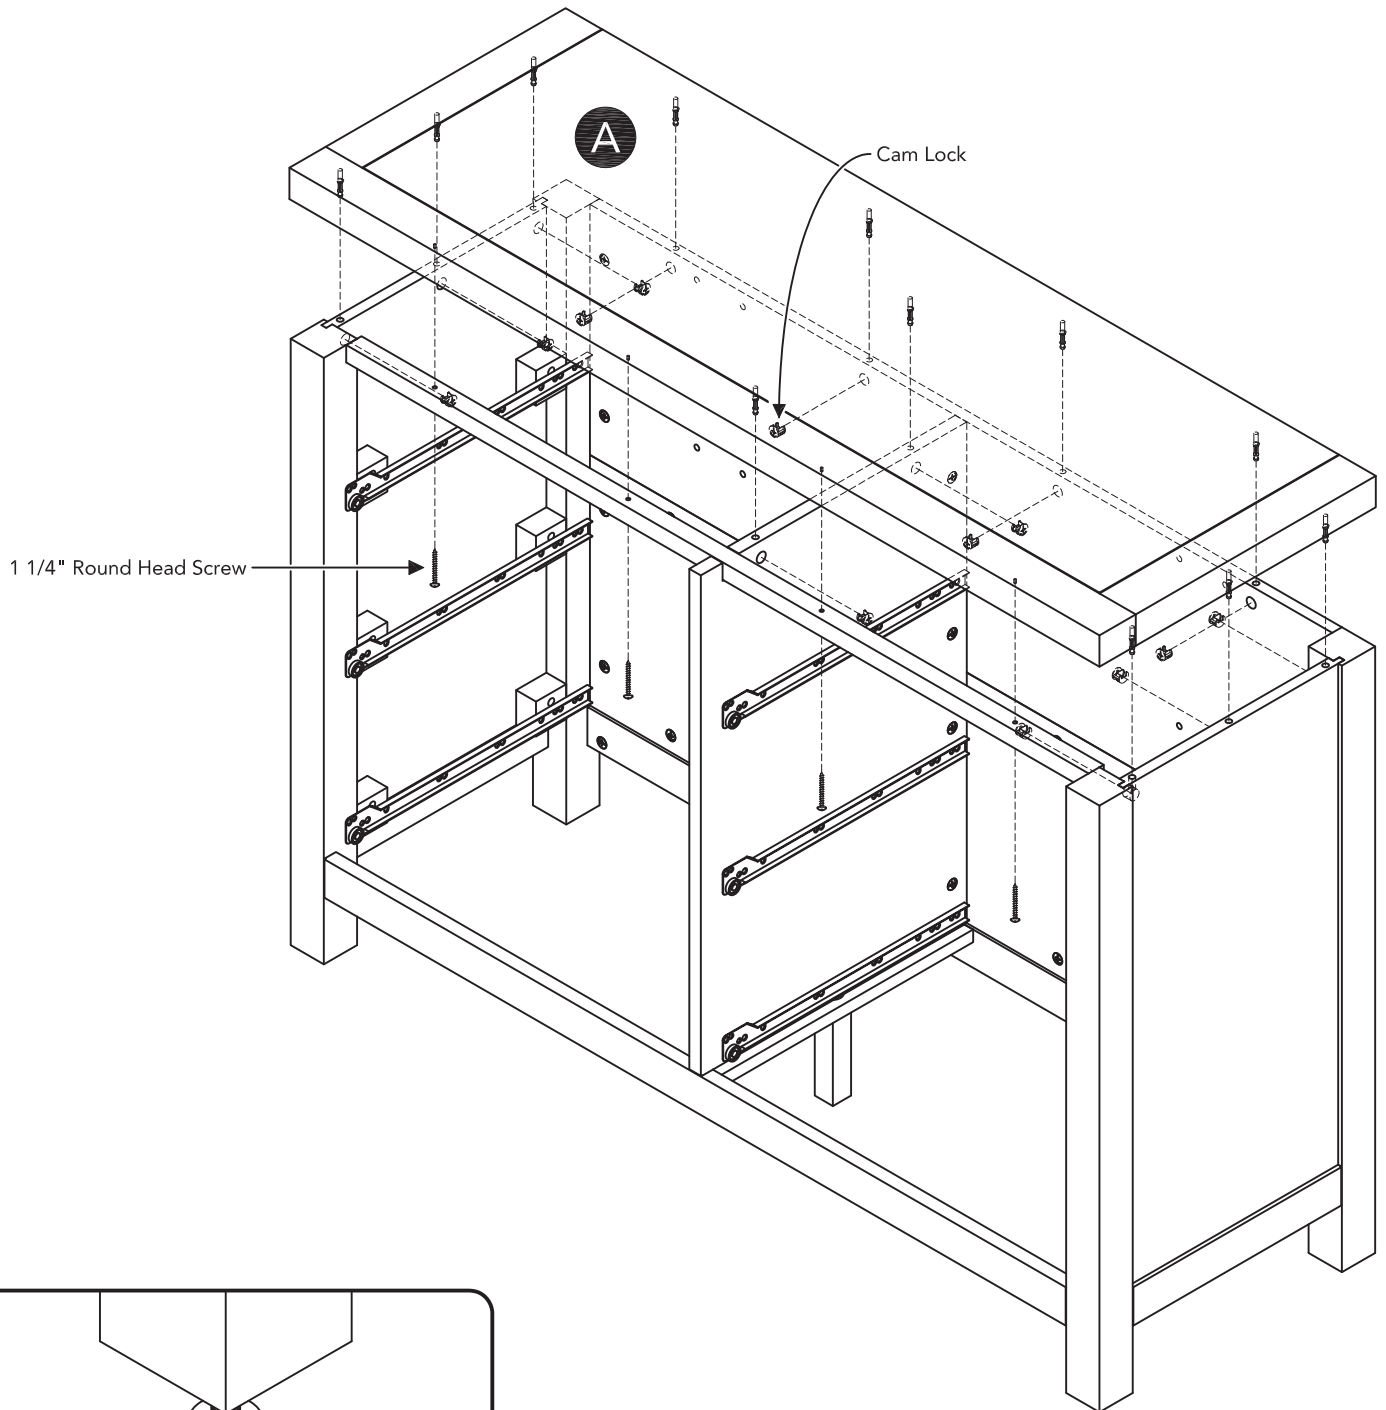


Figure 2

STEP 6

Attach Top (A) to unit with Cam Locks and 1 1/4" Round Head Screws.

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 2)

Note: Unit must be level to work properly.

Assembly Instructions 6/10

IMPORTANT

- To help reduce the risk of the unit tipping over, the Tip-over Restraint must be installed following these instructions exactly.

STEP 7

Place unit at desired location.

Mark wall with pencil just above and in-line with hole in Top (A). (See Figure 3)

Move unit.

Drill a 3/8" hole in wall 2 1/2" below mark.

Insert Anchor into the wall hole and attach Tip-over Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 4)

Move unit back into place and insert Tip-over Restraint into unit through hole in Top (A). (See Figure 5)

Attach Tip-over Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 6)

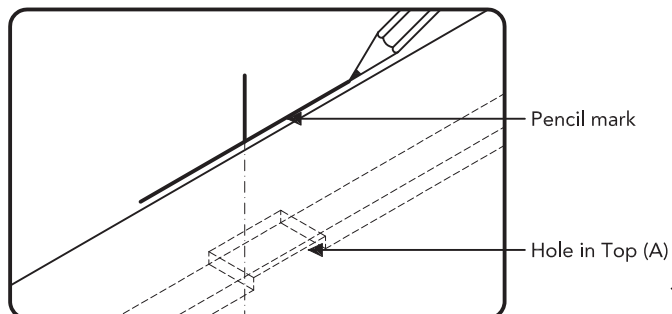
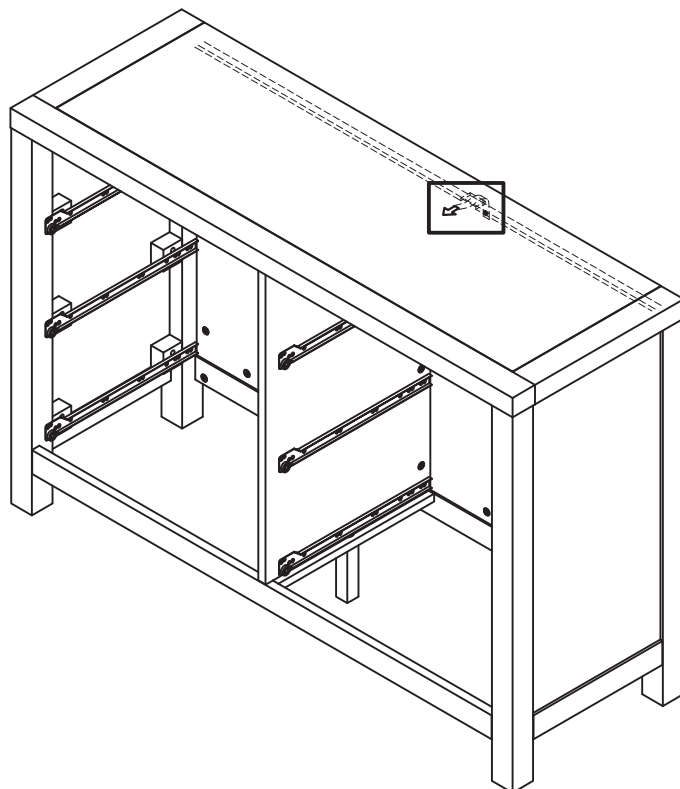


Figure 3

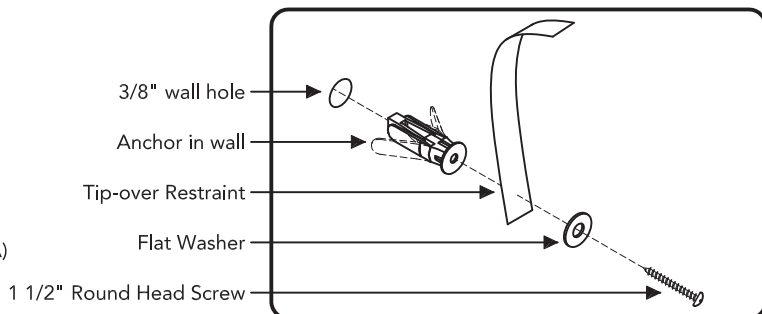


Figure 4

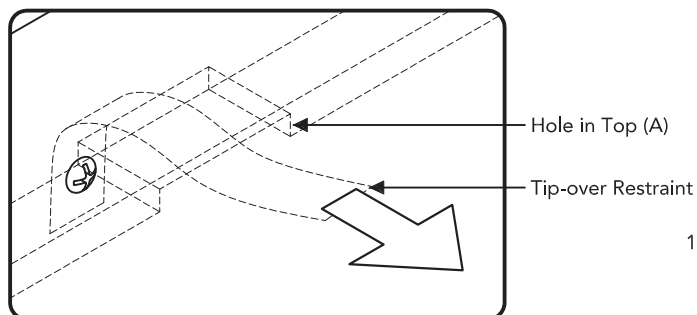


Figure 5


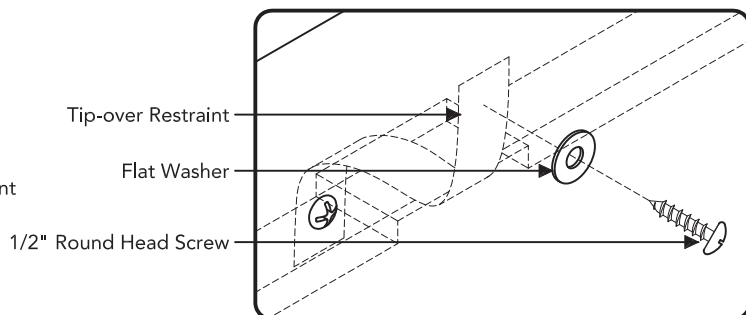


Figure 6

 Hardware List



Tip-over Restraint
1 pc.



Anchor
1 pc. (+1 extra)



(M3x38)
1 1/2" Round Head Screw
1 pc. (+1 extra)




(M3x13)
1/2" Round Head Screw
1 pc. (+1 extra)



Flat Washer
2 pcs. (+1 extra)

Assembly Instructions 7/10

Drawer (L)

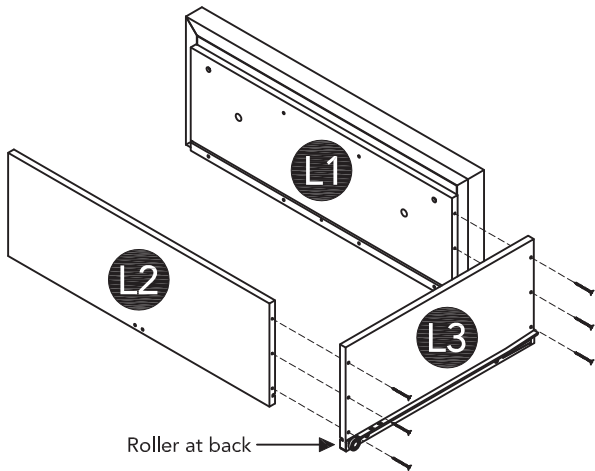

1 1/4" Flat Head Screw

STEP 8


Attach Drawer Side (L3) to Drawer Front (L1) and Drawer Back (L2) with 1 1/4" Flat Head Screws.

STEP 9

Insert Drawer Bottom (L5) into groove.



Attach Drawer Side (L4) to unit with 1 1/4" Flat Head Screws.

1 1/4" Flat Head Screw

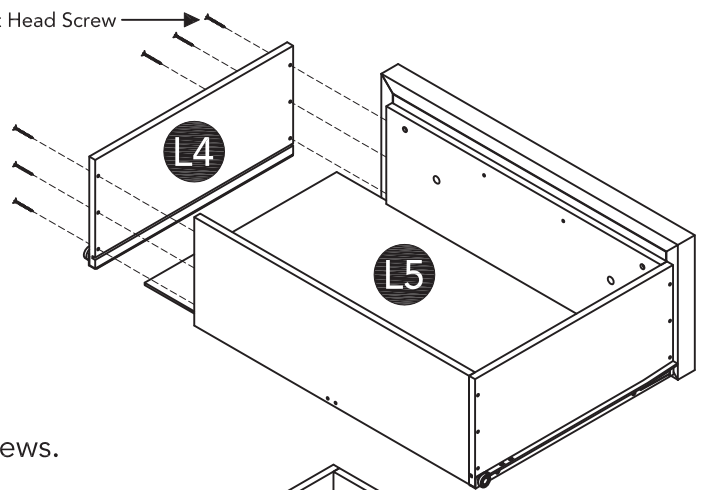

STEP 10

Attach Support (L6) to unit with 1 1/4" Flat Head Screws.

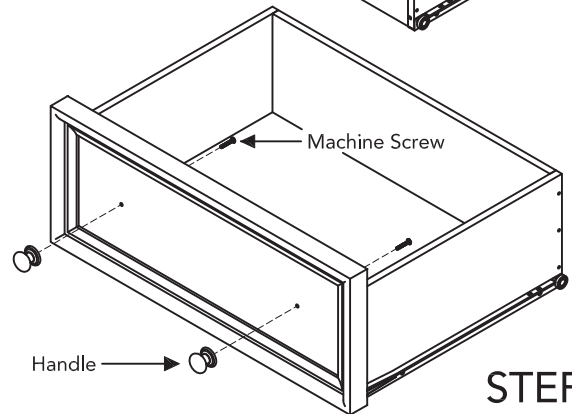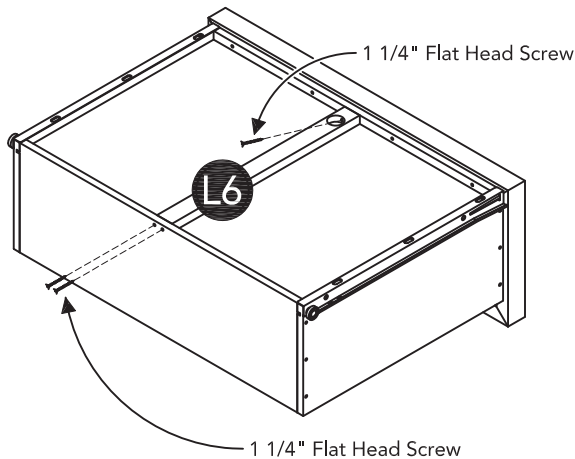


STEP 11


Attach Handles with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are installed in a later step.


Part List

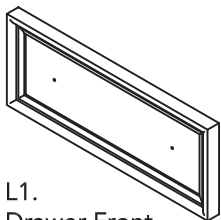


L1.
Drawer Front
2 pcs.

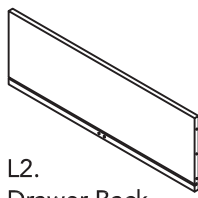


L2.
Drawer Back
2 pcs.

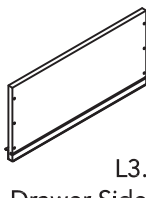

L3.
Drawer Side
2 pcs.

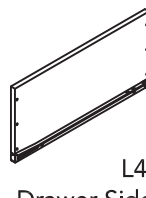

L4.
Drawer Side
2 pcs.

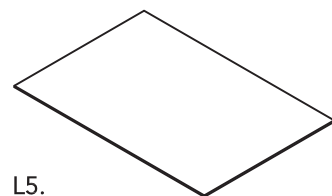


L5.
Drawer Bottom
2 pcs.



L6.
Support
2 pcs.

Drawer (M)

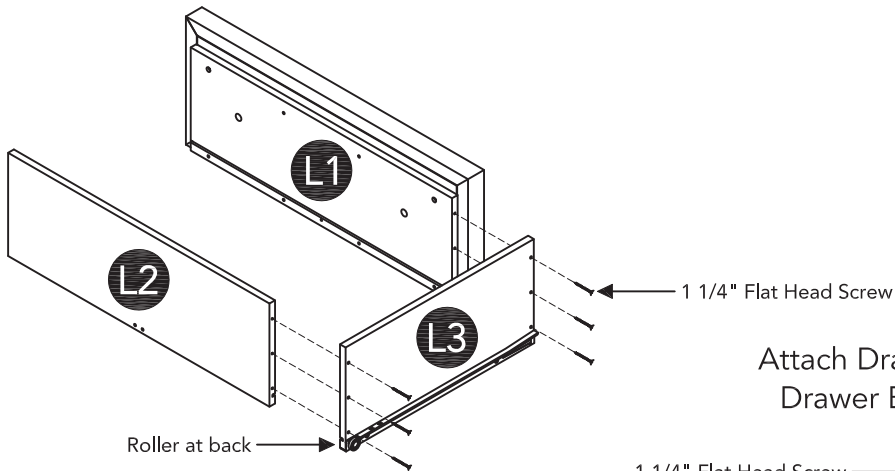


STEP 12

Attach Drawer Side (L3) to Drawer Front (L1) and Drawer Back (L2) with 1 1/4" Flat Head Screws.

STEP 13



Insert Drawer Bottom (M5) into groove.

Attach Drawer Side (L4) to unit with 1 1/4" Flat Head Screws.

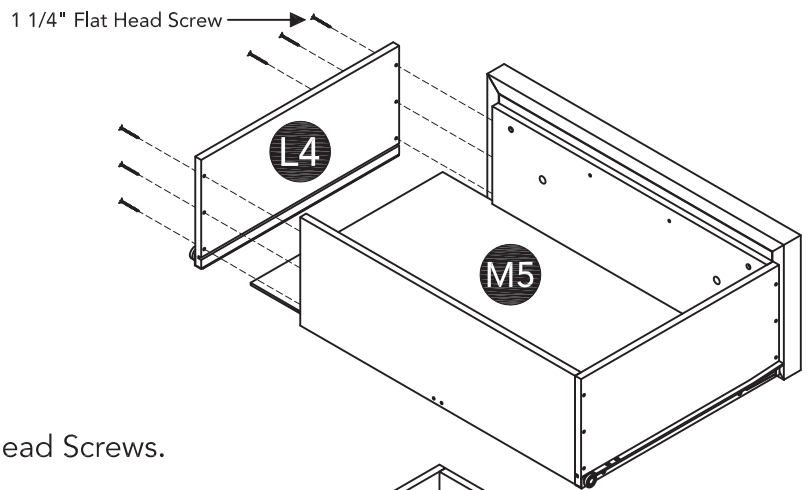

STEP 14

Attach Support (L6) to unit with 1 1/4" Flat Head Screws.

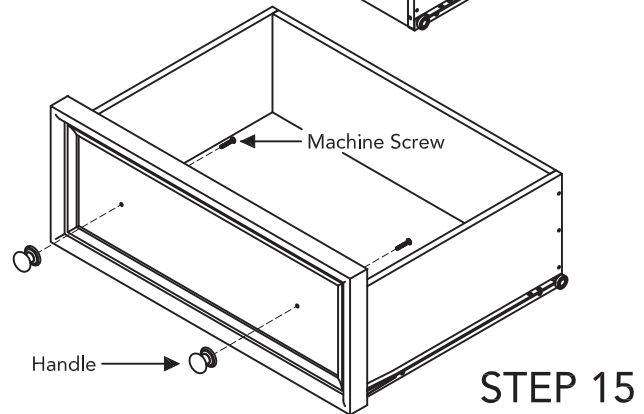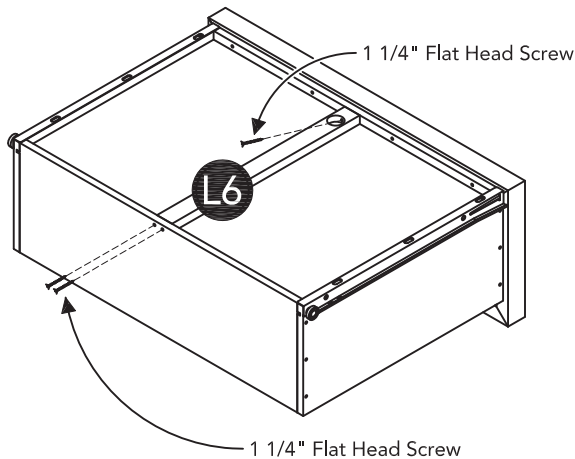


STEP 15


Attach Handles with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are installed in a later step.


Part List

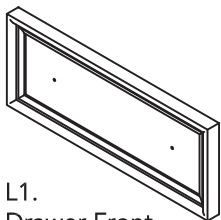


L1.
Drawer Front
4 pcs.

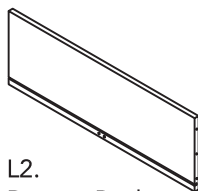


L2.
Drawer Back
4 pcs.

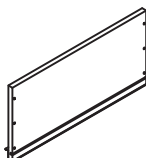

L3.
Drawer Side
4 pcs.

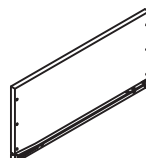

L4.
Drawer Side
4 pcs.

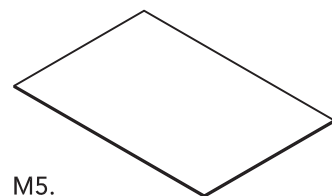

M5.
Drawer Bottom
4 pcs.





L6.
Support
4 pcs.

Assembly Instructions 9/10

STEP 16

Loosen slightly the screws pre-installed on back of drawer fronts.

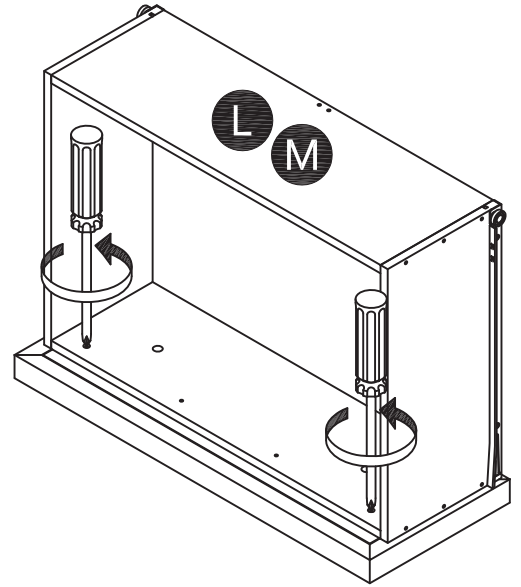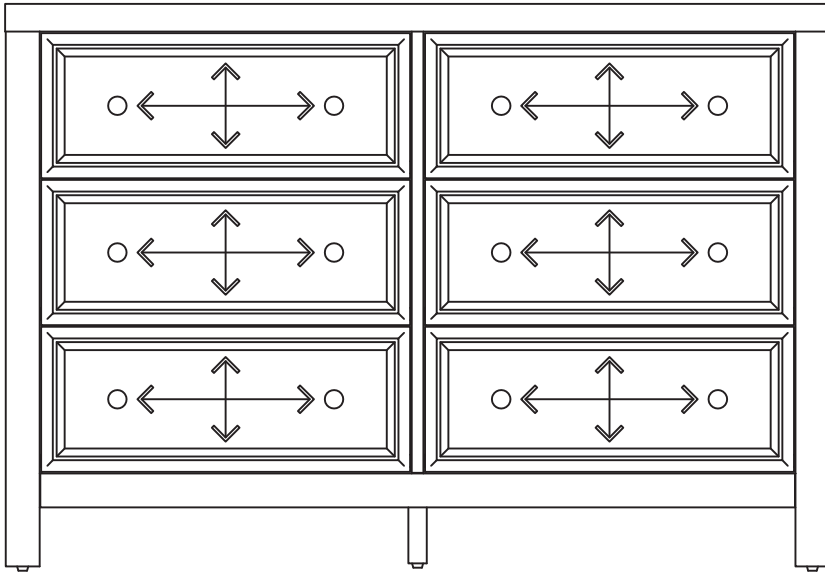

STEP 17



Insert drawers into unit, then adjust drawer front panels left or right and up or down until drawer gaps look proportional.

STEP 18

Pull each drawer open slowly and re-tighten screws from Step 16.


Make sure drawer front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

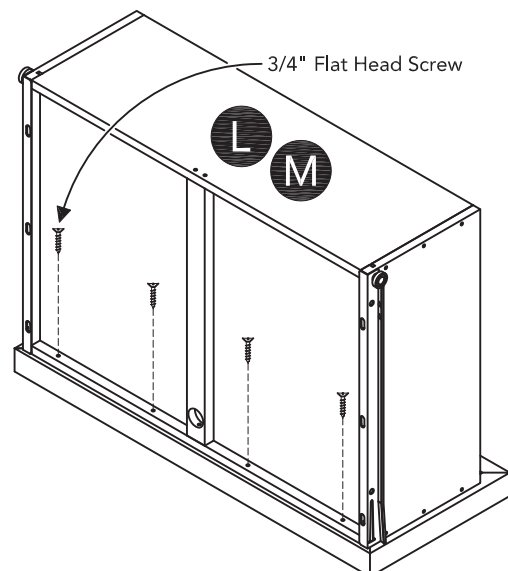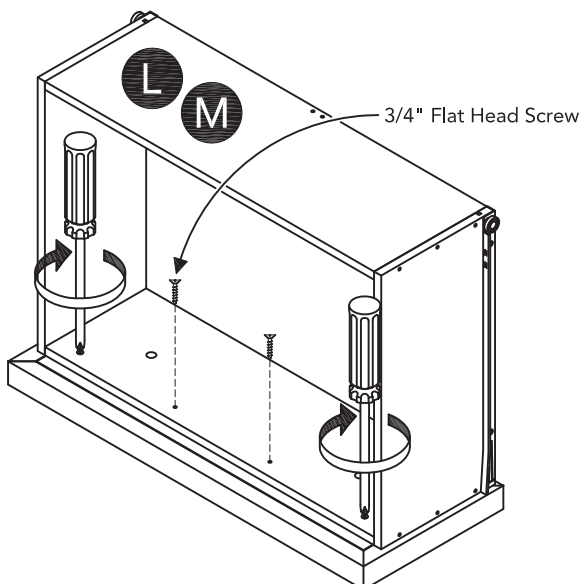

STEP 19

Slide Drawers (L) and (M) into position.

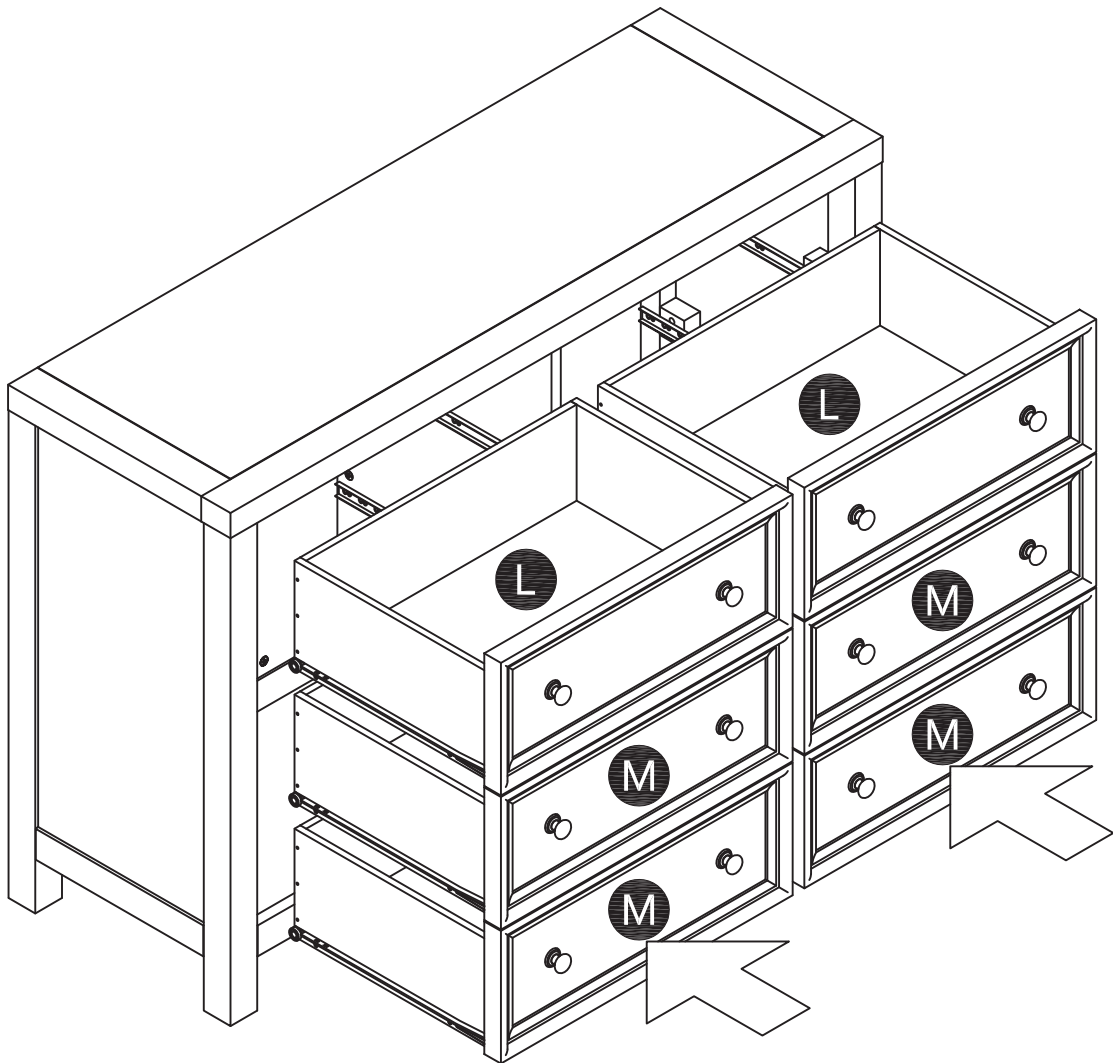

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.

**PREVENT
CRACKING**



Do not place
in direct sunlight.

**PREVENT
FADING**



Do not write
directly on surface.

**PREVENT
MARKING**



Do not place hot
objects on surface.

**PREVENT
FINISH DAMAGE**



Do not use rubber
based placemats.

**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.

**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319