



360° TEE™



INSTRUCTION MANUAL

Thank you for choosing SKLZ 360° Tee. We are dedicated to providing you with the best tools and instruction possible to help you unleash your athletic potential. If there is anything else we can do to help you optimize your training, don't hesitate to drop us an email (customerservice@sklz.com) or give us a call (1-877-225-7275).

BEFORE YOU BEGIN:

- » Read all setup and usage instructions carefully before using. If the setup and/or instructions are not followed correctly, it could result in injury or damage to the product.
- » Recommended for athletes over 14 years of age. Athletes under 18 years of age should use only under strict adult supervision.
- » Adult assembly is recommended.
- » Not suitable for children under 3 years of age.
- » Always check for wear and tear before use. If any is found, do not use the product.
- » Do not leave 360° Tee outdoors.
- » Keep away from fire and heat sources.
- » Make sure you have all the 360° Tee components. Please contact SKLZ customer service toll free at 1.877.225.7275 if you are missing anything.

⚠ CAUTION:

- » When in use, make sure the 360° Tee is setup in a clear area to avoid damage to property.
- » Always wear a helmet; face guard recommended.
- » While using the 360° Tee, please have others stay clear of the batting area to reduce the risk of injury.
- » When using the 360° Tee with a net, position the tee far enough away allowing the batter to swing freely, while still being close enough to ensure the net will capture a hit ball.

LIMITED WARRANTY

REGISTER YOUR PRODUCT AT SKLZ.COM TO ENSURE WARRANTY COVERAGE. GET NEW PRODUCT INFORMATION AND SPECIAL DEALS FROM SKLZ

Pro Performance Sports (PPS) / SKLZ warrants to the original consumer purchaser of any PPS/SKLZ product it manufactures that the product will be free of defects in materials or workmanship for 90 days (unless specified in alternate warranties) from the date of purchase. If defective and purchased from a retail store, return the product along with receipt to the retail store where the product was purchased. If the item was purchased from PPS/SKLZ, return the product along with the packing slip (proof of purchase) postage prepaid to the address below for replacement consideration. Label: Attn: Returns

This warranty does not cover damages resulting from accident, misuse, abuse or lost merchandise. Only valid in the USA. All returns sent to PPS/SKLZ require a Return Merchandise Authorization number (RMA). For returns to PPS/SKLZ and for all other Customer Service inquiries, please email customerservice@sklz.com or call toll free, 1-877-225-7275 for a return authorization number for any exchange.

Made in China. ©2012 Pro Performance Sports, LLC. All rights reserved. Manufactured and distributed by SKLZ/Pro Performance Sports, 2081 Faraday Avenue, Carlsbad, CA 92008 U.S.A. SKLZ, SKLZ Pro Grade, SKLZ Chrome and Sports Balls are registered trademarks of Pro Performance Sports, LLC, its subsidiaries and affiliates. Product features, appearance, and specifications may be subject to change without notice. Unauthorized duplication is a violation of applicable local and international laws.

PATENT #: 7,204,769

IDEA SUBMISSION
 Visit SKLZ.com to submit your concept. Some restrictions may apply.

360° TEE
 360° TEE IS PERFECT FOR:
 » BASEBALL & SOFTBALL



360° TEE PARTS:


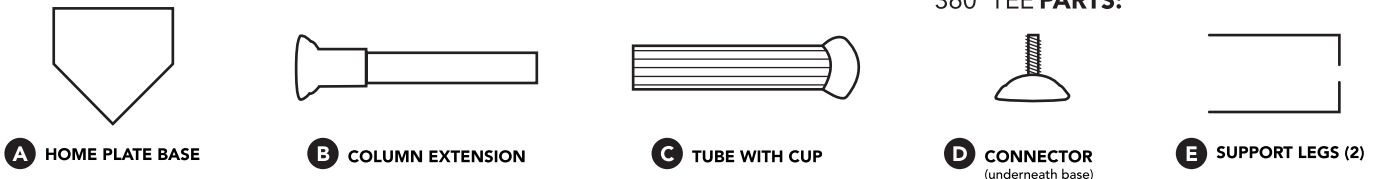 



ILLUSTRATION A

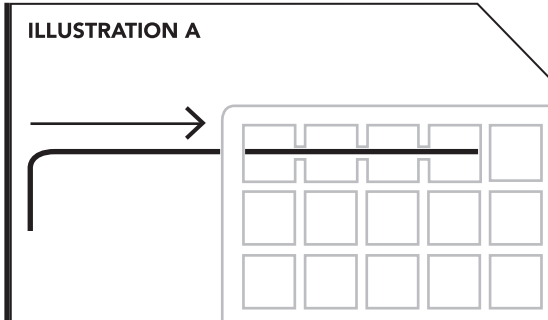 

ASSEMBLE 360° TEE

1. Remove Support Legs from poly bag. Turn the Home Plate Base over and insert the Support Legs into the holes at the front of the base. (see Illustration A)
2. Unscrew Connector from bottom of Column Extension. (see Illustration B)
3. Place Connector below Home Plate Base and re-screw into bottom of Column Extension. Do not over tighten. (see Illustration C)
4. Place Tube with Cup onto Column Extension. Adjust for proper batting height.

 ILLUSTRATION B

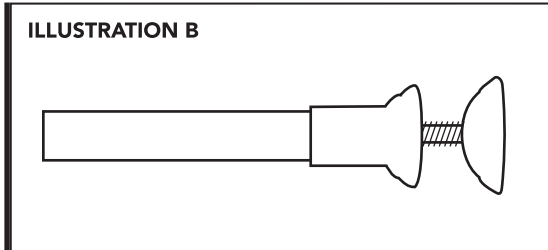

TEE ADJUSTMENTS


ANGLE ADJUSTMENTS

1. Loosen tee by twisting the Column Extension counter clockwise. Move to desired position and tighten into place by twisting the Column Extension clockwise.
2. Place ball in the cup. Adjust cup by rotating the Tube with Cup.

HEIGHT ADJUSTMENTS

1. To raise height, pull from the bottom of the Tube with Cup. To lower, push down on the Tube with Cup.

 ILLUSTRATION C

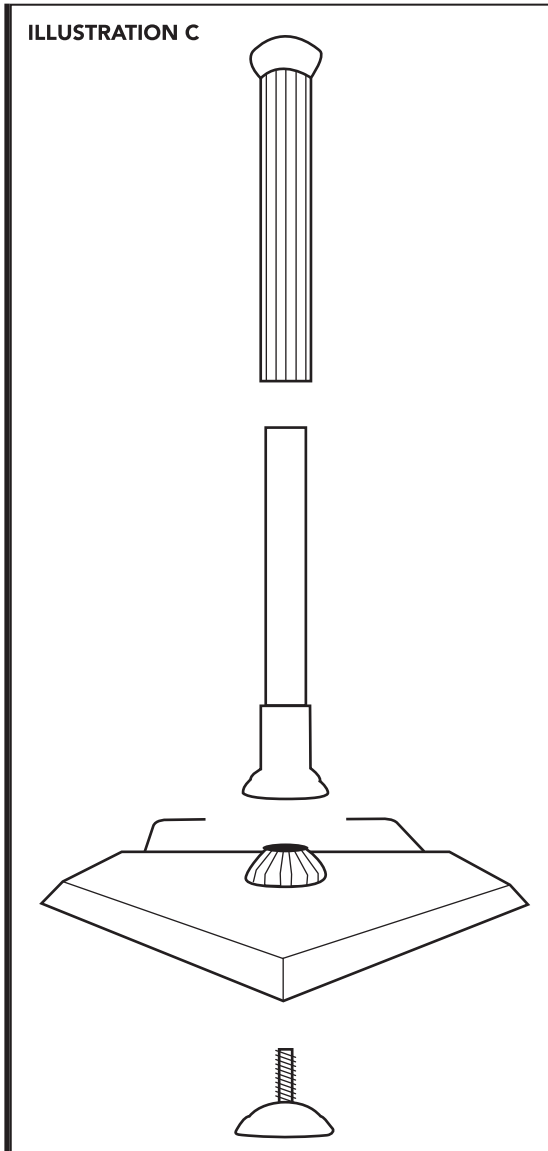

STORAGE

To retain the quality of the 360 Tee, it is recommended to store the product indoors and not leave outside. Product can be stored fully assembled if need be.