homestyles


88 5412 943 Kitchen Island

IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

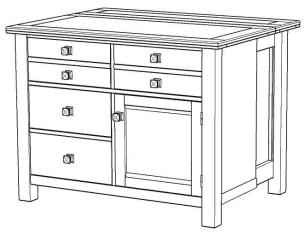

Patent 8,584,600 B2

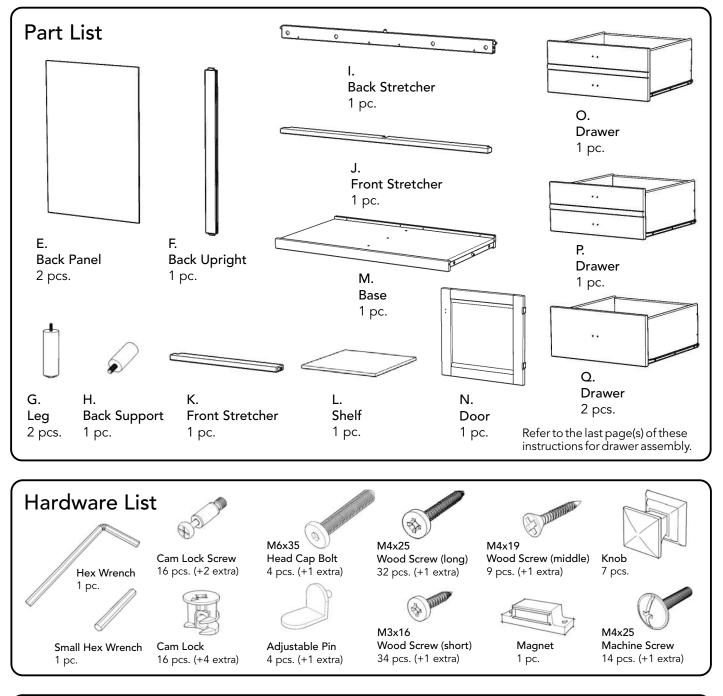

Cartons 88 5412 941/94Q1, 942 are also needed for assembly.

Tool(s) required for assembly: Phillips screwdriver, Level

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/8

Cam Lock Screw

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench in a safe place as the bolts may need to be tightened up in the future.

STEP 1

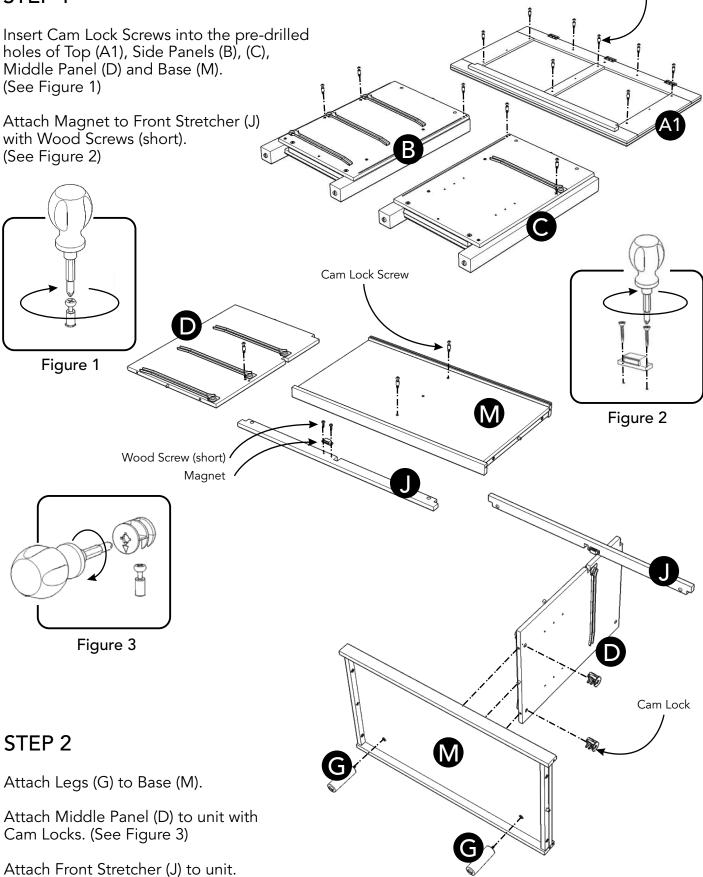


Assembly Instructions 3/8


STEP 3

Attach Back Stretcher (I) and Front Stretcher (K) to Side Panel (B) with Cam Locks.

Attach unit from Step 2 to unit with Cam Lock and Head Cap Bolts. (See Figure 4)

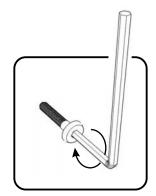



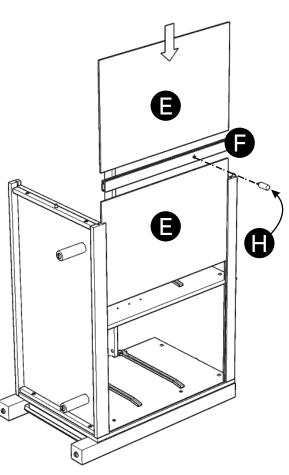

STEP 5


Attach Side Panel (C) to unit with Cam Locks and Head Cap Bolts.

Attach Ba Attach u Head Cap Bolt

STEP 4

Slide Back Panels (E) and Back Upright (F) into place.

Attach Back Support (H) to Back Upright (F).

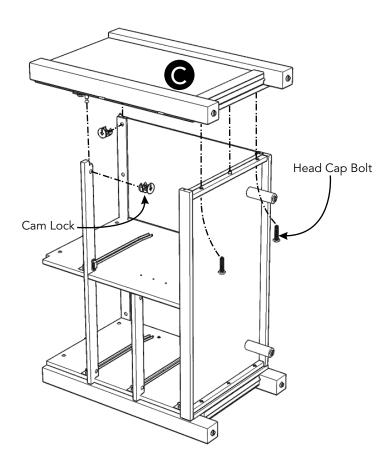

Assembly Instructions 4/8


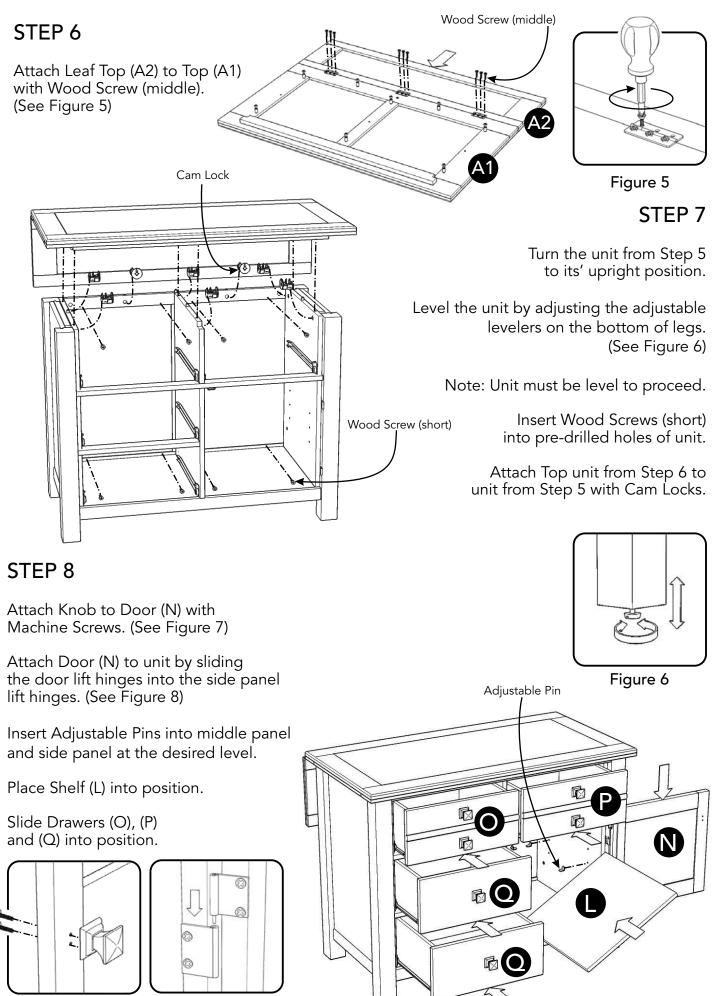


Figure 7

Figure 8

Assembly Instructions 5/8

Top extension instructions

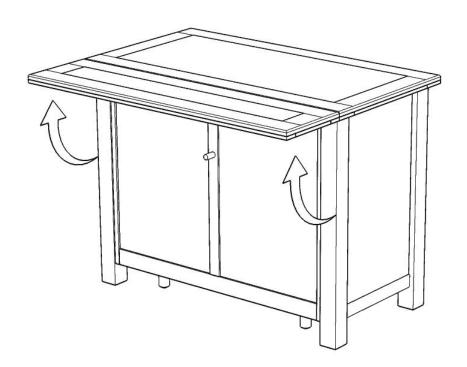


STEP 1

Lift up the Leaf Top.

STEP 2


Holding the Leaf Top, pull out a back leg from the unit; then pull out the other back leg.

Note: Unit must be level for the back legs to pull out.

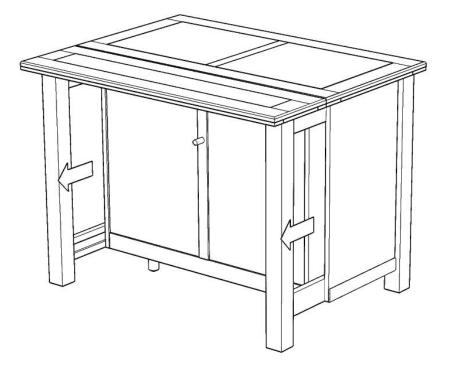

Assembly Instructions 6/8


Drawer (O)

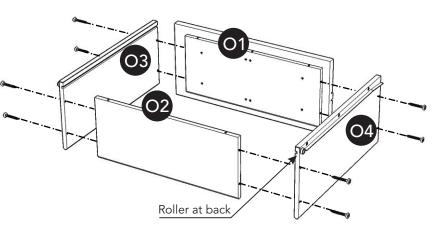


STEP 2

Slide Drawer Bottom (O5) into the grooves of Drawer Sides (O3) and (O4) until it meets Drawer Front (O1).

Attach Drawer Bottom (O5) to unit with Wood Screws (short).

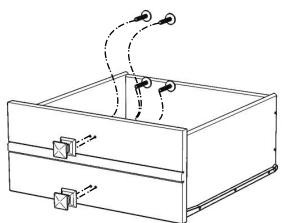


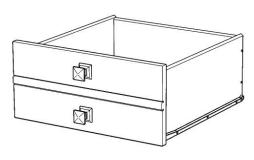

STEP 1


Attach Drawer Front (O1) and Drawer Back (O2) to Drawer Side (O3) with Wood Screws (long).

Attach Drawer Side (O4) to unit with Wood Screws (long).

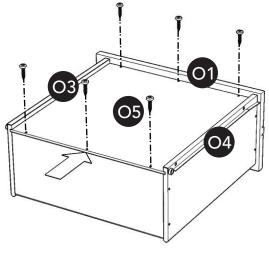


STEP 3

Attach Knobs with Machine Screws.

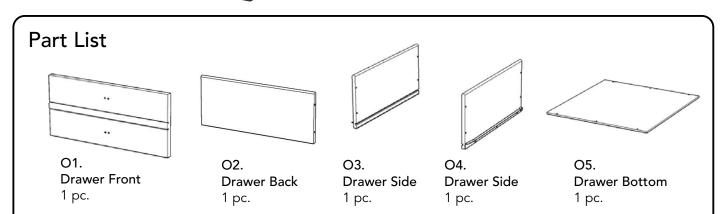

Assembly Instructions 7/8


Drawer (P)

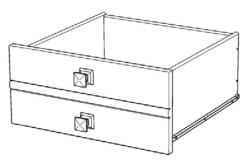

STEP 1

Attach Drawer Front (P1) and Drawer Back (O2) to Drawer Side (O3) with Wood Screws (long).


Attach Drawer Side (O4) to unit with Wood Screws (long).

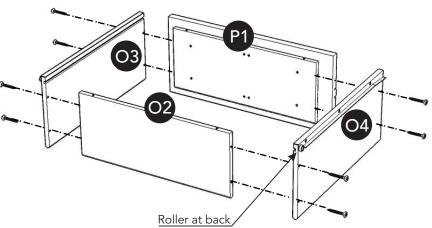


STEP 2

Slide Drawer Bottom (O5) into the grooves of Drawer Sides (O3) and (O4) until it meets Drawer Front (P1).


Attach Drawer Bottom (O5) to unit with Wood Screws (short).

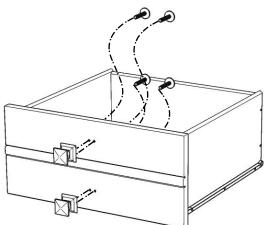

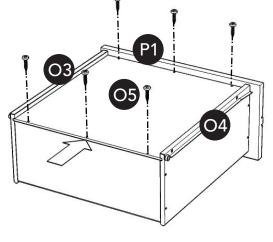


STEP 3


Attach Knobs with Machine Screws.

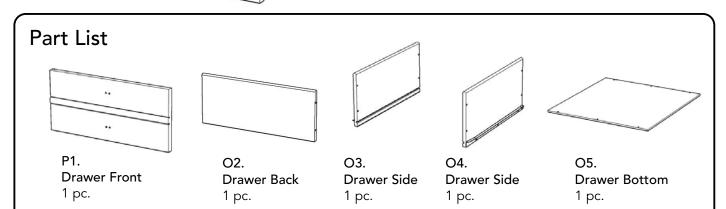

Assembly Instructions 8/8

Drawer (Q)

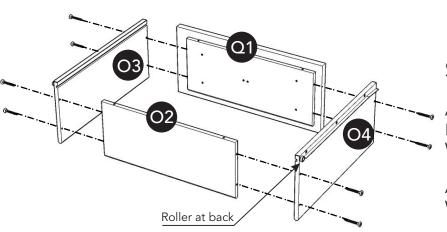

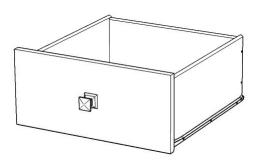

STEP 1


Attach Drawer Front (Q1) and Drawer Back (O2) to Drawer Side (O3) with Wood Screws (long).


Attach Drawer Side (O4) to unit with Wood Screws (long).

STEP 2

Slide Drawer Bottom (O5) into the grooves of Drawer Sides (O3) and (O4) until it meets Drawer Front (Q1).


Attach Drawer Bottom (O5) to unit with Wood Screws (short).

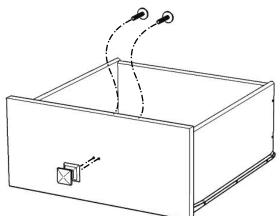

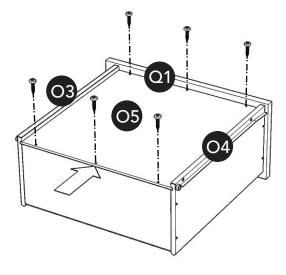

STEP 3

Attach Knob with Machine Screws.

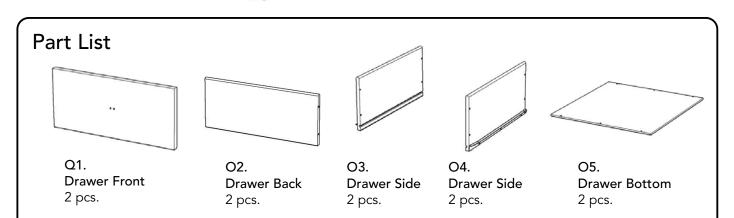

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at: www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319