



Purchase Date: \_\_\_/\_\_\_/\_\_\_ Order/Customer Reference #: \_\_\_\_\_

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty> If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: [customerservice@sunnydazedecor.com](mailto:customerservice@sunnydazedecor.com), or via our contact us page at <https://tiny.cc/SunnydazeContact>

# GLASS BELL WIND CHIME

Please read this manual carefully before use and save it for future reference.


## CLEANING

1. Clean the unit with mild detergent, warm water, and a soft cloth.
2. Rinse thoroughly, ensuring all soap residue has been removed.
3. Allow the unit to air-dry completely before hanging or storing.

## SAFETY STATEMENTS & WARNINGS

- Do not use harsh chemicals or abrasive materials to clean the unit as they may damage the product and void the product warranty.
- Do not hang the unit too close to buildings or objects that may break the unit during windy conditions. Storing the unit indoors during high-wind conditions is recommended.
- Store indoors during freezing temperatures as exposure to freezing weather may cause the unit to crack or break.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

** WARNING:** Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

