

homestyles®

4502-95

Kitchen Cart

IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



Part List

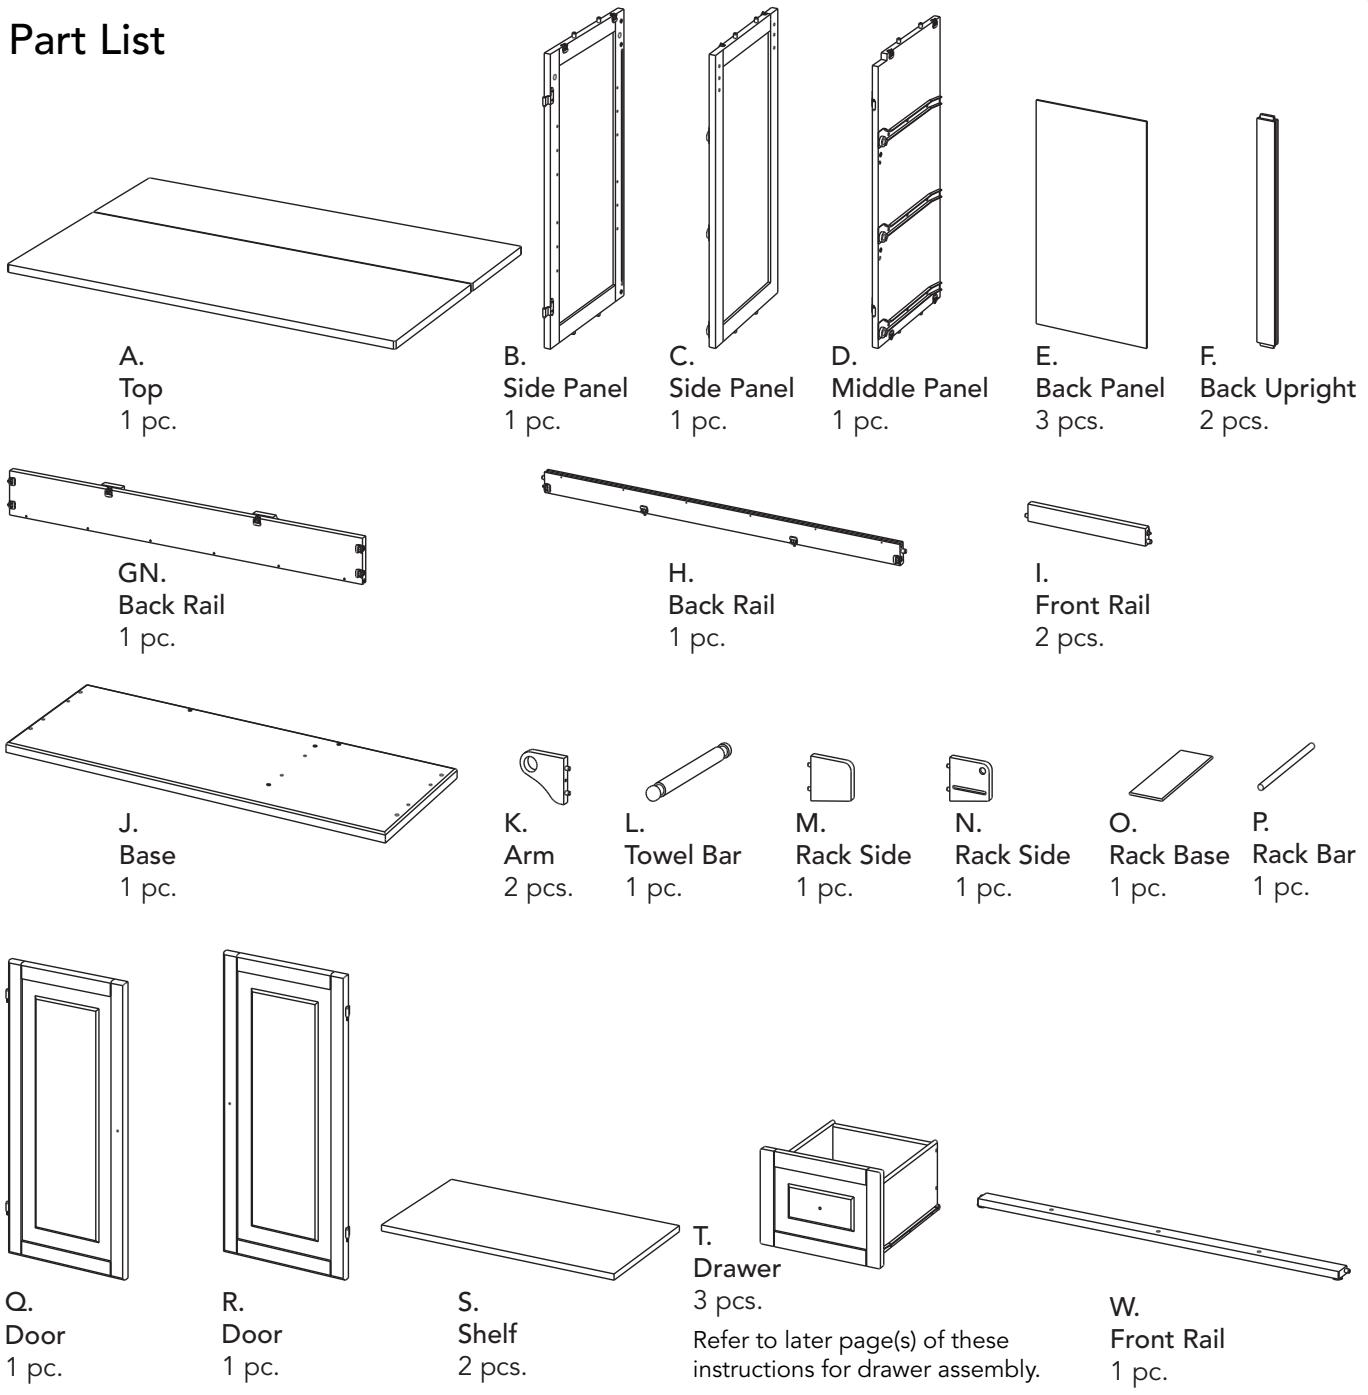


Tool(s) required for assembly: Phillips screwdriver

homestyles Customer Service: www.homestylesfurniture.com,
servicedesk@homestylesfurniture.com, 888-680-7460


Refer to later page(s) of these
instructions for drawer assembly.

Assembly Instructions 2/9

Hardware List

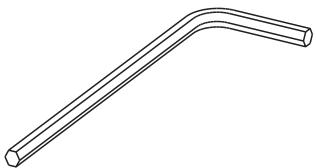

1
Hex Wrench
1 pc.

 


Small
Hex Wrench
1 pc.




1
M6x25
Head Cap Bolt
4 pcs. (+1 extra)



2
M6x38
Head Cap Bolt
4 pcs. (+1 extra)

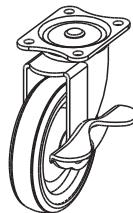


3
3"Locking Caster
2 pcs.

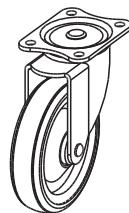

4
3"Non-Locking Caster
2 pcs.



 
5
M6x12
Head Cap Bolt
16 pcs. (+1 extra)



6
Magnet
2 pcs.



 7
#6x3/4"
Wood Screw
4 pcs. (+1 extra)



8
Knob
5 pcs.



9
#8x1"
Machine Screw
5 pcs.



10
#8x1"
Wood Screw
24 pcs. (+1 extra)



11
#4x1 1/2"
Wood Screw
24 pcs. (+1 extra)



12
#8x1"
Wood Screw
3 pcs. (+1 extra)



13
Adjustable Pin
8 pcs. (+1 extra)



14
#8x1 1/4"
Wood Screw
4 pcs. (+1 extra)

Assembly Instructions 3/9



IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

STEP 1


Assemble Rack Sides (M), (N), Rack Base (O) and Rack Bar (P).

Note: Spice Rack and Towel Bar are interchangeable and may be installed on either side of the unit.

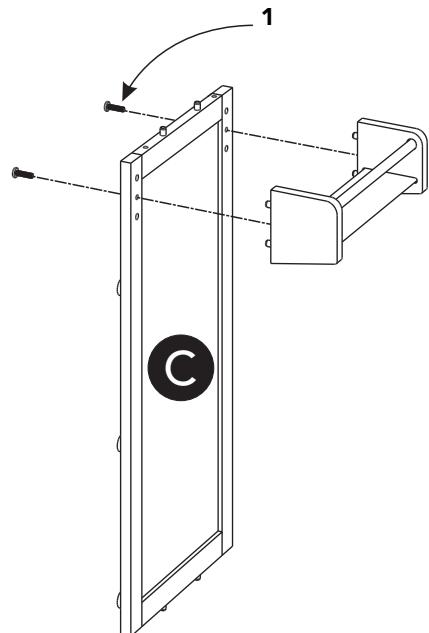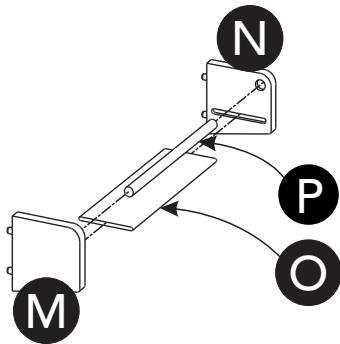

STEP 2

Attach unit to Side Panel (C) with Head Cap Bolts (1).

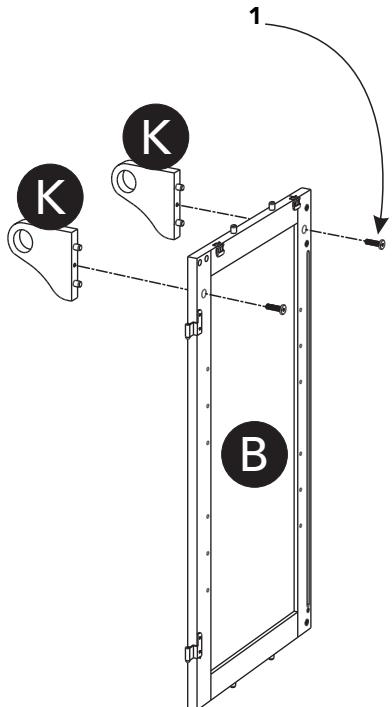

STEP 3

Attach Arms (K) to Side Panel (B) with Head Cap Bolts (1).

Assembly Instructions 4/9

STEP 4

Turn all flip locks in both side panels, Back Rails (H) and (GN) to unlock position. (See Figure 1)

Attach Back Rail (GN) to Side Panel (C), then flip Locks. (See Figures 2 and 3)

Attach Back Uprights (F) to unit.

Slide Back Panels (E) into position.

Attach Back Rail (H) to unit, then flip Lock.

Attach Side Panel (B) to unit, then flip Locks.

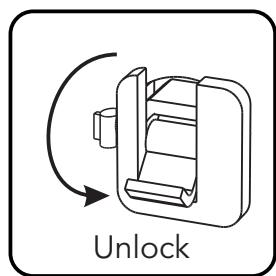
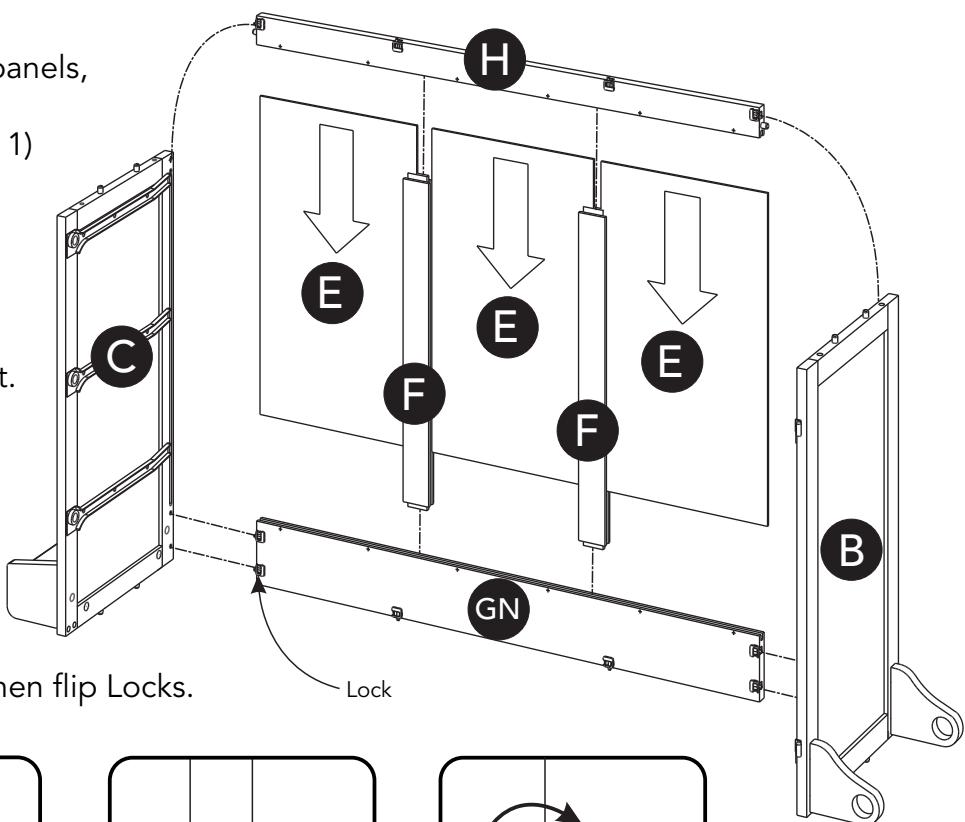


Figure 1

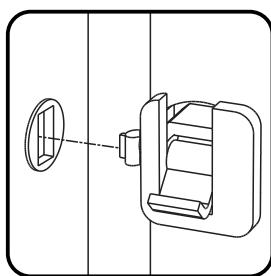


Figure 2


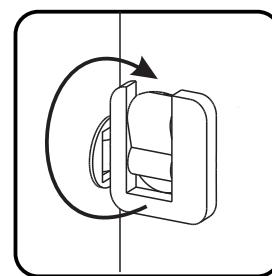


Figure 3

STEP 5

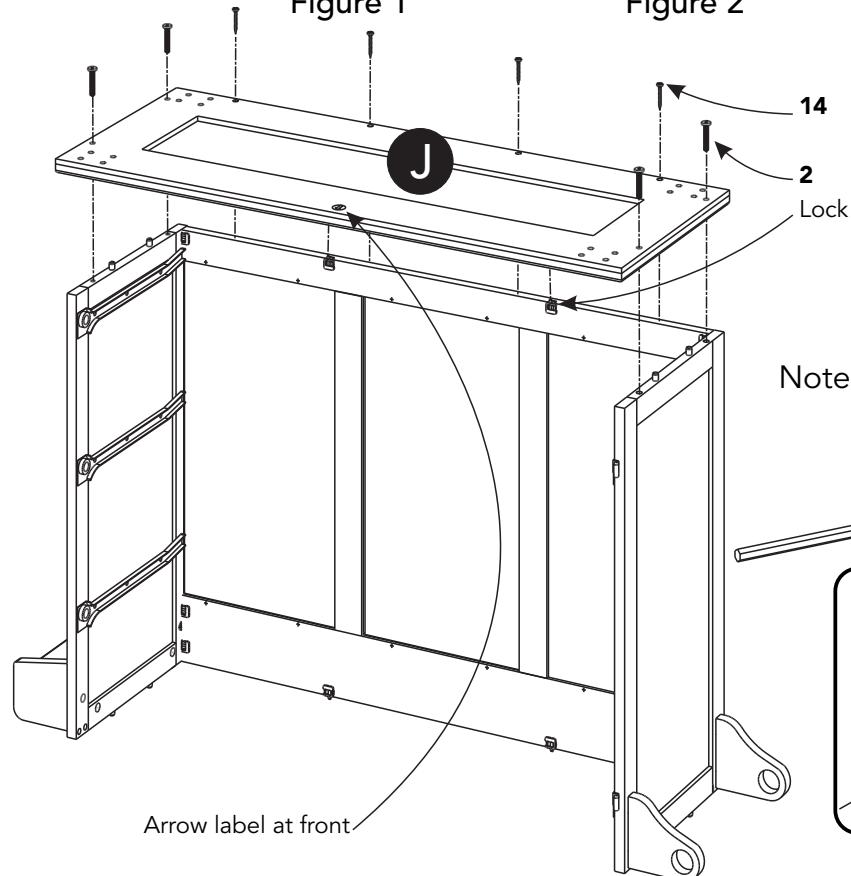

Attach Base (J) to unit with Head Cap Bolts (2) and Wood Screws (14). (See Figures 4 and 5)

Then flip Locks.

Note: Arrow label indicates front of Base (J).

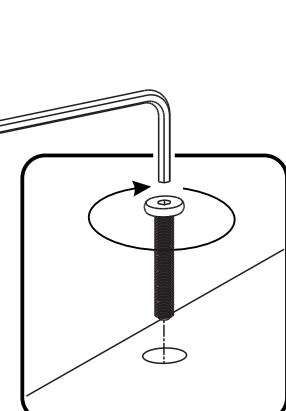


Figure 4

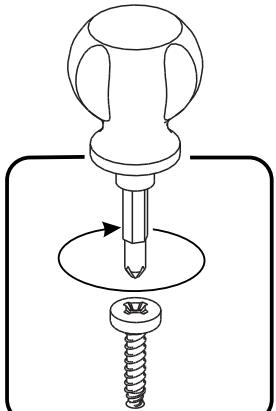


Figure 5

Assembly Instructions 5/9

STEP 6

Attach Casters (3) and (4) to unit with Head Cap Bolts (5).

Attach Locking Casters (3) at front.
(See Figure 6)

Note: Arrow label indicates front of unit.



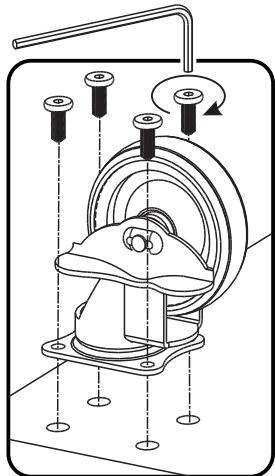


Figure 6

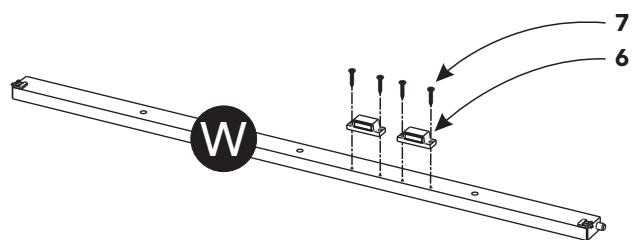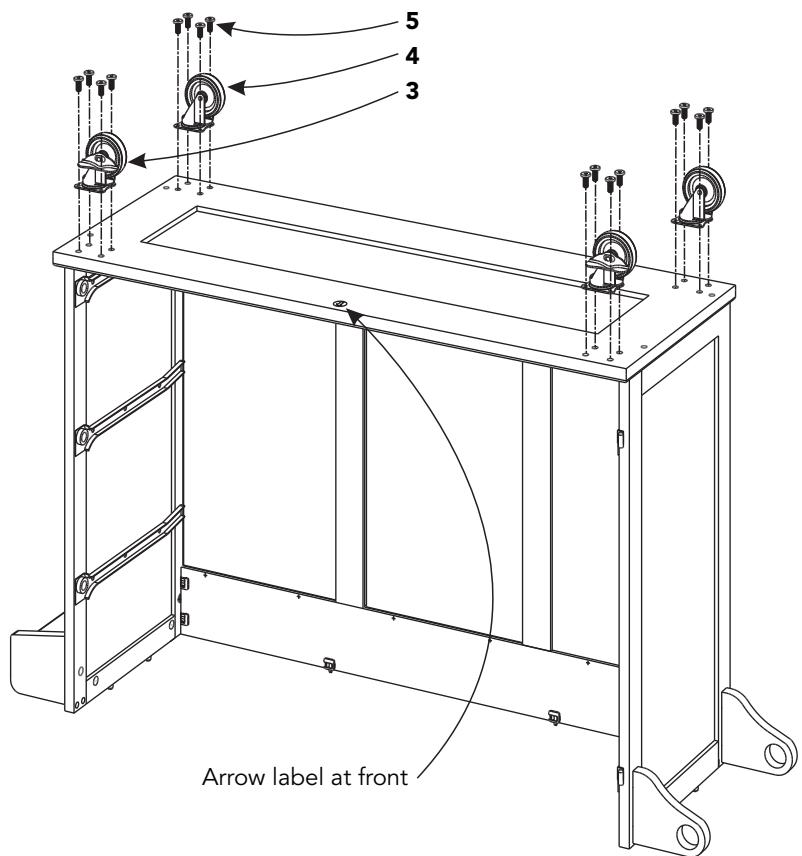

STEP 7

Attach Magnets (6) to Front Rail (W) by inserting Wood Screws (7) into pre-drilled holes, then tighten. (See Figure 7)

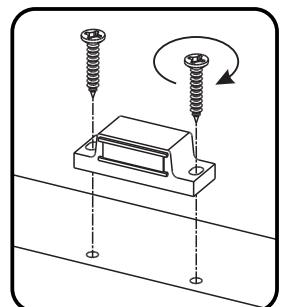


Figure 7

Assembly Instructions 6/9

STEP 8


Turn unit over to its upright position.

Turn all flip locks in Middle Panel (D), both side of Front Rails (I) and (W) to unlock position.

Attach Middle Panel (D) to unit, then flip Locks.

Attach Front Rails (I), (W) to unit, then flip Locks.

Slide Towel Bar (L) into position.

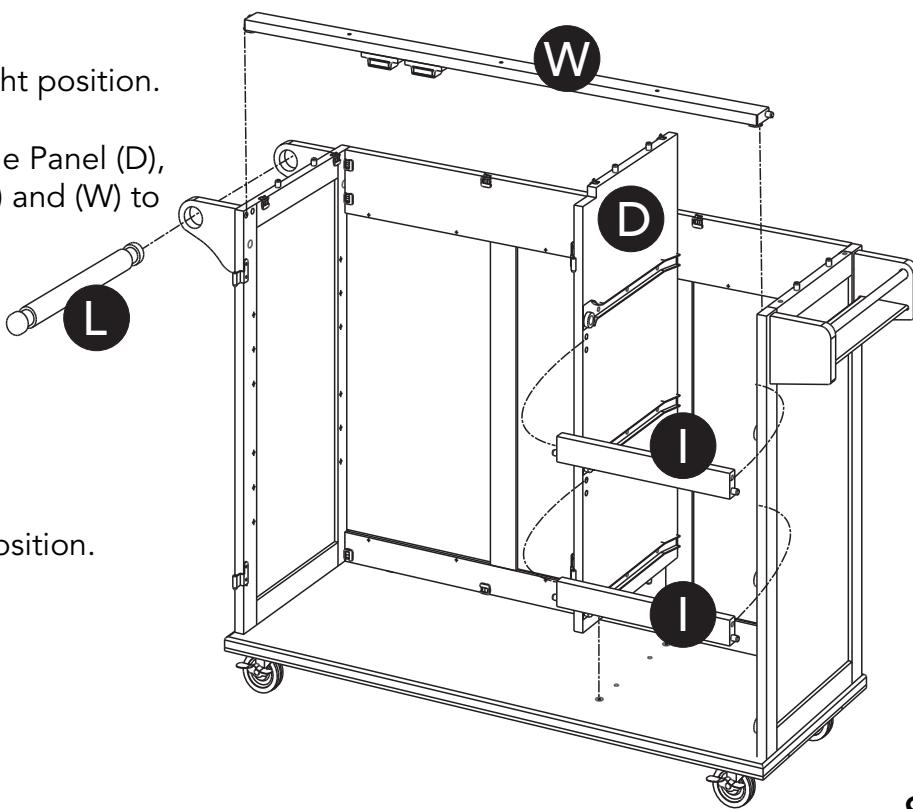

STEP 9

Attach Doors (Q) and (R) by sliding door hinges into side panel and middle panel hinges. (See Figure 8)

Attach Knobs (8) to Doors (Q) and (R) with Machine Screws (9). (See Figure 9)

Attach Top (A) to unit, then flip Locks.

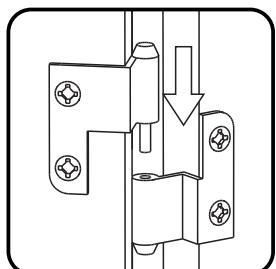


Figure 8




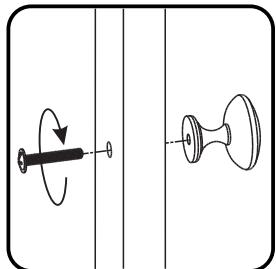


Figure 9

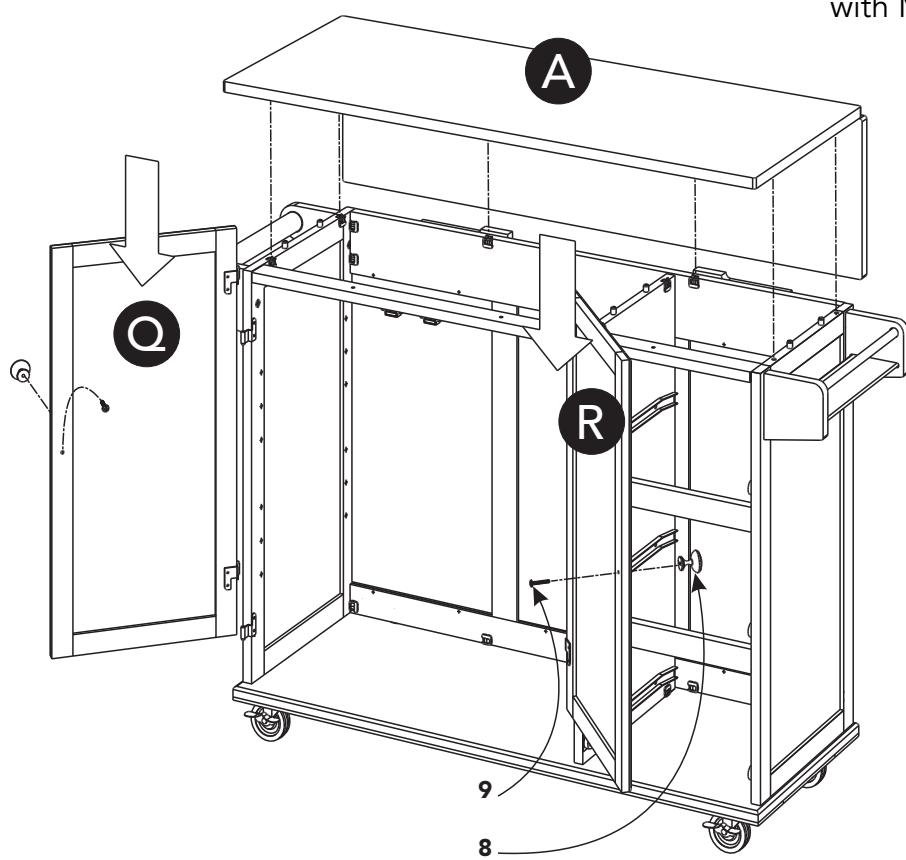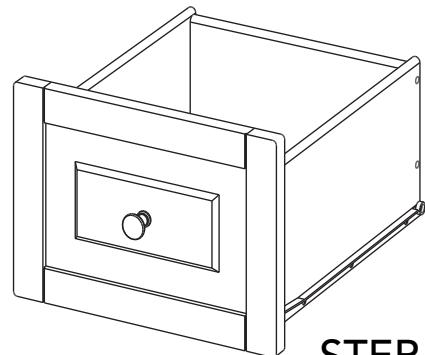

Assembly Instructions 7/9

Drawer (T)

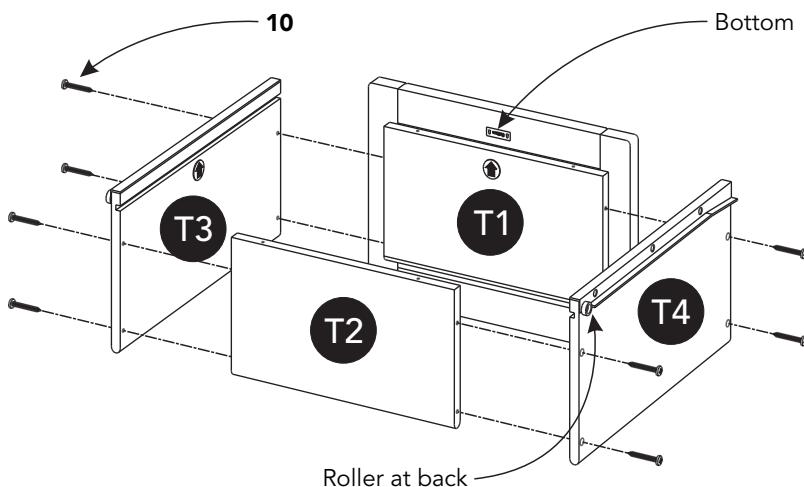

STEP 10

Attach Drawer Front (T1) and Drawer Back (T2) to Drawer Side (T3) with Wood Screws (10).



Attach Drawer Side (T4) to unit with Wood Screws (10).

STEP 11

Slide Drawer Bottom (T5) into groove.

Make sure holes on Bottom (T5) align with pre-drilled holes of unit.


Attach Drawer Bottom (T5) to unit with Wood Screws (11).

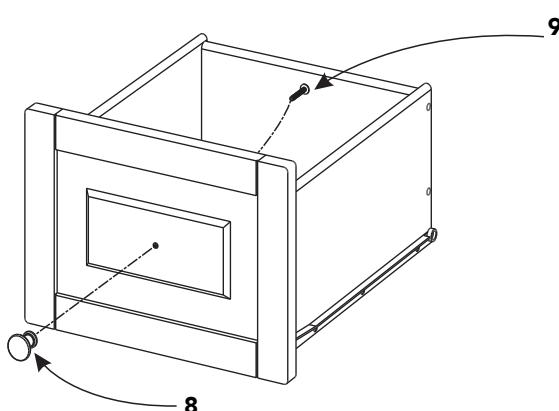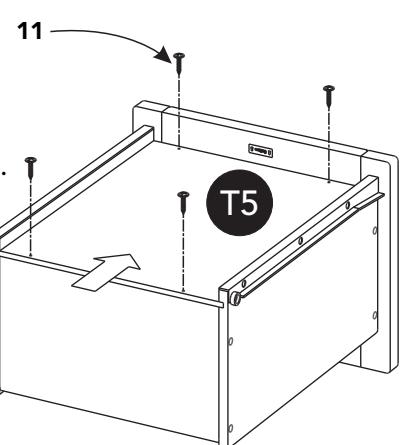


STEP 12

Attach Knob (8) to unit with Machine Screw (9).


Part List

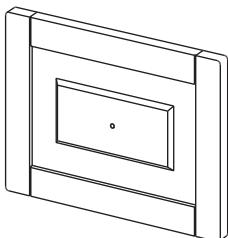


T1.
Drawer Front
3 pcs.

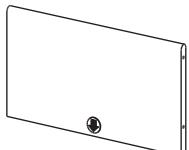


T2.
Drawer Back
3 pcs.

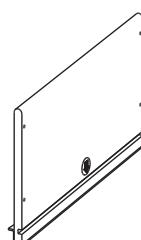

T3.
Drawer Side
3 pcs.

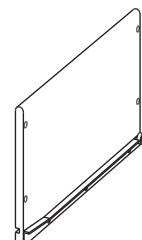

T4.
Drawer Side
3 pcs.

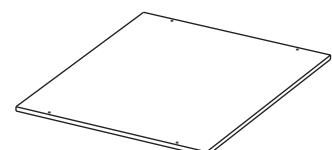


T5.
Drawer Bottom
3 pcs.

Assembly Instructions 8/9

STEP 13



Close the doors, then adjust doors gaps look proportional by move the unit
(See Figure 10)

Open the doors slowly.

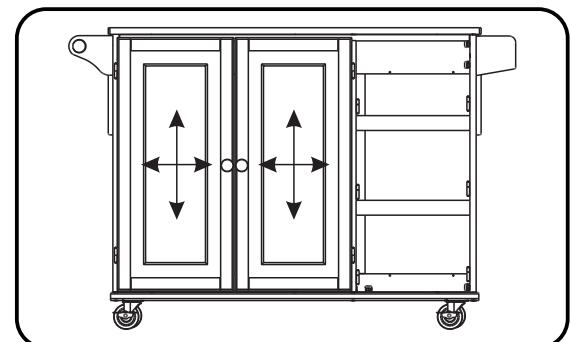


Insert Wood Screws (11) into pre-drilled holes in unit, then tighten.

Figure 10

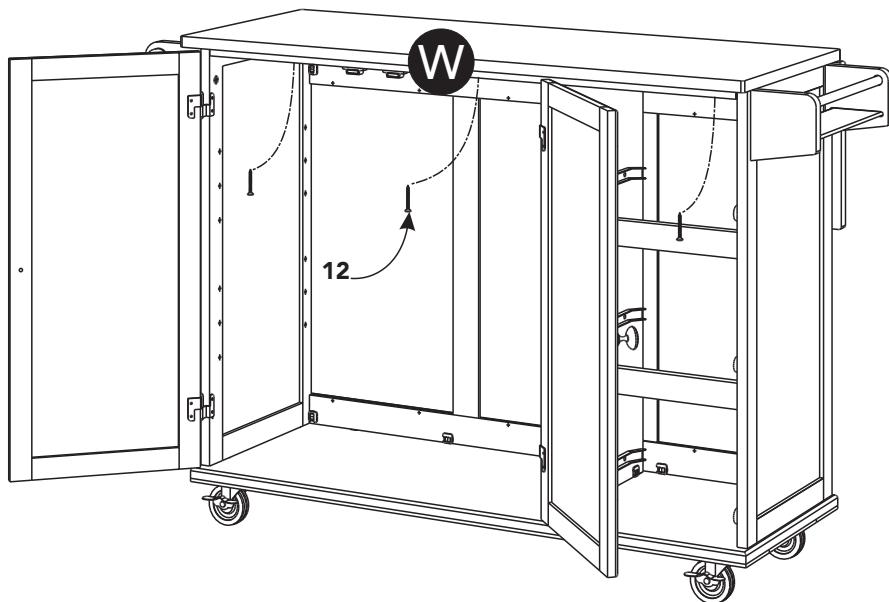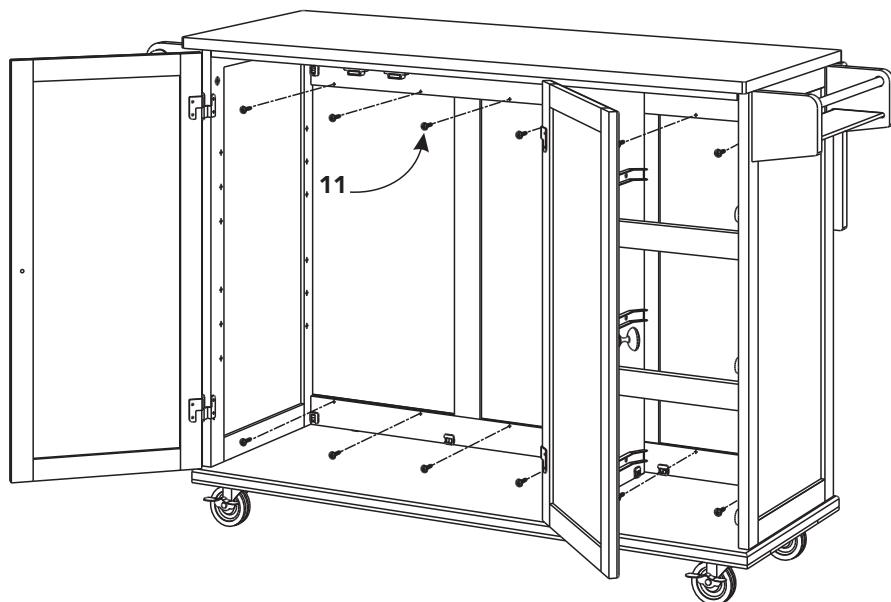

STEP 14

Insert Wood Screws (12) into pre-drilled holes of Front Rail (W), then tighten.

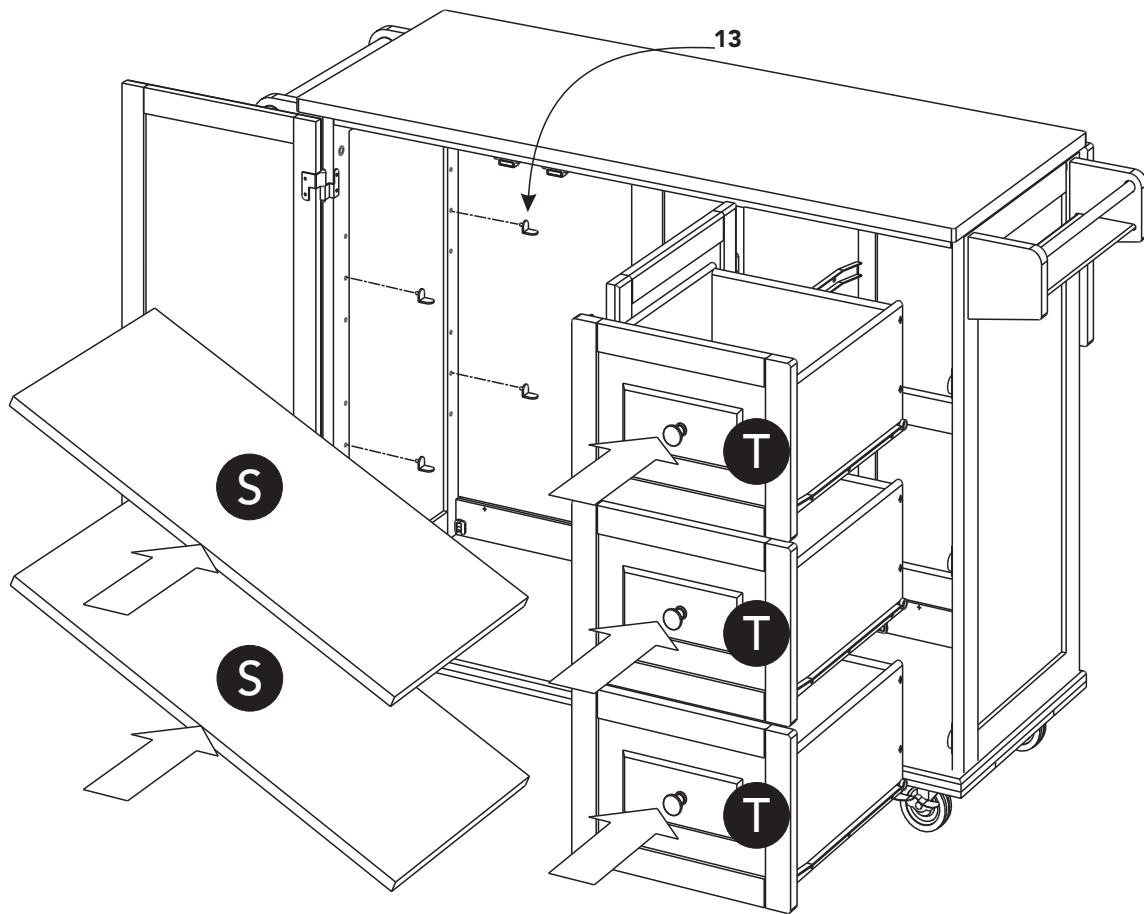

STEP 15

Insert Adjustable Pins (13) into side panel and middle panel at desired level.
(See Figure 11)

Place Shelves (S) into position.

Slide Drawers (T) into position.

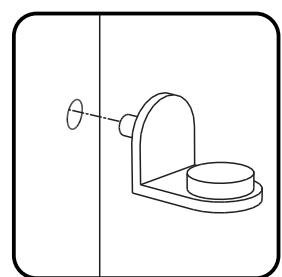


Figure 11

IMPORTANT

- Avoid exceeding 12 kg load on the shelf and base.
- Should distribute weight evenly on the shelf and base.

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.

Absorption causes parts to warp and split and finishes to delaminate.


NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT CRACKING

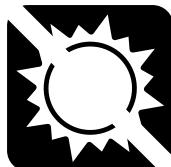

Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING




Do not use commercial waxes and polishes.

PREVENT YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water.
Buff with a dry clean cloth.

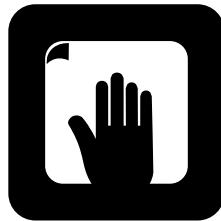

homestyles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **homestyles** is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.

homestyles Customer Service: www.homestylesfurniture.com,
servicedesk@homestylesfurniture.com, 888-680-7460