


# Pantry

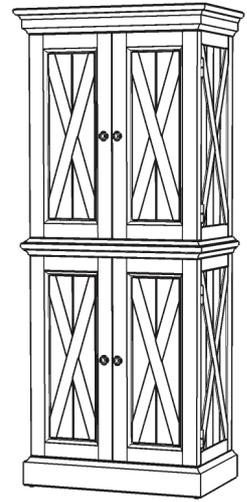


## IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.


Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

## Part List

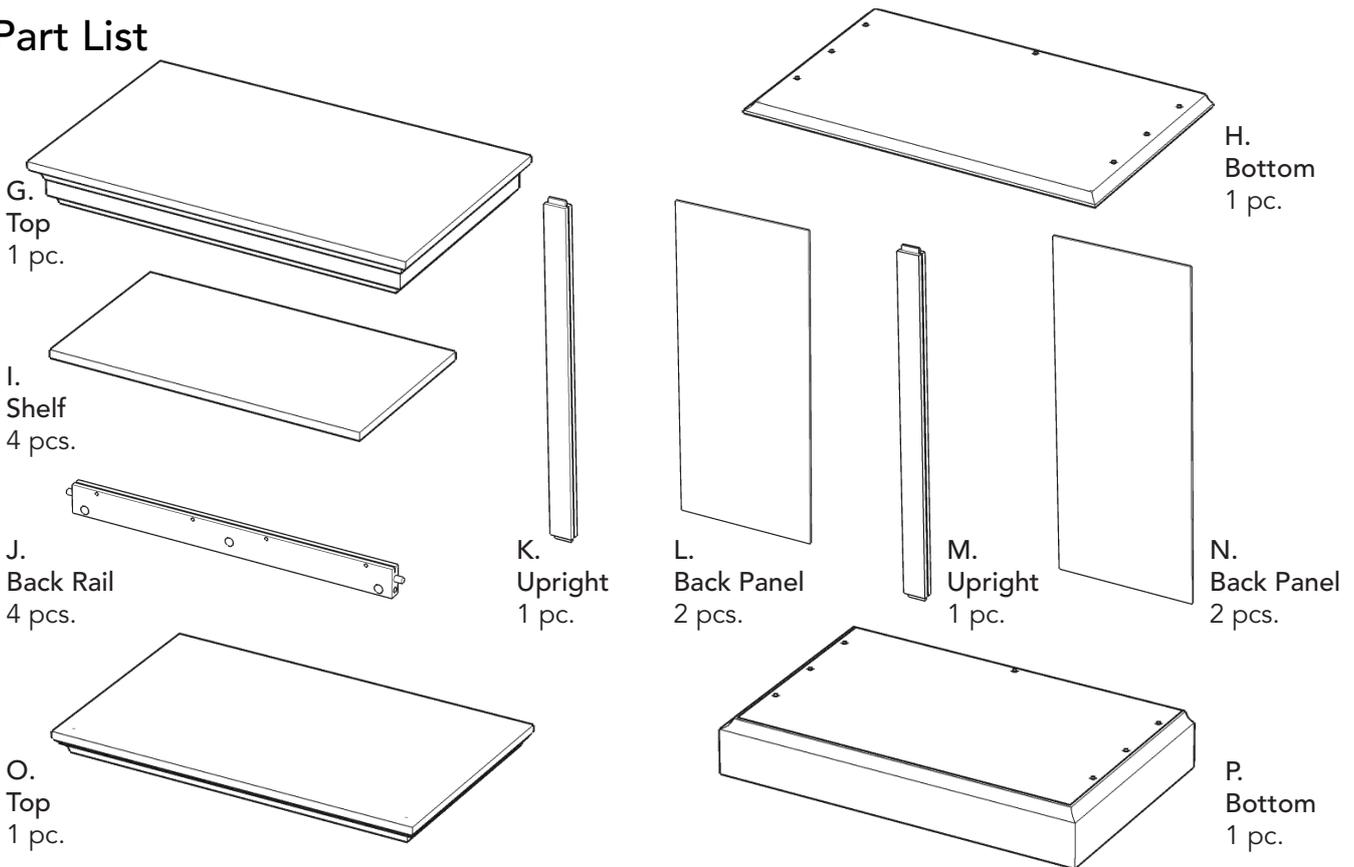

## Hardware List

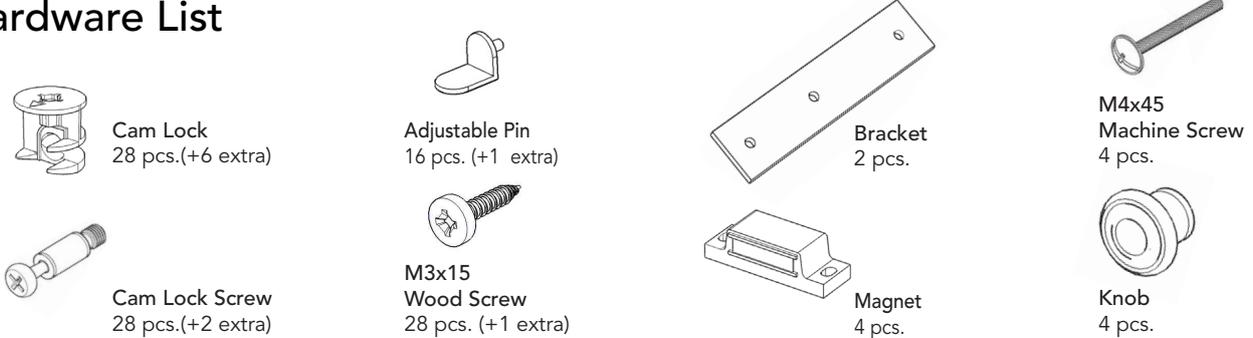

Carton 20 05523 0691 is also needed for assembly.


Tool(s) required for assembly: Phillips screwdriver, Level, Drill (8 volts or less), 3/8" Drill Bit

Home Styles Customer Service: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
 servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

# Assembly Instructions 2/6

## IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.

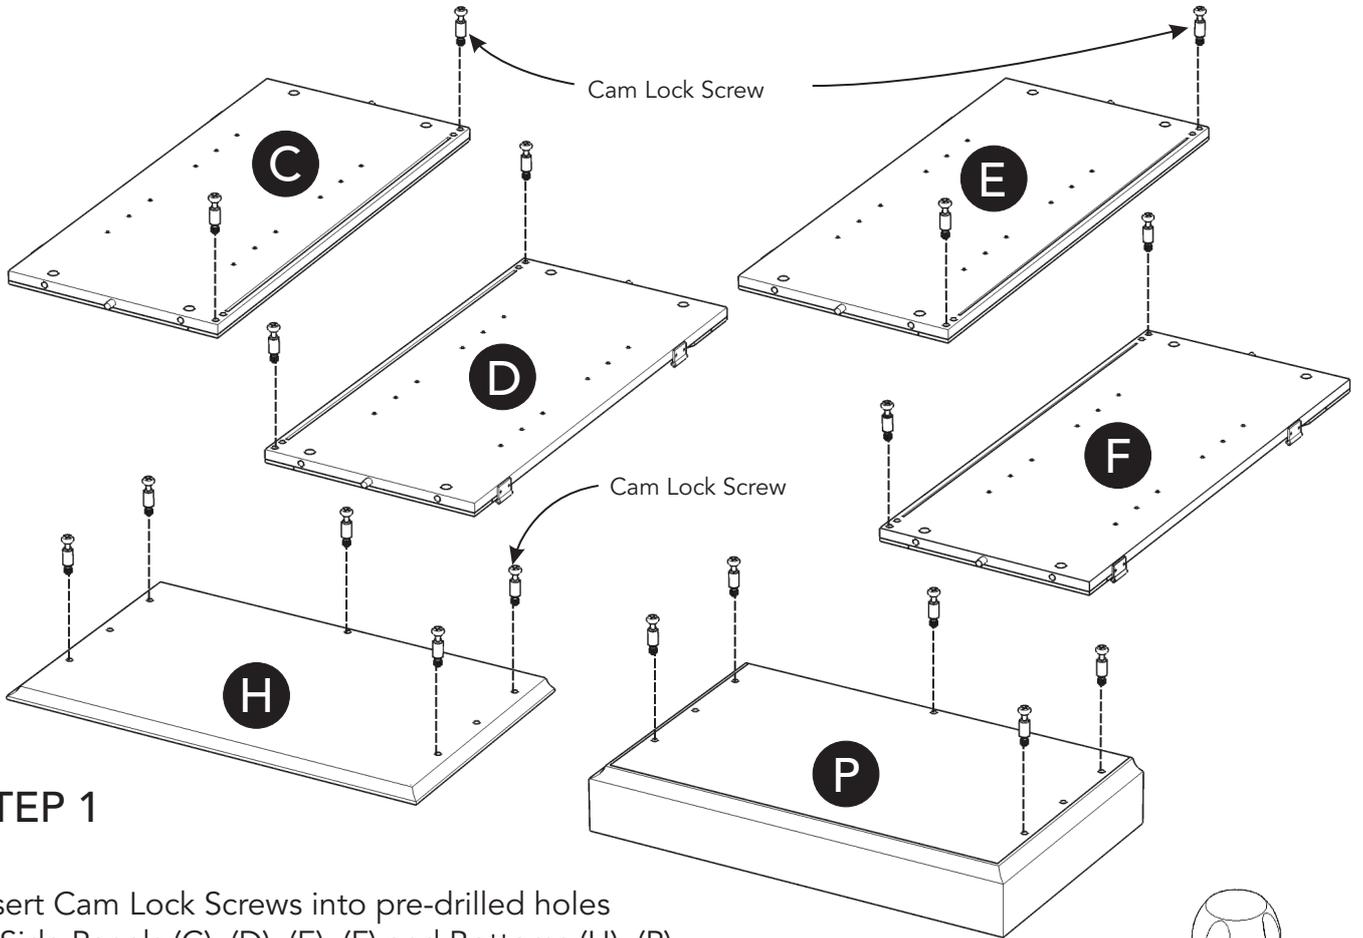

## STEP 1

Insert Cam Lock Screws into pre-drilled holes in Side Panels (C), (D), (E), (F) and Bottoms (H), (P). (See Figure 1)


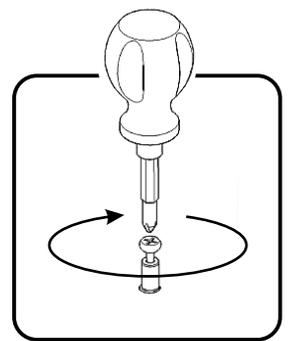


Figure 1

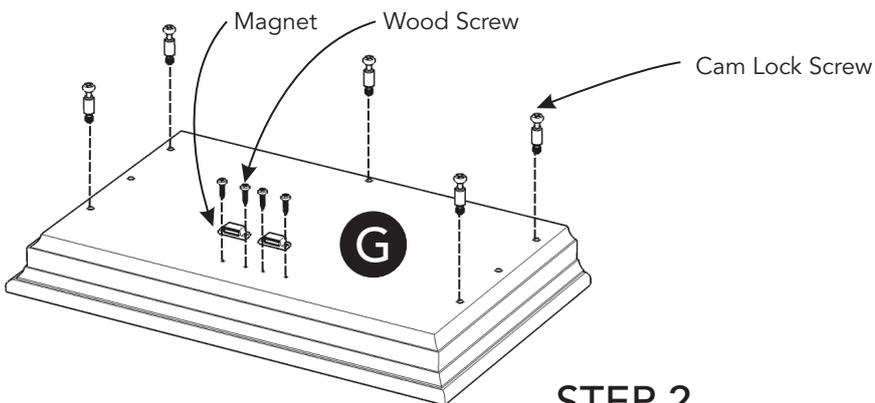

## STEP 2

Insert Cam Lock Screws into pre-drilled holes in Tops (G) and (O).

Attach Magnets to Tops (G) and (O) with Wood Screws into pre-drilled holes. (See Figure 2)


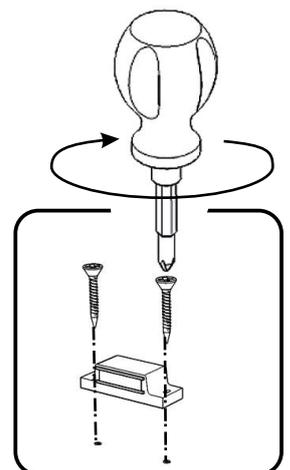


Figure 2

## Assembly Instructions 3/6

### STEP 3

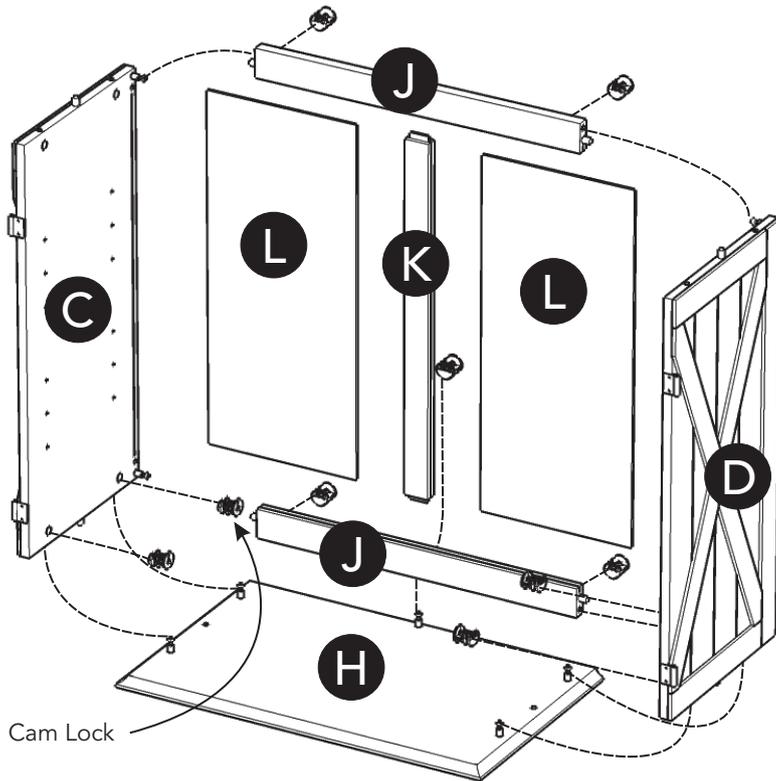

Attach Upright (K) to Back Rail (J).

Slide Back Panels (L) into position.

Attach Back Rail (J) to unit.

Attach Side Panels (C) and (D)  
to unit with Cam Locks.  
(See Figure 3)

Attach Bottom (H) to unit  
with Cam Locks.

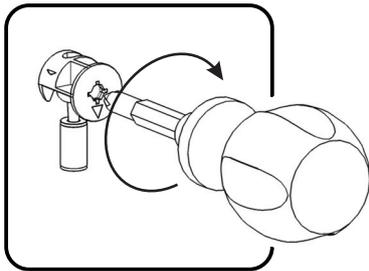


Figure 3

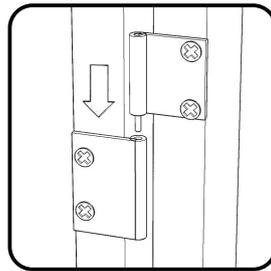


Figure 4

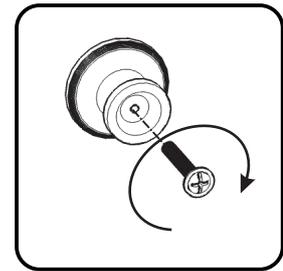



Figure 5

### STEP 4

Attach Doors (A) and (B) to unit by sliding  
door hinges into side panel hinges.  
(See Figure 4)

Attach Top (G) to unit with Cam Locks.

Attach Knobs to Doors (A) and (B)  
with Machine Screws.  
(See Figure 5)

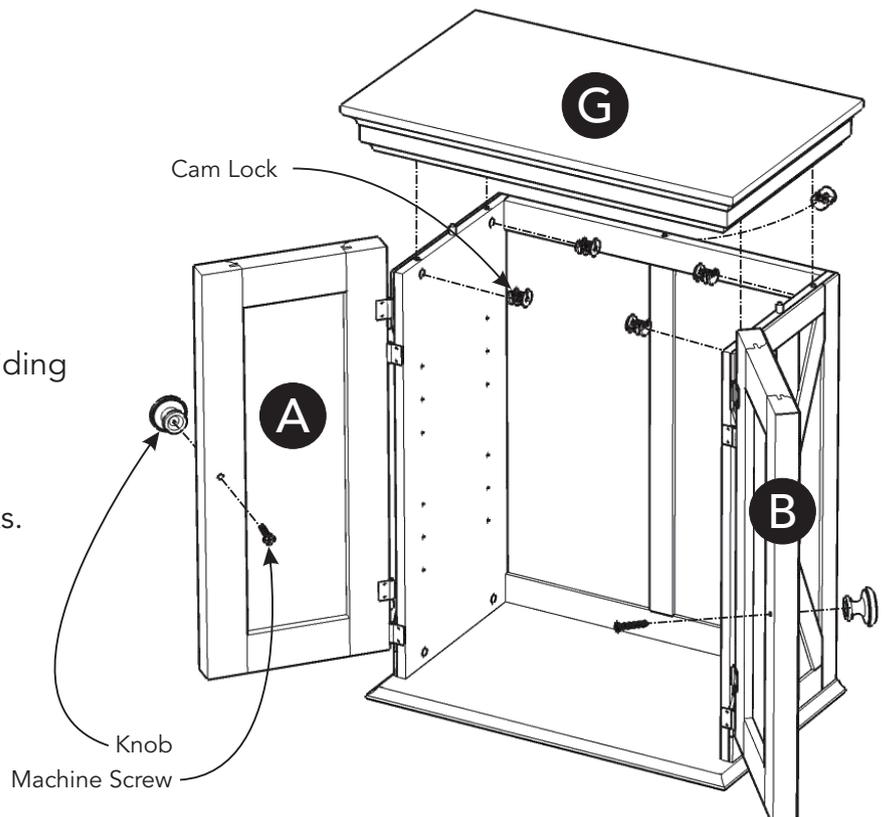

## Assembly Instructions 4/6

### STEP 5



Attach Upright (M) to Back Rail (J).

Slide Back Panels (N) into position.

Attach Back Rail (J) to unit.

Attach Side Panels (E) and (F)  
to unit with Cam Locks.

Attach Bottom (P) to unit with Cam Locks.

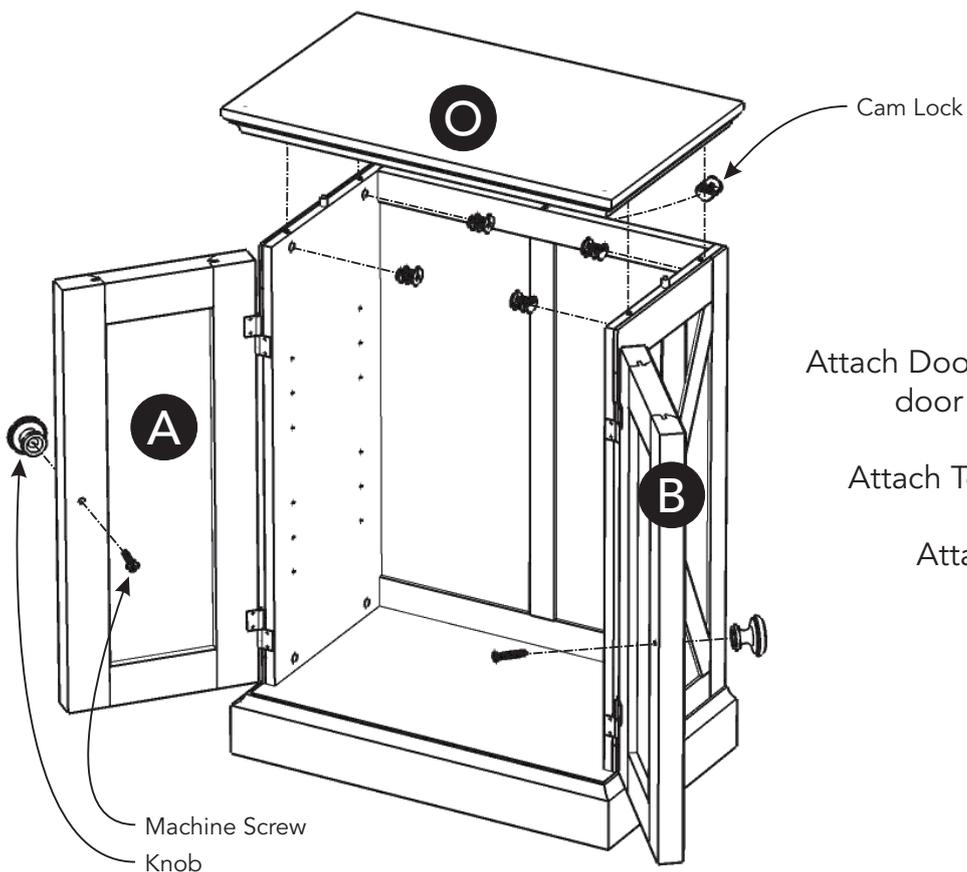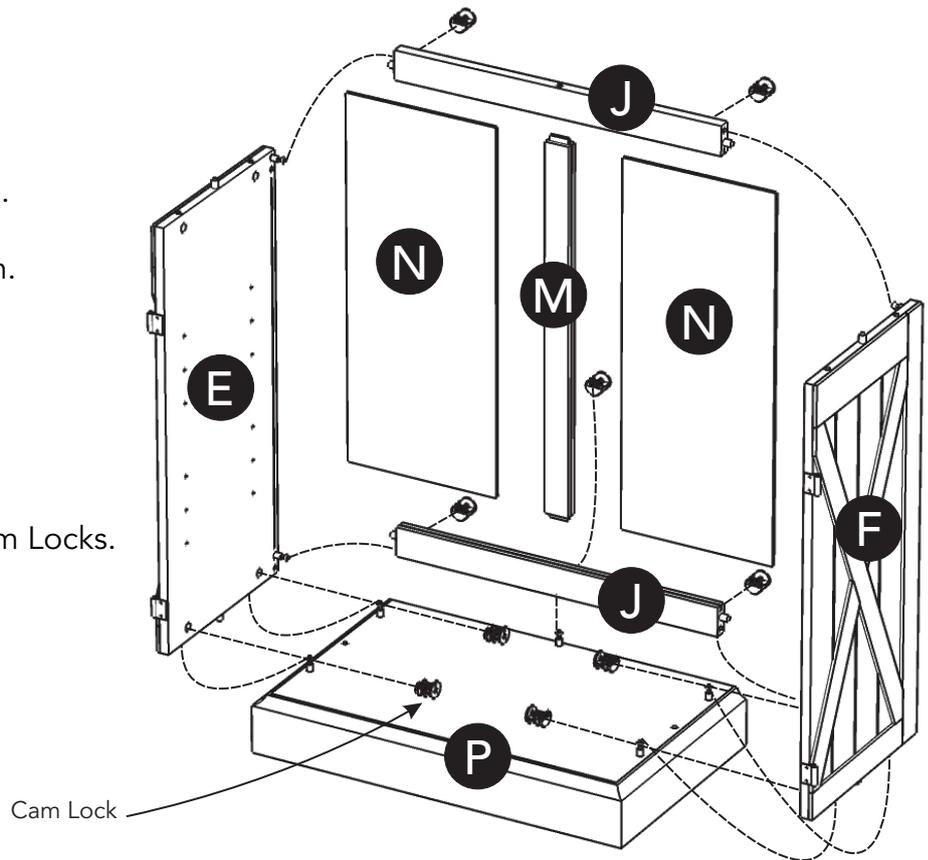

### STEP 6

Attach Doors (A) and (B) to unit by sliding  
door hinges into side panel hinges.

Attach Top (O) to unit with Cam Locks.


Attach Knobs to Doors (A) and (B)  
with Machine Screws.

## STEP 7

Place top unit onto base unit.

Insert Adjustable Pins into side panels at desired level.

Place Shelves (I) into position.

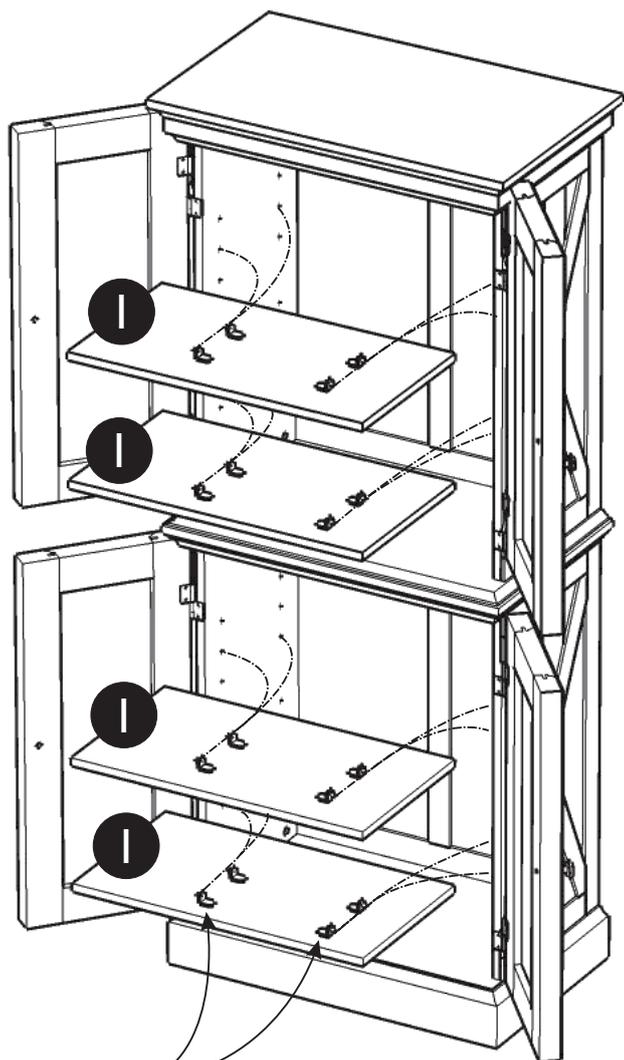

Adjustable Pin

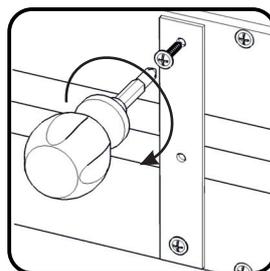


Figure 6

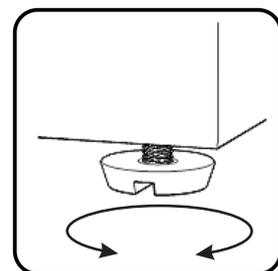


Figure 7


## STEP 8

Attach Brackets to unit with Wood Screws.  
(See Figure 6)

Level unit by adjusting the adjustable levelers on bottom of unit.  
(See Figure 7)

Insert Wood Screws into pre-drilled holes in unit, then tighten.

Note: Unit must be level before tightening these screws.

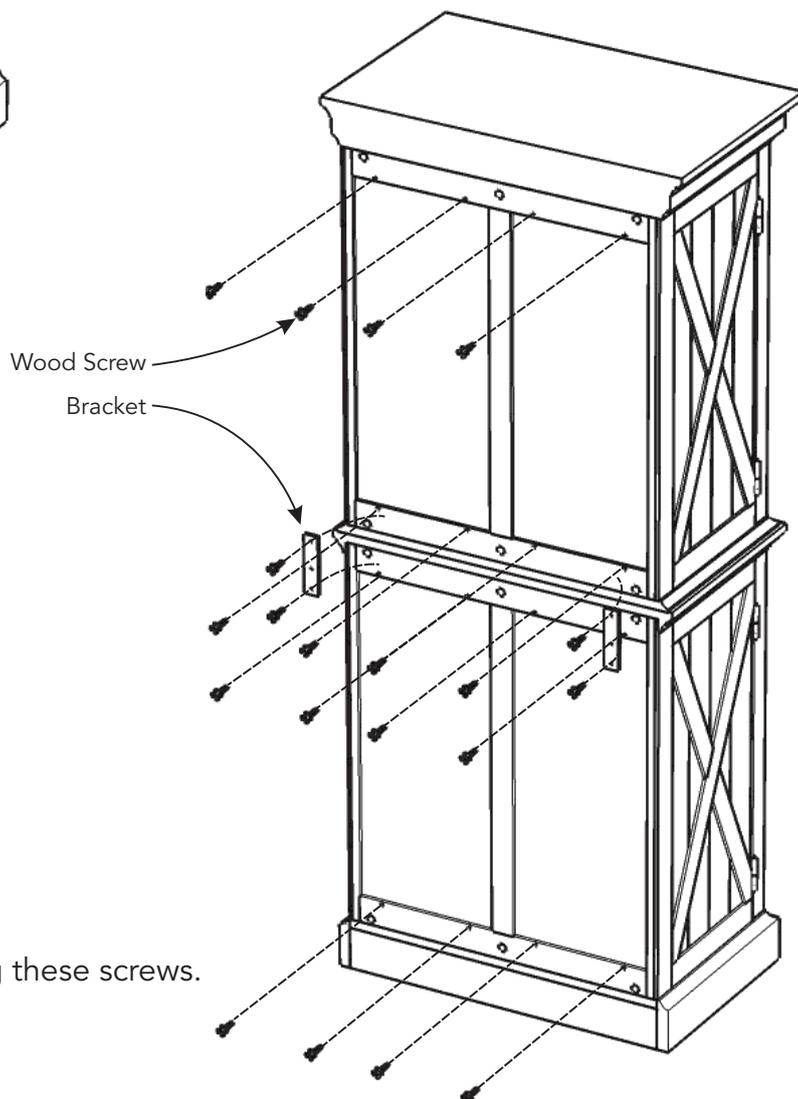

# Assembly Instructions 6/6

## IMPORTANT

- To help reduce the risk of the unit tipping over, the Tip-over Restraint must be installed following these instructions exactly.

## STEP 9

Place unit at desired location.

Drill a 3/8" hole in wall in-line with the pre-drilled hole at top of unit.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.

Attach Bracket at pre-drilled hole at top of unit with Wood Screw.

Move unit back into place.

Slide Tip-over Restraint through Bracket on wall and Bracket on unit.  
(See Figure 8)

Put tie end of Tip-over Restraint into lock end of Tip-over Restraint and pull until tight.



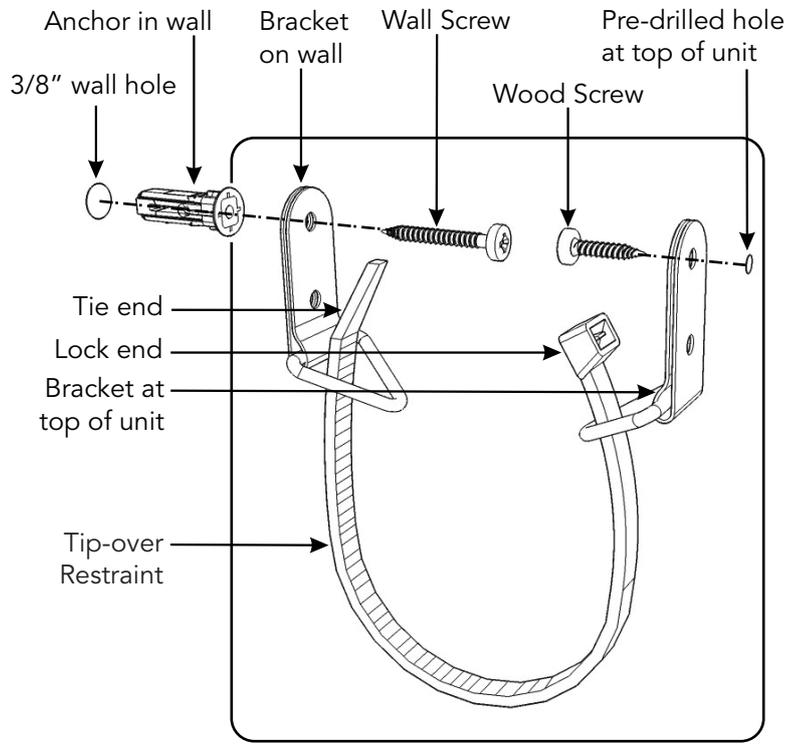



Figure 8

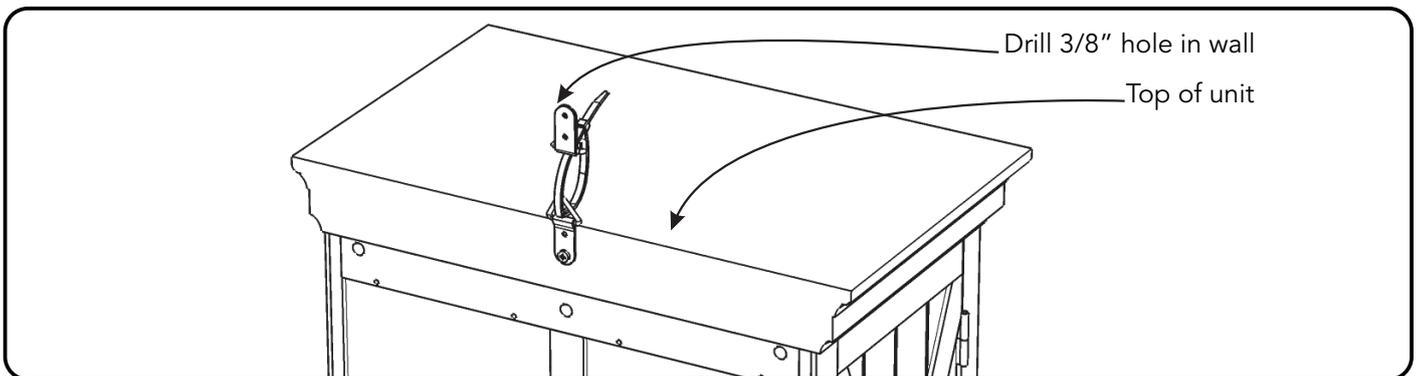

## Hardware List

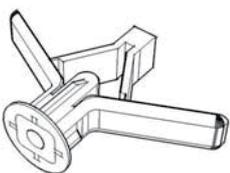


Anchor  
1 pc. (+1 extra)

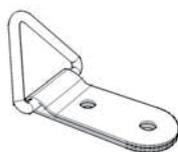

Bracket  
2 pcs. (+1 extra)



Tipover Restraint  
1 pc. (+1 extra)

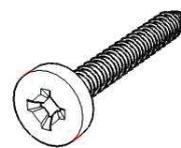

M3.5x40  
Wall Screw  
1 pc. (+1 extra)



M3.5x16  
Wood Screw  
1 pc. (+1 extra)

# CARE INSTRUCTIONS

## NEVER

allow liquids to remain on furniture.  
Absorption causes parts to warp  
and split and finishes to delaminate.

## NEVER

use glass cleaners on  
finished furniture. Ammonia  
chemically attacks the finish.



Do not use power tools  
above 8 volts to assemble.

**PREVENT  
CRACKING**



Do not place  
in direct sunlight.

**PREVENT  
FADING**



Do not write  
directly on surface.

**PREVENT  
MARKING**



Do not place hot  
objects on surface.

**PREVENT  
FINISH DAMAGE**



Do not use rubber  
based placemats.

**PREVENT  
DISCOLORING**



Do not use commercial  
waxes and polishes.

**PREVENT  
YELLOWING**

## CLEAN

with a soft cloth moistened  
in lukewarm soap and water.  
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

[www.homestyles-furniture.com/customer-service/replacement-parts](http://www.homestyles-furniture.com/customer-service/replacement-parts)

Home Styles Customer Service: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319