

Fold line  
(don't printing)

## WATER MEASURING GUIDE RECOMMENDED FILL LINES

	Breast Milk and Formula				Baby Food Jar
	Narrow Neck Bottle		Wide Neck Bottle		
	4 oz.	8 oz.	4 oz.	8 oz.	
Refrigerated Fill Line	4	2.5	4	5	3.5
Room Temperature Fill Line	2.5	2	2.5	3.5	3.5

## WARNINGS

**ALWAYS mix bottle / stir food well and test temperature of contents before giving bottle to child.**  
 ALWAYS turn unit off and unplug to clean.  
 DO NOT use glass bottles in Warmer – sudden temperature change may cause glass to break.  
 DO NOT immerse unit in water.  
 DO NOT use scouring pads, solvents or abrasive cleaners to clean unit.  
 If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.  
 Not for space heating purposes.  
 Any other servicing should be performed by an authorized service representative.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
 (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
 CAN ICES-3(B)

## CUSTOMER CARE

If you have any questions, please contact our Customer Care team by calling 800-704-8697 or by e-mailing [cs@tomy.com](mailto:cs@tomy.com).

help@thefirstyears.com / 1-800-704-8697 / www.thefirstyears.com  
 THE FIRST YEARS is the trademark of TOMY, registered in the U.S. and other countries.  
 © 2024 TOMY, TOMY INTERNATIONAL, 2015 SPRING RD., OAK BROOK, IL 60523, U.S.A.  
 All Rights Reserved. MADE IN CHINA. Y1095 231214


TOMY

4

# the first years

## SIMPLE SERVE™ FAST BOTTLE WARMER

Y1095 Instruction Manual

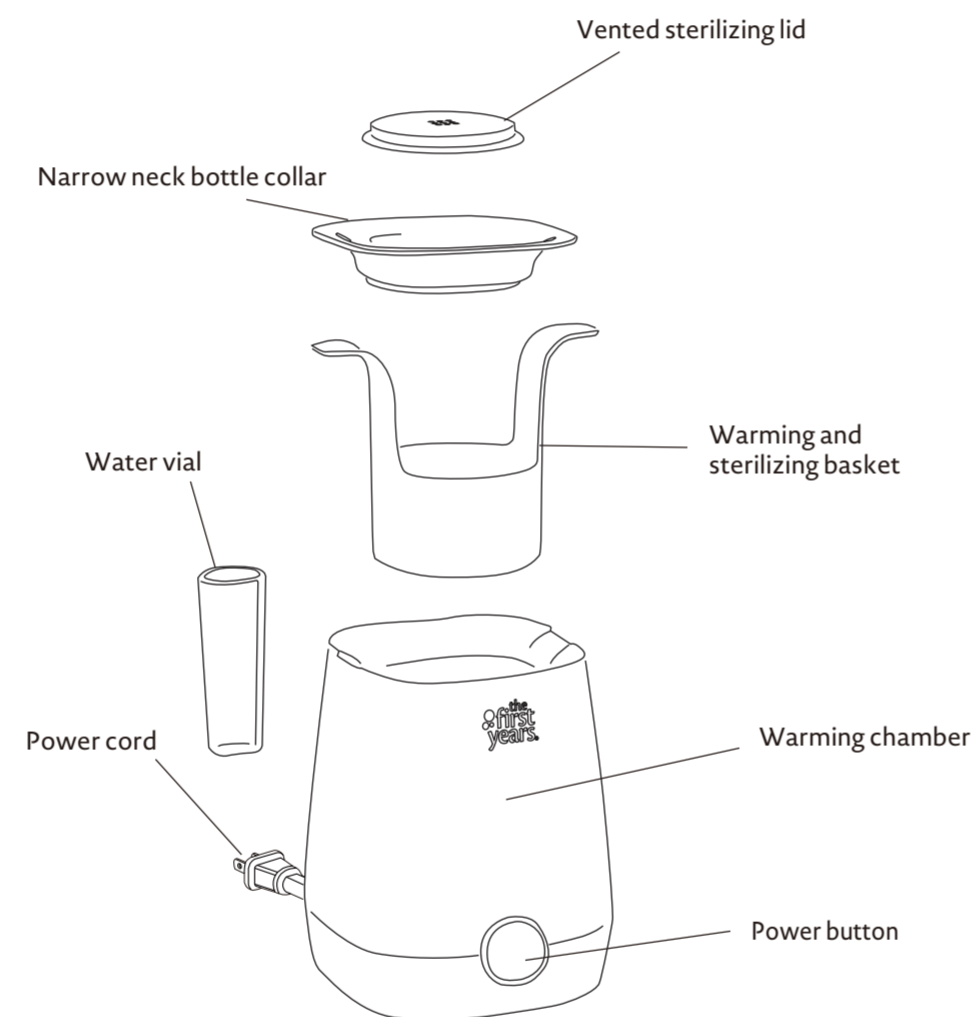

Front

Fold line  
(don't printing)

## IMPORTANT SAFEGUARDS

When using electrical appliances, the below basic safety precautions should be followed:

Read all instructions.

- Before using appliance, check that your voltage power corresponds to the one shown on the appliance's nameplate.
- Do not operate any appliance with a damaged cord, damaged plug, or after the appliance malfunctions or has been damaged in any way.
- Always use the appliance on a level and stable work surface away from water.
- Do not let the cord hang over the edge of table or counter.
- Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
- Do not operate the appliance without water, it may damage the heating element. If this does happen for any reason, you should immediately unplug the appliance from the outlet. After cooling the appliance for 15 minutes, pour cool water in the appliance.
- Do not let the cord touch any hot surface.
- Do not let children pull the power cord or touch the appliance. They may hurt themselves or damage the appliance.
- Do not operate the unit with other appliances with large power requirements.
- While operating the appliance, be very careful of the hot steam coming out from the top cover.
- Always use mitts or clips when handling hot parts. After sterilizing, allow time for the appliance to cool down and open the top cover carefully to avoid being scalded by steam.
- The water in the base is still hot after other parts of the appliance have cooled down. Always handle carefully.
- Do not touch any hot parts such as base, heating element of base, the top cover, etc. to avoid being scalded.
- Do not move the appliance while it is in operation.
- The use of any attachment not recommended or sold by the manufacturer may cause fire, electric shock or injury. Do not use unauthorized attachments.
- Always unplug the appliance when not in use and for any cleaning, assembly or disassembly. Before cleaning, make sure the appliance has cooled down completely.
- Never immerse the appliance in water or any other liquid.
- This product is not a toy, do not allow children to play with it.
- Do not touch hot surface. Use handle or knob.
- Do not use outdoors.
- Do not use appliance for other than intended use.
- Close supervision is necessary when any appliance is used by or near children.
- Extreme caution must be used when moving an appliance containing hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Before serving be sure food is at safe temperature.
- Before serving, unplug cord from wall outlet and dish. Do not leave cord within child's reach.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- a) A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.  
 b) Extension cords are available and may be used if care is exercised in their use.  
 c) If extension cord is used:  
 1) The marked electrical rating of extension cord should be at least as great as the electrical rating of the appliance;  
 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used in household and similar applications such as:  
 - Staff kitchen areas in shops, offices and other working environments;  
 - Farm houses;  
 - By clients in hotels, motels and other residential type environments;  
 - Bed and breakfast type environments.
- The heating element surface is subject to residual heat after use, avoid contact.
- The food should not be heated for too long.
- Please test the milk temperature before feeding baby! You can drip some milk onto your wrist to test the temperature.

## SAVE THESE INSTRUCTIONS

2

## TO CLEAN

**Water vial:** Dishwasher safe (top rack only).

**Basket, adapter ring:** Dishwasher safe (top rack only).

**Sanitizer Lid:** Dishwasher safe (top rack only).

**Bottle warmer unit:** ALWAYS TURN OFF AND UNPLUG BEFORE CLEANING. Wipe surface of unit as well as inside warming chamber with a damp cloth or sponge using mild liquid soap. Wipe with clean water. Air dry. **DO NOT IMMERSE BOTTLE WARMER IN WATER.** Do not use scouring pads, solvents or abrasive cleaners as they could damage the unit.

**Warming chamber:**

Mineral deposits (usually white in color) may form on the inner surfaces of the warming chamber and can cause damage to the unit.

**To remove mineral deposits:**

- Unplug the unit.
- Remove the basket, and wash separately as indicated above.
- Pour 2 oz. vinegar into the warming chamber and let it stand for an hour or two (longer if necessary).
- Pour out the vinegar and rinse the chamber two or three times with 3 or 4 oz. of clean tap water.

**Do not immerse the Bottle Warmer in water.** Wipe dry or air dry.

## TO USE

**HEAT BOTTLE OR JAR:**

- Place unit on a flat surface and plug into AC outlet.
- Fill water vial with room temperature water to the recommended fill line listed in the WATER MEASURING GUIDE.
- Pour water from vial into the warming chamber.
- Always place the basket into warming chamber first before adding bottle or jar. NEVER place bottle or jar directly onto heating element.
- When using:  
 a. Wide neck bottles: Place directly into lift-out basket.  
 b. Narrow neck bottles: Place adapter ring on top of basket and then place bottle into lift-out basket.  
 c. Baby food jar: Remove lid of baby food jar before placing into lift-out basket.
- Press the POWER button. The button will light up to indicate that the unit is heating.
- When the warming cycle is complete, the light will turn off. The heater will shut off automatically.
- Remove the bottle or jar from the chamber by lifting the basket. Allow it to cool before handling.

**ALWAYS mix bottle / stir food well and test temperature of contents before giving to child.**

- Wait 10 minutes before heating a second bottle to avoid overheating.

**NOTE:** Heating may vary. To adjust:

- If contents are too hot-use less water in the vial
- If contents are too cool-use more water in the vial

**ONLY use vial when adding water and avoid overfilling chamber**

**SANITIZE:**

- Place unit on a flat surface and plug into AC outlet.
- Fill the water vial to the #3 fill line.
- Place 1 or 2 pacifier(s) in lift-out basket.
- Place sanitizer lid onto lift-out basket.
- Pour water into warming chamber.
- Place lift-out basket with sanitizer lid into warming chamber.
- Press POWER button.
- When the light turns off, the unit will shut off automatically. Remove the lift-out basket with sanitizer lid.

**ALWAYS allow pacifier to cool before giving to child.**

3

Back

PM#099-Y1095A14EN

Open Size: 11"(L) x 8.5"(H)

Folded size: 5.5"(L) x 8.5"(H)

Pkg. type: Manual

Material: 80gsm woodfree paper

Color: K+K

Ref#: Ward20220809