

Metal Kinetic Spinner Wind Chime

Assembly Instructions

Step 1:

Remove the wind chime from plastic cover.

Step 2:

Slightly twist small spinners outward.

Step 3:

Hang it on your patio, porch, tree or





Step 2



anywhere you wish.



FOR DECORATIVE USE IN THE GARDEN. NOT TO BE GIVEN TO CHILDREN AS TOY. © 2019 Exhart - Chatsworth, CA 91311. Made in China / Fabrique en Chine. All Rights Reserved. For help please call 1-(800) 775-5503 www.exhart.com / instructions



Metal Kinetic Spinner Wind Chime

Assembly Instructions

Step 1:

Remove the wind chime from plastic cover.

Step 2:

Slightly twist small spinners outward.

Step 3:

Hang it on your patio, porch, tree or anywhere you wish.

Step 1



Step 2



Step 3



