 


IMPORTANT

 
Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

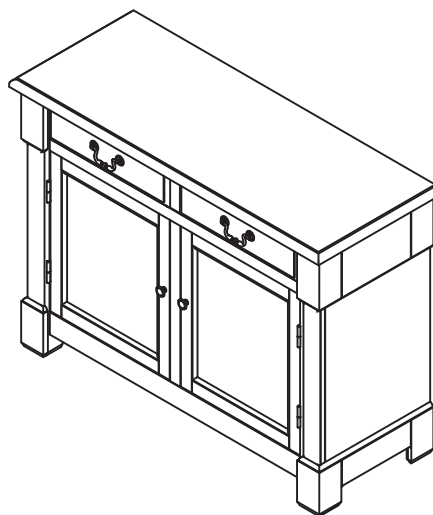

Part List

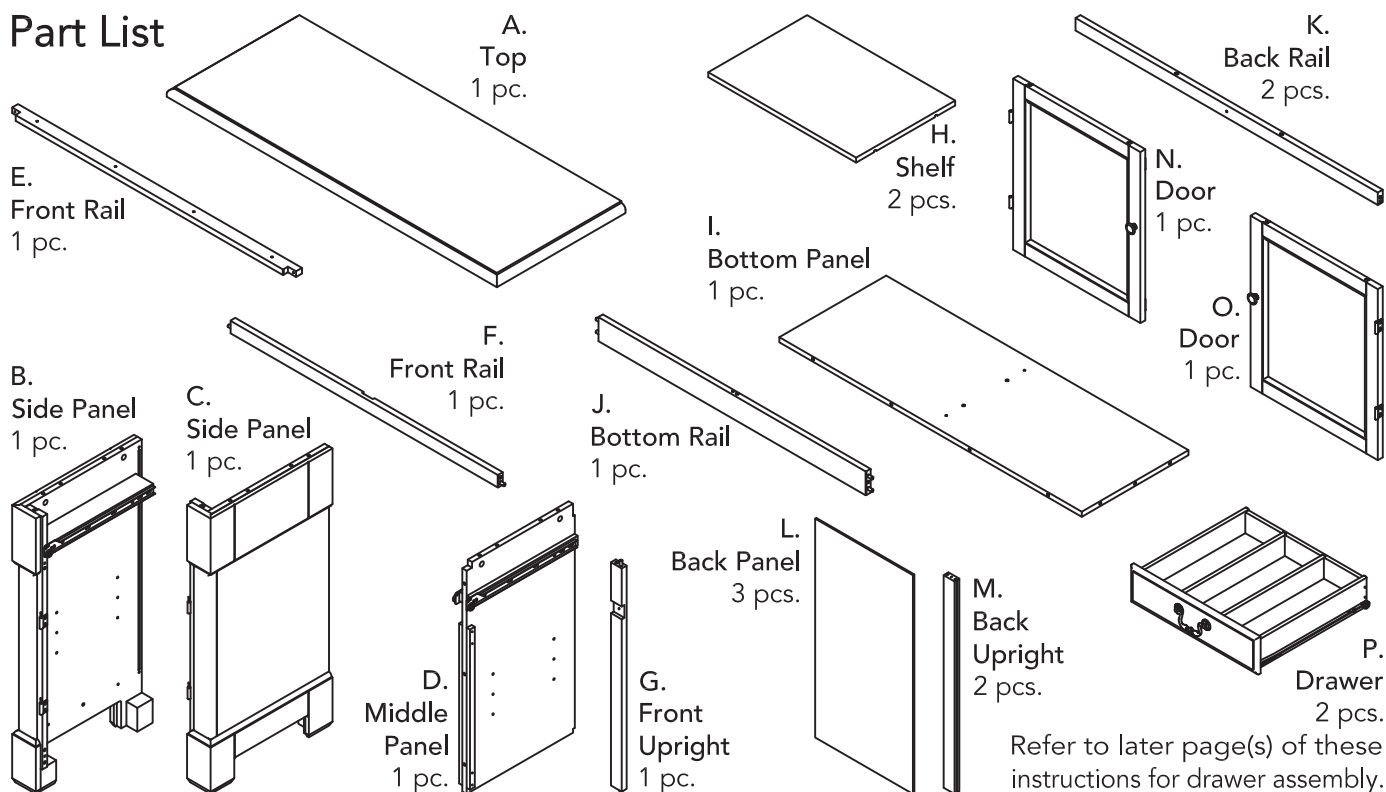

Hardware List

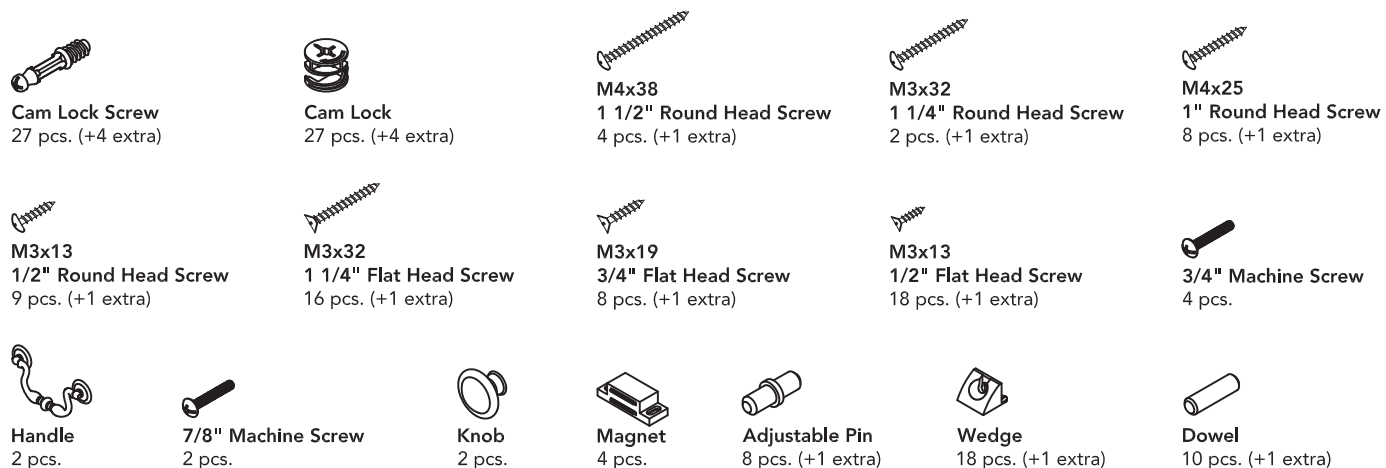 

Tool(s) required for assembly: Phillips screwdriver, Level, Pencil, Drill (8 volts or less), 3/8" Drill Bit

homestyles Customer Service: www.homestylesfurniture.com,
 servicedesk@homestylesfurniture.com, 888-680-7460

Assembly Instructions 2/14

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.

STEP 1

Insert Cam Lock Screws into pre-drilled holes in Top (A), Side Panels (B), (C), Front Rail (E), Front Upright (G) and Bottom Rail (J), then tighten.

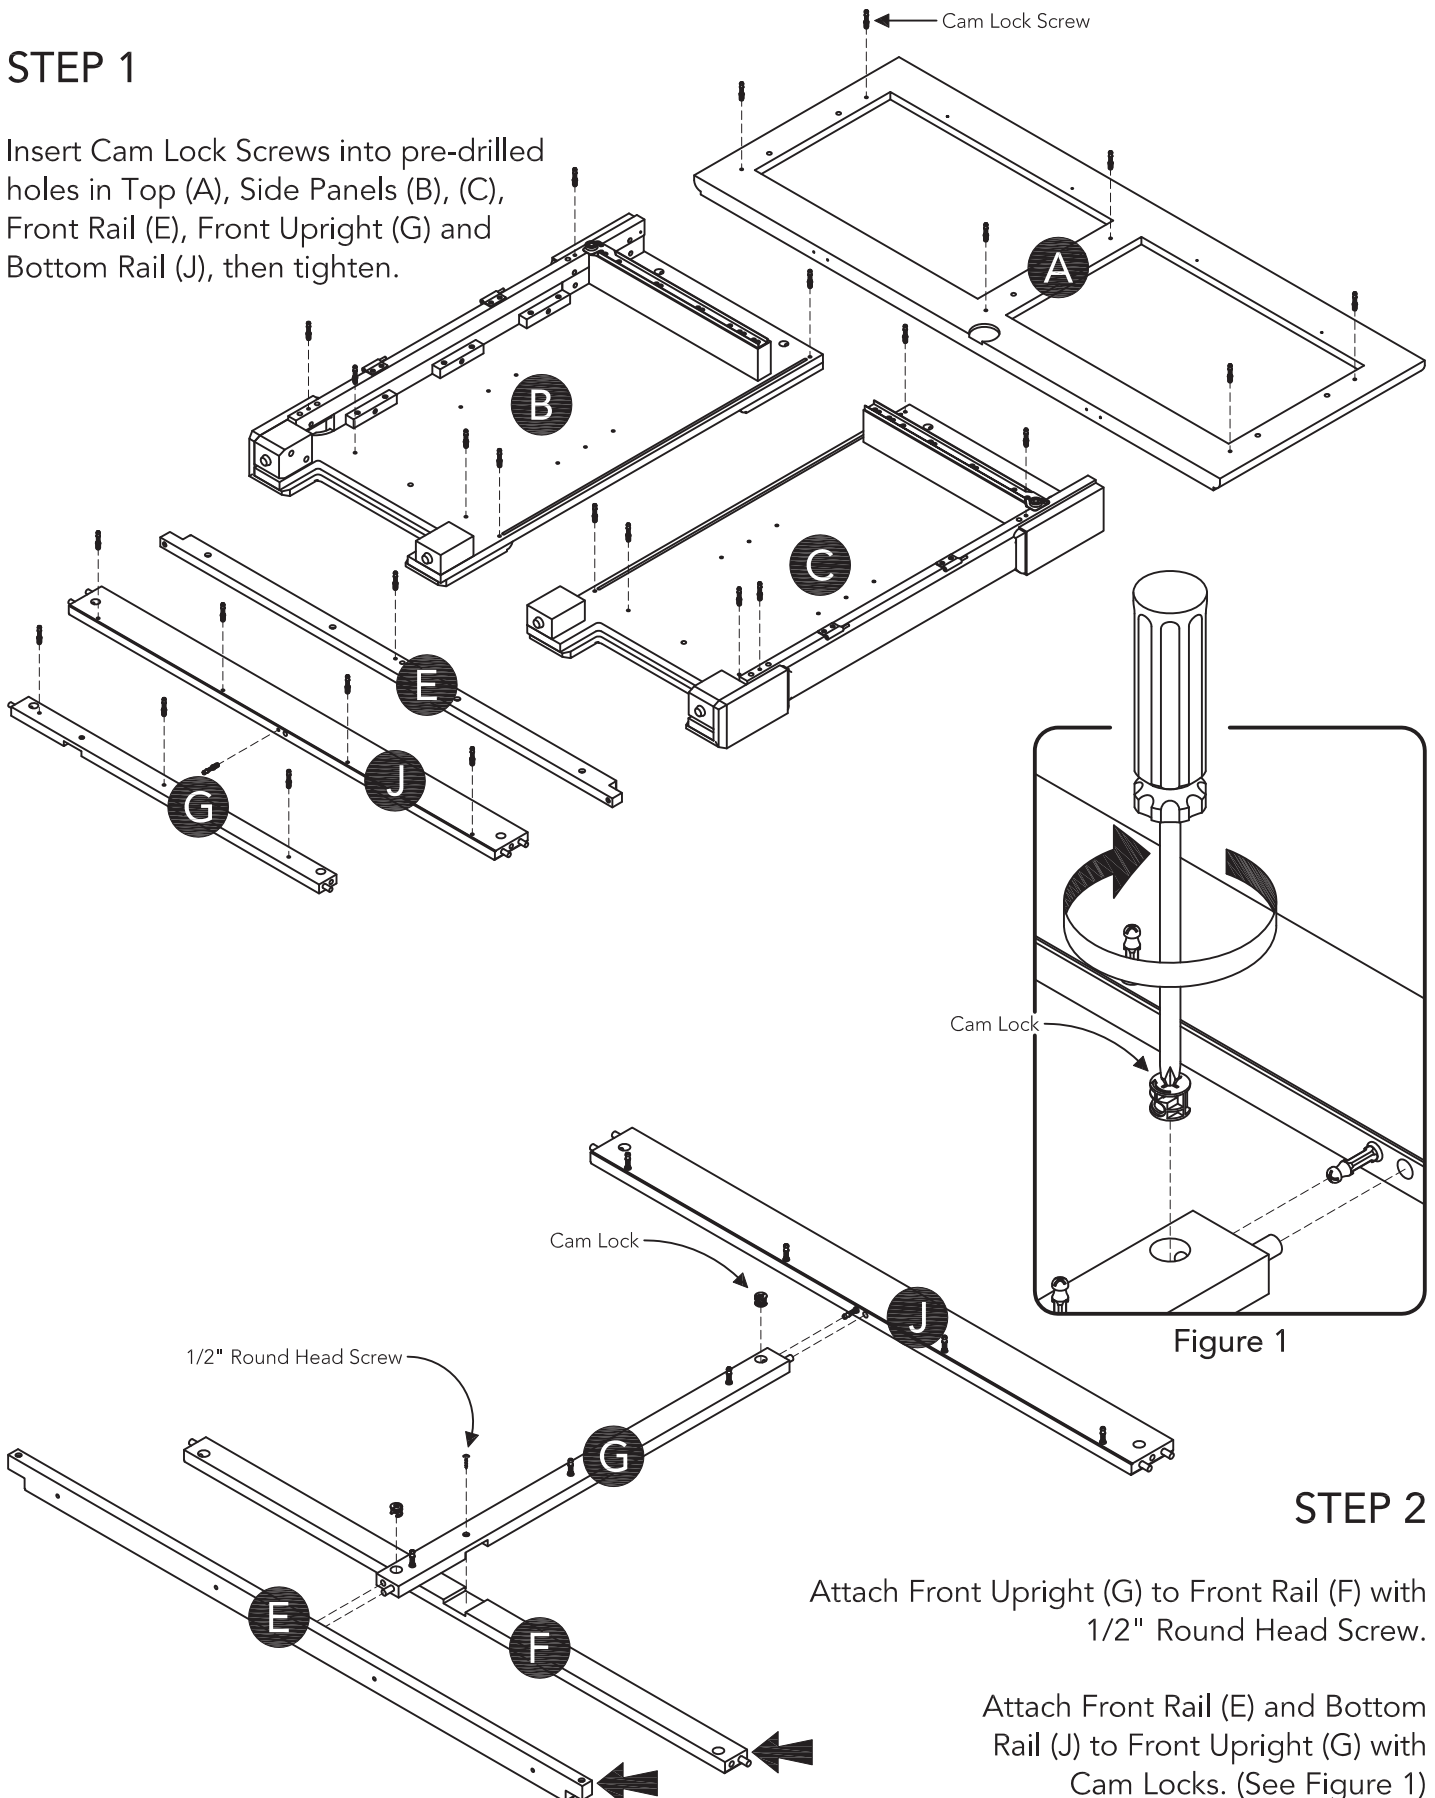 


Figure 1

STEP 2

Attach Front Upright (G) to Front Rail (F) with 1/2" Round Head Screw.

Attach Front Rail (E) and Bottom Rail (J) to Front Upright (G) with Cam Locks. (See Figure 1)

STEP 3

Attach Magnets to Middle Panel (D) with 1/2" Round Head Screws.
(See Figure 2)


 
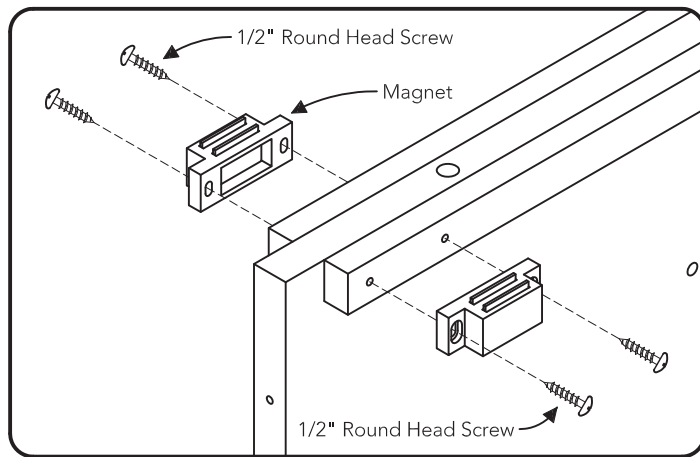 


Figure 2

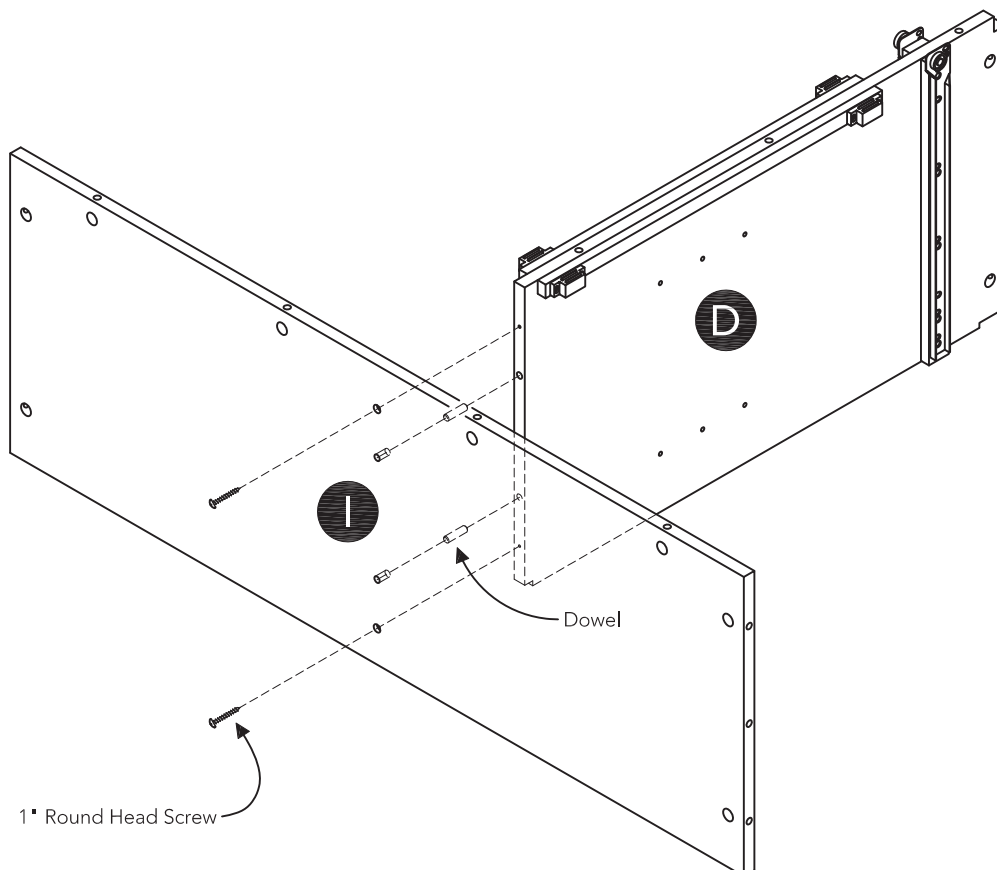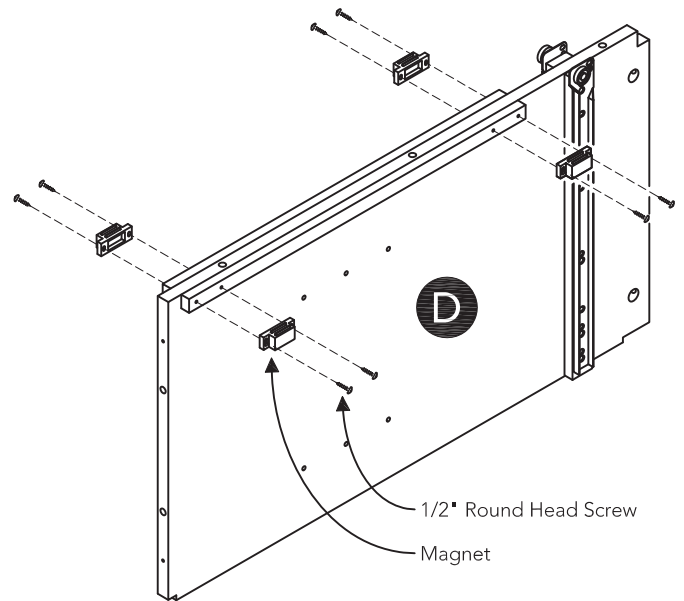 

STEP 4

Attach Middle Panel (D) to Bottom Panel (I) with Dowels and 1" Round Head Screws.

Assembly Instructions 4/14

STEP 5

Attach unit from Step 2 to unit from Step 4 with Cam Locks.


 
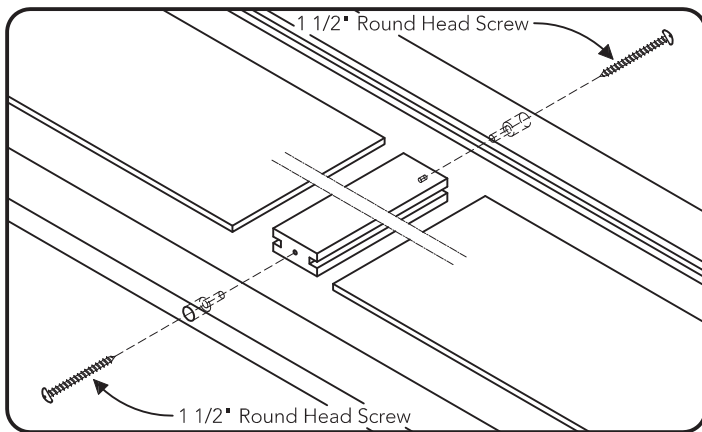 


Figure 3

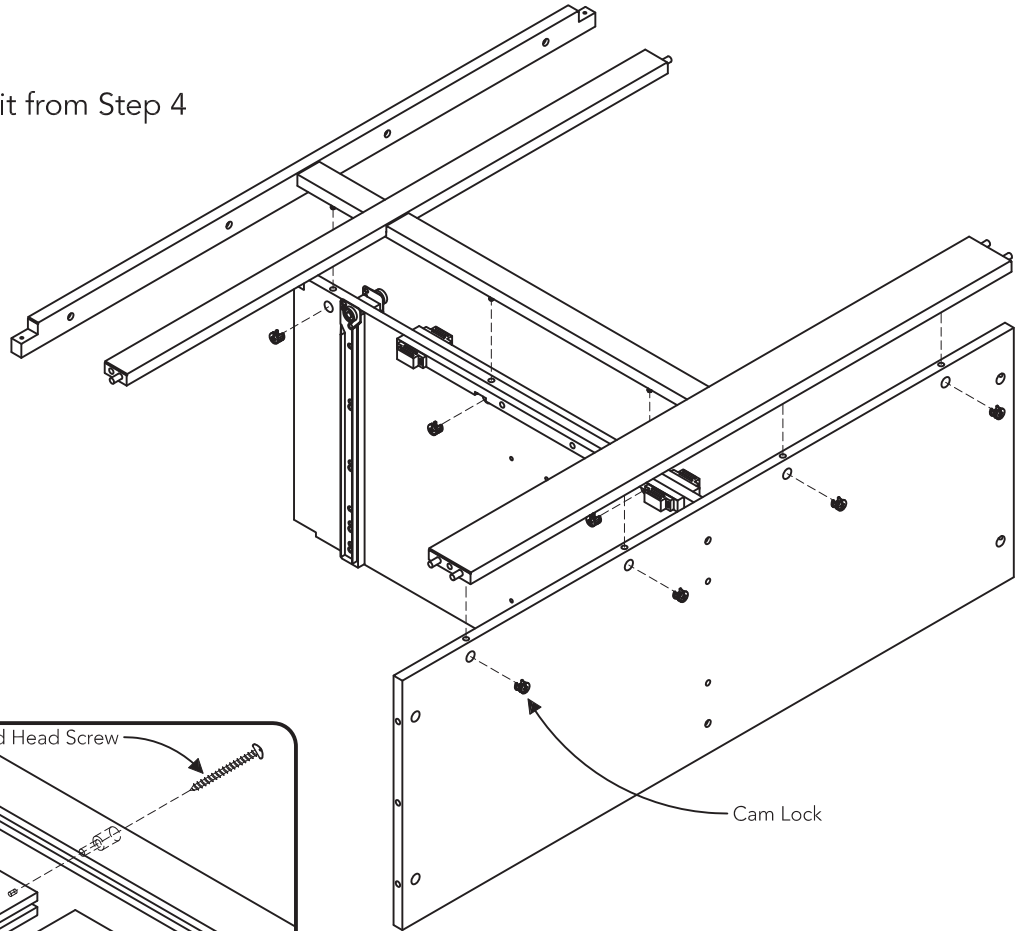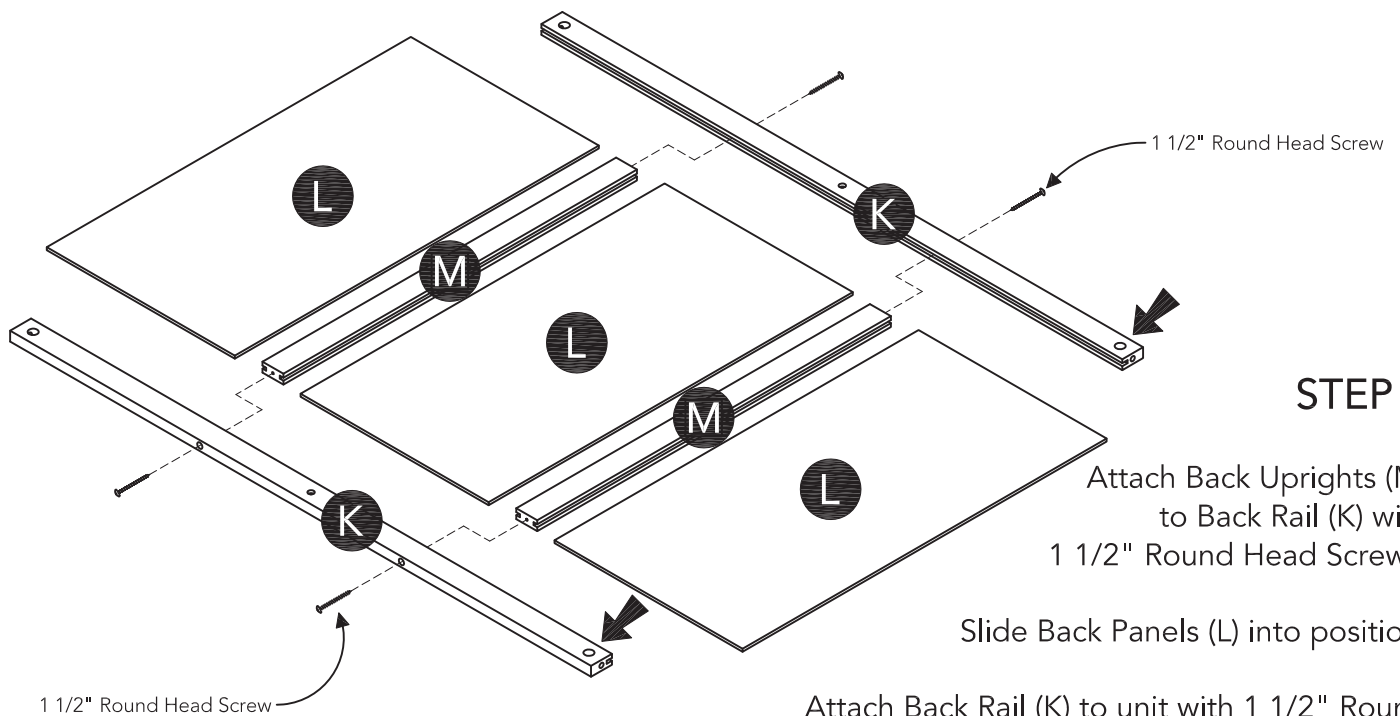 

STEP 6

Attach Back Uprights (M) to Back Rail (K) with 1 1/2" Round Head Screws.

 
 
Slide Back Panels (L) into position.

Attach Back Rail (K) to unit with 1 1/2" Round Head Screws. (See Figure 3)

Assembly Instructions 5/14

STEP 7

Attach unit from Step 6 to unit from Step 5 with 1" Round Head Screws.

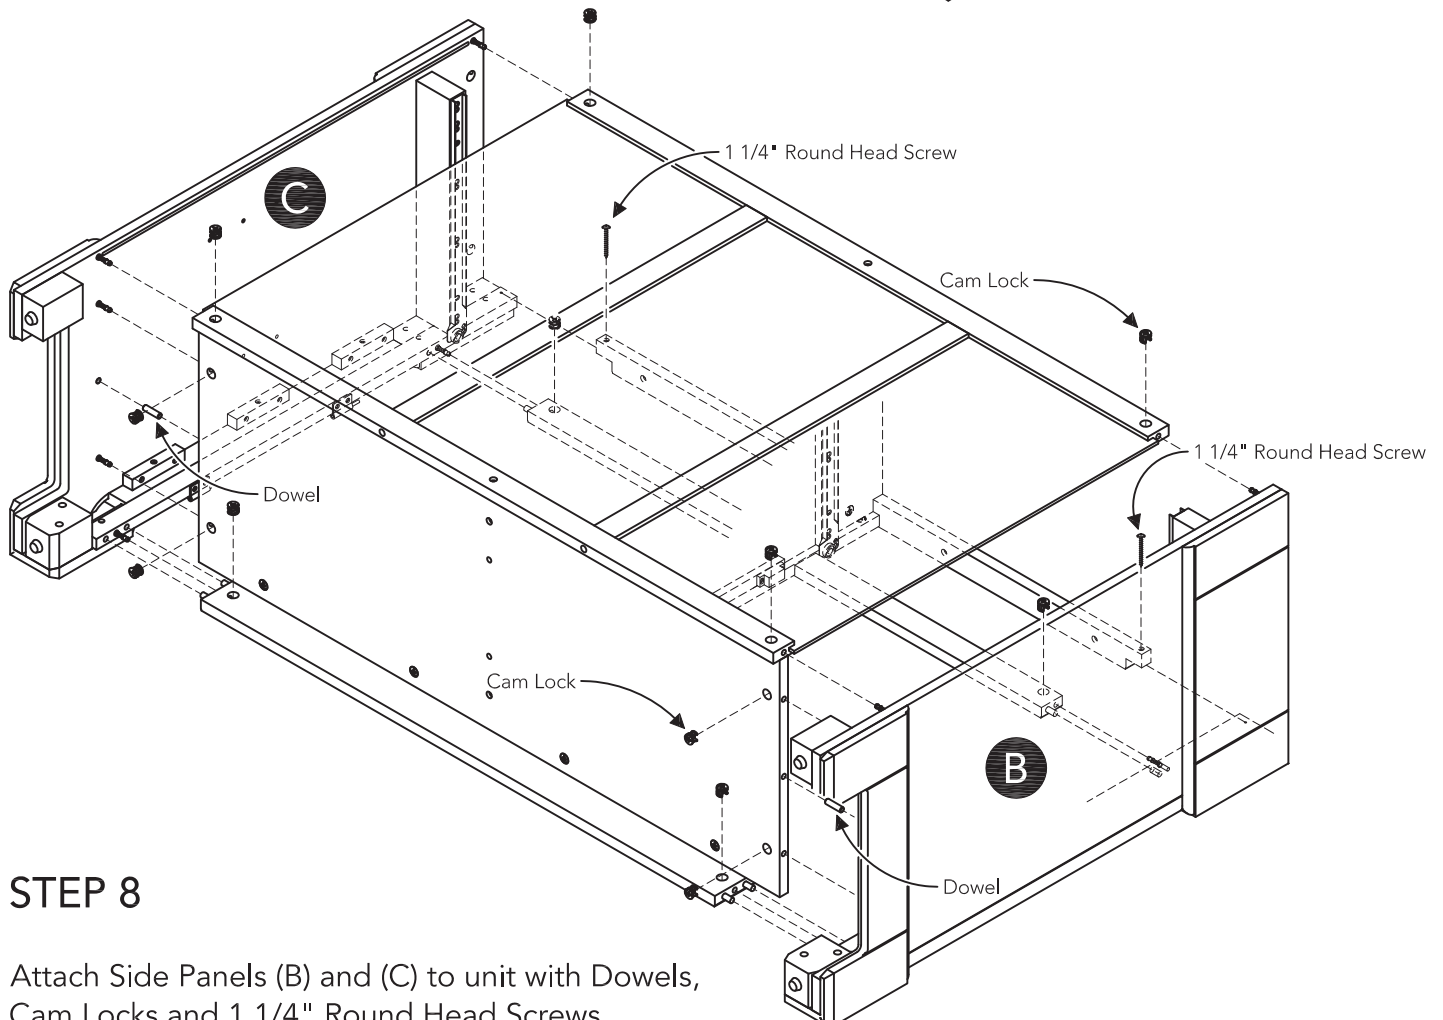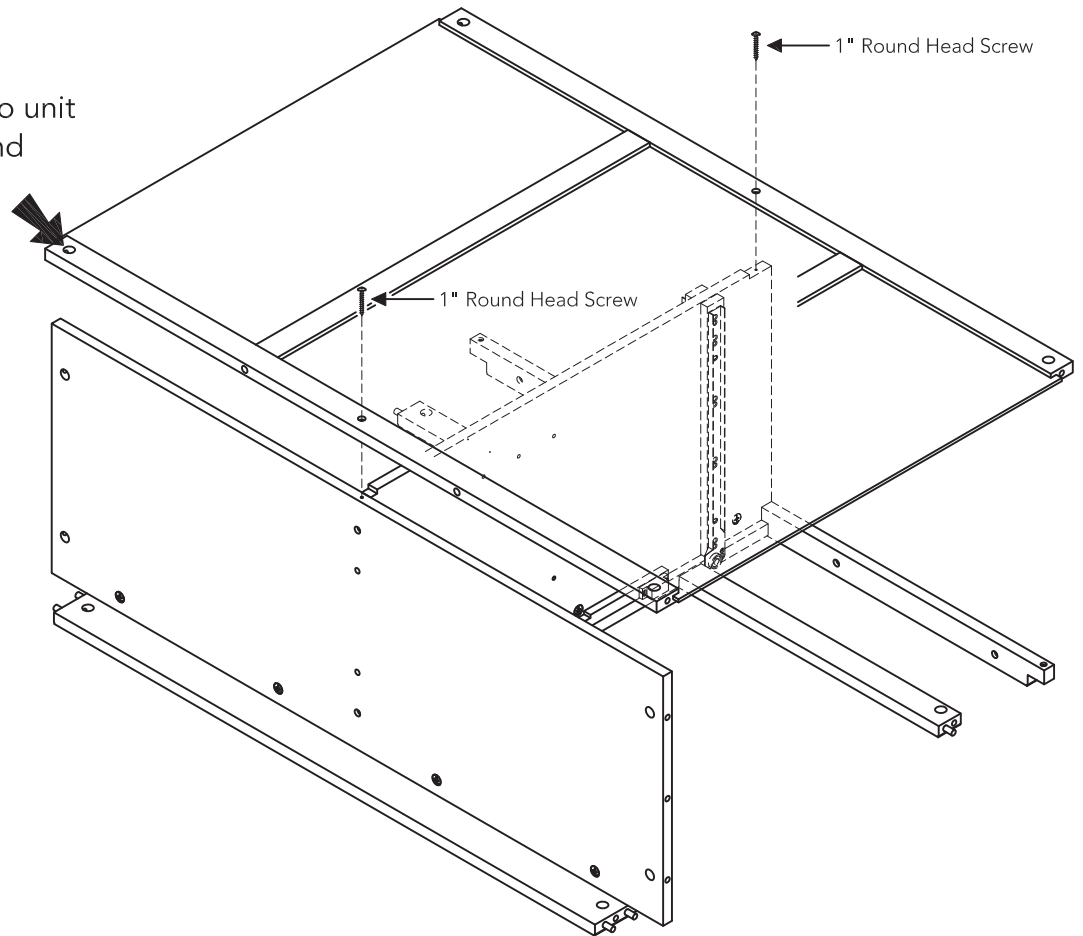

STEP 8

 
 
Attach Side Panels (B) and (C) to unit with Dowels, Cam Locks and 1 1/4" Round Head Screws.

Assembly Instructions 6/14

STEP 9

Attach Top (A) to unit with Dowels, Cam Locks and 1" Round Head Screws.

Note: A Philips screwdriver 5" or less in length is recommended.

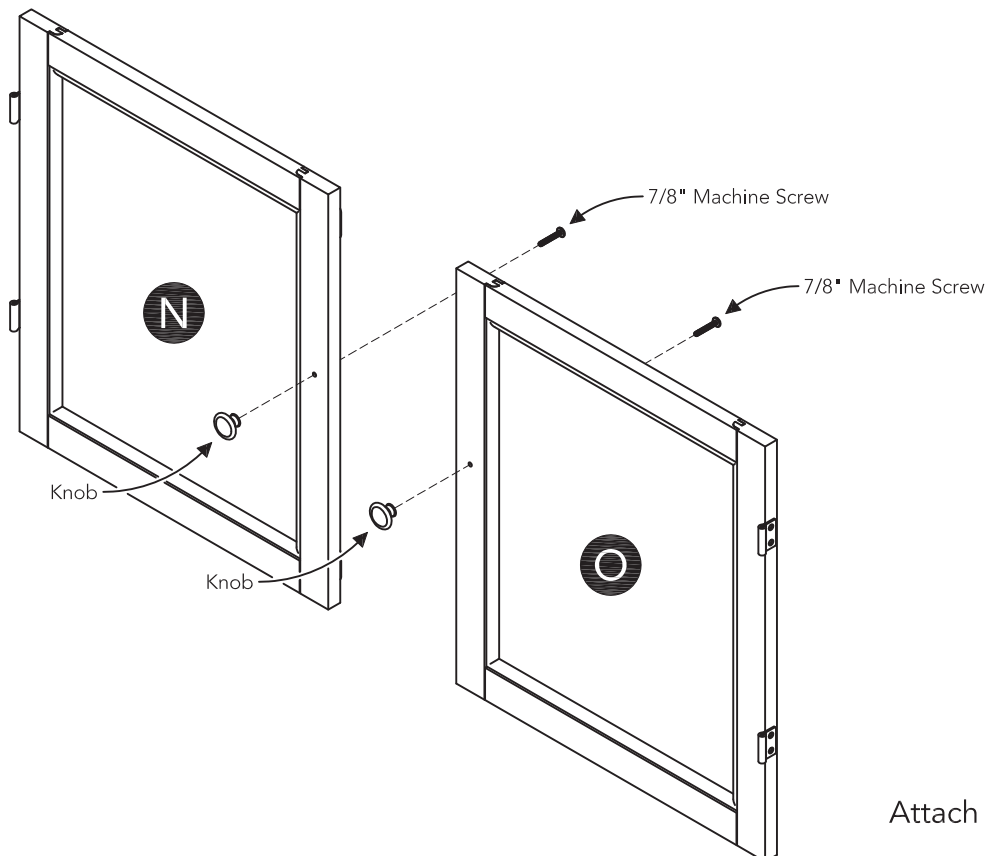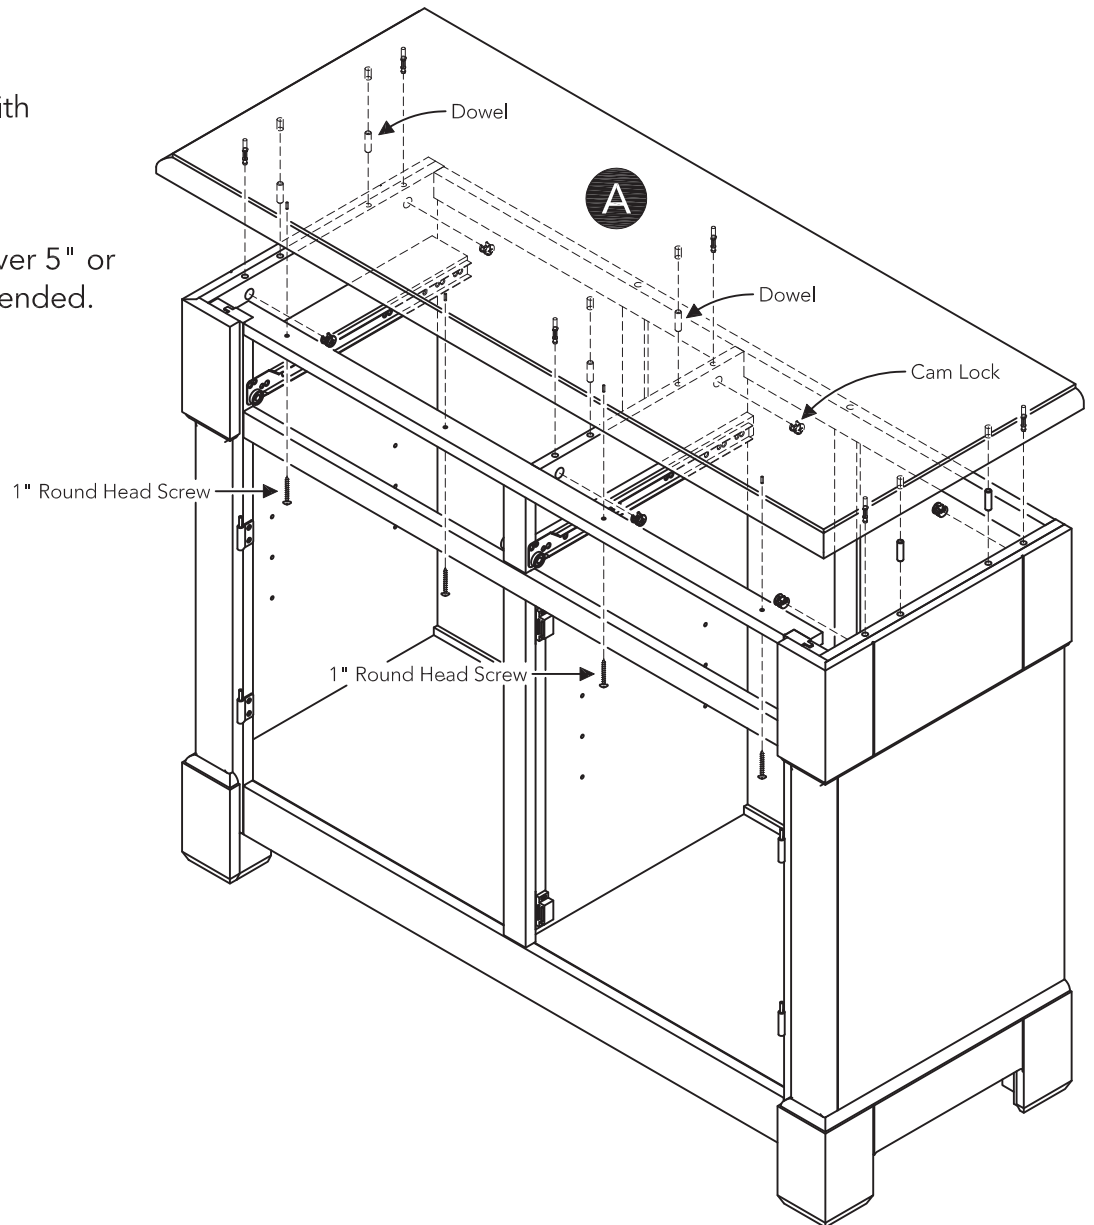

STEP 10

Attach Knobs to Doors (N) and (O) with 7/8" Machine Screws.

STEP 11

Attach Doors (N) and (O) to unit by sliding door hinges into side panel hinges.
(See Figure 4)

Level unit by adjusting the adjustable levelers on bottom of unit.
(See Figure 5)

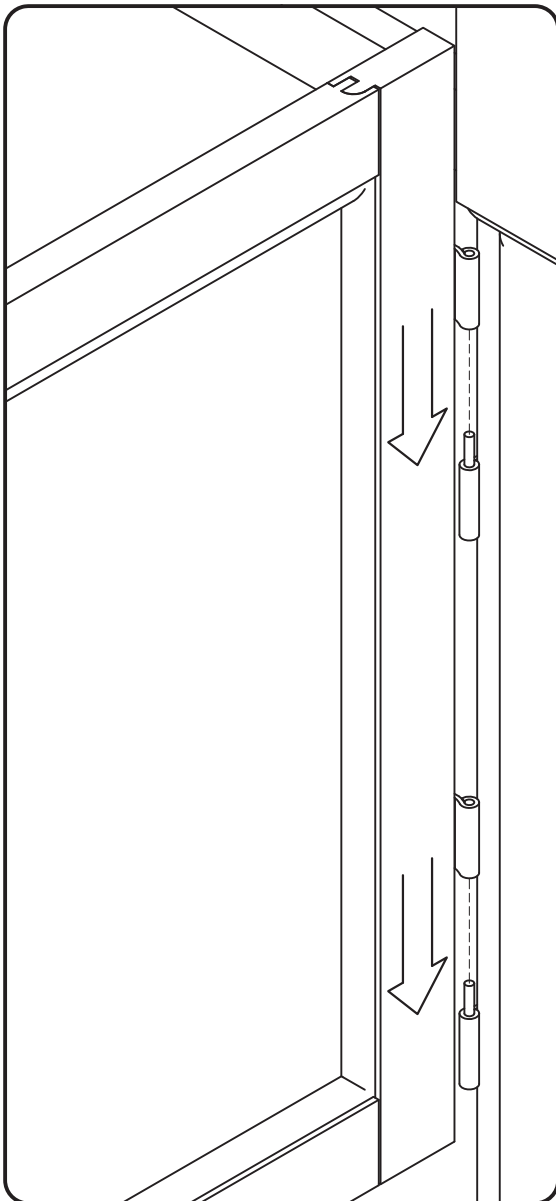 
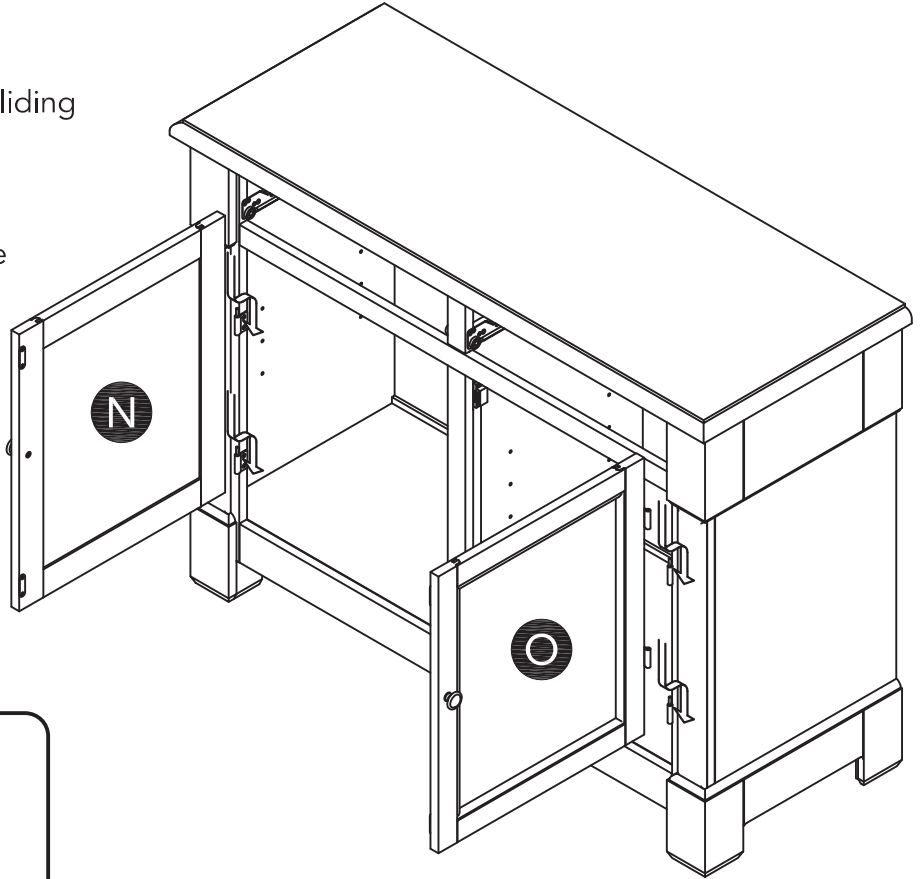 


Figure 4

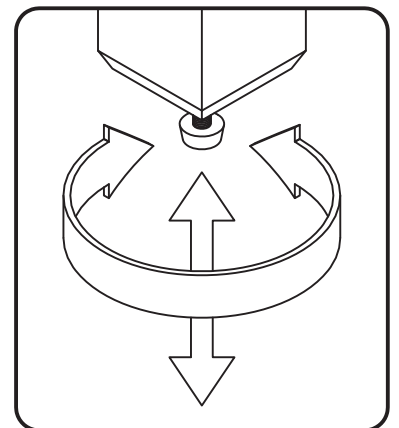 


Figure 5

STEP 12

Attach Wedges to unit with
1/2" Flat Head Screws. (See Figure 6)

Note: Unit must be level
before tightening
these screws.


 
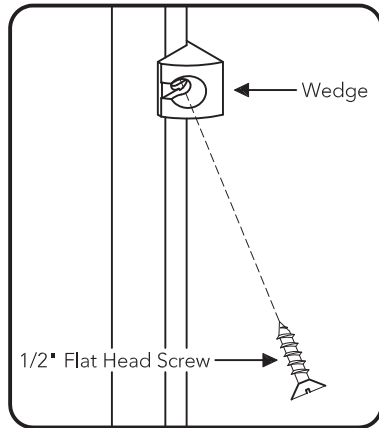 


Figure 6

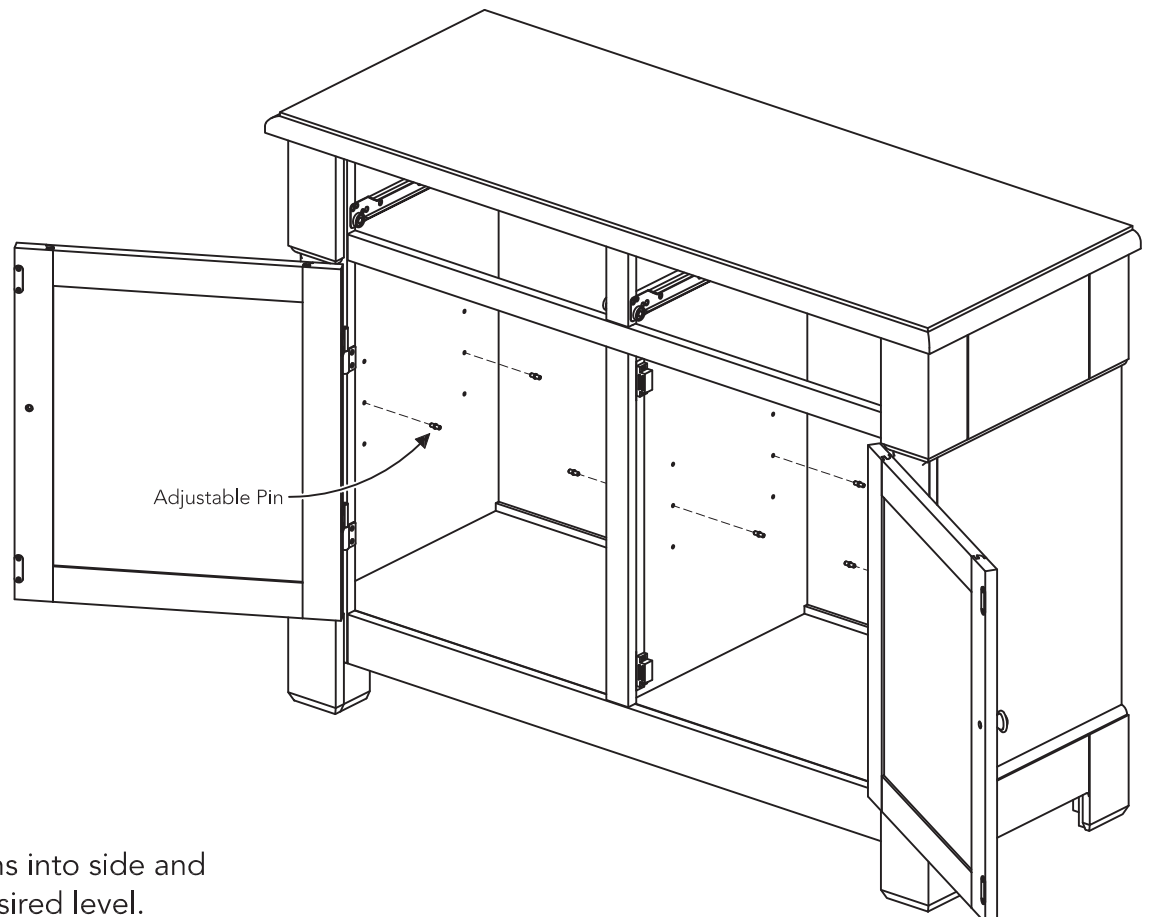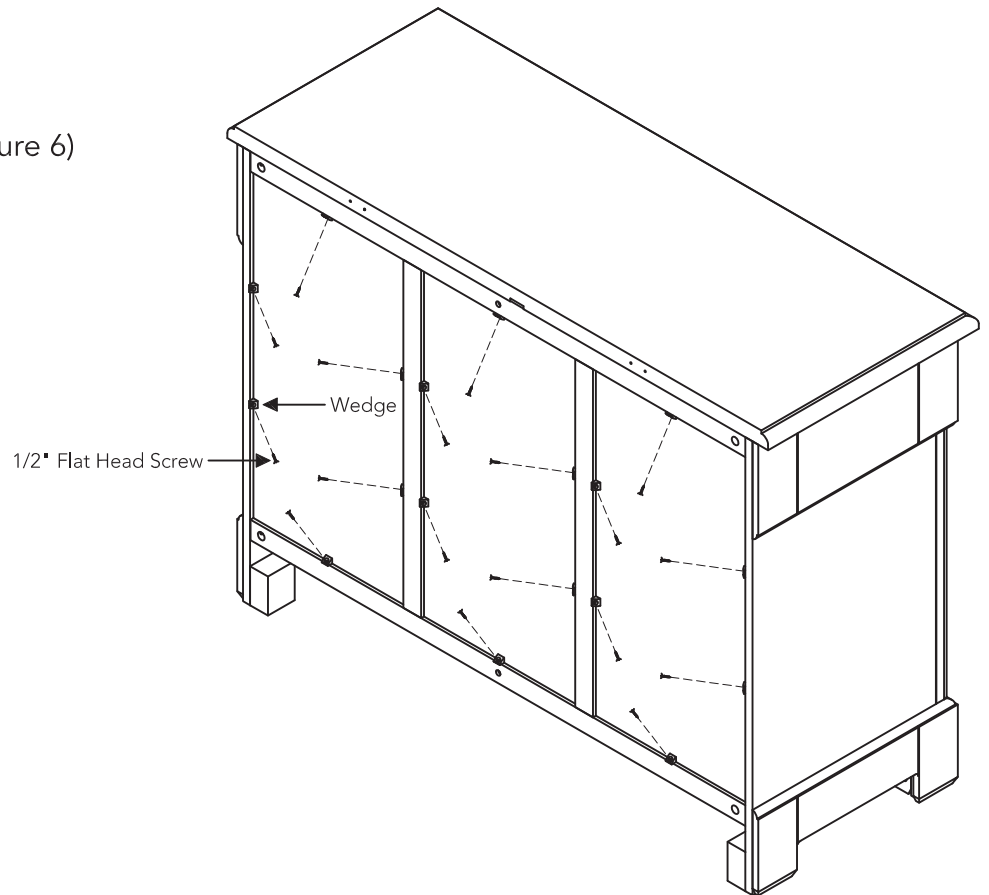 


STEP 13

Insert Adjustable Pins into side and
middle panels at desired level.

STEP 14

 Place Shelves (H) into position.

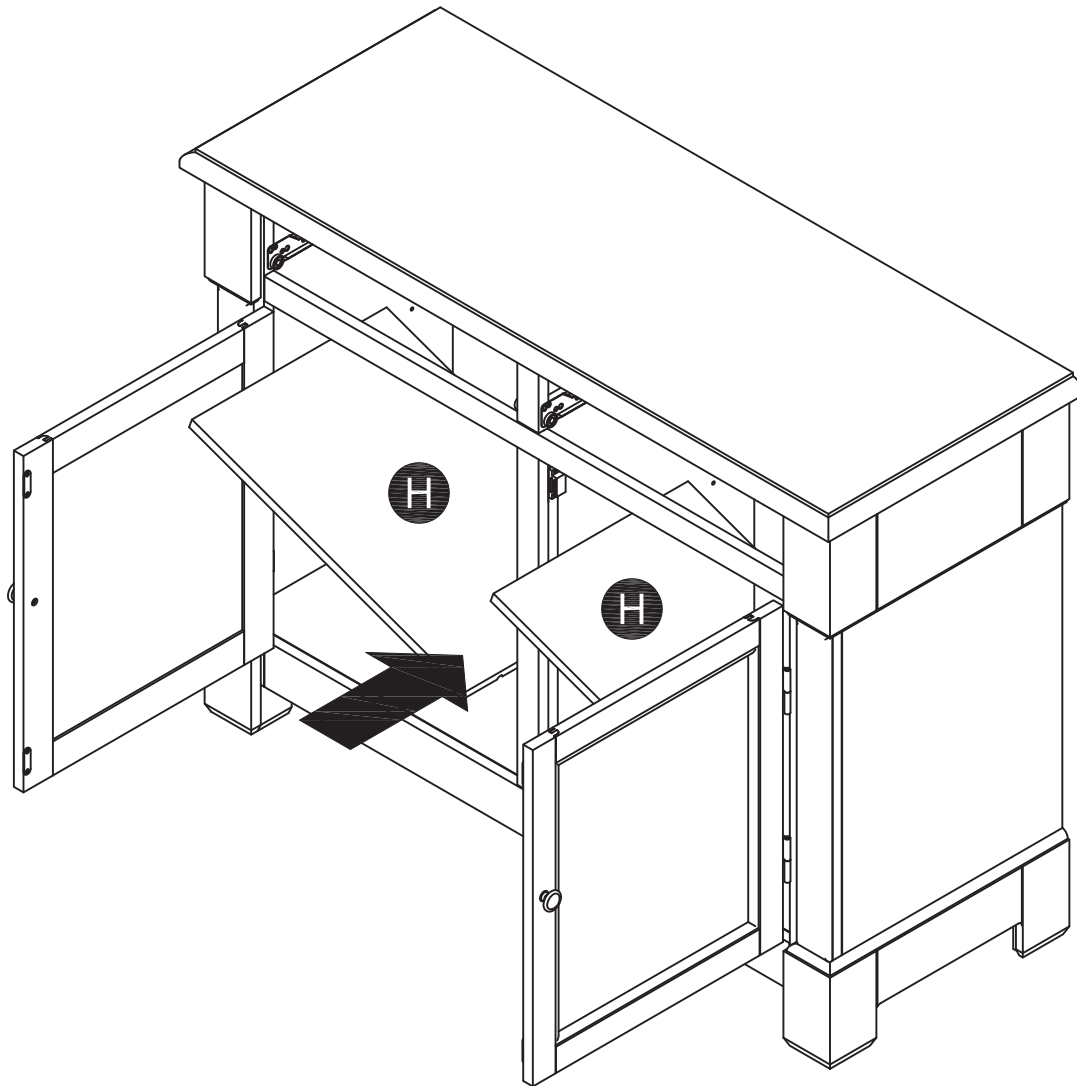

Assembly Instructions 10/14

IMPORTANT

- To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

STEP 15

Place unit at desired location.

Mark wall with pencil just above and in-line with hole in Top (A). (See Figure 7)

Move unit.

Drill a 3/8" hole in wall 1 1/2" below mark.

Insert Anchor into the wall hole and attach Tipover Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 8)

Move unit back into place and insert Tipover Restraint into unit through hole in Top (A). (See Figure 9)

Attach Tipover Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 10)

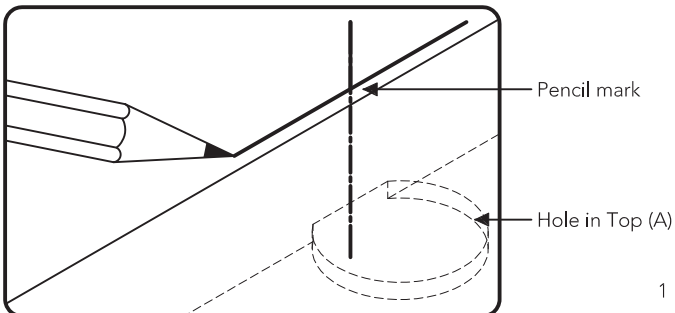 
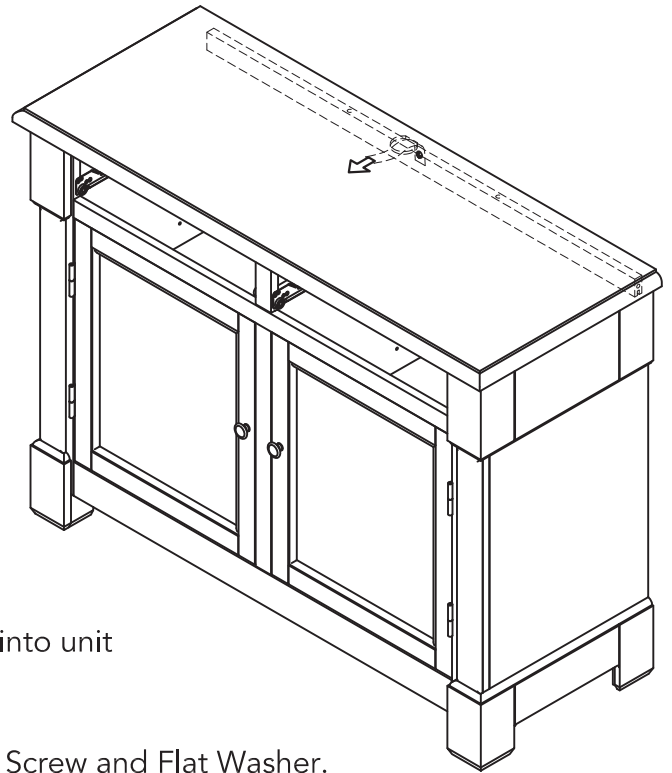 


Figure 7

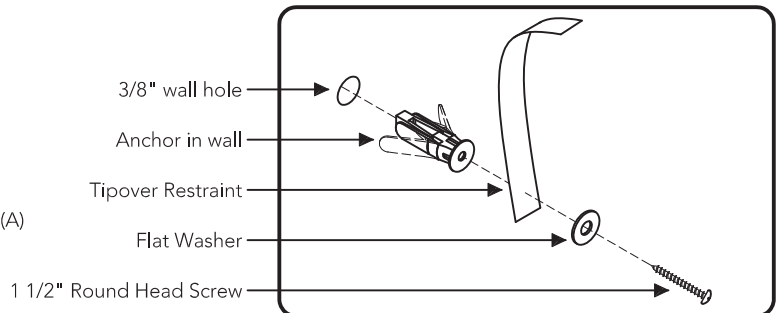 


Figure 8

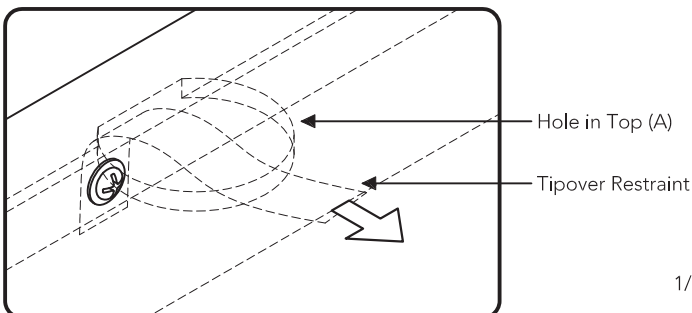 


Figure 9



 
 
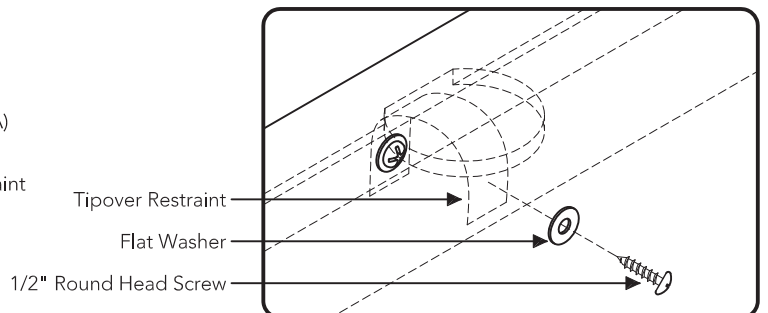 


Figure 10

 Hardware List

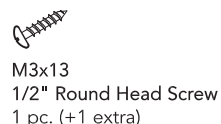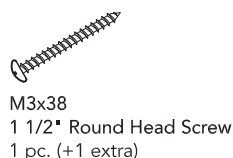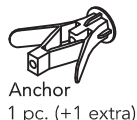

Drawer (P)

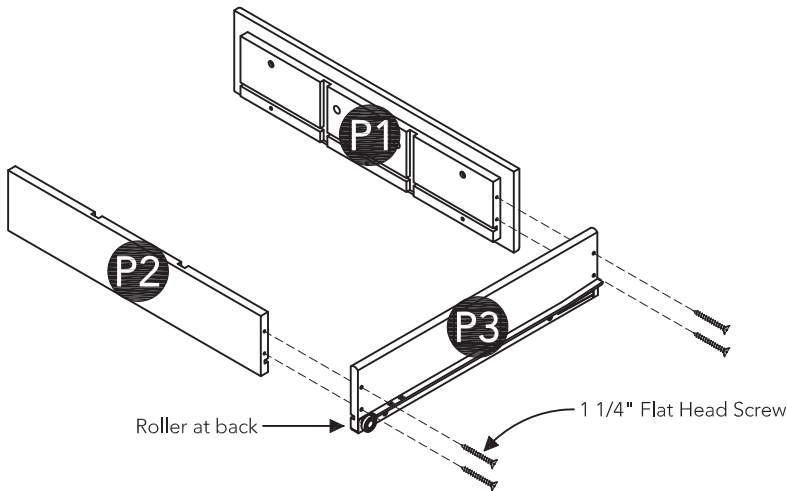 


STEP 16

Attach Drawer Side (P3) to Drawer Front (P1) and Drawer Back (P2) with 1 1/4" Flat Head Screws.

STEP 17


Insert Drawer Bottom (P5) into groove.

 Attach Drawer Side (P4) to unit with 1 1/4" Flat Head Screws.

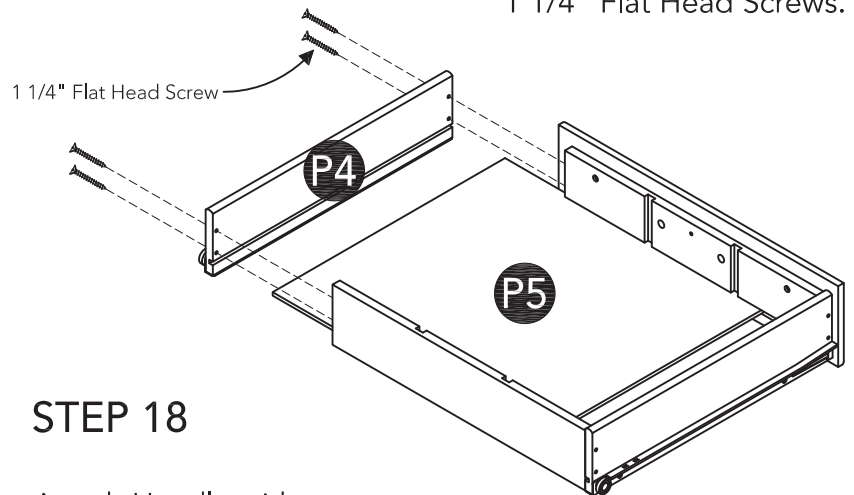


STEP 18

 Attach Handle with 3/4" Machine Screws.

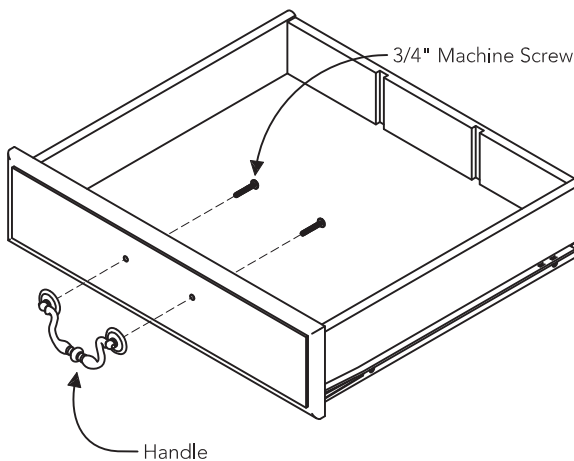


STEP 19

 Slide Dividers (P6) into grooves.

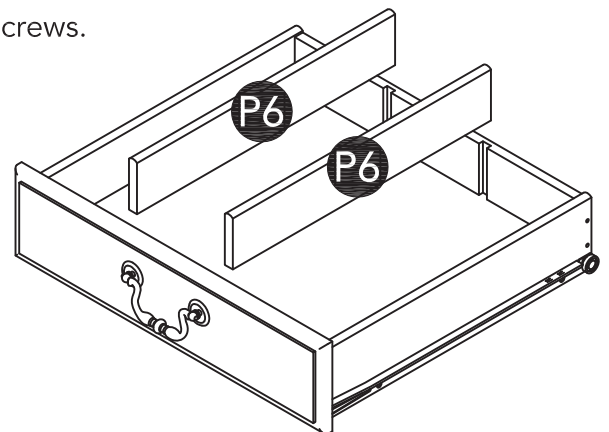


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

 
Part List

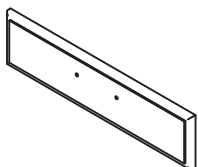


P1.
Drawer Front
2 pcs.

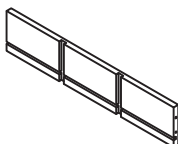 


P2.
Drawer Back
2 pcs.

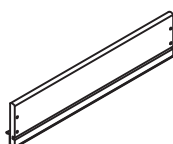 


P3.
Drawer Side
2 pcs.

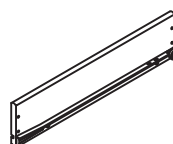 

P4.
Drawer Side
2 pcs.

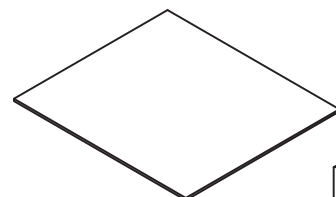 


P5.
Drawer Bottom
2 pcs.

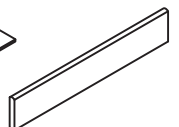 

P6.
Divider
4 pcs.

STEP 20

 Loosen slightly two screws pre-installed on back of drawer fronts.

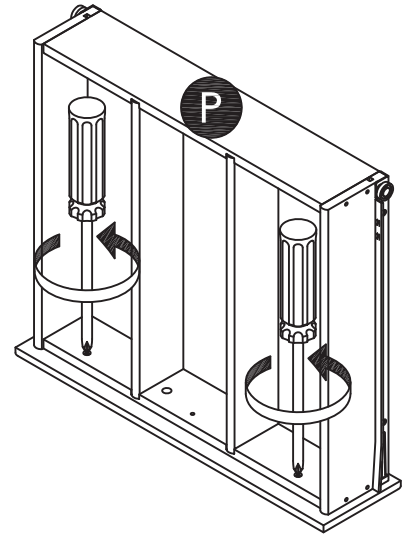

STEP 21

 
 
Insert drawers into unit, then adjust drawer front panels left or right and up or down until drawer gaps look proportional.

STEP 22

Pull drawers open slowly and re-tighten screws from Step 20.


Make sure front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

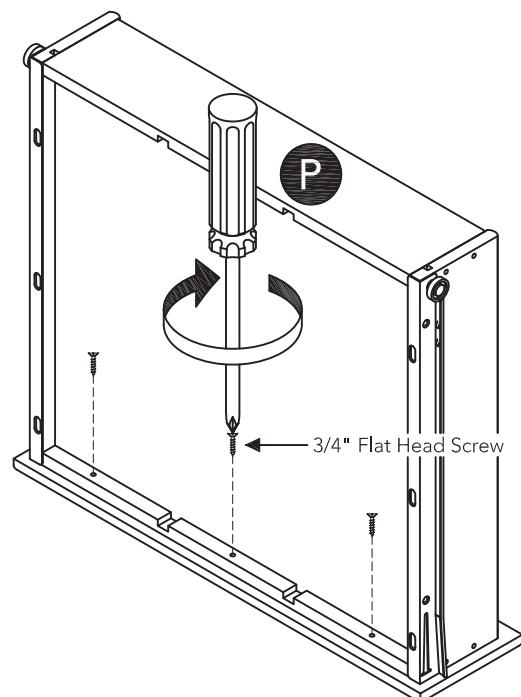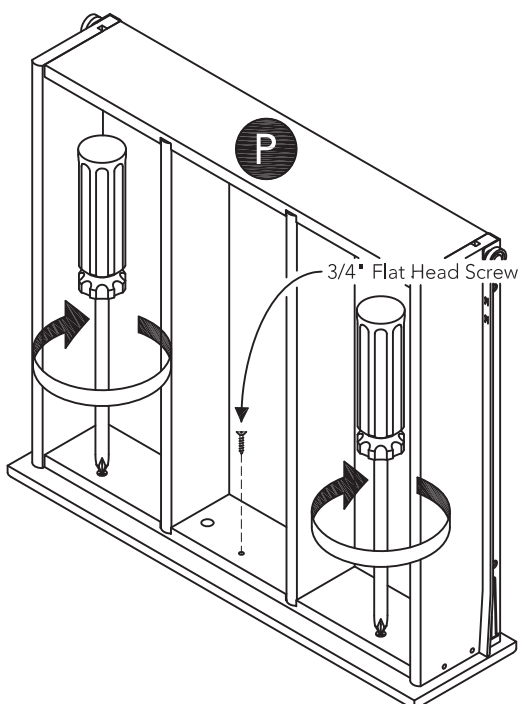

STEP 23






 
Slide Drawers (P) into position.

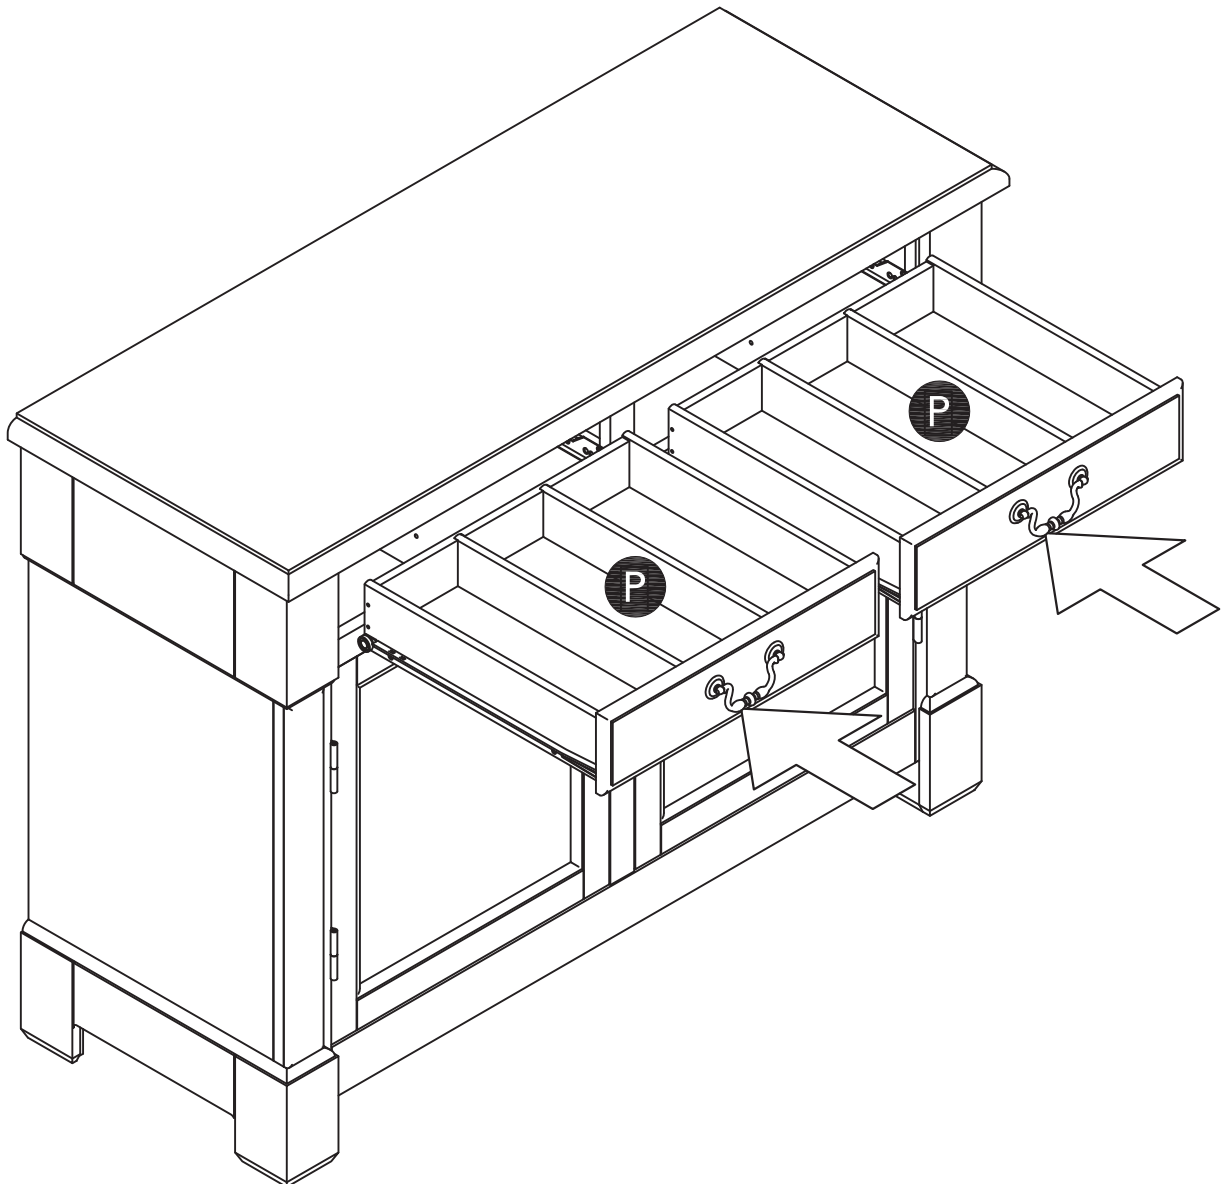

Assembly Instructions 14/14

IMPORTANT

      - If magnetic door catches are too strong and door difficult to open, magnetic power can be reduced and door made easier to open by doing following:

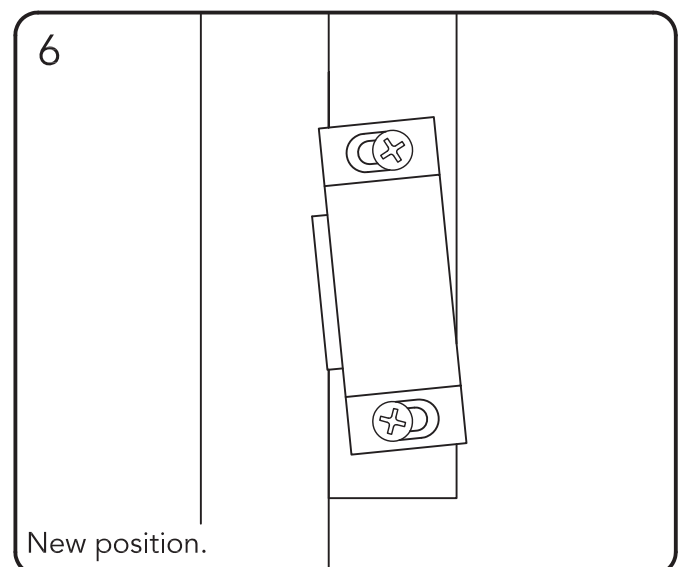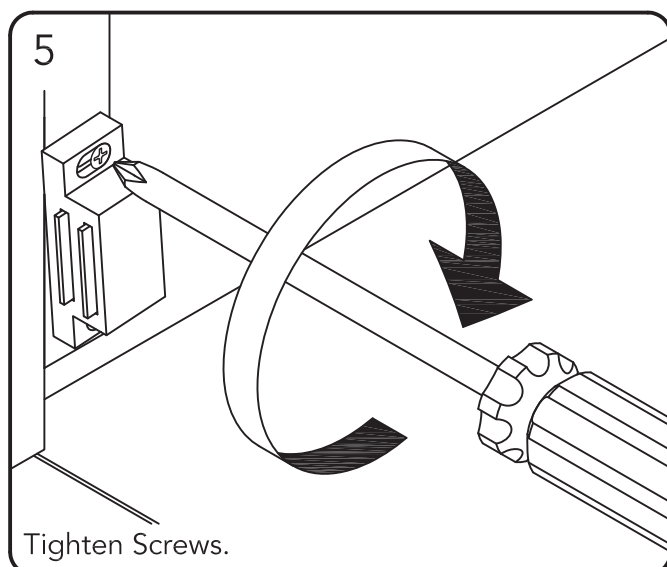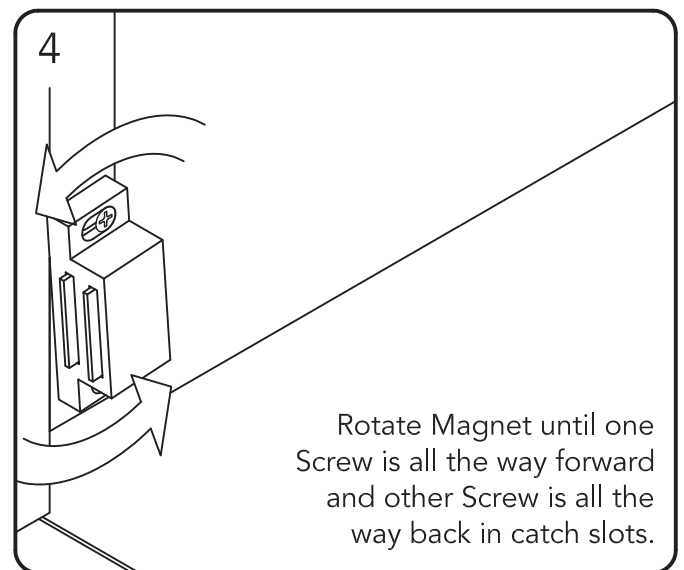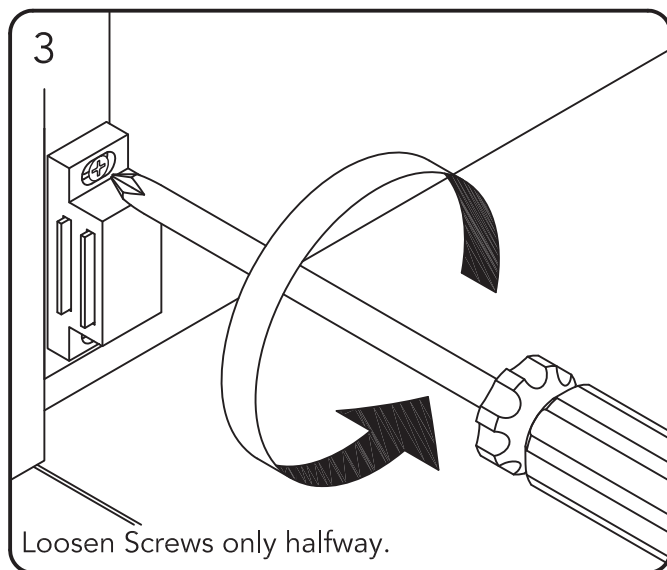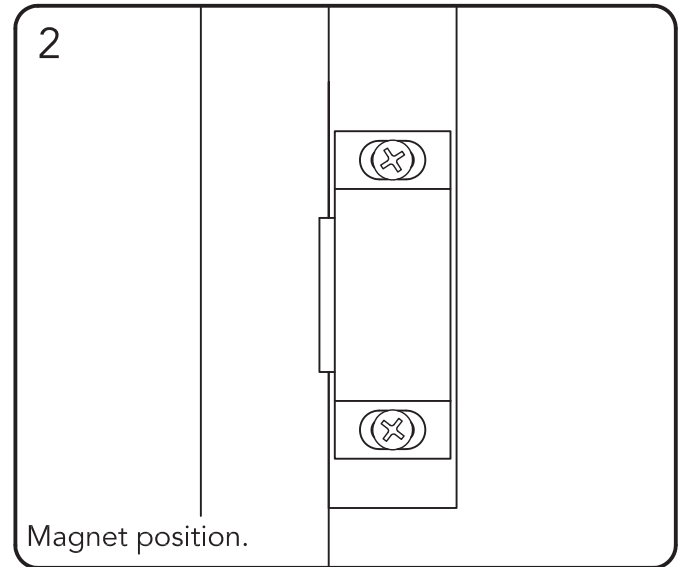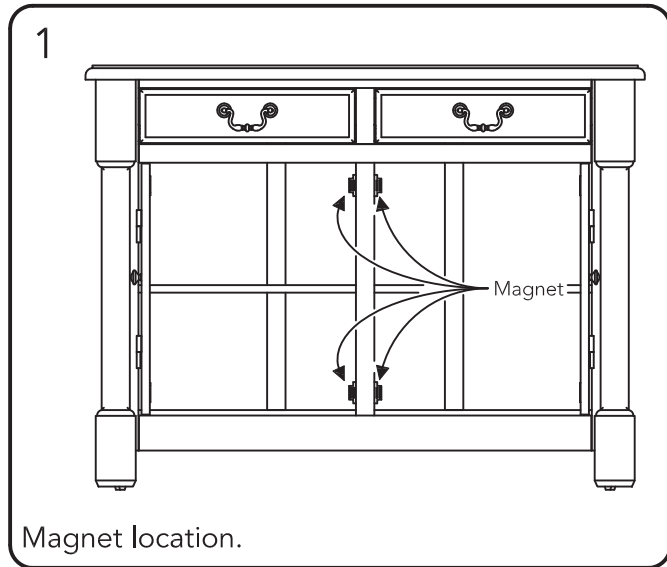

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.
**PREVENT
CRACKING**



Do not place
in direct sunlight.
**PREVENT
FADING**



Do not write
directly on surface.
**PREVENT
MARKING**



Do not place hot
objects on surface.
**PREVENT
FINISH DAMAGE**



Do not use rubber
based placemats.
**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.
**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



homestyles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **homestyles** is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.

homestyles Customer Service: www.homestylesfurniture.com,
servicedesk@homestylesfurniture.com, 888-680-7460