

 
IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.


Part List



H.
Side Panel
2 pcs.



 I.
Side Panel
2 pcs.




J.
Side Panel
2 pcs.



F.
Shelf
1 pc.



G.
Shelf
4 pcs.

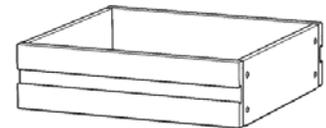

L.
Drawer
1 pc.

Refer to later page(s) of these instructions for drawer assembly.

Hardware List



Cam Lock Screw
46 pcs. (+2 extra)



M3.5x64
Wood Screw for Base
12 pcs. (+1 extra)



M3.5x38
Wood Screw
10 pcs. (+1 extra)




Cam Lock
46 pcs. (+6 extra)



Dowel
36 pcs. (+1 extra)



M3.5x14
Wood Screw for Hinge
48 pcs. (+1 extra)

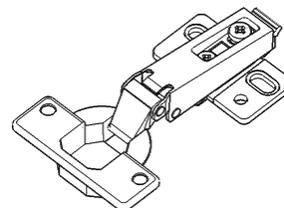

Hinge
8 pcs.



Cover
16 pcs. (+1 extra)



Adjustable Pin
20 pcs. (+1 extra)

Carton 20 08001 0931 is also needed for assembly.


Tool(s) required for assembly: Phillips screwdriver, Level

Home Styles Customer Service: www.homestyles-furniture.com,
 servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/8

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Make sure unit is level before tightening these screws.
- The unit must be level to work properly. Use the included adjustable levelers to level.

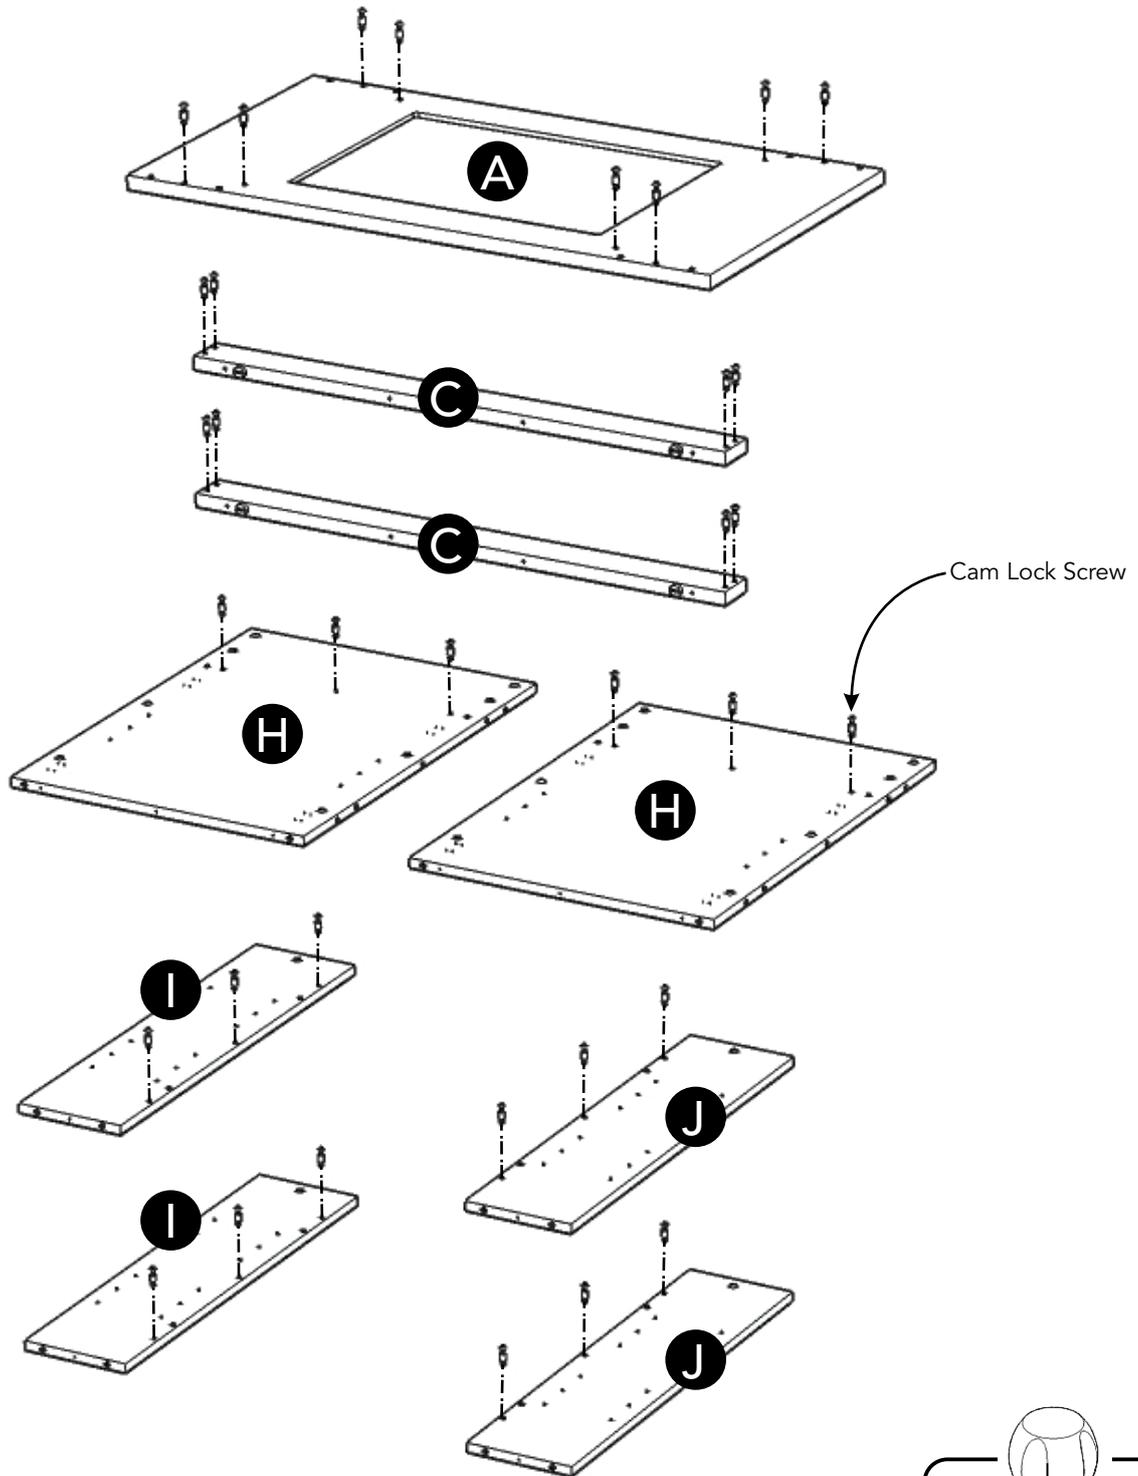

STEP 1

Insert Cam Lock Screws into pre-drilled holes in Top (A), Plinths (C), and Side Panels (H), (I), (J), then tighten. (See Figure 1)

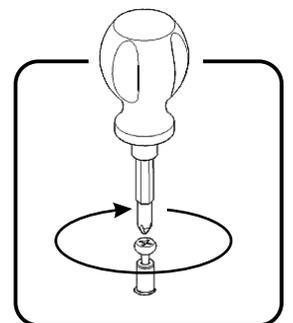


Figure 1

Assembly Instructions 3/8

STEP 2

Attach Plinths (C) to Plinths (D) with Cam Locks. (See Figure 2)



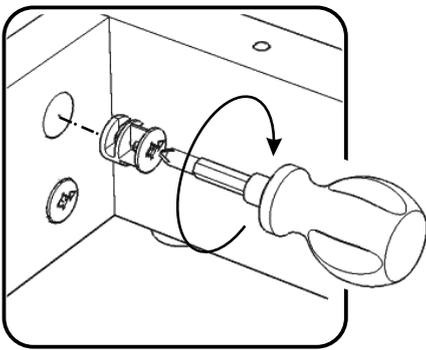


Figure 2

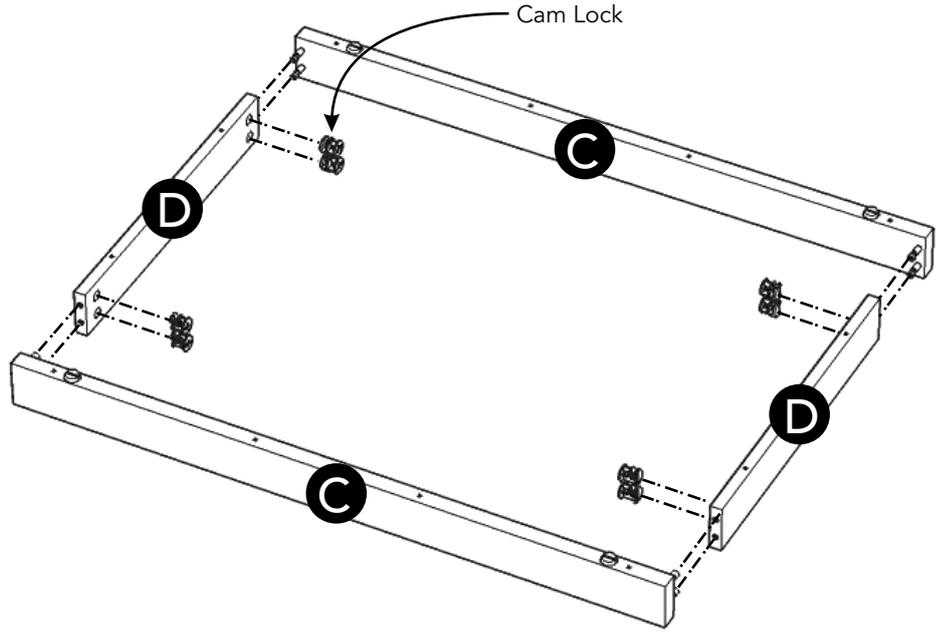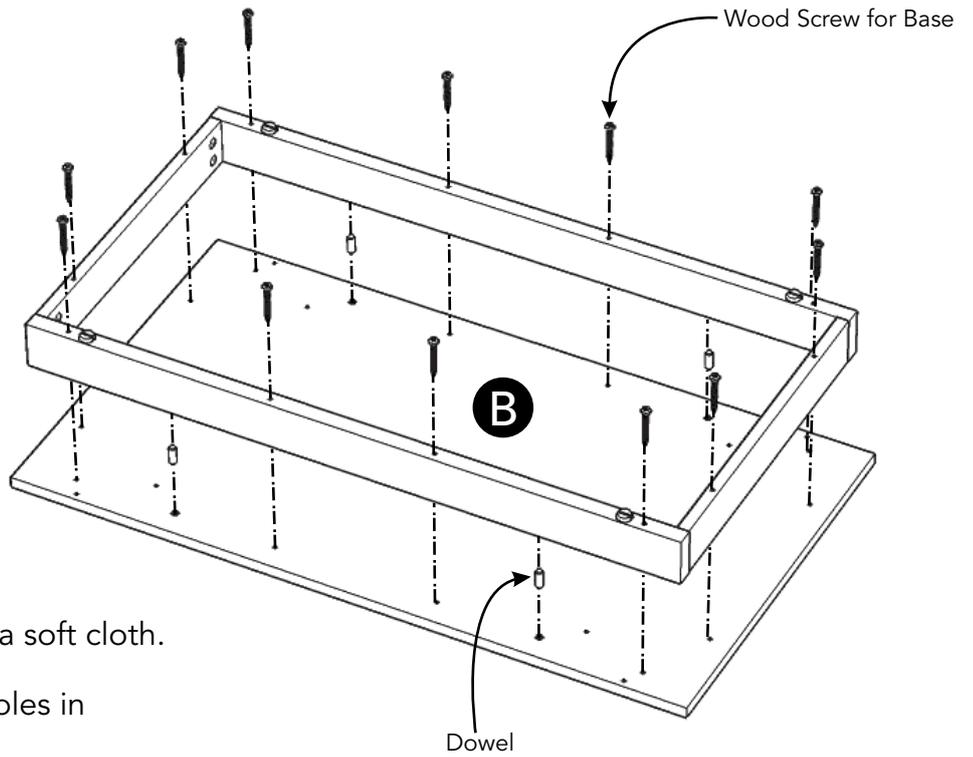

STEP 3

Place Base (B) upside down on a soft cloth.

Insert Dowels into pre-drilled holes in Base (B). (See Figure 3)

Attach unit to Base (B) with Wood Screws for Base into pre-drilled holes. (See Figure 4)

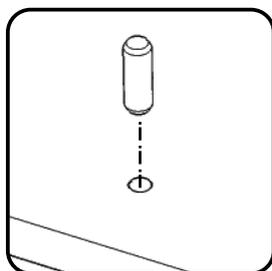


Figure 3


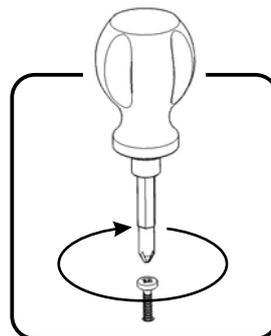


Figure 4

Assembly Instructions 4/8

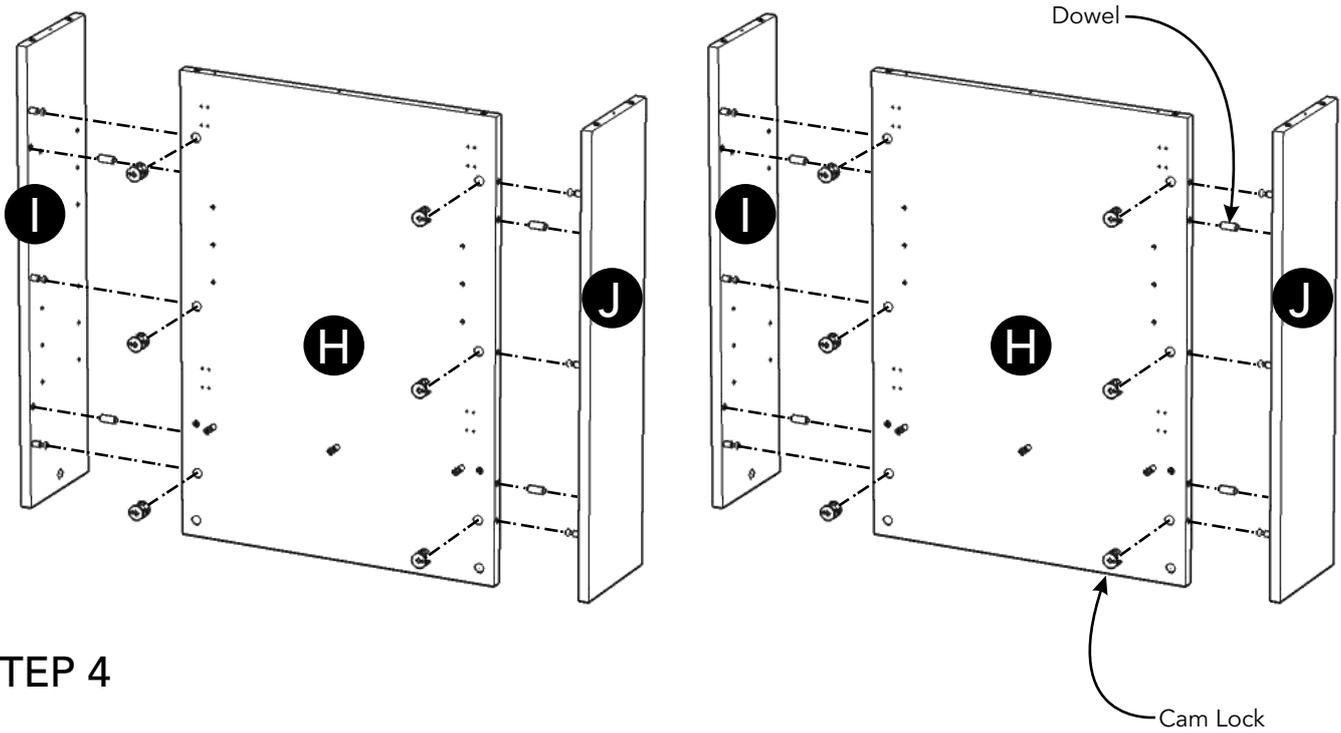


STEP 4

Insert Dowels into pre-drilled holes in Side Panels (I).

Attach Side Panels (H) to Side Panels (I) with Cam Locks.

Insert Dowels into pre-drilled holes in units.

Attach Side Panels (J) to units with Cam Locks.

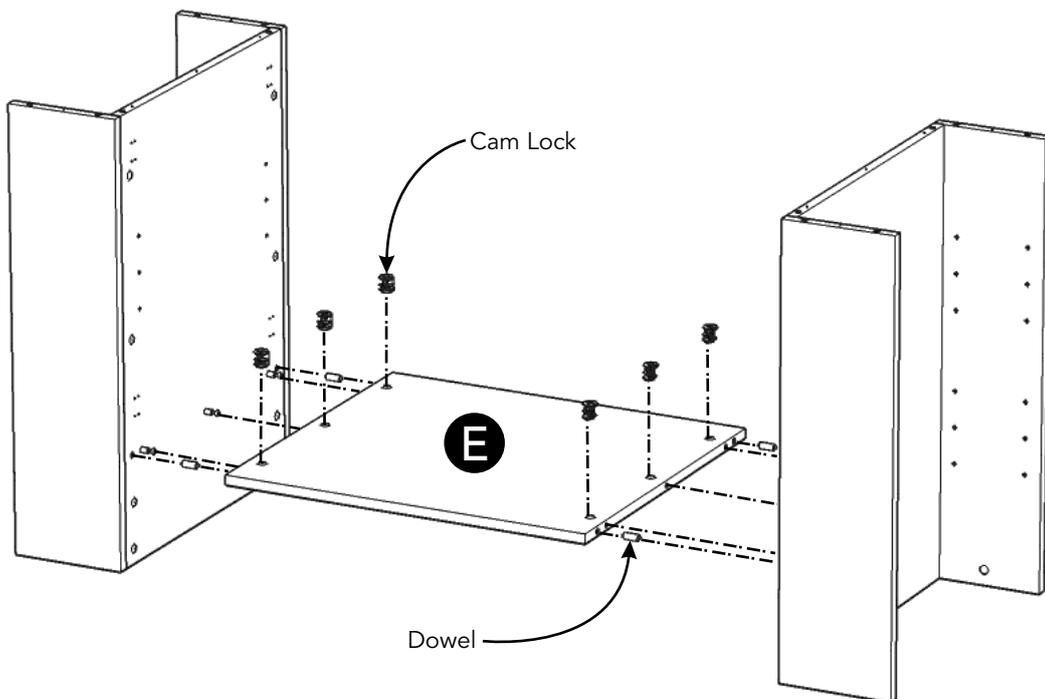

STEP 5

Insert Dowels into pre-drilled holes in units.



Attach Shelf (E) to units with Cam Locks.

Assembly Instructions 5/8

STEP 6

Insert Dowels into pre-drilled holes in unit.

Attach unit from Step 3 to unit with Wood Screws into pre-drilled holes.

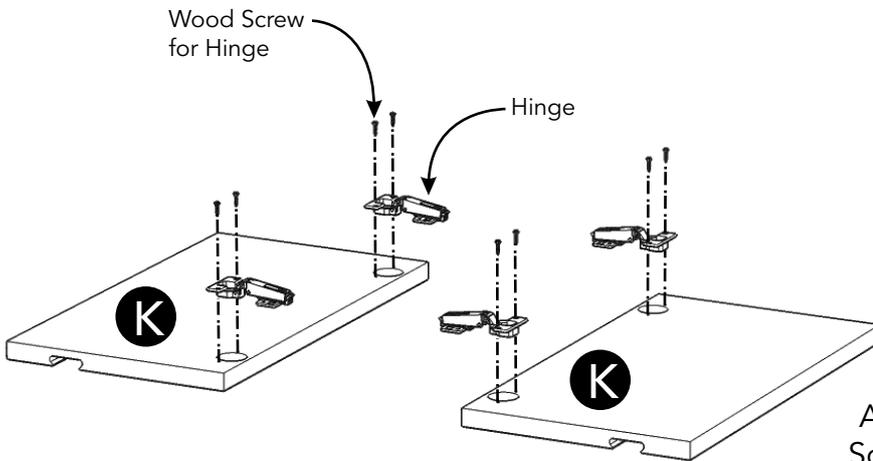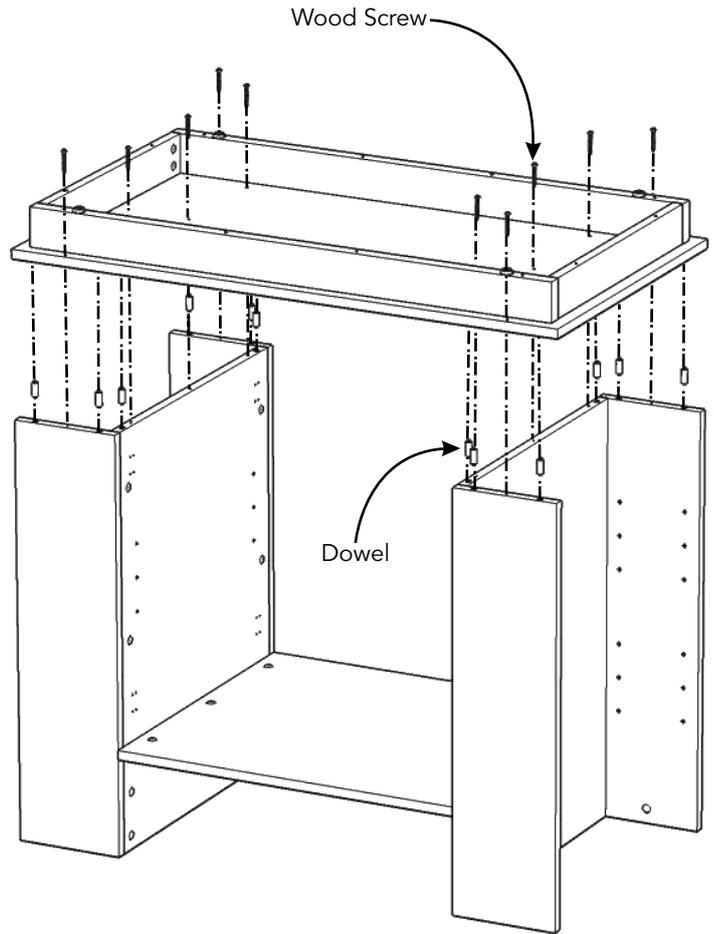

STEP 7

Place Doors (K) face down on a soft cloth.

Attach Hinges to Doors (K) with Wood Screws for Hinge into pre-drilled holes, then tighten. (See Figure 5)



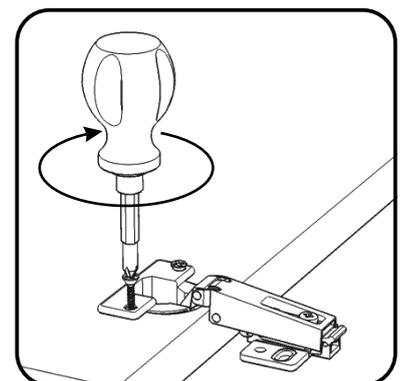


Figure 5

Assembly Instructions 6/8

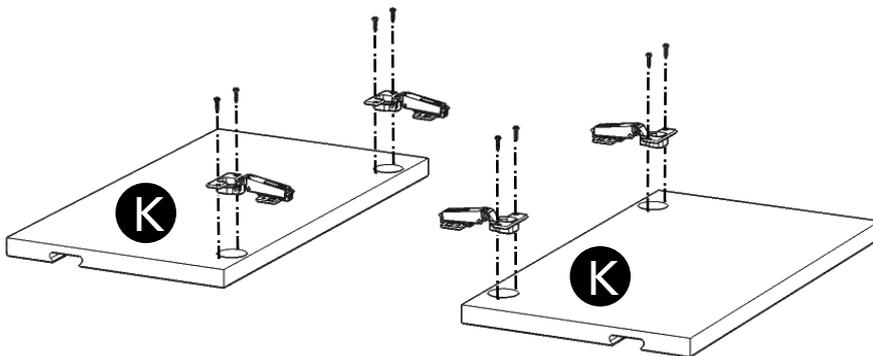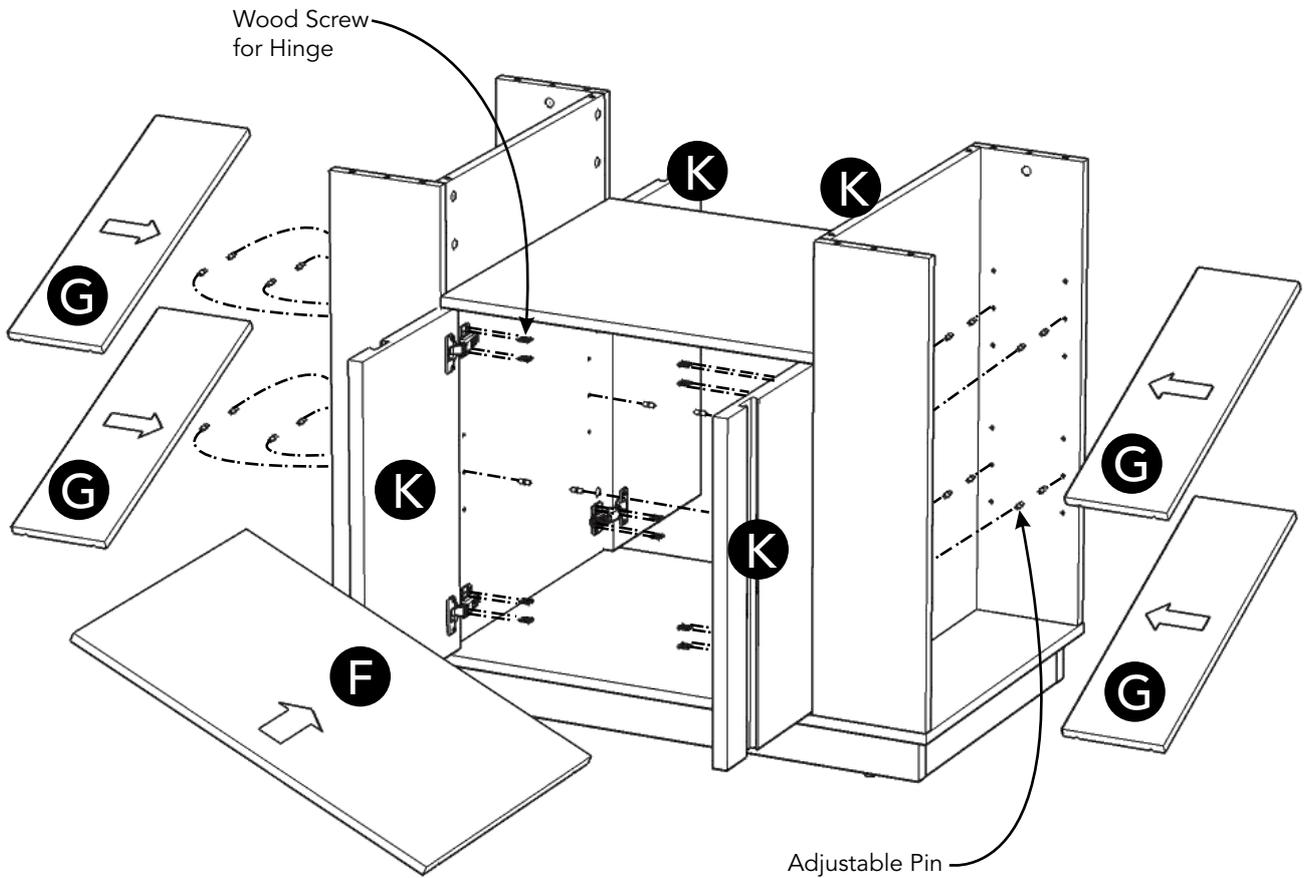

STEP 8

Turn unit from Step 6 over to its' upright position.

Attach Doors (K) to unit with Wood Screws for Hinge. (See Figure 6)

Insert Adjustable Pins into side panels at desired level. (See Figure 7)

Place Shelves (F) and (G) into position.

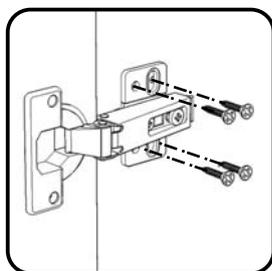


Figure 6



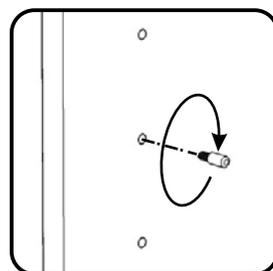


Figure 7

Assembly Instructions 7/8

Drawer (L)

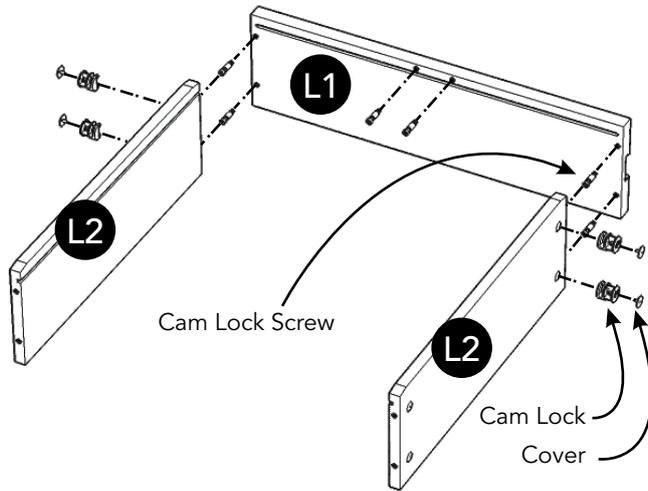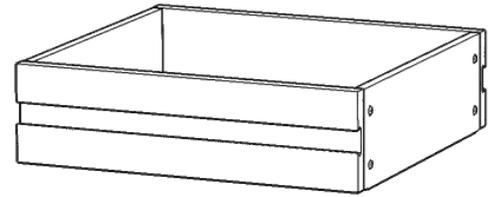

STEP 9

Insert Cam Lock Screws into pre-drilled holes in Drawer Front (L1), then tighten.


Attach Drawer Sides (L2) to Drawer Front (L1) with Cam Locks.

Cover Cam Locks with Covers.

STEP 10

Slide Drawer Bottom (L3) into groove.

Attach Support (L4) to unit with Cam Locks.

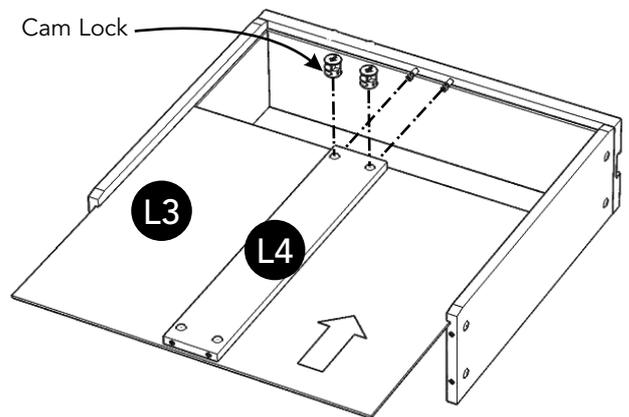


STEP 11


Insert Cam Lock Screws into pre-drilled holes in Drawer Front (L1), then tighten.

Attach Drawer Front (L1) to unit with Cam Locks.


Cover Cam Locks with Covers.

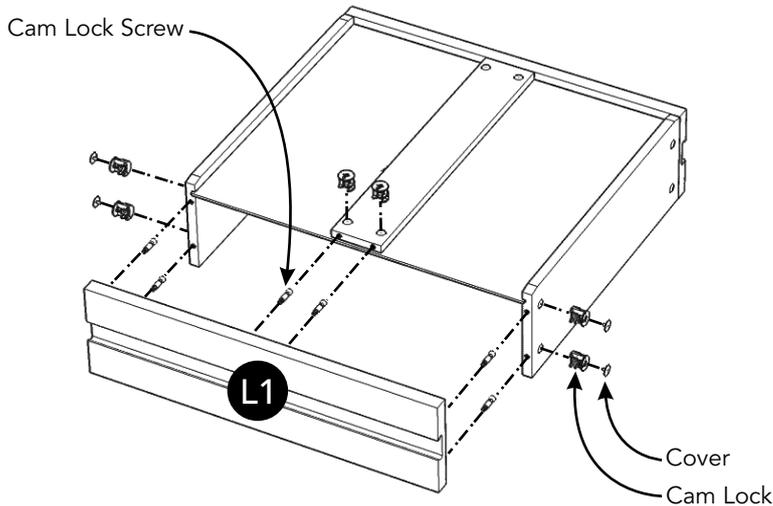

Part List

 

L1.
Drawer Front
2 pcs.

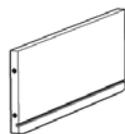

L2.
Drawer Side
2 pcs.



L3.
Drawer Bottom
1 pc.



L4.
Support
1 pc.

Assembly Instructions 8/8

STEP 12

Insert Dowels into pre-drilled holes in unit.

Attach Top (A) to unit with Cam Locks.

Cover Cam Locks with Covers.

Level unit by adjusting the adjustable levelers on bottom of unit.
(See Figure 8)

Note: Unit must be level
to work properly.

Slide Drawer (L) into position.

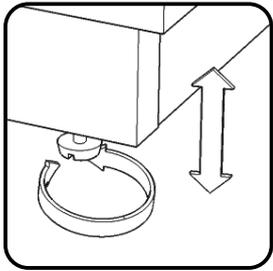
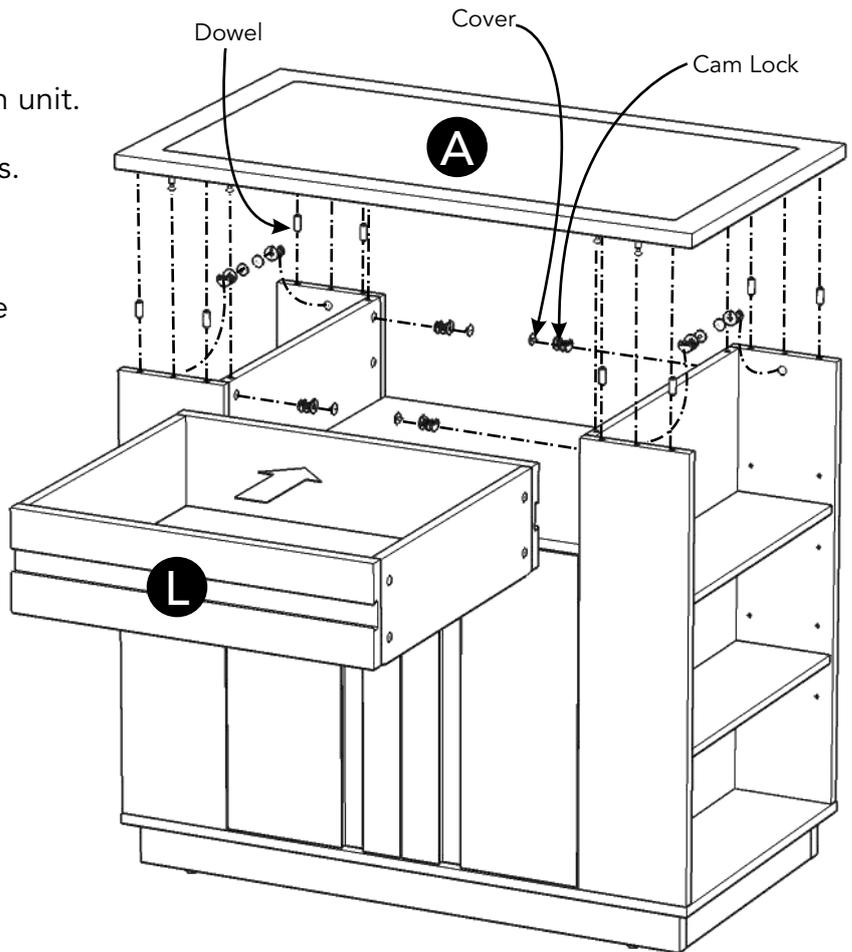


Figure 8

STEP 13

If needed, adjust doors up or down by removing the front Wood Screws for Hinge and loosening slightly the back Wood Screws for Hinge from side panels, adjusting doors up or down and re-installing screws. (See Figure 9).

If needed, adjust doors left to right. (See Figure 10)

If needed, adjust doors front to back. (See Figure 11)

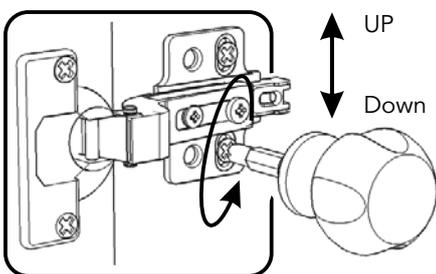


Figure 9

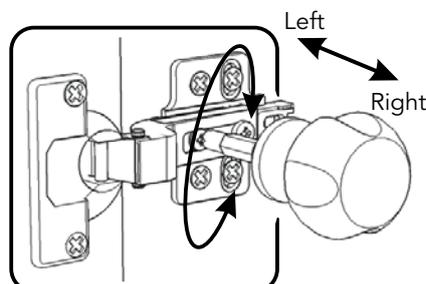


Figure 10

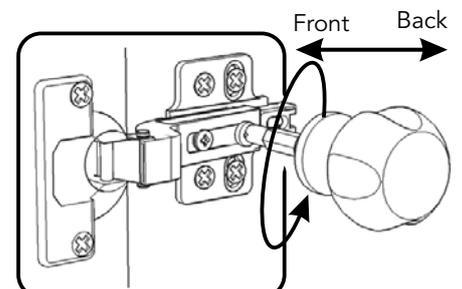


Figure 11

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.

**PREVENT
CRACKING**



Do not place
in direct sunlight.

**PREVENT
FADING**



Do not write
directly on surface.

**PREVENT
MARKING**



Do not place hot
objects on surface.

**PREVENT
FINISH DAMAGE**



Do not use rubber
based placemats.

**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.

**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319