



AMBITION BALLPOINT PEN



- Ambition Ballpoint Pens come equipped with a black, broad ballpoint refill.
- There is no need to remove the twist cap at the end of the pen. Doing so repeatedly will cause the cap to become loose and put the twist mechanism in jeopardy.

1. Remove the front piece (1) from the barrel (2) by turning the barrel (2) counterclockwise.
2. Remove the empty ballpoint refill (4) from the barrel (2).
3. Insert new Faber-Castell Ballpoint Refill (4) into the barrel (2).
4. Return the front piece (1) making sure the spring is centered and the tip of the refill (4) slides into the middle of the spring inside the front piece (1).
5. Secure the front piece (1) by turning the barrel (2) clockwise.
6. Hold the barrel (2) and turn the cap (3) clockwise to advance the ballpoint (4) and begin writing.
7. To retract the ballpoint (4) hold the barrel (2) and turn the cap (3) counterclockwise.

REFILLS Ballpoint: #148780 Fine, Black
 #148789 Medium, Black
 #148788 Medium, Blue
 #148742 Broad, Black
 #148743 Broad, Blue
 #148794 Extra Broad, Black
 #148793 Extra Broad, Blue

Faber-Castell USA, Inc. • 9450 Allen Drive, Suite B • Cleveland, OH 44125
800-311-8684 penrepair@fabercastell.com
Monday – Friday 9 a.m. – 5 p.m. EST