



Purchase Date: ____/____/____ Order/Customer Reference Number: _____

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested within the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion. For warranty information, visit <https://tiny.cc/SunnydazeWarranty>

If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

CANOPY BAG

Read this manual carefully and save it for future reference.

⚠ IMPORTANT -- READ BEFORE USE ⚠

⚠ **Measure the longest and widest points of your collapsed canopy. If measurements are less than the dimensions of the canopy bag, your canopy should fit into the storage bag.** Canopy not included.

⚠ CAUTION ⚠

1. Please read instructions COMPLETELY before use. If you have questions, please contact us via one of the methods mentioned at the top of this manual.
2. Do not use this product for any use other than which it is intended. This product is classified as a storage bag for temporary portable shade products (e.g. Sunnydaze canopy).
3. Sunnydaze Decor cannot be held responsible for damage resulting from improper use or storage of contents. Damages from improper use and care are not considered a defect.

FABRIC CARE

🧼 **HAND WASH ONLY** ~~☒~~ **DO NOT USE BLEACH OR SOLVENTS** ~~☒~~ **DO NOT TUMBLE DRY** ~~☒~~ **DO NOT IRON**

WASHING

Use warm, soapy water and a cloth to scrub the fabric; dish soap works well. Thoroughly rinse all soap residue before air-drying the fabric. A garden hose with a spray nozzle set to the 'flat' setting works great for removing soap; spray from top to bottom until all of the soap residue is removed. Never use bleach or harsh cleansers.

DRYING

Hang the canopy bag to air dry, avoid hanging the fabric over anything with sharp edges that may damage the fabric. Allow air and light to hit the fabric as much as possible — this will reduce the chance of mold and mildew.

WHAT IS NOT COVERED BY WARRANTY:

- Bag that has been subjected to abuse, accident, alteration, modification, tampering, vandalism, negligence, misuse, contact with abrasive surfaces, faulty installation, lack of reasonable care or if affixed to any attachment not provided with the bag.
- Damage to a canopy, any person or property.
- Normal and foreseeable wear and tear.
- Damage and wear to fabric and closures resulting from improper packing of canopy parts.
- Damage resulting from improper use.

Any modification to the product or failure to follow recommended care will void the product warranty.

⚠ WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.