
# the first years®


## Sit or Stand™ Potty & Urinal Instructions

 
Y7884

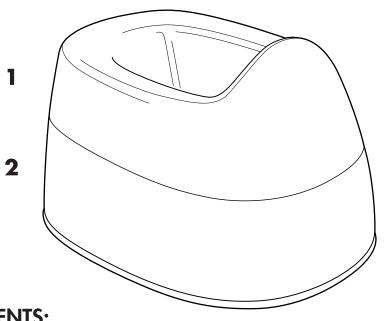

#### **COMPONENTS:**

- 1. Urinal/Pot
- 2. Base
- 3. Clip
- 4. Foam Spacers (2)

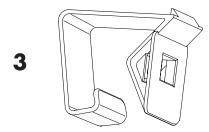



READ ALL INSTRUCTIONS BEFORE USING.
KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.
FOR HOUSEHOLD USE ONLY.

### **AWARNING**

- Do NOT leave child unattended when using this product
- Use potty on a flat level surface only

#### **IMPORTANT**

- Do NOT exceed 50 lbs (22.7 kg) on seat
- This product is not a toy

Before returning this product to the store for any reason, please contact our Customer Care Team (U.S. AND Canada) at 1-800-704-8697 or help@thefirstyears.com. We can provide helpful tips and instructions, and may be able to resolve your problem over the phone or via e-mail.

#### **ASSEMBLY & USE**

#### **SIT MODE:**

**Tip:** Confirm that Urinal/Pot is securely in place on Base prior to use.

- 1. Help your child to sit on the seat.
- 2. After use, empty Urinal/Pot and wash with soap and warm water.

#### **STAND MODE:**

- 1. Remove Clip.
- 2. Snap Clip over rim of the adult toilet bowl with the hook side inside toilet. (Fig. A) NOTE: The Clip can remain on adult toilet when Urinal/Pot is not in use. The toilet lid will still close.
- 3. Test the fit to ensure that Clip is securely in place and leveled.
  - a. Optional Foam Spacers are included.
  - b. If needed for a secure fit, attach one Foam Spacer to Clip as shown. (Fig. B)
  - c. If Clip is still fitting too loosely, use the second Foam Spacer.
- 4. There are 3 slots on the back of the Urinal/Pot that let you adjust the height. (Fig. C & D) Use the slot that works best for your child's height.

NOTE: For optimal use, be sure the Urinal/Pot is not tilting too far in either direction. It should be as vertical as is possible. (Fig. E & F)

- 5. Encourage your child to "shoot" for the target inside the Urinal/Pot, this will help them learn to aim.
- 6. After use, empty Urinal/Pot and wash with soap and warm water.

