

 
INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service
Email: journey@nemoequipment.com
Phone: 800-997-9301





1 Insert Poles in Corner Anchors

Lay the inner tent on the ground and orient the pole set with orange ends towards the door and center swivel down. Insert locking pole tips into the four corner anchors. Stake anchors in place.



2 Attach Inner Tent with Center Swivel

  Attach the black clip at the center of the inner tent to the clear swivel between the main poles. Note the swivel must face down in step one.




3 Clips

Attach the rest of the inner tent to the main poles with clear twist clips.



4 Secure Ridge Pole

Position the short ridge pole over the main poles at the tent entrance. Secure the ridge pole using grommets at the sides of the inner tent and the plastic clip at the center.

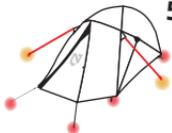

5 Attach Fly and Vestibule

Attach the corners of the tent fly to the pole tips and stake vestibule. Tension all adjustable anchors. Add guylines through loops on inner tent and around poles, and pull through direct guyouts in fly.



©2018 NEMO Equipment, Inc.



Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

KUNAI™ 2P