

88 5516 601

Barnside


King Headboard

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles

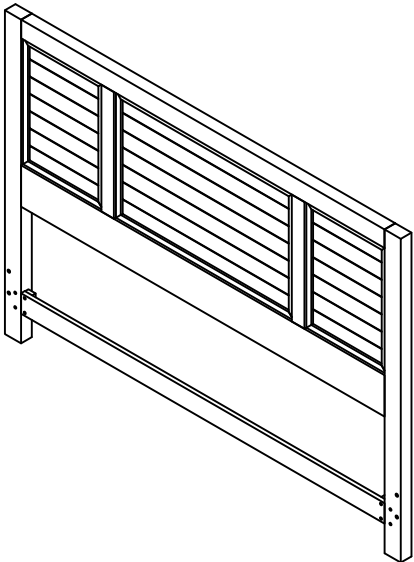

Part List

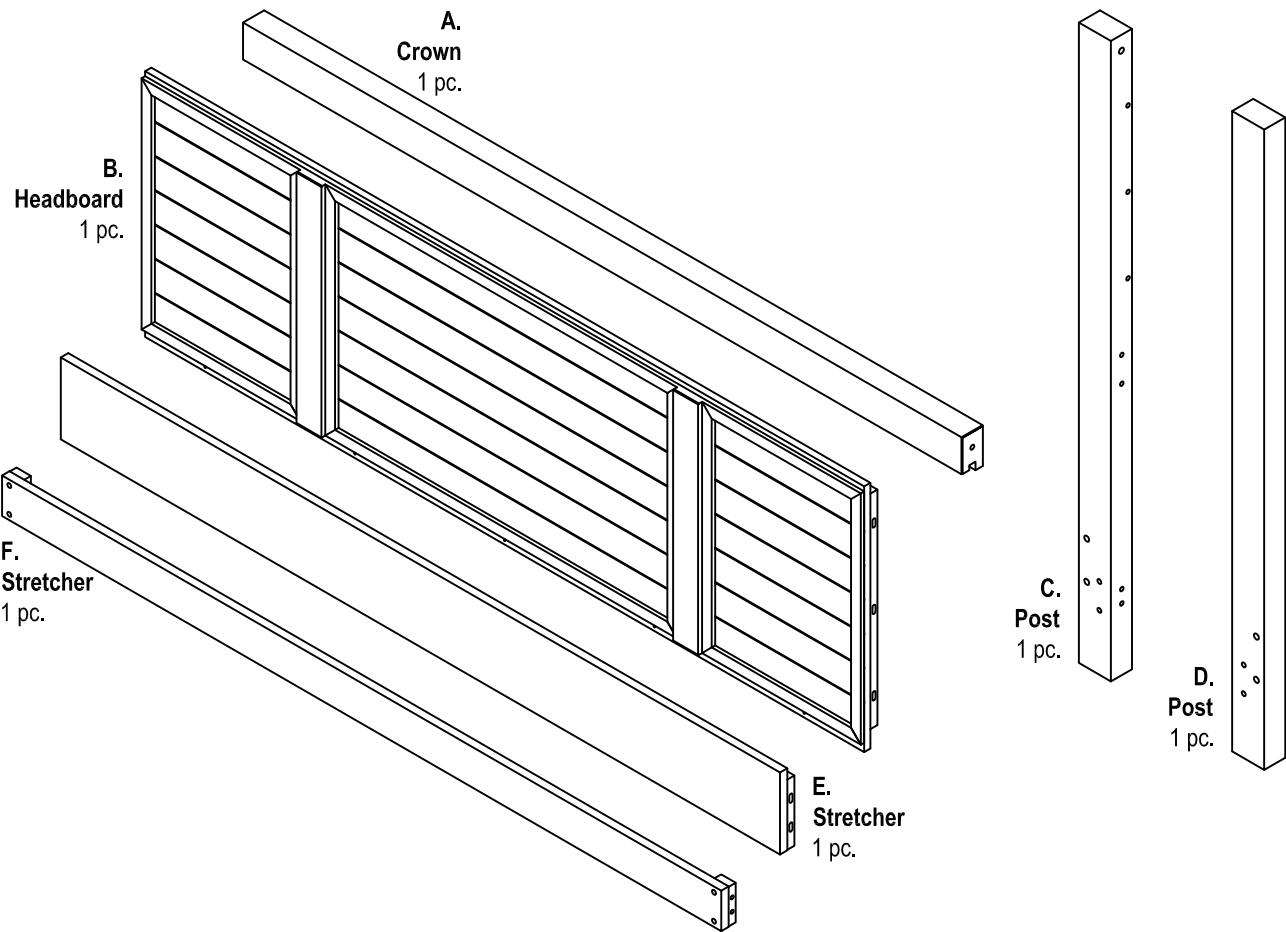

Hardware List

 										
Bolt 2 pcs. (+1 extra)	Square Washer 2 pcs. (+1 extra)	Nut 2 pcs. (+1 extra)	Wrench 1 pc.	Wood Screw 10 pcs. (+1 extra)	Head Cap Bolt (Long) 4 pcs. (+1 extra)	Head Cap Bolt (Short) 10 pcs. (+1 extra)	Spring Washer 14 pcs. (+1 extra)	Flat Washer 14 pcs. (+1 extra)	Key Wrench 1 pc.	Small Key Wrench 1 pc.

Tools Required For Assembly : Phillips screwdriver

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/3

IMPORTANT

- * Do not tighten up all the bolts until each part is properly assembled.
- * You should keep Key Wrench in a safe place as you may need to tighten up the bolts in the future.
- * Use a soft cloth between these parts and the floor.

STEP 1

Insert Bolts into the pre-drilled holes Posts (C) and (D).

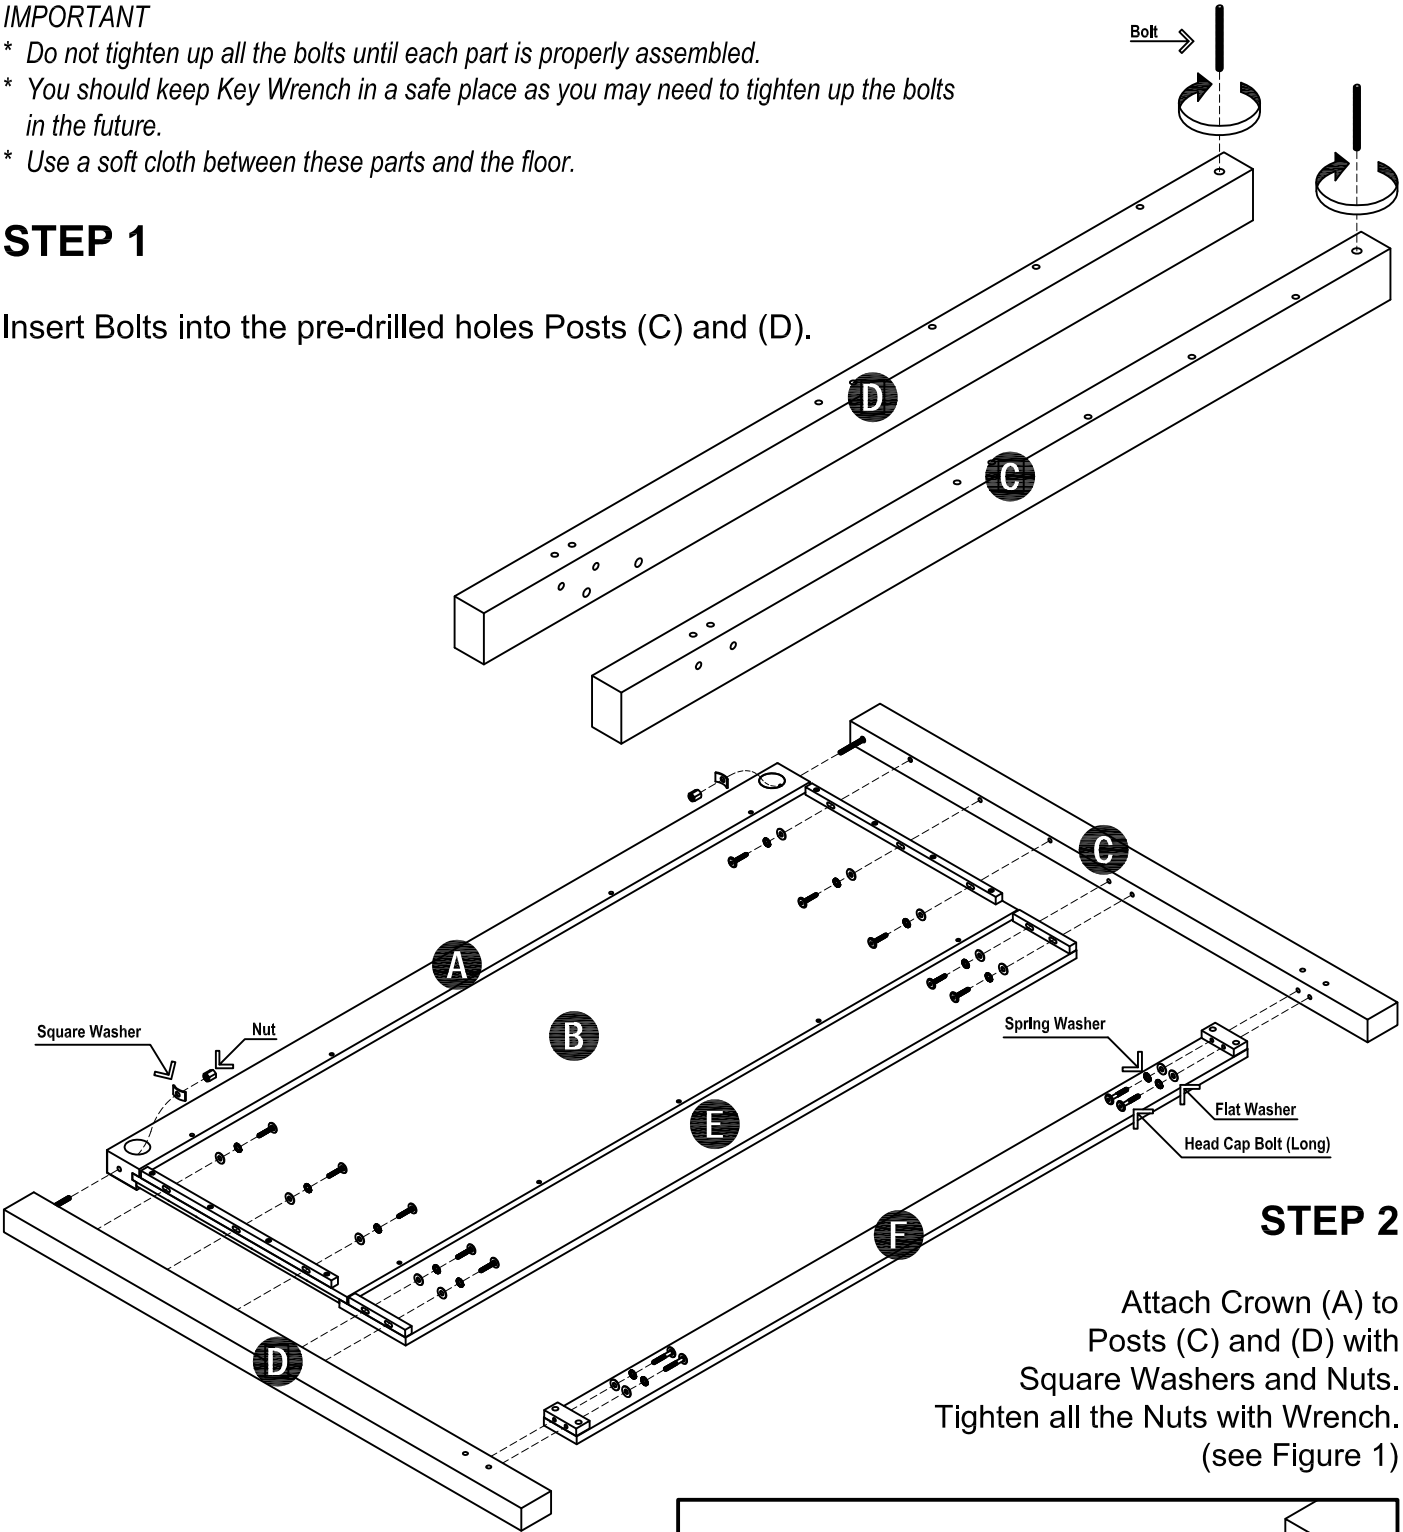

STEP 2

Attach Crown (A) to Posts (C) and (D) with Square Washers and Nuts. Tighten all the Nuts with Wrench. (see Figure 1)

Attach Headboard (B) and Stretcher (E) to Posts (C) and (D) with Head Cap Bolts (Short), Spring Washer and Flat Washers.

Attach Stretcher (F) to Posts (C) and (D) with Head Cap Bolts (Long), Spring Washer and Flat Washers.

Note: Do not tighten Head Cap Bolts at this time.

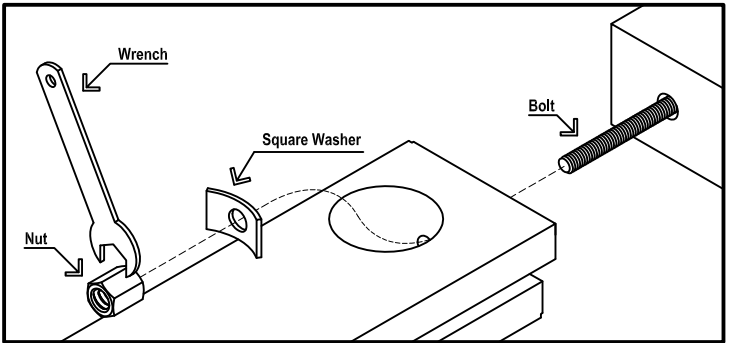


Figure 1

STEP 3

Push Headboard (B) and Stretcher (E) firmly towards Crown (A) and hold in place.

Attach Wood Screws to unit.

Tighten the Head Cap Bolts from Step 2 completely with Key Wrench as shown.
(see Figure 2)

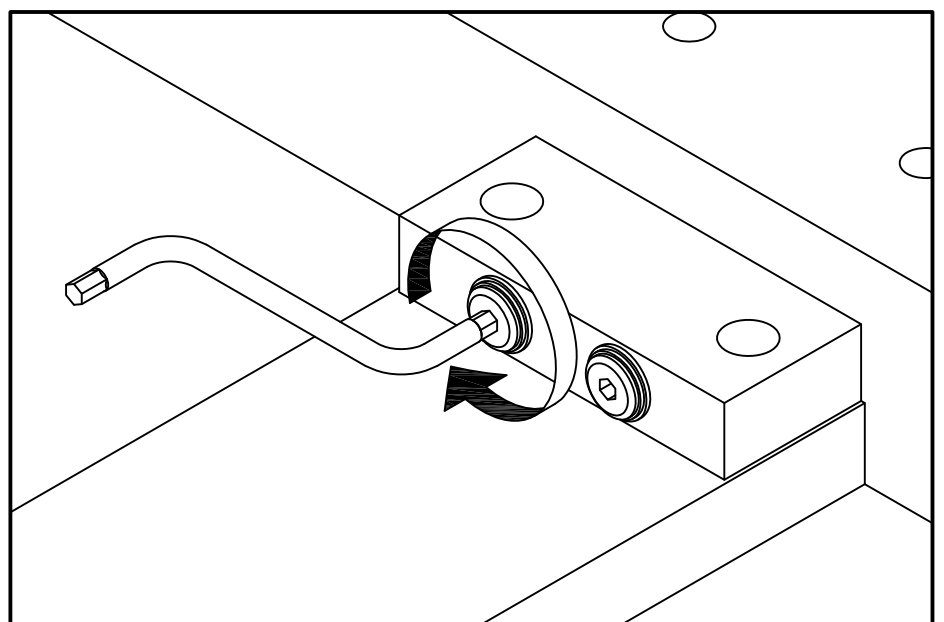
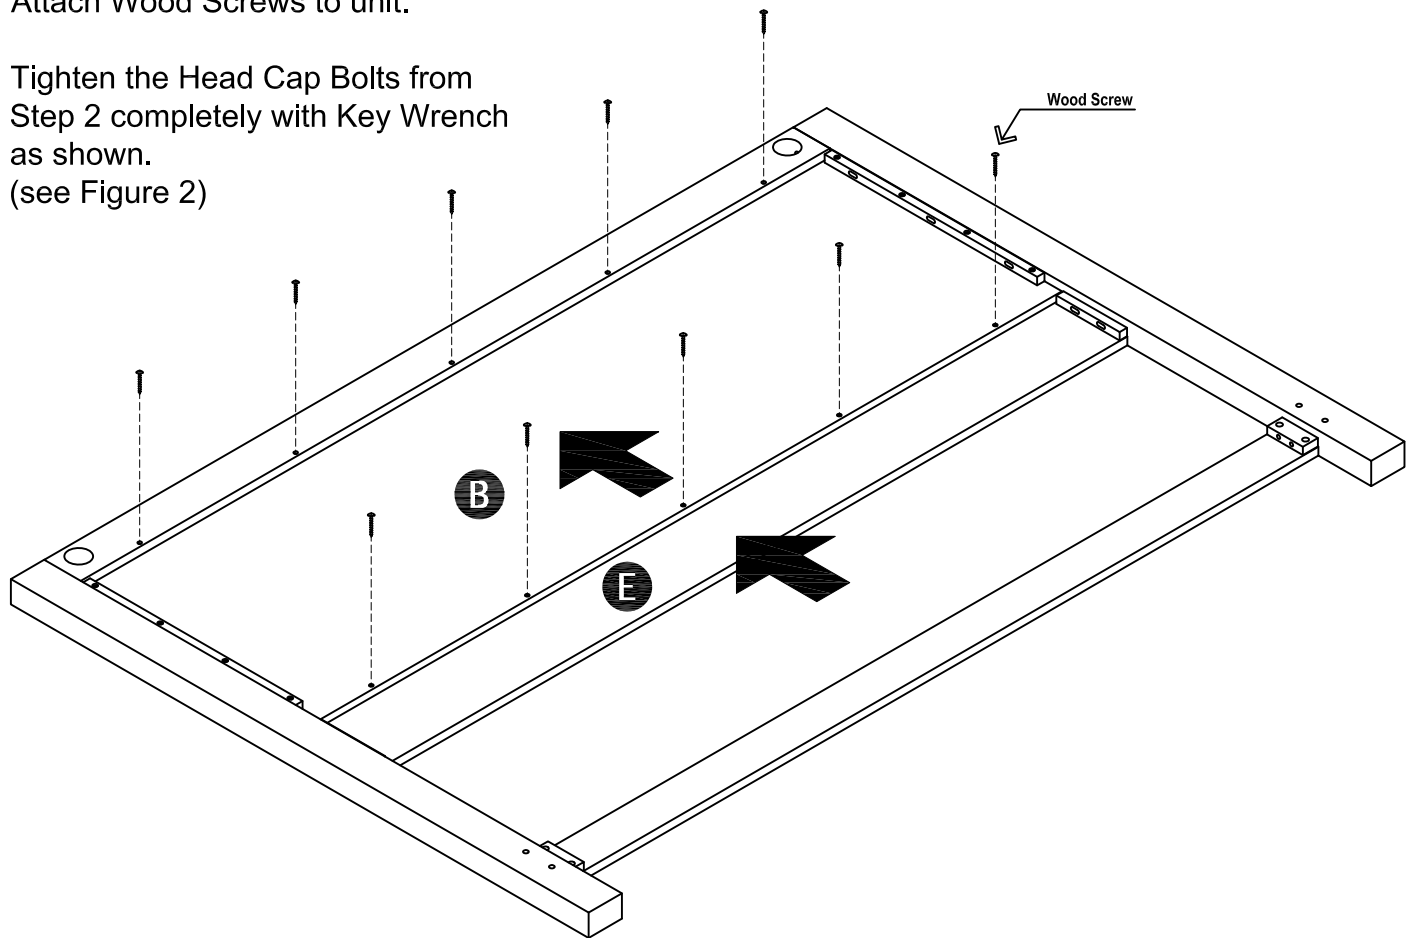


Figure 2

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
OBJECTS
ON SURFACE.



**PREVENT
FINISH DAMAGE**

DO NOT
USE
RUBBER
BASED
PLACE MATS.



**PREVENT
DISCOLORING**

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319