

ASSEMBLY INSTRUCTION

ITEM#1620-55488-WH Low Entertainment Console

** Please make sure you have all parts indicated below prior to assembly.
This unit is heavy and can best be assembled with the help of two or more people

NO.	HARDWARE LIST		Q'TY
A		Allen Wrench	1

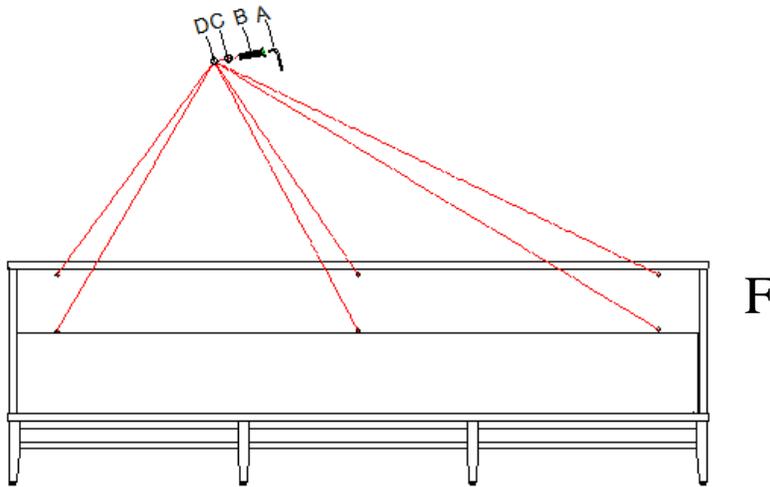
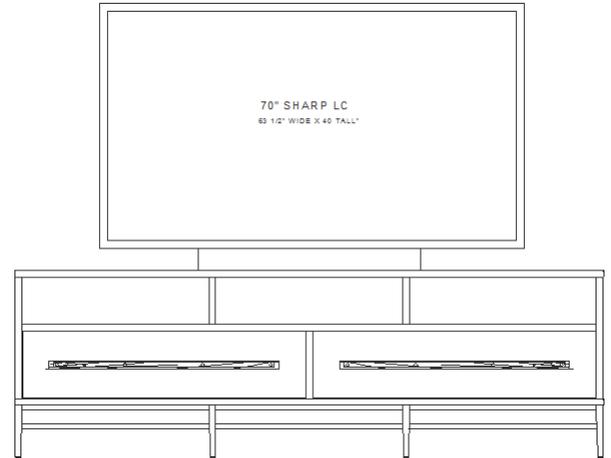


Diagram1

How to remove back panel:

1. Back panel (F) is removable. If necessary, you can remove back panel (F) on console back, by using Allen wrench (A) unscrew in counter clockwise direction. (See diagram 1)

Cleaning Instruction: Clean finished parts with a damp cloth using a mild dishwashing liquid and water solution. Polish the finish with soft cloth and an industry recognized furniture polish.