



BV8720

Contents

**In-Dash AM/FM-RDS
DVD/MP3/CD Receiver With
4.3" Widescreen Touchscreen TFT Monitor
With Front Panel USB Port and
SD/MMC Card Slot**

Precautions	2	DISC Special Functions	26
Safety Information	3	Selecting audio languages	26
Disc Notes	4	Selecting Subtitles	26
Installation	5	Selecting multi-angle views	26
Detaching the front panel	7	Title menu function	26
Attaching the front panel	7	Setup	27
How to clean the connectors	7	System Setup.....	27
Angle panel adjustment	8	Languages Setup.....	29
Electric Connection	9	Audio Setup	30
Remote Control	10	Video Setup	30
Basic Operations	13	Digital Setup	31
TFT Monitor Adjustment	13	AUX Operations	32
Rear View Camera	13	USB Operations	33
Audio Quality Adjustments	14	SD Card Operations	35
Selecting Preset Sound Modes	14	MP3/WMA/JPEG/MPEG4 Play	36
Setting The Time	14	Specifications	37
Reset Factory Settings	14	Trouble Shooting	38
Control Panel	15		
Unit keys	15		
Radio Operations	18		
Listening to the radio	18		
Storing stations in memory	19		
Listening to a preset station	19		
RDS Function	20		
DISC Operations	22		
Basic Operations	22		
Select Playback Mode	23		
On-Screen Disc Operations	25		

Precautions

THANK YOU FOR PURCHASING THIS CAR DVD PLAYER .

Before operating the unit, read this manual thoroughly and keep it handy for future reference.

To avoid injury or accident, read the following precautions before installing and operating the unit.

ON INSTALLATION

- DO NOT install any receiver in locations where;
 - it may obstruct the steering wheel and gearshift lever operations, as this may result in a traffic accident.
 - it may obstruct the operation of safety devices such as air bags, as this may result in a fatal accident.
 - it may obstruct visibility.
- DO NOT operate any receiver while manipulating the steering wheel, as this may result in a traffic accident.
- The driver must not watch the monitor while driving.
- IF THE DRIVER watches the monitor while driving, it may lead to carelessness and cause an accident.
- IF YOU NEED to operate the receiver while driving, be sure to look ahead carefully or you may be involved in a traffic accident.
- IF THE PARKING BRAKE is not engaged. "Parking Brake" flashes on the monitor, and no playback picture will be shown.
 - This warning appears only when the parking brake wire is connected to the parking brake system built in the car. (refer to the electric connection)

ABOUT THE LIQUID CRYSTAL DISPLAY (LCD) PANEL

Do not press on the LCD panel on the unit as doing so can distort the picture or cause a malfunction. The picture may become unclear, or the LCD panel may be damaged.

NOTES ON CLEANING

- Clean the LCD panel with a slightly damp soft cloth.
- Do not use solvents such as benzene, thinner, commercially available cleaners or antistatic spray.
- Do not use alcohol to clean the screen.

If your car was parked in a cold or hot place, the picture may not be clear. The monitor is not damaged. The picture will become clearer the temperature in your car becomes normal.

Safety Information

CAUTION:

THIS DVD PLAYER IS A CLASS I LASER PRODUCT. HOWEVER THIS DVD PLAYER USES A VISIBLE/INVISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE DVD PLAYER CORRECTLY AS INSTRUCTED.

USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE ONLY THE RECOMMENDED ACCESSORIES.

THIS DEVICE IS INTENDED FOR CONTINUOUS OPERATION.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macro vision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

REGION MANAGEMENT INFORMATION:

This DVD Player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD Player, this DVD Player cannot play this disc.

Disc Notes

Disc formats supported by this player

DVD	DVD	Audio and Video Disc size 12 cm
VCD	VCD	Audio and Video Disc size 12 cm
CD	CD	Audio Disc size 12 cm
MP3	MP3	Audio Disc size 12 cm

Discs which cannot be played with this player

- DVD-RAM
- CDV
- CDG

Handling and Cleaning

- Dirt, dust, scratches and warping disc will cause misoperation.
- Do not place stickers or make scratches on discs.
- Do not warp discs.
- A disc should always be kept in its case when not in use to prevent from damaging.
- Do not place discs in the following places:
 1. Direct sunlight
 2. Dirty, dusty and damp areas
 3. Near car heaters
 4. On the seats or dashboard


Disc Cleaning

Use a dry soft cloth to wipe the surface. If the disc is quite dirty, use a soft cloth slightly moistured with isopropyl (rubbing) alcohol. Never use solvents such as benzine, thinner or conventional record cleaners as they may mar the surface of the disc.

Note:


A disc may become somewhat scratched (although not enough to make it

unusable) depending on your handle it and conditions in the usage environment. Note these scratches are not an indication of any problem with the player.

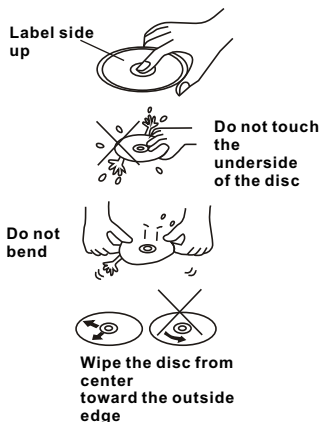

Preparing New Discs with Rough Spots

A new disc may have rough edges on its inside and outside edges. If a disc with rough edges is used, the proper setting will not be performed and the player will not play the disc. Therefore, remove the rough edges in advance by using a ball point pen or pencil as shown on the right. To remove the rough edges, press the side of the pen or pencil against the inside and outside edges of the disc.

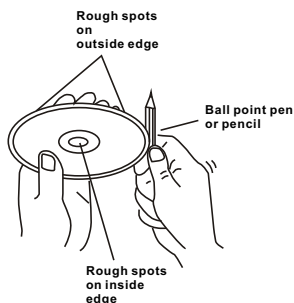

Installation

NOTES:

Choose the mounting location where the unit will not interfere with the normal driving function of the driver.


Before finally installing the unit, connect the wiring temporarily and make sure it is all connected up properly and the unit and the system work properly.

Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.

Consult with your nearest dealer if installation requires the drilling of holes or other modifications of the vehicle.

Install the unit where it does not get in the driver's way and cannot injure the passenger if there is a sudden stop, like an emergency stop.

If installation angle exceeds 30° from horizontal, the unit might not give its optimum performance.

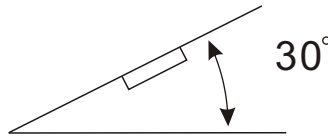


Avoid installing the unit where it would be subject to harmful elements such as high temperature, direct sunlight, hot air (even if from the heater), dust, dirt or excessive vibration.

DIN FRONT/REAR-MOUNT

This unit can be properly installed either from "Front"(conventional DIN Front-mount) or "Rear"(DIN Rear-mount installation, utilizing threaded screw holes at the sides of the unit chassis). For details, refer to the following illustrated installation methods.



USA/EURO FREQUENCY SWITCH

 On the right of this device, there is a USA/EURO frequency switch, you can select the desired radio frequency before installing.



USA/EURO Frequency Switch (radio frequency switch for selecting between the USA and EUROPE frequency band.)

Installation

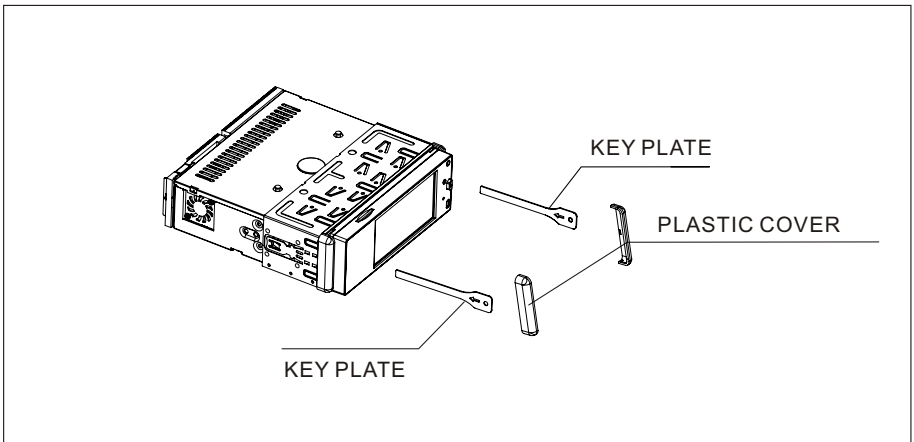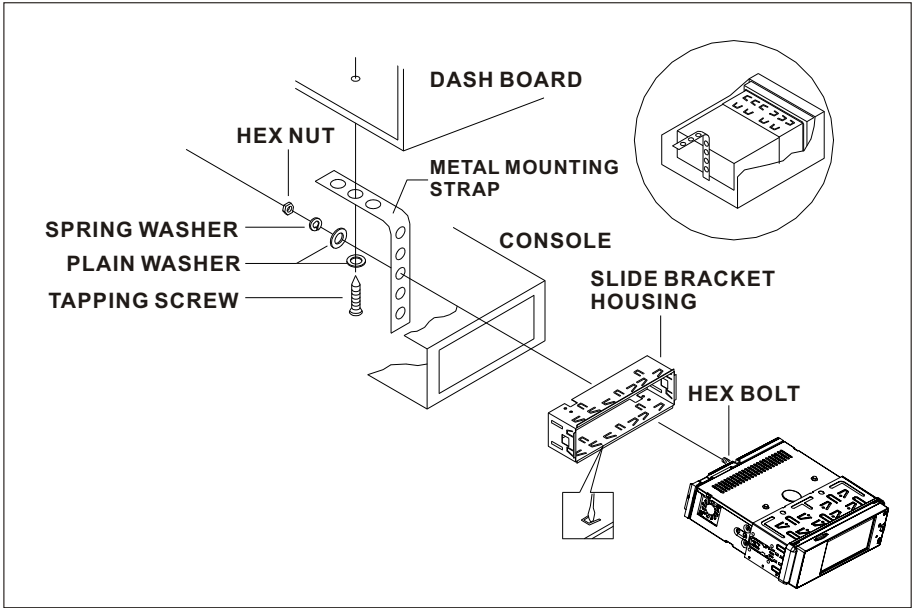

If you want to take CHASSIS out of the SLIDE BRACKET HOUSING, first remove the PLASTIC COVER of the both sides away, then insert the two KEY PLATE into left and right side of chassis as above illustration.


Installation


How To Remove And Install The Front Panel

When detaching or attaching the control panel, be careful not to damage the connectors on the back of the control panel and on the panel holder.


Detaching The Front Panel

Before detaching the control panel, be sure to turn off the power.

- 1). Press the  button and the right hand side of the front panel will release.

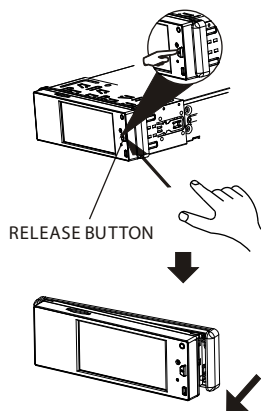


- 2). Pull-off the front panel and keep the front panel into the case.

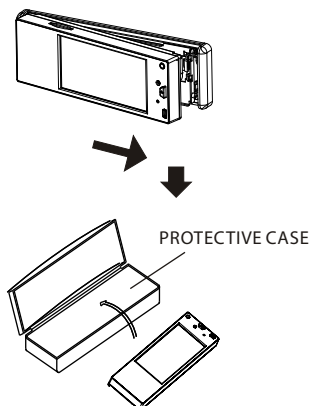


Attaching The Front Panel

- 1). First insert the left hand side of the front panel into the hollow of the unit. (NOTE : the “bulge” point on the panel must be attached into the hollow of unit.)

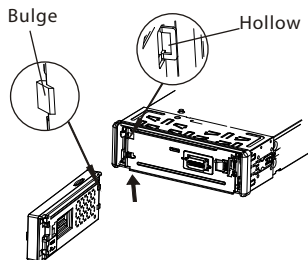


- 2). Gently push the right hand side of the front panel until you feel a “Click”.

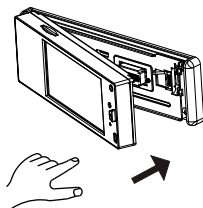

How to clean the connectors


Frequent detachment will deteriorate the connectors.


To minimize this possibility, periodically wipe the connectors with a clean, soft, dry cloth only, being careful not to damage the connectors.

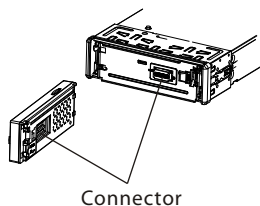

Panel Angle Adjustment

CHANGING THE CONTROL PANEL ANGLE

When you want to change the viewing angle of the operating unit to play, you can press the  (angle) button repeatedly to select the desired angle as follows:

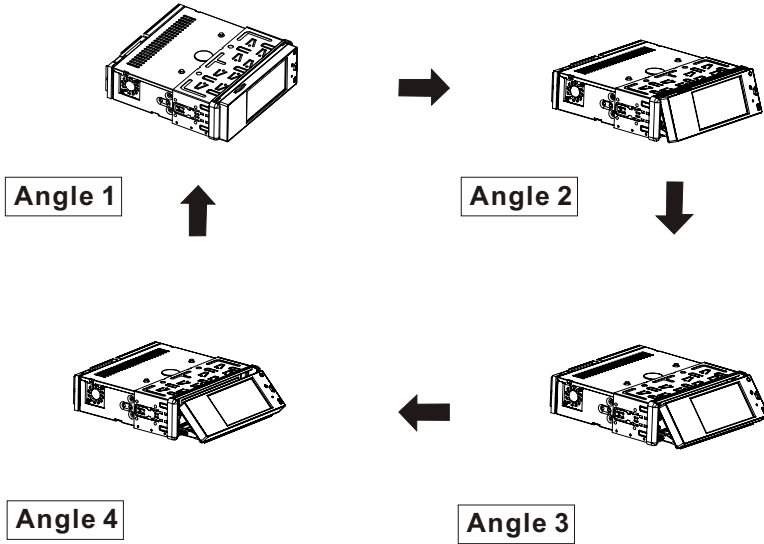


Caution:

Do not insert your finger behind the control panel.

Electric Connection


WIRING CONNECTION

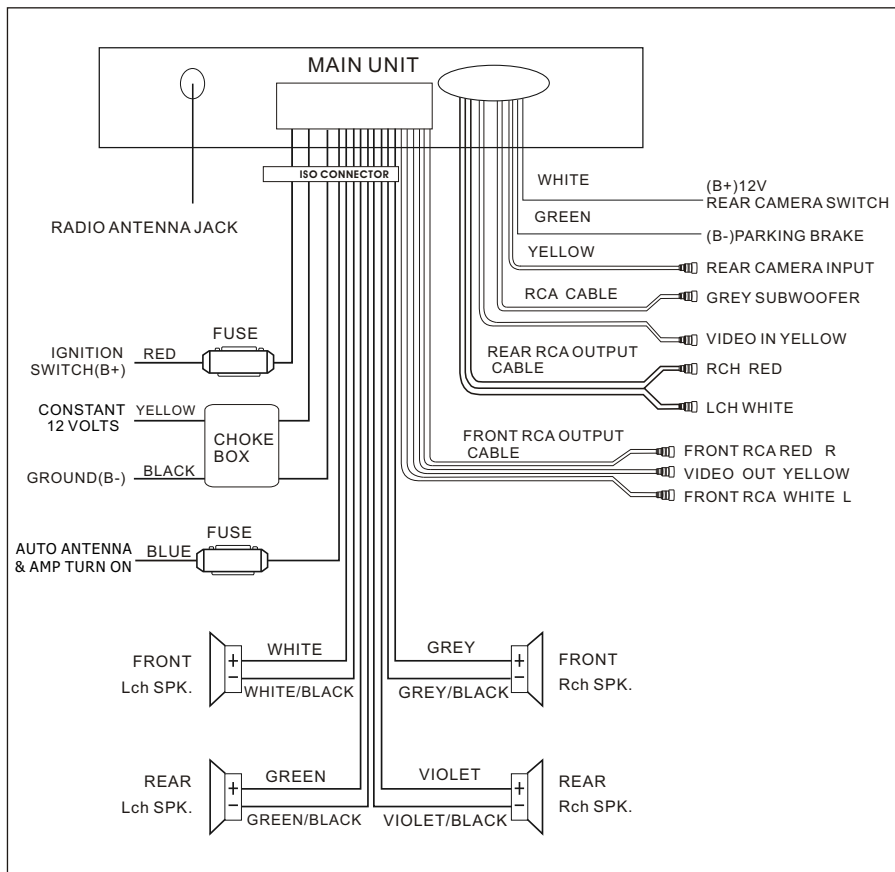

Note:



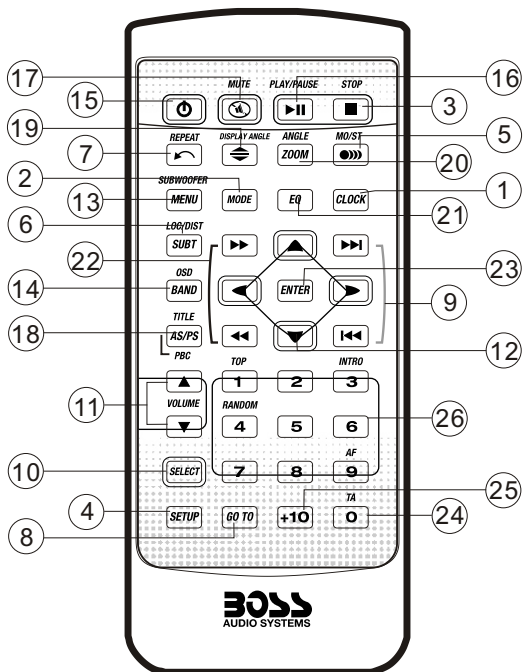



The "PARKING BRAKE" wire must be connected to the parking brake system of your car. When the parking brake is engaged, the LCD screen will be allowed to view your video. If not, the screen will produce an image saying, "PARKING BRAKE" this is a safety feature designed for the driver not to watch a video while driving. The video output on this unit is not affected by this.

Remote Control



Ref #	Button	Function
1	CLOCK	Press it briefly to view the clock time. Press again to return to normal display mode.
2	MODE	Press it to select the input mode, such as DVD, RADIO, etc.
3	STOP	Press once to pause playback. Press PLAY/PAUSE to resume playback. Please note: if you press STOP twice, playback will start at the beginning of the disc.
4	SETUP	Press this button to open the SETUP menu.
5	MO/ST (AUDIO)	In Radio mode, press this button to change between Mono and Stereo reception modes (when a station is weak, sometimes switching to Mono will improve sound quality). In Disc Playback mode, pressing this button opens the AUDIO setup menu for making changes to the way the soundtrack is reproduced.
6	SUBTITLE LOCAL/DISTANT	In DVD Disc Playback mode, pressing this button will allow you to change the subtitle language on discs which have this as an option. In Radio mode, press this button to change the radio reception sensitivity in stations are near or far.
7	REPEAT	Pressing the button will open a menu presenting you with the playback repeat options available for that kind of disc.

 Remote Control

Ref #	Button	Function
8	GOTO	Press button to begin playback at a moment in the program you designate. Use number buttons to enter the data that is needed.
9		Press these buttons to skip ahead or back one track.
10	SELECT	Press this button repeatedly to cycle through the various audio and video adjustments you can make: Volume, Bass, Treble, Balance, Fader, Color, Brightness, Contrast and Tint.
11	VOL+/-	Use these controls to adjust the volume level.
12		Press to navigate the various menus present in the product.
13	Menu SubWoofers ()	Press this button briefly to display the root level directory of a DVD disc. Press and hold this button to turn on or off the SUBWOOFER output.
14	BAND (OSD)	In Radio mode, press this button repeatedly to switch between the five radio bands: FM1 > FM2 > FM3 > AM1(MW1) > AM2 (MW2) . In Disc Playback modes, Press this button to see information about the disc currently in play.
15		Press this button to turn the unit ON, press it again to turn the unit OFF.
16	PLAY/ PAUSE	In Disc Playback mode, press to pause playback. Press again to start where playback stopped.
17	MUTE	Press this button to turn off the audio. Press again to restore the sound to its prior volume level.
18	TITLE/ PBC (AS/PS)	When playing a DVD, pressing this button will open the TITLE menu which is recorded on the DVD. When playing a VCD disc, press this button to create a PBC (Playback Control) menu for the disc to assist in making playback selections. In Radio mode, press and hold this button to start the Auto-Program mode, during which the tuner will scan for all strong stations and assign them to the radio preset buttons.
19		Press this button to change the viewing angle of the operate unit.
20	ZOOM/ ANGLE	For DVD discs which have alternate viewing angles encoded, when you see the "angle mark" symbol advising you that these angles are available, longer press this button to see them. Shortly press it button to increase the picture in size.
21	EQ	Press repeatedly to cycle through the different equalizer curve presets you may wish to use for enhanced listening.
22		In Disc Playback mode, press for fast forward/reverse playback.


Remote Control

Ref #	Button	Function
23	ENTER	This button is used to confirm selections and settings within many of the menus in the OSD system.
24	0-9	Use to input numerical values during programming, with the GOTO button, or to directly select a track to play. In Radio mode, (when the RDS engaged), 0 serves as TA function, 9 serves as the AF function.
25	+10	This button is used with the other number buttons for use with two-digit number entries.
26	1-6	Six numbered preset buttons store and recall stations for each band.

Preparing the Remote Control

Inserting the Battery

1. First push to inside as the direction indicated by the arrow (See ①) then remove battery holder as the direction indicated by the arrow (See ②).
2. Replace battery. Set a new battery property with (+)side up as illustrated (See ③).
3. Insert the battery holder. Push holder to the original position(See ④).

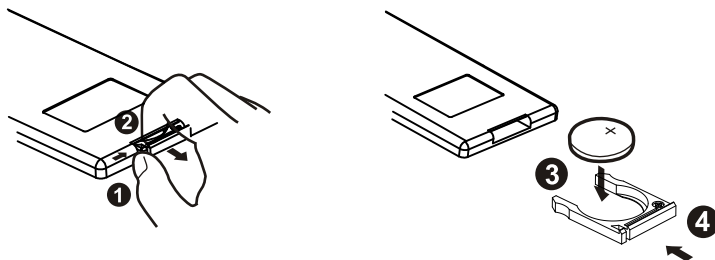

Using the Remote Control

Face the remote control towards the player front face IR mark (remote control signal receiver).

Operation angle: About ± 30 degree in each the direction of the front of the IR mark.


Note :

The lithium cell in the battery compartment of remote control has been secured for transport with a foil. Before initial use please remove this foil so that the remote control is ready for operation.

Basic Operation

TFT Monitor Adjustment

when playing a DVD, touch screen of “**||||**” range to enter the main menu. Touch “**SETUP**” ICON to enter the setting menu, the message display in screen:

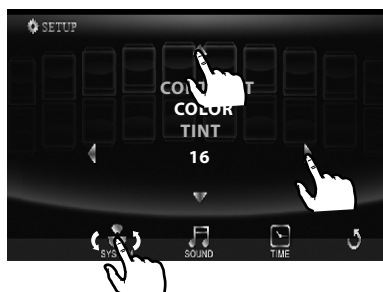

Touch “**SYSTEM**” on the setting menu, touch the “**▲/▼**” ICONS to select the adjustment item, touch the “**◀/▶**” ICONS to adjust the selectment item, it depends on your habit to setup the data.

ADJUSTABLE ITEMS:

CONTRAST: 0 to 32

Adjust the contrast of the bright and dark portion.

COLOR: 0 to 32

Adjust the color for the picture-lighter or darker.

BRIGHT: 0 to 32

Adjust if the picture is too bright or too dark.

TINT: 0 to 32

Adjust the tint if the human skin color is unnatural.

-Adjustable when “**NTSC**” is selected for “**NTSC/PAL**”.

ANIMATION

In **RADIO** mode, you can change the playing time of animation among of “**10SEC, 30SEC, 60SEC, 90SEC, 2MIN, 3MIN, 4MIN** and **OFF**”.

Note:

Please set the playing time of the animation to “**10SEC**” for the first, when you turn the unit on.

Rear View Camera

When connecting the rear view camera the mirror image of the rear view is automatically displayed on the monitor when you change the gear to the back position.

(Note: additional monitor can not display the image.)

AUDIO QUALITY ADJUSTMENT

In any mode, touch the “**⤵**” ICON to enter the home menu, touch “**SETUP**” ICON to enter the Setting mode.

The message will display in the screen:



Basic Operation

Touch “**SOUND**” on the setting menu, touch the “▲/▼” ICONS to select the adjustment item, touch the “◀/▶” ICONS to adjust the selectment item, It depends on your habit to select the Audio mode.

ADJUSTABLE ITEMS:

TREBLE: -14 to +14

Adjust treble level.

BASS: -14 to +14

Adjust bass level.

BALANCE: R 0-10 to L 0-10

Adjust sound balance between left and right speakers.

FADER: F 0-10 to R 0-10

Adjust sound balance between front and rear speakers.

 
BUZZER SET

Touch to switch the BUZZER BEEP function ON or OFF.

SETTING AUDIO MODES

In any mode, touch the “EQ” range on the touch screen (or press the EQ button on remote control) to select one of the preset sound modes: ROCK/POP/JAZZ/CLASSIC/FLAT.

The information will display in the monitor as follow:



It depends on your habit to select the Audio mode.

SETTING THE TIME

In SETTING mode, touch “**TIME**” to select the time mode.



touch the “▲/▼” ICONS to select the adjustment item, touch the “◀/▶” ICONS to adjust the selectment item, then touch “↻” ICON to confirm. It depends on your need to setup the data.

ADJUSTABLE ITEMS:

Hour adjustment: 0-23


Minutes adjustment: 0-59

Time format selection : 12H/24H

RESET FACTORY SETTINGS

RESET button is placed on the housing and must be activated with either a ballpoint pen or thin metal object. The RESET button is to be activated for the following reasons:

- Initial installation of the unit when all wiring is completed.
- All the function buttons do not operate.
- Error symbol on the display.

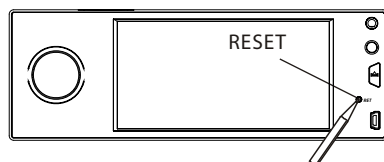


NOTE:

If RESET is selected, all memory data will be deleted, please re-adjust.

Control Panel

UNIT KEYS

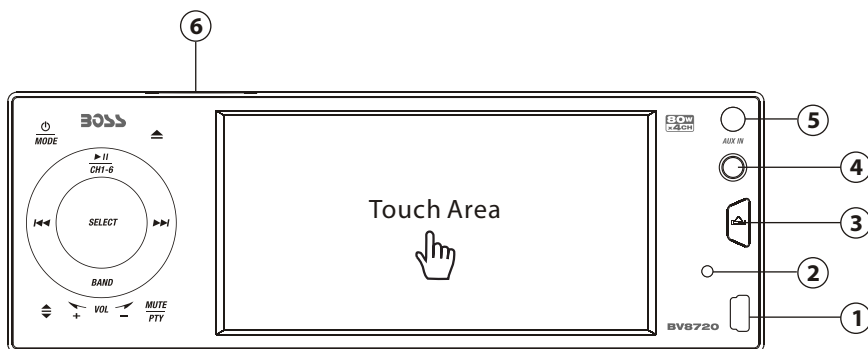


- ① USB OPERATION**
For information about connecting a USB device, please see page 33.
- ② RESET BUTTON**
Press this button to return to factory settings.
- ③ PANEL RELEASE BUTTON**
Press this button to remove the control panel.
- ④ IR SENSOR**
- ⑤ AUXILIARY INPUT JACK**
Insert an external device to this AUX jack in order to have audio output of the device through the unit.
- ⑥ SD CARD SLOT**

Control Panel

UNIT KEYS

(touch sensitive control)

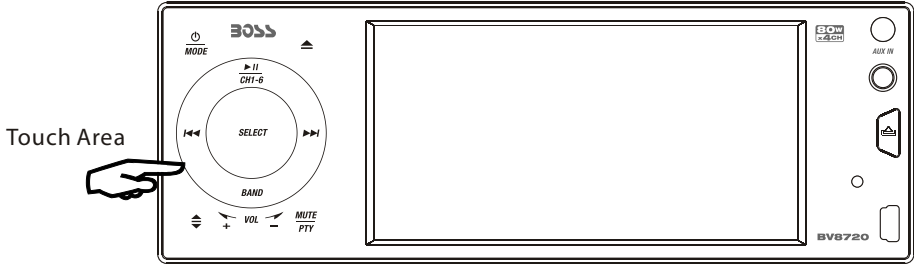

⏻ (POWER On/Off) / MODE

Touch this button to switch the device on. WELCOME appears in the display. Touch it again to switch the device off. SEE YOU appears in the display. In playback mode, you can touch this range to select the input mode by touching repeatedly until the proper one is found :
DISC > AUX IN > RADIO .



⏏ (EJECT)

To insert a disc, touch this button. The panel will swing downward, exposing the slot. Insert the disc, label side facing up, until the mechanism senses its presence and draws the disc in. The panel will automatically return to its previous position.



▶|| (PLAY/PAUSE) / CH 1-6 (RADIO PRESET)

A) In Disc Playback Mode

Touch this button to pause playback, touch again to resume playback.

B) In Radio Mode

Touch repeatedly to preset station. With this system a total of 30 stations can be stored in the memory. Each band store up to six preset stations. The stations might be FM1, FM2, FM3, AM1 (MW1) and AM2 (MW2) band.

The operation as below:

-Store in Memory

- > Select the frequency band.
- > Touch repeatedly this range to select the desired memory key.
- > Select the station.
- > Keep the desired memory key touched in until the station is heard again after a brief interruption.


 
Control Panel


-Retrieve a preset station

Touch repeatedly to retrieve a station which had been stored in the memory in advance the chose number is shown on display.



UP/DOWN BUTTONS

 In Disc (or USB) Playback mode, briefly touch  or  to skip forward or back one track. Touch and hold for more than two seconds to begin Fast Forward (or for Fast Reverse) mode. Press the button again as needed, to cycle thru the range of available speeds.



In Radio mode, briefly touch these buttons to manually tune the radio in single steps. Touch and hold for two seconds for the radio to seek the next station automatically.



SELECT BUTTON

To access the available adjustment settings for audio and video, touch repeatedly to cycle through and select them:



BAND

Touch to switch between the 3FM and the 2AM(MW) bands.

The designation of the corresponding level - **FM1, FM2, FM3, AM1(WM1), AM2(MW2)** - is shown in the TFT.



◆ ANGLE (Screen position)

You can change the viewing angle of the operating unit. Touch up to four times in order to select your desired position.



VOL-/VOL+ BUTTON

In normal mode, this button is used to adjust the volume to desired level.

It is also used as an UP/DOWN button when audio or video settings are being adjusted when accessed using the SELECT button.



MUTE/PTY

In any mode, touch to mute the sound.

In RDS Radio mode, touch repeatedly to step through the different station categories (such as NEWS, INFO, SPORTS, etc). When you have selected the category, the radio searches for stations in that category.

Touch Screen Operation



Touch “**SOUND**” on the setting menu, touch the “**▲/▼**” ICONS to select the “Radio LOC/DX” item, touch “**◀/▶**” ICONS to choose between the LOC and DX mode of Local and Long-distance traffic news.

Storing Stations In Memory

Setting Memory



With this system, a total of 30 stations can be stored in the memory of six buttons. Each band stores up to six preset stations. The stations might be FM1, FM2, FM3, AM1(MW1), and AM2(MW2) band.

The operation is as follows:

- **Store in Memory**
 - > Select the frequency band.
 - > Select the station.
 - > Keep the desired memory key pressed until the station is heard again after a brief interruption.
- **Retrieve a preset station**
 - Touch the **1-6** ranges briefly to retrieve a station which had been stored in the memory in advance. The chosen preset number will appear in display.

Automatic Memory Storing & Program Scanning

Automatic Preset Setup

In Radio Mode, touch and hold (for more than 2 seconds) the “APS” section to activate automatic station storage. The radio searches within the current frequency band, e.g. FM1, for the stronger signal level until the search cycle has finished. The six strongest stations are then allocated to the corresponding storage locations. Then the station of the first storage location is set.

Scan Function

In Radio mode, briefly touch “**APS**” on the touch screen, the radio briefly plays all the preset stations of the frequency band.

RDS FUNCTION

In Radio mode, touch the “**⌂**” ICON to enter the main menu, then touch the “**SET**” ICON to enter the set mode. The message in the display : (only in the “**TA ON**” mode.)



Touch Screen Operation

Touch “**RDS**” on the setting menu, touch the “▲ / ▼” ICONS to select the adjustment item, touch the “◀ / ▶” ICONS to adjust the item.

ADJUSTABLE ITEMS:

REGION SET

Touch to switch the REGION function ON or OFF.

PI SET

Touch to change between PI MUTE and PI SOUND.

REG FUNCTION

At certain times some stations divide up their programs into regional programs with varying content.

REG ON: The message “REG ON” will appear in the display for a few seconds.

Note :

- The display capacity is limited. It is possible that in the double display mode some segments of the display are deleted.

- The function REG ON prevents the radio from switching to alternative frequency which have a different regional program content.

REG OFF: The program identification (PI) of the regional program is ignored during the search for an alternative frequency (AF) or a program identification (PI).

PI MUTE/PI SOUND

(only for radio operation)

If you are in an area where two program identifications (PI) overlap, you can select the option **PI SOUND** and **PI MUTE** for playback of the sound. Alternate switching of the program identification should be avoided.

PI SOUND :

If switching occurs the sound of another station is heard for less than one second.

PI MUTE :

The sound of another station is suppressed.

TA Traffic Announcement

(Priority For Traffic Information)

In Radio mode, touch the cursor button to switch the **TA** function ON or OFF. When the **TA** function is activated, the **TA** symbol appears in the display. During radio operation in one FM frequency band the search for a traffic announcement station is started automatically (**TA SEEK**).

If an FM station is being received which transmits the latest traffic announcements from time to time, the TP display lights up.

When the **TA** function is switched on, the FM traffic automatically interrupts CD operation (the word **TRAFFIC** appears in the display).

The volume level is increased to the minimum value for the transmission of traffic announcements.

After the traffic announcements has finished, previous program will resume.

Interruption of the TA Function:

If you would like to interrupt the current traffic announcement, briefly touch **TA** on the screen. This will switch off the **TA** mode.

Touch Screen Operation

AF FUNCTION

(Alternative Frequencies)

In Radio mode, touch the cursor button to switch the **AF** function ON or OFF.

AF is a function that works with the help of RDS (Radio Data System) and can only be used with FM stations. The radio searches in the background for the best frequency reception of the station that has been tuned into.

Touch **AF** on touch screen for more than 2 seconds, the **AF** function is activated. The **AF** symbol appears in the display.

When the **AF** function has been switched on, the radio continuously tests the signal strength of the **AF** frequency. The test interval for each **AF** frequency depends on the signal strength of the current station and can vary for a few minutes in the case of weak signals. Whenever the new **AF** frequency is stronger than the station that is currently tuned in, the radio switches to this frequency for a short time and the message "**NEW FREQUENCY**" is displayed for one or two seconds.

Note :

The status of the **AF** function is shown by an **AF** symbol in the display.

- If the **AF** symbol appears in the display, the **AF** function is switched on and **RDS** transmission data is being received.
- If the **AF** symbol flashes in the display, the **AF** function is selected but no **RDS** signal can be received at the moment.

PTY FUNCTION

In Radio mode, touch "**PTY**" ICON to select the Program type.



PTY Selection of the program type appears

beside the stations name. Some FM stations also transmit information on the type of program. This information can be displayed by your car radio. Examples of such types of program are :

SPORT NEWS POP WEATHER.....

With **PTY** function you can specifically select stations transmitting a particular type of program. Touch the **PTY** ICON on screen repeatedly to call up the **PTY** selection menu. The message "**PTY SEEK**" then appears briefly in the display.

When **PTY** has been selected the radio starts searching for corresponding **PTY** information and stops when the **PTY** information has been found, "**NO PTY**" appears in the display. If the **PTY** information being searched for no longer exists, the **PTY** function automatically switches to normal mode.

Touch Screen Operation

DVD MODE

In any mode, touch the “↻” ICON to enter the main menu. Touch the DVD ICON on the main menu to enter the DVD play mode.

The message will display as below:
(When Parking Brake is applied.)



Mute function



To decrease the volume level



To increase the volume level



To enter the main menu



Random Function



Repeat Function



Intro Function



Next menu



To search fast forward



To search fast backward



Stop



Play/Pause the disc



To skip the next track



To skip the previous track



To search the disc with numbers



In DVD mode, touch to display the root menu. In VCD mode, touch to switch the PBC ON and PBC OFF.



To select the viewing angle



To show/hide the Subtitle
(depending on the DVD)



To change the AUDIO setting
(depending on the DVD)



ZOOM IN and OUT



Turning pre-switching for traffic
announcements on and off



Switching on and off an Alternative
frequency



To display the SETUP menu



To select the Equalizer mode



On screen- display



To show / hide the clock



Loudness Function



Subwoofer Function






Previous menu



Touch Screen Operation

BASIC OPERATION



 
Stopping Play


 Touch  ICON to stop the unit playback. Touch  to start play.

Pause (still picture)

 Touch  during playback to temporarily pause play. Touch again to return to normal playback.

Rapid Forward/Rapid Reverse




 During DISC playback, touch  /  for rapid forward/reverse.

 The speed of rapid forward/reverse changes according to the disc as follows:

DVD/VCD/CD/MP3:

Normal Playback 2x → 4x → 8x → 20x


Skipping Track

 During DISC playback, touch  /  to skip to next/back one track.

Note :

For some VCD2.0 disc (PBC-playback control), above these buttons may be unavailable.

Zoom Function

 Repeatedly touch for zoom-in/zoom-out rates as follows:
“zoom 2, zoom 3, zoom 4, zoom ½,
zoom 1/3, zoom 1/4, zoom off.”

Use the direction keys (▲/▼/◀/▶) on remote control to move the enlarged picture.

Note:


When JPEG disc playback is in normal mode use arrow buttons to rotate the picture.
Press UP to invert an image.
Press DOWN to mirror an image.
Press LEFT to rotate an image to left.
Press RIGHT to rotate an image to right.

SELECTING THE PLAY MODES

During the Disc playback, touch the “RPT, RDM, INT” to select the different playing modes.


1). REPEAT FUNCTION

FOR DVD :

Touch the “” ICON (or press the **REPEAT** button on the remote control) to select REPEAT mode as follow :



FOR VCD/CD/MP3 :


Touch the “” ICON (or press the **REPEAT** button on the remote control) to select REPEAT mode as follow :



1. Continuously repeat at the current chapter/track, when selected REP-ONE mode.
2. Select REP-ALL mode to continuously repeat all chapter/track on the current disc.


2). INTRO FUNCTION

FOR CD :

Touch the “” ICON (or press and hold the **3/INTRO** button on the remote control) to play the previous 10 seconds of each track/chapter on disc.
(Touch it again to cancel this mode)

Touch Screen Operation

FOR VCD :

Touch the “” ICON (or press and hold the **3/INTRO** button on the remote control). The following menu is displayed:




Note: When INTRO Mode is selected, player will play the previous 10 seconds of each track/chapter on disc. (Touch it again to cancel this mode.)


FOR DVD/MP3 :

For DVD/MP3, the INT button is not available.

3). RDM(RANDOM) FUNCTION

During DISC playback, touch the “” ICON (or press and hold the **4/RANDOM** on the remote control). Each playing, the order is different. (Depending on the disc used for VCD)
Touch it again to cancel this function.

TOP/RPT/INT/RDM FUNCTION (Only for the remote control.)

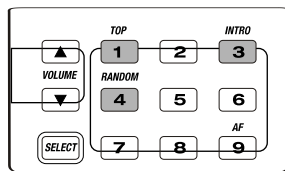

TOP function

For DVD/VCD/CD/MP3:
Press to select the first track/chapter to play. (Depending on the disc used for VCD)

INTRO function

Refer to page 23.


RANDOM function

Refer to page 24.

DISC Search (GOTO)

FOR DVD :


Touch “**GOTO**” and screen will display the following message :

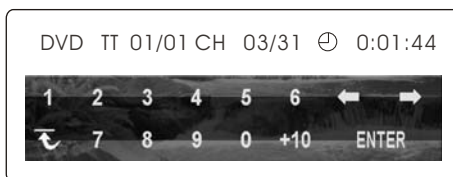

Touch **← / →** to select the adjustment item, select the item you want to watch through CHAPTER/TIME setting by touching the numeric buttons. Touch the **ENTER** button to confirm.

FOR VCD (With PBC OFF):

Touch “**GOTO**” and screen will display the following message :

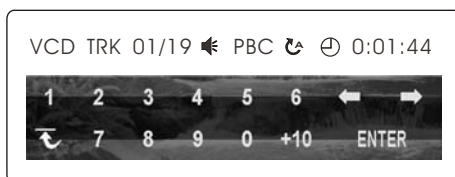

Touch **← / →** to select the adjustment item, then select the item you want to watch through TRACK/TIME setting by touching the numeric buttons. Touch the **ENTER** button to confirm.

Touch Screen Operation

ON-SCREEN DISPLAY FUNCTION

OSD



During playback, touch the OSD section, it will display the following as below :

1. DVD:

A. Touch or Press **OSD** for first time:

DVD TT 01/01CH 04/31 C 0:02:06

Title Number, Total Title Number, Chapter Number, Total Chapter Number of this Title of the disc currently being played will be shown on the screen, along with the elapsed time.

B. Touch or Press **OSD** for second time:

⏮ ½ ENG ■■ 2CH ⏪ OFF ⏩ OFF

C. Touch or Press **OSD** for third time:

DVD TT 01/01CH 04/31 C -0:01:32

D. Touch or Press **OSD** for fourth time:

DVD TT 01/01CH 04/31 T 0:16:00

E. Touch or Press **OSD** for fifth time:

DVD TT 01/01CH 04/31 T -1:36:55

F. Touch or Press **OSD** for sixth time:
The message on the screen will be cleared.

2. Example for VCD/SVCD/CD:

A. Touch or Press **OSD** for first time:

VCD TRK 1/19 🔊 PBC ⏪ C 0:01:36

B. Touch or Press **OSD** for second time:

VCD TRK 1/19 🔊 PBC ⏪ C -0:06:06

C. Touch or Press **OSD** for third time:

VCD TRK 1/19 🔊 PBC ⏪ T 0:02:12

D. Touch or Press **OSD** for fourth time:

VCD TRK 1/19 🔊 PBC ⏪ T -1:23:06

E. Touch or Press **OSD** for the fifth time:
The message on the screen will be cleared for SVCD and VCD.

NOTE:

For CD(audio) Disc, touch OSD button is not available.

3. Example for MP3

A. Touch or Press **OSD** for first time:

CDrom TRK 2/76 🔊 ⏪ C 0:00:36

B. Touch or Press **OSD** for second time:

CDrom TRK 2/76 🔊 ⏪ C 0:03:38

C. Touch or Press **OSD** for third time:
The message on the screen will be cleared.

Touch Screen Operation

DVD/VCD Special Function

1. Multi-subtitle Language Function (for DVD Only)



During DVD playback, touch the **SUBTITLE** section on touch screen (or press SUBTITLE on the remote).

Each time the button is pressed or touched the number of the subtitle language changes in sequential order.

Notes:

- The language number is different according to the disc.
- Some discs only contain one subtitle language.
- When none or different subtitle language is recorded, "INVALID KEY" will be displayed at screen left top corner.

2. Multi-Audio Language Function



For DVD:
During DVD playback, touch the **AUDIO** section on touch screen (or press the AUDIO

on the remote). Each time the button is pressed or touched number of the audio soundtrack language changes on sequential order.

Notes:

- The language number is different according to the disc.
- Some disc only contain one language soundtrack.
- When none or different language soundtrack is recorded, "INVALID KEY" will be display at screen left top corner.

For VCD/CD:

During playback, touch the **AUDIO** section of the touch screen (or press **AUDIO** on the remote). It is possible to switch the sound between monaural and stereo sound as follows:



3. Multi-Angle Function (for DVD Only)



During DVD playback, touch the **ANGLE** (㉞) button on the touch screen.

Each time the button is pressed, the number of the angles change in sequential order.

Notes:

- The angle number is different according to the disc.
- The function only works with discs having scenes recorded at different angles.
- When no different angle is recorded, "INVALID KEY" will be displayed at screen left top corner.

4. Title Menu Function

For DVD:

If the DVD has multiple titles recorded on the disc you can select preferred title from the title menu to start playback.

- During DVD playback, press **TITLE** button on the remote. The title menu is display.
- Select preferred title by the cursor button and confirm by pressing the **ENTER** button.


For VCD:






Press **TITLE/PBC** button on the remote control while the disc is playing, you can switch between "PBC ON" and "PBC off" mode.

Touch Screen Operation

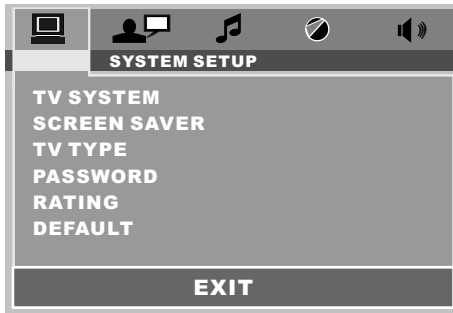SETUP

USING THE MENU




1. Touch the “” ICON (or press the **SETUP** button on remote).
2. The SETUP menu is displayed.
3. Touch directly to select preferred item or by using the / / /  buttons.
4. Touch “**EXIT**” to clear setup menu (or press the **SETUP** on the remote control).

Overview Of The Main Menu




- (1). System Settings
- (2). Language Settings
- (3). Audio Settings
- (4). Video Settings
- (5). Digital Settings

SYSTEM SETUP

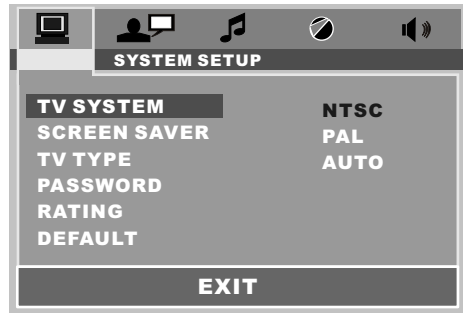

TV TYPE SETUP




This player is capable of playing discs recorded in either PAL or NTSC formats. Make the selection based on whether you are connecting the unit to a PAL TV or an NTSC TV. You can also set the unit to AUTO (autoselect). The disadvantage to autoselect is that each time you turn the unit on it checks to see what kind of monitor is connected, which causes a small delay and some flickering of the display image which you may find unpleasant.

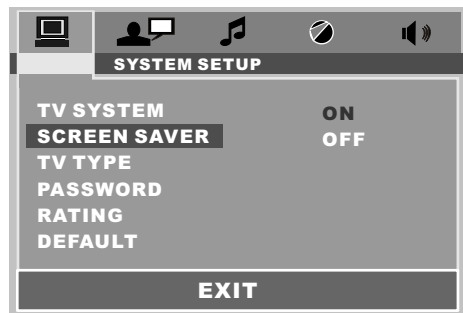

SCREEN SAVER SETUP

If the screen displays a static image for too long, some "burn-in" may occur, leaving a permanent trace of the image behind. To avoid this, turn ON the SCREENSAVER item. After a short period of inactivity on the monitor, the unit will substitute a moving image to avoid burn-in.

Touch Screen Operation

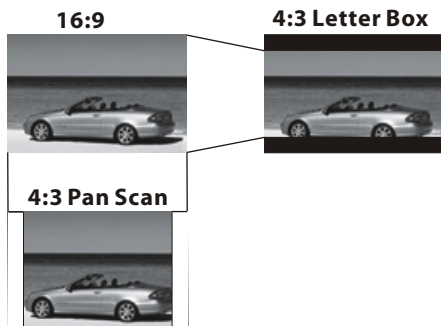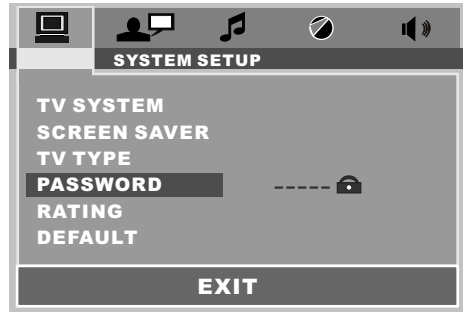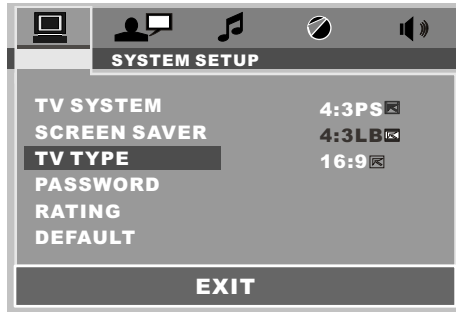

PASSWORD SELECTION

The password must be used to make changes to the Parental Control menu below. The factory default password is **0000**. You will be asked for the current password. Key in “**0000**” and then press “ENTER” on remote control to confirm. You have the opportunity to change it and enter your new password. Then when you enter the Parental Control menu, you can make any changes.

TV DISPLAY SETUP

This is to select the appropriate TV aspect (4:3 or 16:9) according to the connected TV set.

Normal/PS (For 4:3 TV)


Played back in the PAN & SCAN style. (If connected to wide-screen TV, the left and right edges are cut off.)

Normal/LB (For 4:3 TV)

Played back in LETTER BOX style. (If connected to wide-screen TV, black bands appear at top and bottom of the screen.)

Wide (For 16:9 TV)

Select when a wide-screen TV set is connected.

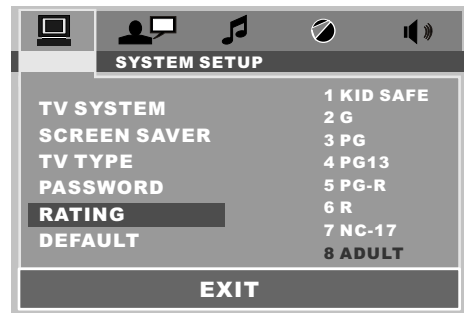

RATING

Select suitable parental guidance with the cursor buttons and confirm it by pressing the ENTER button.

Touch Screen Operation



DEFAULTS

Selecting the **DEFAULT** item and confirming **RESTORE** will return ALL personal settings you have made, including radio and TV presets, to the factory default settings.



AUDIO LANGUAGE SETUP

Select the preferred **AUDIO** soundtrack language by touching directly the desired language.

LANGUAGE SETUP



OSD LANGUAGE SETUP

Select the preferred **OSD** language by touching directly the desired language.



SUBTITLE LANGUAGE SETUP

Select the preferred **Subtitle** language by touching directly the desired language.


Touch Screen Operation



DISC MENU LANGUAGE SETUP

Select the preferred DISC MENU language by touching directly the desired language.

AUDIO SETUP

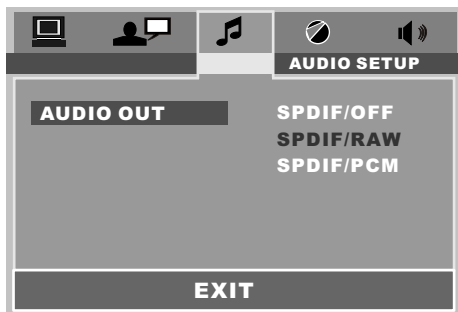

AUDIO SETUP (DIGITAL OUT)

Your DVD player can be connected to a home theater system with a coaxial digital audio jack for high quality sound. Digital audio output allows you to select SPDIF/RAW or SPDIF/PCM digital signal.

A. SPDIF/RAW


The coaxial output is connected to a receiver that accepts Dolby Digital or other signals. It works for most of the coaxial connections.

B. SPDIF/PCM


The coaxial output is connected to a receiver that accepts PCM SIGNALS.

VIDEO SETUP

These settings allow you to set the video signal brightness, contrast, hue, and saturation.

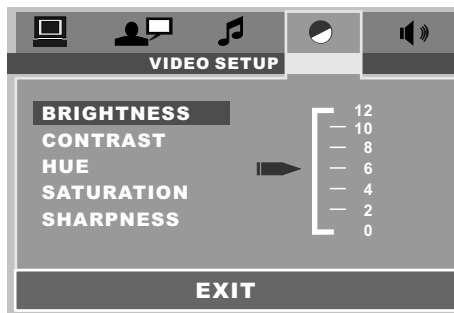


BRIGHTNESS- The brightness of the video signal (how light the picture is).

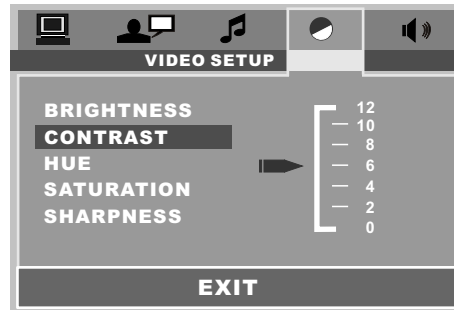

CONTRAST- The contrast of the video signal (the dark portions of pictures).


Touch Screen Operation

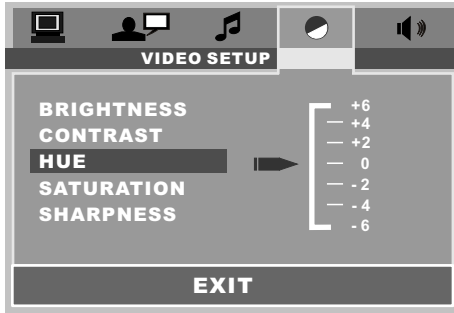

HUE- The hue of the video signal (the color of the pictures).




SHARPNESS- The sharpness of the video signal (the image setting acumination).

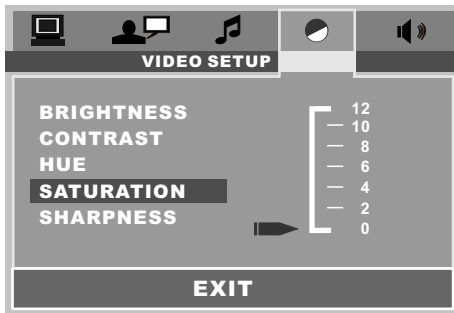

SATURATION- The saturation of the video signal (the vividness of the color) all above can be adjusted to your tasters.

DIGITAL SETUP

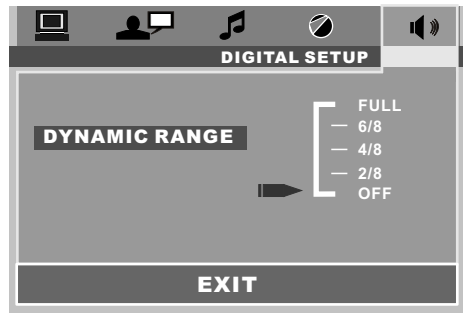

DYNAMIC RANGE CONTROL
Select DRC and adjust the dynamic range of a Dolby Digital encoded program. There are 8 steps between full compression and off compression.

Touch Screen Operation


AUX Operation

On the front panel of this unit, there is an AUX IN jack. Follow the diagram below to connect analogue replay devices (only for the Audio connect. If you want to connect the Video, plug the RCA <Video input > on the back of the unit). Use this jack to replay sound of other replay equipment such as DVD players, computers, etc. via the loudspeakers.



1). Please connect the external device with stereo jack plug the Aux in socket.

AUX IN JACK FRONT PANEL

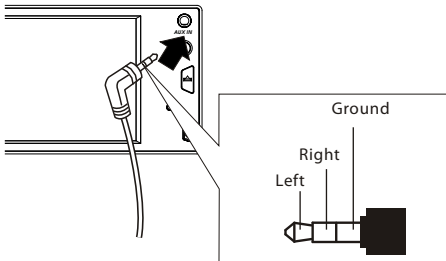

Note:

Unit only supports the 3.5 mm audio Jack Pin Assignment as shown in diagram.

2). In any mode, touch the “ ↻ ” ICON to enter the main menu. Touch “ **AUX** ” ICON to enter the AUX IN mode.



3). Sound from the external device will now be played back through the loudspeakers.



4). Touch the volume+/- sections on touch screen or use the VOL+/- on the panel to adjust the volume level.

Touch Screen Operation

USB Operation

(USB Storage Capacity : 8GB)

Following the diagram below, connect your USB device by USB connect cable to the front panel USB port.

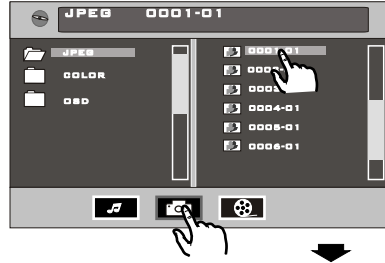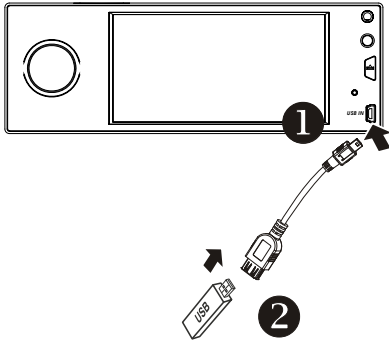

If it is properly connected, the device will be mounted and start playing automatically. The information like following:

1. MP3/WMA file operations



File Playback Operation

All the playback operation function is same as the operation on CD/MP3 play.

(Use your finger to touch directly the desired track to start play)

2. JPEG file operations

In USB playback mode, you can touch directly the "📷" icon to choose JPEG mode, the message will display as below :

1). Selecting other file

Touch or press "▶▶ / ◀◀" once while viewing a picture to advance to the next /previous file. (You can touch directly you desired picture to start play.)

2). To flip the picture

Press "▼ / ▲" while viewing a picture to flip picture horizontally or vertically.

3). To rotate picture

Press "▶ / ◀" while showing a picture to rotate the picture clockwise or counter clockwise.


4). To stop viewing at any time, press stop

the JPEG menu appear, you can choose other item.



Touch Screen Operation

3. MOVIE or MPEG4 file operations

In USB playback mode, you can touch directly touch the “” ICON to choose movie mode, the message will display as below :






File Playback Operation




All the playback operation function is same as the operation on DVD play.

(Use your finger to touch directly the desired track to start play)

Changing From USB to DISC or SD card Playback modes

If you are in USB Playback mode and wish to begin playback of a disc already in the player, touch the “” ICON to enter the home menu, then touch the “” (DISC) or “” (SD) ICON to enter the DISC or SD mode.

Changing From DISC to USB or SD card Playback Mode

If the disc present in the player is an DVD or VCD or MP3/WMA or MP4 disc, touch the “” ICON to enter the home menu, then touch the “” (USB) ICON or “” (SD) to enter the USB or SD mode.

IMPORTANT NOTE:

1. To prevent damage to the USB device, do not remove or disconnect it during playback. It is also a good practice to remove the USB drive during disc playback.

Touch Screen Operation


SD/MMC card OPERATION

(SD/MMC Storage Capacity : 8GB)

The unit can support playback MP3/WMA /JPEG/MP4 and Divx format which are stored into SD and MMC memory card. Please read below before you start the operation of memory card.


Inserting the SD or MMC card.

①

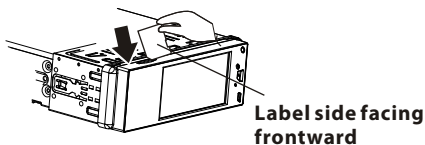

Insert the memory card into slot with label side facing forward.


②

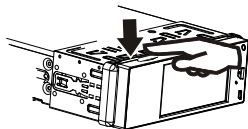

Press in until you hear a "CLICK".


Removing the SD or MMC card.

①

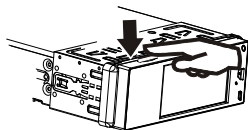

Press in until you hear a "CLICK".

②

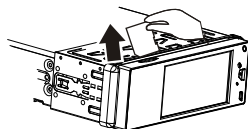

Remove the memory card.

MODE CHANGE TO SD/MMC CARD

After a SD or MMC card was inserted into the main unit card slot, the unit will start playing the files contained on the memory card. Once the unit reads the memory card successfully, the first file on the memory card will automatically start playback. Press the mode button repeatedly is allowing changing to other modes.

FILE PLAYBACK OPERATION

1. MP3/WMA file operations

All the SD or MMC memory card playback operation functions are same as the operation on **CD/MP3/WMA**. Please see "MP3/WMA" operation for more details.

2. JPEG file operations

All the playback operation functions are the same as the operation on USB play.

3. MOVIE or MPEG4 file operations

All the playback operation functions are the same as the operation on USB play.

CHANGE DISC TO SD/MMC CARD

The operations are the same as USB mode, refer to see USB operation.


CHANGE SD/MMC CARD TO DISC

The operations are the same as USB mode, refer to see USB operation.

Touch Screen Operation

MP3/WMA/JPEG/MPEG4 DISC PLAY

The unit is support MP3/WMA/JPEG/MPEG4. When a disc is inserted into player, the following picture will appear on the monitor. The unit will play the first track automatically. You can touch to directly others mode (MP3/JPEG /MPEG4) to play. EX. : When the MP3 mode is selected.

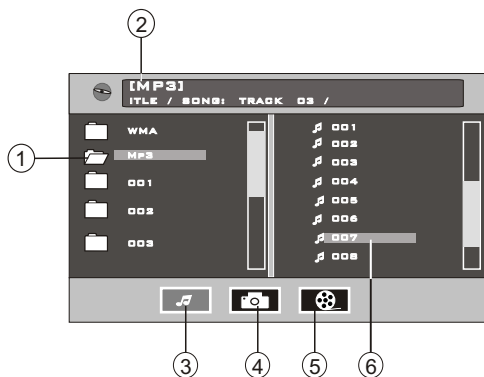

- 1 Current type (highlighted bar).
- 2 Current track (ID3 TAG display).
- 3 The current play mode(MP3).
- 4 Select the play mode(JPEG).
- 5 Select the play mode(MPEG4).
- 6 Current song in MP3 folder.

Touch directly to select the play mode and then touch the desired track to play. Or Use ▲ / ▼ / ► / ◀ on the remote control to select the play mode or item, then press **ENTER** button on the remote control to confirm.

MOVING TO ANOTHER TRACK :

1. Touch directly the desired song to start play.
2. Touch ►► or ◀◀ range on the touch screen to skip a track ahead or back.
3. Press ►► or ◀◀ button on the remote control to skip a track ahead or back.

FAST FORWARD/FAST BACKWARD

1. Touch briefly “►► / ◀◀” range on touch screen for fast forward / fast backward.
2. Press shortly ►► or ◀◀ button on the remote control for forward or backward.

REPEAT FUNCTION

Touch “**REPEAT**” on the screen (or press the “**REPEAT**” on the remote control) repeatedly can select two kinds of repeat play mode.

REP-ONE:

Play the same song over and over again.

REP ALL:

Play all songs on the disc, then repeats the entire disc over and over again.

NOTE:

In JPEG/MPEG4 mode, the details operations as same as MP3/WMA operation.

Specification

General:

Supply Voltage:	12V DC (11V-15V)		
Current Consumption:	Less than 10 A		
Signal System:	Compositive video 1.0Vp-p 75 Ω		
Discs Played:	(1)DVD-VIDEO Disc 5"(12 cm) single-sided, single-layer 5"(12 cm) single-sided, double-layer (2)Compact Disc (CD-DA, VIDEO CD) 5"(12cm) disc		
Audio Signal Output:	2ch&4ch line out		
Characteristics:	(1)Frequency Response	20 Hz - 20 KHz	
	(2)S/N Ratio	90 dB (JIS)	
	(3)Wow and Flutter	Below measurable limits	

RADIO Section:

	For 3 Bands (Europe) FM	For 2 Bands (Europe) FM	For 2 Bands (U.S.A.) FM
Frequency Coverage:	87.5 to 108 MHz	87.5 to 108 MHz	87.5 to 107.9 MHz
IF:	10.7 MHz	10.7 MHz	10.7 MHz
Sensitivity (S/N = 30 dB):	15 dBu MW	15 dBu MW	15dBu AM
Frequency Coverage:	522 to 1620 KHz	522 to 1620 KHz	530 to 1710 KHz
IF:	450 KHz	450 KHz	450 KHz
Sensitivity (S/N = 20 dB):	40 dBu	40 dBu	40 dBu

TFT Monitor:

Monitor Screen Size:	4.3 Inch Wide
Number of Pixels:	1440 X 234 pixels
Color System:	NTSC/PAL

NOTE:

Specifications and design are subject to modification, without notice, due to improvements in technology.

Trouble Shooting

Before going through the check list, check wiring connection. If any of the problems persist after check list has been made, consult your nearest service dealer.

SYMPTOM	CAUSE	SOLUTION
No power	The car ignition switch is not on	If the power supply is properly connected to the car accessory terminal, switch the ignition key to "ACC"
	The fuse is blown	Replace the fuse
Disc can not be loaded or ejected	Presence of disc inside the player.	Remove the disc in the player, then put a new one
	Inserting the disc in reverse direction	Insert the compact disc with the label facing upward
	The disc is extremely dirty or defective	Clean the disc or try to play a new one
	Temperature inside the car is too high	Cool off or until the ambient temperature return to normal
Television/video image appears black-white	The color system is set incorrectly	Please switch to correct color system from menu
No television/video image appears	The unit is not connected to the parking brake detection switch	Make proper connection according to "wire connection"
	The parking brake is not engaged	For safety reasons no television /video images are displayed while the vehicle is moving. Engaging the parking brake will cause images to be displayed.
No color in picture	The disc format is not according to the TV-set used (PAL/NTSC)	Please the television mode of the choice accommodation
JPEG disc can not be played back	No JPEG files are recorded on the disc.	Change the disc
	JPEG files are not recorded in a compliant format	Change the disc Record JPEG files using a compliant application
The operation keys do not work	The built-in microcomputer is not operating properly due to noise	Press the RESET button. Front panel is not properly fixed into its place
The radio does not work	The antenna cable is not connected	Insert the antenna cable firmly
	The signals are too weak	Select a station manually