

LETTER & NUMBER GUIDES

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

1 2 3 4 5 6 7 8 9 0 ! ? # @ &

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

1 2 3 4 5 6 7 8 9 0 ! ? # @ &

TROUBLESHOOTING TIPS

Etching looks rough: Press lightly on the plastic as you etch. Pressing down hard creates a rougher finish.

Blue dust on the etching tool: As you etch, the foam stencil may create dust. Stop the tool and remove the dust with your hand or paper towel.

Etching tool tip fell out: Just push it back in place, and continue to use.

On/Off button came off: Just push it back in place. We have also included an extra button just in case.

Tool isn't working when I press down on the plastic: Be sure you are using fresh batteries. Pushing too hard may slow the power of your etching tool. Use light pressure to maximize battery life.



Etch-It Workshop #6264000
© Faber-Castell USA, Inc.
Cleveland, Ohio 44125
www.fabercastell.com
Designed in USA • Made in China

Need Help?
Call: 800-311-8684
e-mail: consumer@fabercastell.com
Chat or view FAQs & INFO online:
supportcfk.fabercastell.com

ETCH-IT Workshop

BATTERY CAUTIONS

- Use only Alkaline batteries.
- Non-rechargeable batteries are not to be recharged.
- Do not mix different types of batteries or new and used batteries.
- Only batteries of the same or equivalent type as recommended should be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Instructions must be kept since they contain important information.

The tool requires 2AA (2 x 1.5v) batteries. (not included) Twist the top off. Place the batteries in the bottom half of the tool as shown and also marked on the barrel. Screw top half back on.



WARNING: The etching tool should only be used as directed with the components included in your kit. Do not place the etching tool on any part of your body, furniture or other items. Younger children may need help and adult supervision.

You will also need a pair of scissors and a pencil or pen.

Read through all instructions before you begin




Use the stencils and letter guide, or create your own designs. The possibilities are endless!



USING THE ETCHING TOOL

Use the foam sheet included to protect your workspace. Hold the tool as shown in the photo. To turn it on, press the button and hold it down. When you let go of the button, it will automatically turn off.

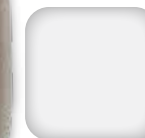

For your first time using the etching tool, we have included a small square of plastic for you to test the tool. Try different amounts of pressure. When you like how it looks, you are ready to move on to the accessories.

You do not need to press too hard. A light touch will create a cleaner etch.

Choose your accessory and decide what you would like to etch into it. For design ideas refer to the instructions and pictures on the packaging.



Whatever you etch will be permanent.





USING THE STENCILS

Use the next page of your instructions to plan out your design.

However, do not put the stencils on the paper.


When you are ready to etch, peel stencils off the backer and then position them on top of your accessory. Use the stencil to guide the outline of your design. Then fill in the middle.

Carefully peel off the stencil when you are done.

Note - When using the tool, normal wear and tear of the stencils is expected. In most cases, stencils are intended to be used one time.



You can also try using the stencil “middles” and etch around them. Just place the inside of the stencil on your accessory, and etch around the outside as shown.

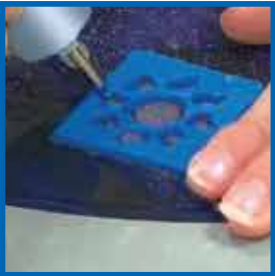

USING THE LETTER & NUMBER GUIDES

To add words or initials, use the alphabets printed on the back page of the instructions. Plan out your design first to make sure the words and letters are centered and they all fit.

Remove the backs from the backpack clips and frames. Place your backpack clips, frames or room sign over the letters - so they show through - and carefully trace along the outline with your etching tool. *The lines underneath the letters are there as a guide to help keep your letters straight if desired.*



ADDING COLOR

Once you have etched your designs, follow these instructions to add colorful inserts or photos to your backpack, clips, frames and room signs

Pro-tip: *If adding a photo to your magnet frames or backpack clips, look for images with darker backgrounds for your etching to stand out more.*


Backpack Clips: Remove the backs from the backpack clips. (Use the notch on the back and lift with a paperclip). Trace around the frame back on the paper insert or photo you are using. Cut it out and place it inside your frame. Snap the back in place.

Pro-tip: *For a sophisticated look, try etching both sides of your backpack clip, and don't put paper in between; but be careful what you choose to do, as you will see both sides!*










Magnetic Frames: Bend the opposite corners to loosen and remove the back. Use this as a guide to trace your image onto your paper or photo. Insert the paper into the frame and replace the magnetic back.

Room Sign: Use the room sign printed backer as shown. Thread the string through the holes in the backer and room sign. Secure it with a knot. Now it's ready to hang.

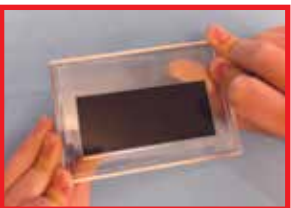

PLAN YOUR DESIGNS HERE

   Reminder: Do not stick the stencils to the paper.

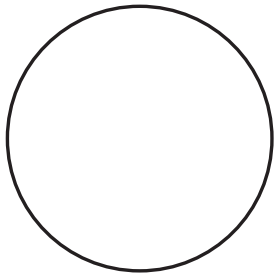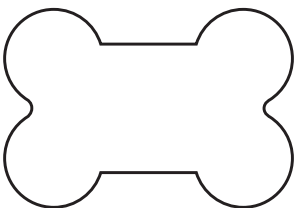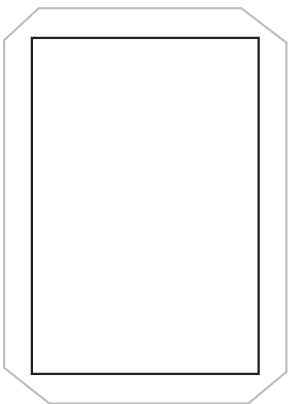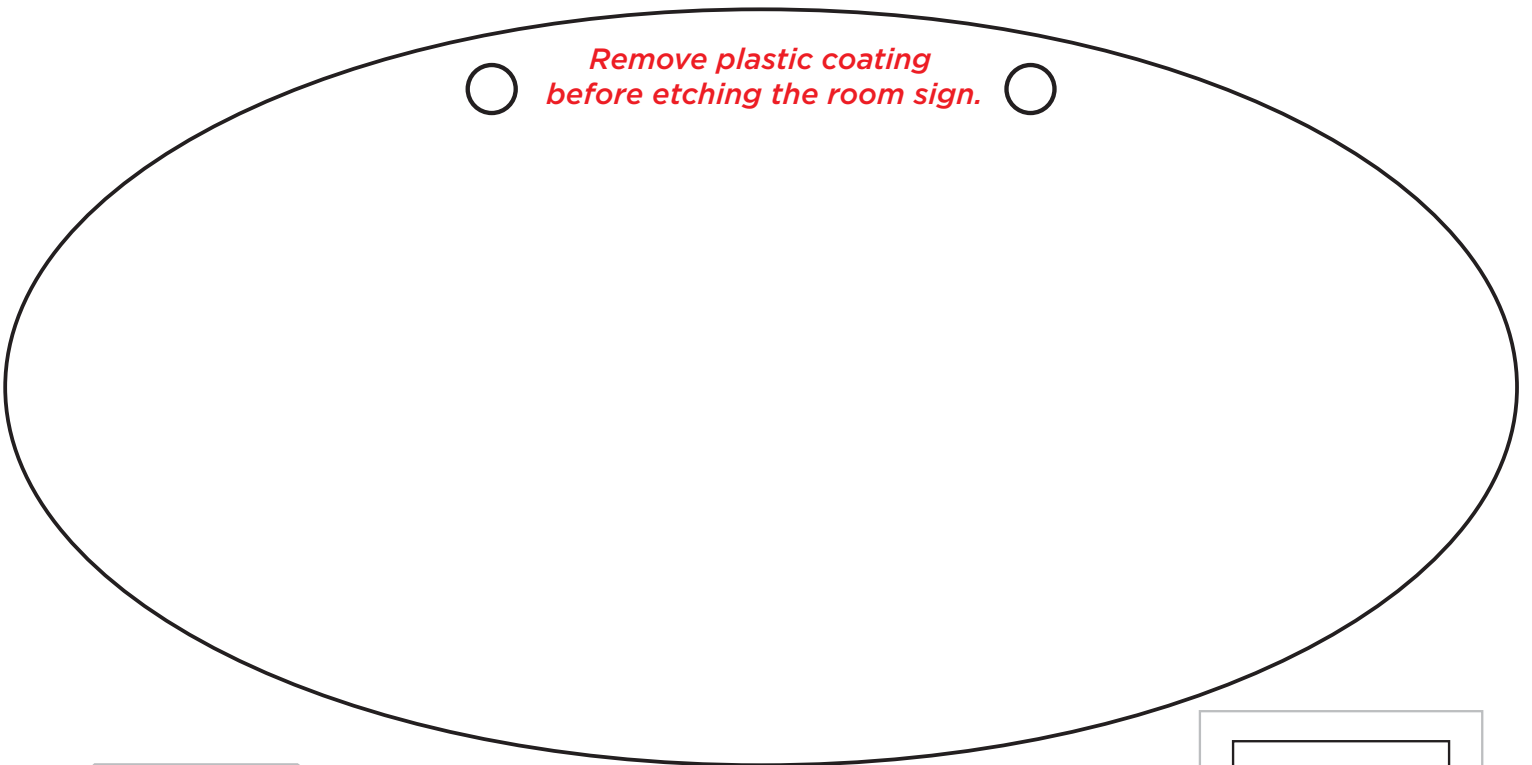

Save your Etch-It Workshop tool and any unused materials for future projects. Ask your parent's permission before etching any other materials.