


Assembly Instruction:

- 1. Take down the bag. Feet are packed inside.
- 2. Attached the feet on recliner.
- 3. Put the back on the seat, inserting two metal brackets into two clips on the sides of the back.
- 4. Connect the corresponding wires

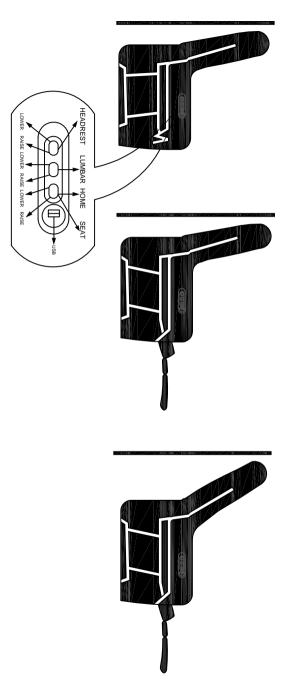

Operation Instruction:

return to an upright position, press the back side of the button closest to the footrest. to smoothly raise the footrest and recline to any position. To lower the footrest and To recline: Sit on the furniture, and press the front of the button closest to the footrest

original position, press the back side of the button closest to the backrest. raise and adjust the headrest to any position. To lower the headrest and return it to its To adjust headrest: Press the front of the button closest to the backrest to smoothly

original position, press the back side of the middle button. raise and adjust the lumbar to any position. To lower the lumbar and return it to its To adjust lumbar: Press the front of the middle button to smoothly

positions, press the Home button. To close all: To simultaneously return the headrest and footrest to their original

Caution:

folds down on closing so that a child could possibly be injured. Always leave in an upright and Do not allow children to play on this mechanized furniture or operate the mechanism. Legrest closed position. Keep hands and feet clear of mechanism. Only the occupant should operate it