

Let's get this fire started

REUNION FIRE PIT ACCESSORIES USER GUIDE


TIKI
BRAND
fire pit 

Table of contents

| | |
|---|----|
| Safety | 3 |
| Fire Poker | 3 |
| Screen | 4 |
| Stainless Tabletop | 5 |
| Assembly & Use | 6 |
| Fire Poker | 6 |
| Screen | 7 |
| Stainless Tabletop | 10 |
| Frequently Asked Questions | 11 |
| Warranty | 14 |



Accessory safety

⚠️ WARNING: DO NOT use TIKI® Brand Fire Pit Accessories until you have read the operating instructions and safety warnings. Failure to do so can cause death, serious injury or property damage.

- Keep Fire Pit accessories out of the reach of children. Accessories should only be used by adults.
- Fire Pit Accessories should only be used with TIKI® Brand Fire Pit products only.

Fire Poker safety

- Ensure that the Fire Pit handle and poker ends are securely attached prior to use.
- DO NOT touch the Fire Pit Poker's end while hot. Only handle the Fire Pit Poker by the intended handle.
- DO NOT use the Fire Pit Poker for anything other than to tend to or operate the Tiki Brand Fire Pit.
- DO NOT use the Fire Pit Poker if it is damaged or broken.
- DO NOT leave the Fire Pit Poker in the fire.
- DO NOT place the Fire Pit Poker when hot onto combustible surfaces such as grass, a wooden deck, furniture, etc.



Screen safety

- The Fire Pit Screen and the Fire Pit Screen handle can reach extreme temperatures from the fire and will cause injury to an unprotected hand.
- The Fire Pit Screen and Fire Pit Screen handle should only be handled with the use of heat-resistant gloves or the Fire Pit Poker.
- DO NOT place the bottom piece of the Fire Pit Screen on Fire Pit when in use. The bottom piece of the Fire Pit Screen should be in place prior to starting a fire.
- DO NOT place a hot Fire Pit Screen onto combustible surfaces such as grass, a wooden deck, furniture, etc.
- It's recommended that the Fire Pit Screen be used at all times when the Fire Pit is in use.
- Inspect and clean the Fire Pit Screen on a regular basis with soap water. DO NOT use flammable, harsh or abrasive chemicals to clean the Fire Pit Screen.
- After a period of storage or non-use, check for signs of damage or creosote build-up prior to use. DO NOT use until necessary repairs and/or cleanup are executed.
- DO NOT cover the Fire Pit Screen when in use or until the Fire Pit Screen has completely cooled down.



Screen safety cont.

- Always use the Fire Pit Screen in accordance with all applicable local, state, federal, and national codes. Contact your local fire department for more details.

NOTE: Refer to page 3 for additional safety instructions

Stainless Tabletop safety

 
- DO NOT place the Fire Pit Stainless Tabletop on the Fire Pit until it has completely cooled and any embers or pellets have been extinguished.
- DO NOT attempt to start a fire until the Fire Pit Stainless Tabletop has been removed from the top of the Fire Pit.
- DO NOT use the Fire Pit Stainless Tabletop to snuff or extinguish a fire.
- DO NOT sit or stand on the Fire Pit Stainless Tabletop.
- DO NOT place heavy objects on the Fire Pit Stainless Tabletop.
- DO NOT use the Fire Pit Stainless Tabletop if it is damaged or broken.

NOTE: Refer to page 3 for additional safety instructions




Fire Poker assembly & use

Remove both pieces
and screw together.

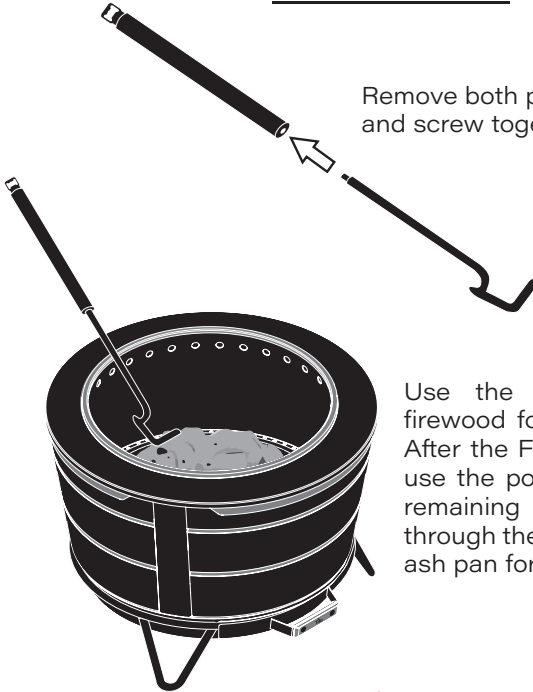

Use the poker to adjust firewood for optimal air flow. After the Fire Pit has cooled, use the poker to scrape any remaining ash and debris through the grate and into the ash pan for easy clean-up.

 Screen assembly & use

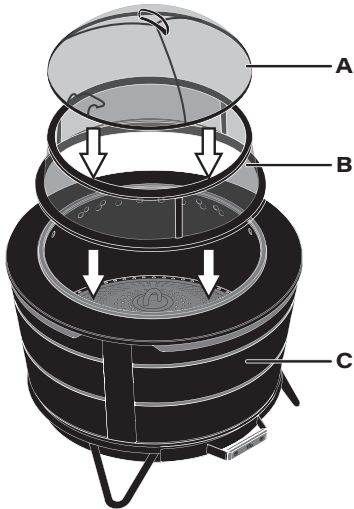


Place both top (A) and bottom (B) pieces of the screen on the Fire Pit (C). Ensure that they are securely nested.

NOTE: Screen bottom piece should be in place prior to starting a fire.



 Screen assembly & use

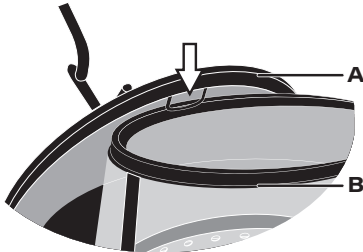

To add an additional Wood Pack or firewood, remove the top piece (A) of the screen with the included poker (see page 6 for assembly), and gently hang on the side of the bottom piece (B).




After a Wood Pack or firewood has been added, place the top piece back on with the poker. Ensure that it is securely nested.

REUNION FIRE PIT
ACCESSORIES




Screen storage

 OPTION 1

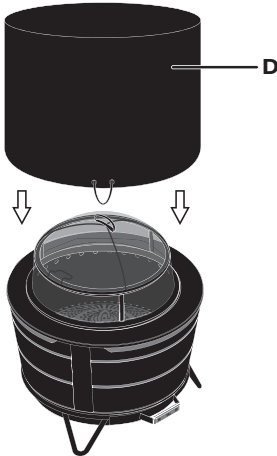


When the Fire Pit is not in use, place the cover (D) (included with the Fire Pit purchase), over to help protect your screen and Fire Pit from the elements.

 OPTION 2

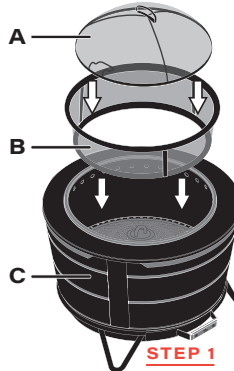

 STEP 1

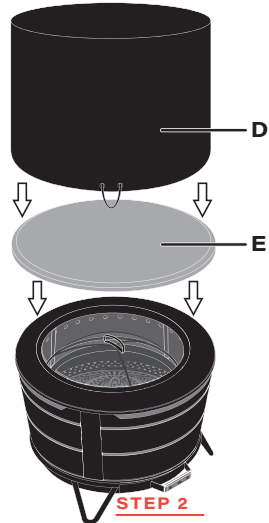


STEP 2

If you have purchased the tabletop as well, you may nest the screen pieces (A) & (B) inside of the Fire Pit (C), then place the stainless tabletop (E) on top. Finally, place the cover (D) (included with the Fire Pit purchase), over the top.



 Stainless Tabletop assembly & use

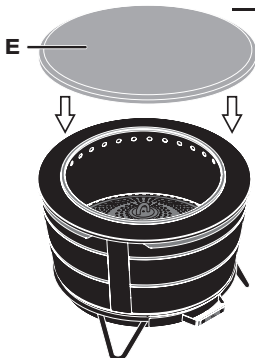


When the Fire Pit is completely cooled, set the stainless tabletop (E) in place, making sure it is securely nested.

NOTE: Store off to the side away from the fire when the Fire Pit is in use.

When the Fire Pit is not in use, when completely cooled, put the stainless tabletop (E) on top of the pit and place the cover (D) (included with the Fire Pit purchase), over the top.

 NOTE: If you have the screen as well, nest the screen (see page 9 option 2), inside of the Fire Pit before placing the stainless tabletop on.

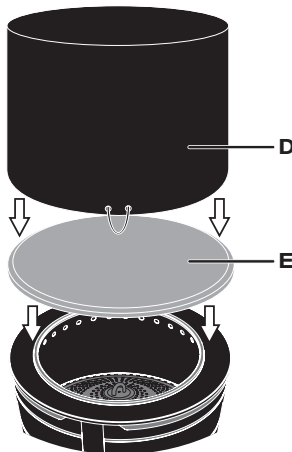

Fire Poker

frequently asked questions

What is the handle of the poker made out of?

The poker is made of 304 stainless steel.

Can I use the poker for cooking?

No.

Screen

frequently asked questions

Can I use the screen with other fire pits?

The screen is only designed for use with TIKI® Brand Fire Pit.

Where can I store my screen when not in use?

The screen can be flipped over and nested within the Fire Pit when completely cooled. Put included cloth cover over unit for protection.

Can I use the bottom piece of the screen without the top?

Yes. This is a great option for s'more making! Beware that using in this way will not protect from all sparks and embers.



Stainless Tabletop

frequently asked questions

Can the stainless tabletop be used as a snuffer to put the fire out?

No.

How long should I wait for the Fire Pit to cool before using the stainless tabletop?

If using the TIKI® Brand Wood Pack, this should take approximately 12 hours and is designed to completely consume leaving minimal ash. If you are using wood logs, times will vary depending on the amount of wood used and consumed. Be sure to clean out all ash to ensure there are no embers left over before putting the tabletop on.

Is there a concern of placing cool drinks on the stainless tabletop and are there any materials you shouldn't place on the tabletop?

The tabletop can handle regular drinkware, but if putting anything abrasive on the stainless tabletop, a mat or coaster should be placed underneath to ensure there is no scratching.



Stainless Tabletop

frequently asked questions

Are there any specific cleaning instructions if you spill something on the stainless tabletop?

Most multi-surface cleaner and a cloth can be used to clean the stainless tabletop.

Can I sit or stand on the stainless tabletop?

No.

Where can I store my stainless tabletop when not in use?


When the Fire Pit is in use, store the stainless tabletop away from the fire on a flat surface away from anywhere people may be walking to avoid tripping. When the Fire Pit is not in use and completely cooled, store on the Fire Pit with the cloth cover over the top for added protection.



Limited Warranty

Visit [TIKIBrand.com/our-guarantee](https://www.tiki.com/our-guarantee) or contact us at 1-888-473-1088 for more information.

For information on patents go to [TIKIBrand.com/patents](https://www.tiki.com/patents)

 **WARNING:** These products can expose you to chemicals including soot, which is known to the State of California to cause Cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

REUNION FIRE PIT
ACCESSORIES



Keep the fire going

FOR WOOD PACKS AND OTHER PRODUCTS
TO
HELP YOU ENJOY YOUR FIRE,
VISIT TIKIBRAND.COM



USER GUIDE



TIKIBRAND.COM

4002099 REV2

©2023 Lamplight Farms Incorporated