




# INSTRUCTION AND USE MANUAL

---

## TIKI® BRAND FIRE PIT

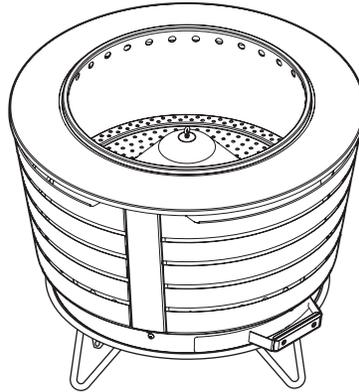

©2020 LAMPLIGHT FARMS INC.

TIKI® is a trademark of Lamplight Farms Inc.  
W140 N4900 Lilly Rd., Menomonee Falls, WI 53051 • TIKIBRAND.COM

Model #1119001  
4000873 REV 3

# Table of Contents

---

<b>Safety Information</b> .....	<b>3</b>	<b>Lighting Your Fire Pit</b> .....	<b>14</b>
Fire Pit Safety .....	3	Tips and Tricks to Consider Before	
Wood Pack Safety .....	5	Enjoying Your Fire Pit .....	14
<b>Warranty</b> .....	<b>6</b>	Light Your Fire Pit Using Wood Packs .....	15
2-Year Limited Warranty .....	6	Light Your Fire Pit Using Natural Cut Firewood ..	16
Applicability .....	6	<b>Extinguishing Fires</b> .....	<b>17</b>
Eligibility .....	6	Waiting It Out – Allowing the Fire	
Exclusions .....	7	to Extinguish Naturally .....	17
Limitation of Warranty .....	8	In Case of Emergency .....	17
<b>Pre-Assembly</b> .....	<b>10</b>	Disposing of Ash and Debris .....	17
Planning Assembly .....	10	<b>Care and Maintenance</b> .....	<b>18</b>
Hardware Included .....	10		
Package Contents .....	11		
<b>Assembly</b> .....	<b>12</b>		
Preparing the Fire Pit .....	12		
Attaching the Foot Ring .....	13		

# Safety Information

## Fire Pit Safety



**WARNING:** DO NOT use this TIKI® Brand Fire Pit until you have read the operating instructions and safety warnings. Failure to do so can cause death, serious injury or property damage.

- ❑ FOR OUTDOOR USE ONLY. Toxic carbon monoxide fumes can accumulate and cause asphyxiation.
- ❑ DO NOT touch when in use. The Fire Pit will be extremely hot when burning. Never attempt to touch, move, or clean your Fire Pit until it has completely cooled down.
- ❑ DO NOT operate, light, or use the Fire Pit any closer than within 15 ft. of walls, structures or buildings, or other combustible materials such as dry grass/bushes, awnings, etc.
- ❑ DO NOT use under a patio roof, low hanging branches, trellis, or overhangs of any kind including covered porches.
- ❑ DO NOT use the Fire Pit in any explosive environment such as areas where flammable or combustible gases may be present.
- ❑ DO NOT use the Fire Pit with fuel sources other than the TIKI® Brand Wood Pack or natural cut firewood.
- ❑ DO NOT use an electric style grill starter. Use only matches or lighters which will provide a flame and then can be moved away from the fire once it has begun.
- ❑ DO NOT use gasoline, kerosene, diesel fuel, lighter fluid, alcohol, or any other flammable liquid to light or relight the Fire Pit.
- ❑ DO NOT store or use gasoline or any other flammable vapors, liquids, or materials in the vicinity of the Fire Pit.
- ❑ DO NOT store or use LP cylinders within 30 ft. of the Fire Pit while it is in operation.

## Safety Information (cont.)

---

### Fire Pit Safety (cont.)

- ❑ DO NOT use the Fire Pit on or near automobiles, trucks, vans, recreational vehicles, or boats.
- ❑ DO NOT place on any combustible surface such as wood, dry grass, leaves, mulch, etc.
- ❑ Only operate under the supervision of an adult.
- ❑ **⚠CAUTION:** Keep clothing, hair and face away from flame when lighting.
- ❑ DO NOT lean over the Fire Pit when lighting or when it is in use.
- ❑ DO NOT breathe smoke from the fire and avoid getting smoke in your eyes.
- ❑ DO NOT use product while under the influence of drugs or alcohol.
- ❑ DO NOT leave unattended either while in use or while hot, especially when children or pets are nearby.
- ❑ Flames may reach a height of 3 ft. from the top of the Fire Pit.
- ❑ DO NOT use the Fire Pit in windy conditions.
- ❑ When using the Fire Pit, exercise the same precautions you would with any open fire.
- ❑ Never leave the Fire Pit unattended until the flames go out.
- ❑ DO NOT use water to extinguish the fire under normal circumstances as this could cause damage to the Fire Pit. Only extinguish with water during emergencies.
- ❑ DO NOT cover the Fire Pit with the cloth cover until it has completely cooled down.
- ❑ Always use the Fire Pit in accordance with all applicable local, state, and national codes. Contact your local fire department for details.
- ❑ DO NOT alter or modify the Fire Pit in any manner.
- ❑ The Fire Pit should be inspected and cleaned regularly after every use.
- ❑ The Fire Pit is heavy. Use two people when lifting and moving the Fire Pit.

# Safety Information (cont.)

## Wood Pack Safety



**WARNING:** DO NOT use this TIKI® Brand Wood Pack until you have read the operating instructions and safety warnings. Failure to do so can cause death, serious injury, or property damage.

- This Wood Pack contains petroleum distillates.
  - This product is combustible and is intended for outdoor use only.
  - Keep out of reach of children and pets.
  - Pellets are not intended for animal or human consumption. Consuming these pellets can cause sickness, serious illness, or death.
  - If swallowed DO NOT induce vomiting, and contact poison control, a physician or local emergency services.
  - For TIKI® Brand Fire Pit use only. Not intended for grills, smokers, pellet burners, stoves, or any other enclosed burning system
- DO NOT add additional Wood Packs until the flame reduces below the top rim of the Fire Pit.
  - Never leave fire unattended.
  - Disposal of Ashes — Ashes should be placed in a metal container with a tight-fitting lid. The closed container of ashes should be placed on a non-combustible floor or on the ground, well away from combustible materials, pending final disposal.
  - When the ashes are disposed by burial in soil or otherwise locally dispersed, they should be retained in the closed container until all cinders have thoroughly cooled.
  - Store in a cool, dry, and well-ventilated area.
  - Store away from flame or direct heat source, or anything that may puncture the bag.

# Warranty

## 2-Year Limited Warranty

30-Day Money Back Guarantee —

If you're not 100% satisfied, call **1-888-473-1088** to return or exchange your item within 30 days of purchase. Proof of purchase required.

2-Year Limited Workmanship Warranty — Visit [tikibrand.com/our-guarantee](https://www.tikibrand.com/our-guarantee) for more information.

### **TIKI® BRAND FIRE PIT LIMITED WARRANTY TERMS AND CONDITIONS**

## Applicability

- TIKI® Brand Fire Pits are warranted against defects in materials and workmanship for a period of 2 years from the date of purchase when used under normal conditions for its intended purpose in a residential backyard setting.

## Eligibility

- This limited warranty extends to the original purchasers of TIKI® Brand Fire Pits who are located in the continental United States (Hawaii, Alaska and U.S. territories are excluded). The “original purchaser,” for the purposes of this warranty, is the first purchaser from [tikibrand.com](https://www.tikibrand.com) or an authorized retailer, or in the case of a gift, to the initial gift recipient of the first purchaser. This limited warranty is non-transferable.
- To start a warranty claim, please call **1-888-473-1088** or visit [support.tikibrand.com/help/contact-form](https://support.tikibrand.com/help/contact-form). Please have your proof of purchase along with a photo of the potential warranty issue before beginning. We reserve the right to perform testing to determine if your product is subject to this warranty and/or to refuse warranty service to any person who, in our sole discretion, abuses the TIKI® Brand Fire Pit or warranty policy.

# Warranty (cont.)

## Eligibility (cont.)

- If Lamplight Farms Incorporated determines that the TIKI® Brand Fire Pit is subject to this warranty, we will, in our sole discretion: (i) replace the TIKI® Brand Fire Pit with the same model product or parts, (ii) replace the TIKI® Brand Fire Pit with a comparable product should the TIKI® Brand Fire Pit be discontinued or otherwise unavailable, or (iii) provide you with a refund of the purchase amount. The replacement of the TIKI® Brand Fire Pit or any part of the TIKI® Brand Fire Pit under warranty will not extend the period of warranty. If you obtain a replaced or repaired TIKI® Brand Fire Pit, the warranty term of the replaced or repaired TIKI® Brand Fire Pit begins from the date of purchase of the original TIKI® Brand Fire Pit.

## Exclusions

This limited warranty does not cover:

- Purchases from retailers that are not authorized retailers of TIKI® Brand Fire Pits.
- Damages caused by improper assembly or handling, misuse and/or abuse.
- Damages caused by lack of storage away from the elements.
- Failure to comply with use instructions.
- Non-residential use of TIKI® Brand Fire Pits, such as commercial use.
- Damage cause by acts of God or other natural forces.
- Use of parts and accessories other than those designed for TIKI® Brand Fire Pits.
- Repairs or alterations carried out by unauthorized parties or agents.
- Painting or otherwise altering the materials used to produce the product.
- Normal wear and tear or cosmetic damage.

## Warranty (cont.)

---

### Limitation of Warranty

TO THE MAXIMUM EXTENT PERMISSIBLE BY APPLICABLE LAW, THERE ARE NO EXPRESS WARRANTIES OTHER THAN PROVIDED HEREIN. LAMPLIGHT FARMS INCORPORATED DISCLAIMS ALL STATUTORY AND IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE TO THE EXTENT PERMITTED BY LAW. IN SO FAR AS SUCH WARRANTIES CANNOT BE DISCLAIMED, ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WILL BE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. SOME STATES OR OTHER JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSIONS MAY NOT APPLY TO YOU. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE AND JURISDICTION TO JURISDICTION.

## Warranty (cont.)

---

### Limitation of Warranty (cont.)

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW AND EXCEPT AS SET FORTH IN THIS LIMITED WARRANTY, IN NO EVENT WILL LAMPLIGHT FARMS INCORPORATED OR ITS SUPPLIERS BE LIABLE FOR PROCUREMENT OF SUBSTITUTE PRODUCTS, LOSS OF USE, OR OTHER SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES ARISING OUT OF OR RELATED TO THE TIKI® BRAND FIRE PITS OR USE BY YOU OR ANY THIRD PARTY, WHETHER UNDER THEORY OF CONTRACT, TORT (INCLUDING NEGLIGENCE), INDEMNITY, PRODUCT LIABILITY OR OTHERWISE. THIS LIMITATION WILL APPLY EVEN IF LAMPLIGHT FARMS INCORPORATED HAS BEEN ADVISED OF SUCH DAMAGES AND NOTWITHSTANDING THE FAILURE OF ESSENTIAL PURPOSE OF ANY LIMITED REMEDY. IN LIEU OF ANY OTHER REMEDY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE, LAMPLIGHT FARMS INCORPORATED MAY, AT ITS SOLE AND

EXCLUSIVE OPTION AND IN ITS DISCRETION, REPAIR OR REPLACE YOUR PRODUCT, OR REFUND ITS PURCHASE PRICE. LAMPLIGHT FARMS INCORPORATED'S TOTAL LIABILITY WILL NOT EXCEED THE PURCHASE PRICE PAID FOR THE TIKI® BRAND FIRE PITS GIVING RISE TO SUCH LIABILITY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

No employee or agent of Lamplight Farms Incorporated may modify this limited warranty.

This limited warranty will be governed by the laws of the State of Wisconsin.

# Pre-Assembly

## Planning Assembly

Compare all parts with the Package Contents and Hardware Included lists. If any part appears missing or damaged, DO NOT assemble or use this product. Return to the place of purchase or contact Customer Service at **1-888-473-1088**.



### CAUTION




Some parts may contain sharp edges. Wear protective gloves when assembling, moving, or handling product.  
Algunas piezas pueden contener bordes afilados.  
Use protectors guantes al ensamblar, mover o manipular el producto.

## Hardware Included




**NOTE:** Hardware not shown to actual size. For replacement parts, refer to Hardware Pack item #131913268.

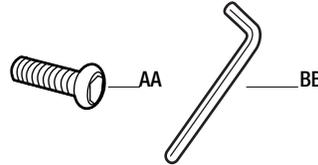

Part	Description	Quantity
AA	Hex Screw	3
BB	Hex Key	1

## Pre-Assembly (cont.)

### Package Contents

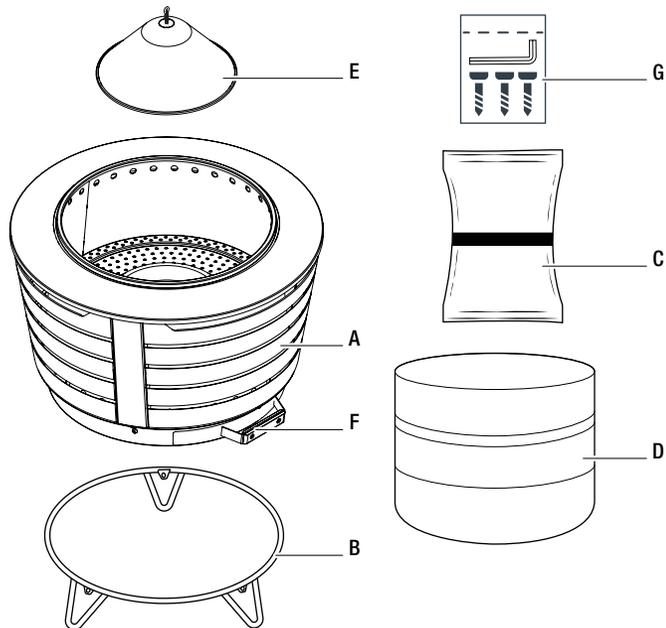


Part	Description / Part Number	Quantity
A	Fire Pit / 111900168	1
B	Foot Ring / 131913168	1
C	Wood Pack / 121613568	1
D	Cover / 131900568	1
E	Cone / 131913368	1
F	Ash Pan (preassembled to Fire Pit) / 131913068	1
G	Hardware Pack / 131913268	1

# Assembly

## 1 Preparing the Fire Pit


- Remove the ash pan (F) and cone (E) from the Fire Pit (A) and set aside.
- Separate the Fire Pit (A) from the foot ring (B) and place the foot ring (B) on its feet.

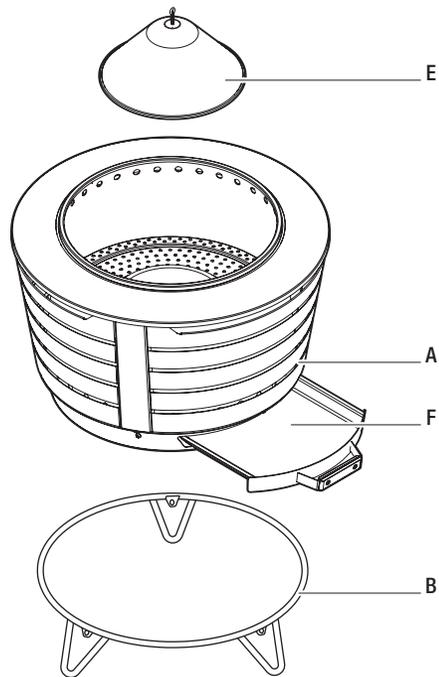

## Assembly (cont.)

### 2 Attaching the Foot Ring

- Place the Fire Pit (A) on top of the foot ring (B) ensuring the three tabs on the foot ring (B) align with the three holes at the base of the Fire Pit (A).
- Secure together by inserting three screws (AA) through the tabs on the foot ring (B) and into the base of the Fire Pit (A). Tighten using the hex key (BB).
- Replace the ash pan (F) and cone (E) back into the Fire Pit (A).
- Place the Fire Pit (A) on a level surface at least 15 ft. away from buildings, overhangs, or any debris. See the Safety section for more information on safe and proper placement.

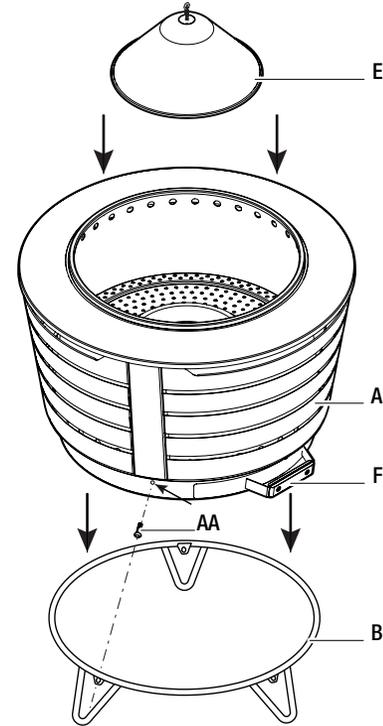

# Lighting Your Fire Pit



**IMPORTANT:** The TIKI® Brand Fire Pit is designed to burn most efficiently with the TIKI® Brand Wood Pack. Natural cut firewood or wood that has been aged/dried at least six months is also acceptable. Always follow local laws and ordinances when selecting materials to burn.

## Tips and Tricks to Consider Before Enjoying Your Fire Pit

### If using the Wood Packs (recommended)...

- Avoid adding a second Wood Pack until the flames stop reaching above the top of the Fire Pit. Adding a second Wood Pack too early reduces your total burn time.
- TIKI® Brand Wood Packs do not require stirring. The deeper the wood pellet bed remains, the longer your burn time will extend. Use with fire poker (sold separately) that is at minimum 40 in. long.
- TIKI® Brand Wood Packs are constructed using natural hardwood sawdust that are repurposed from other industrial processes. Burn time will vary due to the natural variance of woods.
- When cooking over the TIKI® Fire Pit and Wood Pack, wait until flames die down and the wood pellets begin to form glowing coals. Follow all

instructions, warnings, and good fire safety practices.

### If using Naturally Cut Firewood...

- Never use “green” wood. In other words, freshly cut wood from a live tree (cut less than six months ago). The moisture content is too high and will result in incomplete combustion and smoke.
- Logs should be no longer than 16 in. in length. At least one portion of every log should be touching the bottom of the flame bowl for maximum stability.
- Never add flammable or combustible liquids to the Fire Pit after ignition. This could lead to flare ups in the ash pan and flame bowl.


## Lighting Your Fire Pit (cont.)

### Light Your Fire Pit Using Wood Packs

- If necessary, center the cone (E) in the Fire Pit (A). The cone (E) optimizes air flow and performance of the Wood Pack (C).
- Center the Wood Pack (C) over the cone (E) in the Fire Pit (A).
- Ignite each corner of the Wood Pack (C). The safest method for igniting is to use a long-stemmed match or lighter and ensure you are not wearing loose clothing. You should see a full flame in under 5 minutes.
- **⚠ CAUTION:** Keep clothing, hair and face away from flame when lighting.



**NOTE:** The Wood Pack burns with a flame for approximately 30 minutes and then reduces to hot coal. When the flames stop reaching above the top of the Fire Pit, add a second Wood Pack to continue burning with a brilliant flame.

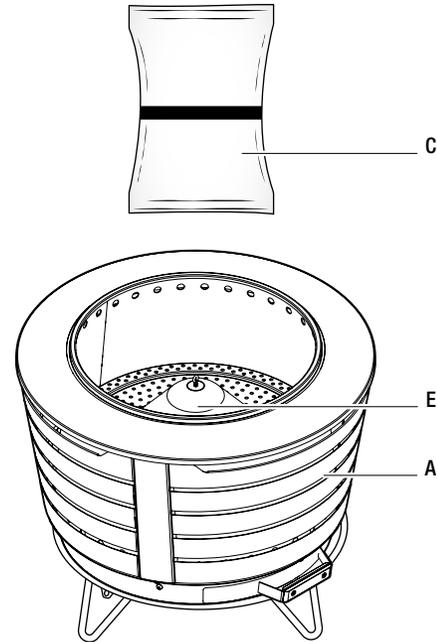

## Lighting Your Fire Pit (cont.)


### Light Your Fire Pit Using Natural Cut Firewood



**IMPORTANT:** Natural cut firewood naturally contains sap, water, and air pockets as well as irregularities that lead to the potential to eject sparks. We recommend placing a fire screen (sold separately) over the Fire Pit to prevent sparks from escaping. Always follow local laws and ordinances when burning.

- Remove the center cone (E) from the Fire Pit.
- Stack kindling, newspaper, or a commercially-available fire starter in the center of the Fire Pit.
- Build larger pieces of wood around the fire starter.
- Ignite the kindling, newspaper, or commercially-available fire starter with a match. Use with caution as these ignitable materials could catch fire quickly and could cause burns if your hand is too close to the fire.

- DO NOT use lighter fluid to light the natural cut wood. DO NOT use any flammable fluids (gasoline, lighter fluid, etc.) to light or relight fires. Doing so could cause serious injury and lead to the fire getting out of control.

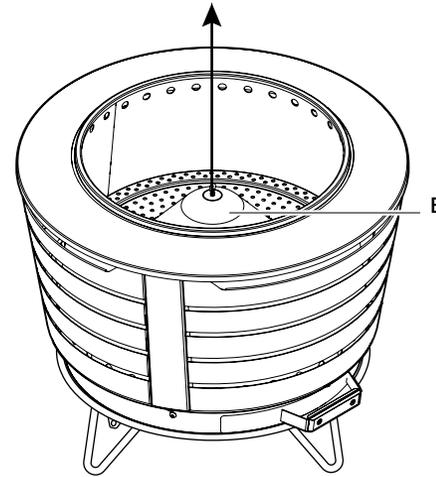

# Extinguishing Fires

## Waiting It Out – Allowing the Fire to Extinguish Naturally

The safest and preferred method for extinguishing a fire is to wait it out and allow the fire to burn out naturally. This method takes the longest but results in the least smoke, least mess, and the best experience. Never leave the Fire Pit unattended to ensure that the fire goes out completely.

## In Case of Emergency

If you need to extinguish the fire due to an emergency, you can use a garden hose and water:

- Stand back at least 5 ft. while spraying to avoid the hot steam and debris.
- Spray the coals and inside the Fire Pit continuously for 5 minutes or until there is no visible flames and steam has dissipated.
- Using your fire poker (sold separately), stir remaining contents to ensure no hot coals or flames remain. Spray an additional 5 minutes if flames persist.



**NOTE:** If no garden hose is available, you can pour water over the Fire Pit. Use caution as this generates a significant amount of steam and smoke.

You can also use sand or a dry chemical extinguisher that is specified for wood fire applications.

## Disposing of Ash and Debris

Wait at least 12 hours for the Fire Pit to cool and then empty the ash and debris. Wood ash mixed with water creates a basic (alkaline) solution which can affect finishes and stainless steel.

Always use metal containers for ash disposal as stated in the Safety Information section. Never leave the ash container on a combustible surface.

DO NOT use ash in a garden or landscape application unless you review local laws and ordinances. Lamplight Farms Inc. has not evaluated ash applications on gardens or landscapes and cannot advise on proper application.


## Care and Maintenance



Allow the Fire Pit to cool for at least 12 hours before performing any cleaning or maintenance.

With proper care, you can improve the efficiency and performance of your Fire Pit and prolong its life. Here is how you should care for your Fire Pit:

- ❑ **Cover during periods of inactivity.** Cover the Fire Pit with the cover after the Fire Pit has cooled.
- ❑ **Use two people to move the Fire Pit.** The Fire Pit is 50 lbs. when empty and is awkward to move with one person.
- ❑ **Clean out ash regularly after Fire Pit has cooled completely.** Remove the center cone and carefully brush the left-over ash through the grate and into the ash tray. Remove the ash tray and dispose of the ash properly. You should always use metal containers for ash disposal. Never leave the ash container on a combustible surface.

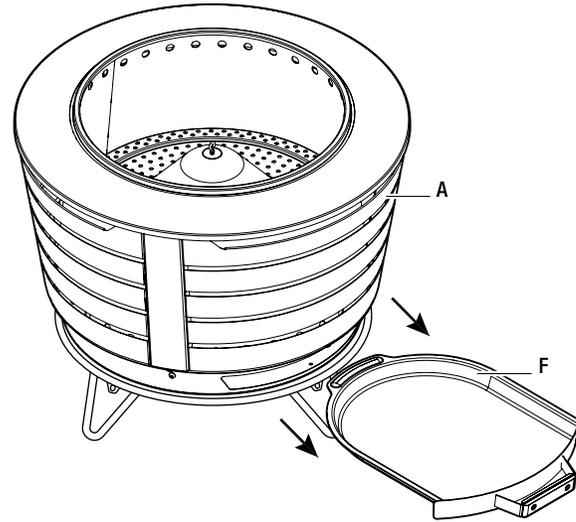

- ❑ **Clean the Fire Pit with dish soap or baking soda.** Rinse clean with water. Thoroughly clean the top of the Fire Pit if you notice any residue. **DO NOT** use oven cleaner or abrasive cleaners as they will damage the finish. Thoroughly dry the Fire Pit with a soft cloth to prevent rust from forming.

For How-to Videos Visit [TIKIBRAND.COM](http://TIKIBRAND.COM)



Questions, problems, missing parts?  
Call Customer Service **1-888-473-1088**

**TIKIBRAND.COM**

Patent Pending

Retain this manual for future use.



Questions, problems, missing parts?  
Call Customer Service **1-888-473-1088**

**TIKIBRAND.COM**

Patent Pending

Retain this manual for future use.