
Installation Instructions for 8905 Series Omni Trilock


Single Pull Handle Version - Suits 35mm to 45mm door thickness


Step 1.


- Fold template where indicated.
- Position template on door edge at desired lock / latch height.
- Firmly hold template and mark latch height and 2 off 60mm holes centres.
 Measure door thickness and mark
- Measure door thickness and mark centre on 'latch height' marking.
- Drill 22mm (7/8") latch hole.
 Note: it is important to drill this hole squarely.
 Drill pilot holes [suggested size
- Drill pilot holes [suggested size 3mm (1/8")]. Then enlarge holes to 60mm, drilling from both sides of the door.


In particular, ensure the 60mm dia. holes through door face are drilled only to this size, otherwise correct functioning may be impeded – refer template.

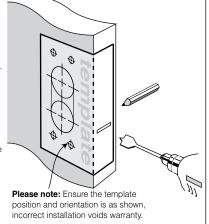

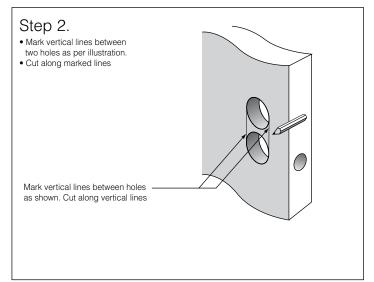

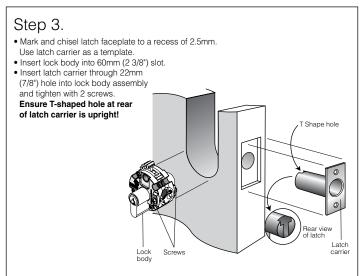

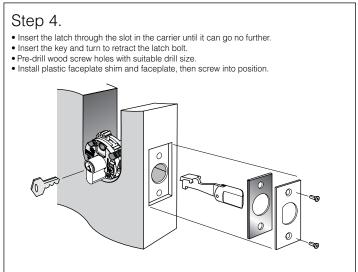

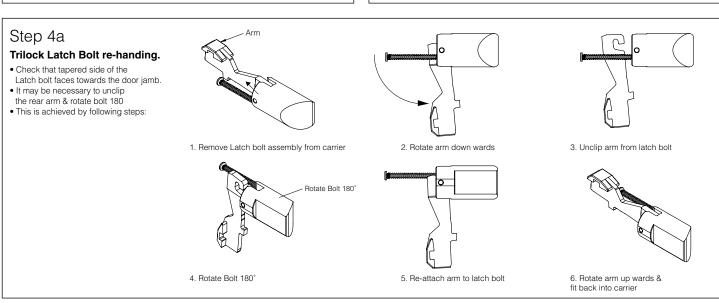

NOTE: • carefully follow these instructions when installing.

- do not overtighten screws.
- use of power driver is not recommended.
- fully remove the Trilock prior to painting the door to avoid harming the product's finish.

Gaingborough
TRILOCK


AIT 148 Patent Pending

Installation Instructions for 8905 Series Omni Trilock

Single Pull Handle Version - Suits 35mm to 45mm door thickness

Step 5

- Remove perforated cut-out from card-board template and place over lock body, making sure template is square to door edge.
- While holding template firmly in position, mark remaining 4 holes, as indicated on both sides of the door (reversing template as required).
- Drill pilot holes from both sides of the door [suggested size 3mm (1/8")] then enlarge, again from both sides of the door, to sizes indicated on template, otherwise correct functioning may be impeded – refer template.

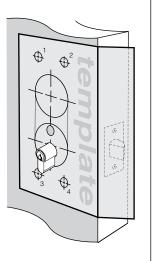


Step 6 To rehand internal lever & set lever operation (if required). • Hold Trilock faceplate up to door to check lever orientation. • To rehand lever, if required, insert flat blade screwdriver under handing-plate and twist. • Rotate lever 180° toward top of faceplate, as shown, until it clicks into place.

Step 7


To rehand external lever & set lever operation (if required).

  If rehanding is required remove the stop screw from SS1 & fit to SS2, to allow Lever to operate away from door edge



Step 8.

 Install 4 posts to Trilock external faceplate (this is the faceplate without the rectangular snib push-button).

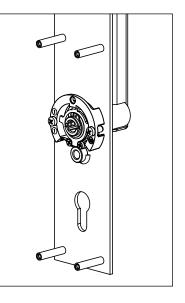

Step 9 • Mount the Inside face plate so that mark on large gear engages with mark on lock bodygear Align marks


NOTE: • carefully follow these instructions when installing.


- do not overtighten screws.
- use of power driver is not recommended.
- fully remove the Trilock prior to painting the door to avoid harming the product's finish.





Installation Instructions for 8905 Series Omni Trilock

Single Pull Handle Version - Suits 35mm to 45mm door thickness

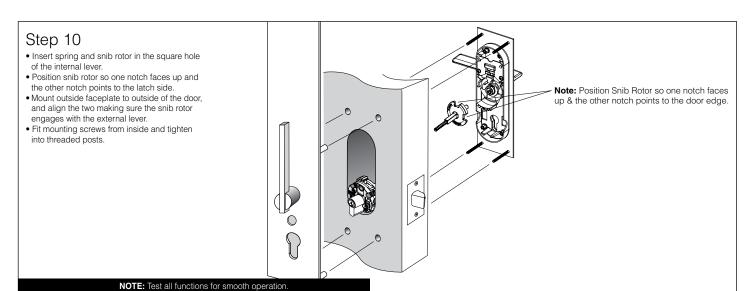

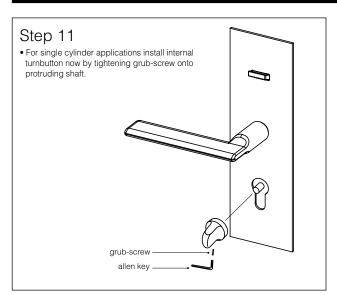

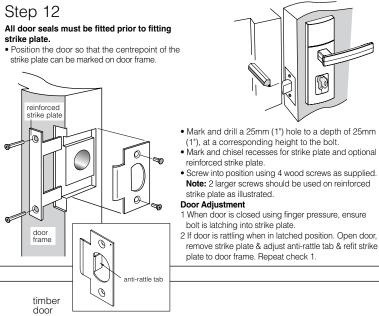

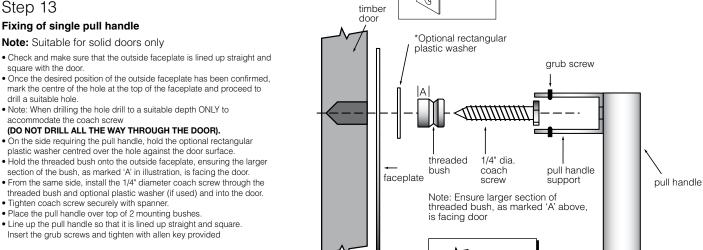

NOTE: • carefully follow these instructions when installing.

- · do not overtighten screws.
- use of power driver is not recommended.
- fully remove the Trilock prior to painting the door to avoid harming the product's finish.





