

ASSEMBLY INSTRUCTIONS SHEET


Dual grill

Prior to assembly, please read these instructions carefully. We suggest you carry out assembly on a soft surface so as to avoid scratching the paint.

- * Do not discard any of packaging until you have checked that you have all parts and pack of fittings.
- * Keep children away during assembly. This item contains small parts which can be swallowed by children.
- * Retain the assembly instructions for future reference.

Part list:

| NO. | Parts | Qty. |
|-----|---|------|
| A | Top bar & hanger | 1 |
| B | Turning lock screw | 3 |
| C | Rectangle BBQ grill | 1 |
| D | Rectangle frame | 1 |
| E | bracket | 1 |
| F | Arm bar | 2 |
| G | Round BBQ grill | 1 |
| H | Round frame | 1 |
| I | Adjustable tube | 2 |
| J | Main tube | 1 |
| K | Triangle base(Insert into ground, could be pull out) | 1 |
| L | Square base(Insert into cement, couldn't be pull out) | 1 |
| T1 | Bolts(1/4" x 5/8") | 2 |
| T2 | Bolts(1/4" x 1-3/8") | 1 |
| U | Washer | 3 |
| V | Nut | 3 |
| X | Allen key | 1 |
| Y | Spanner | 1 |

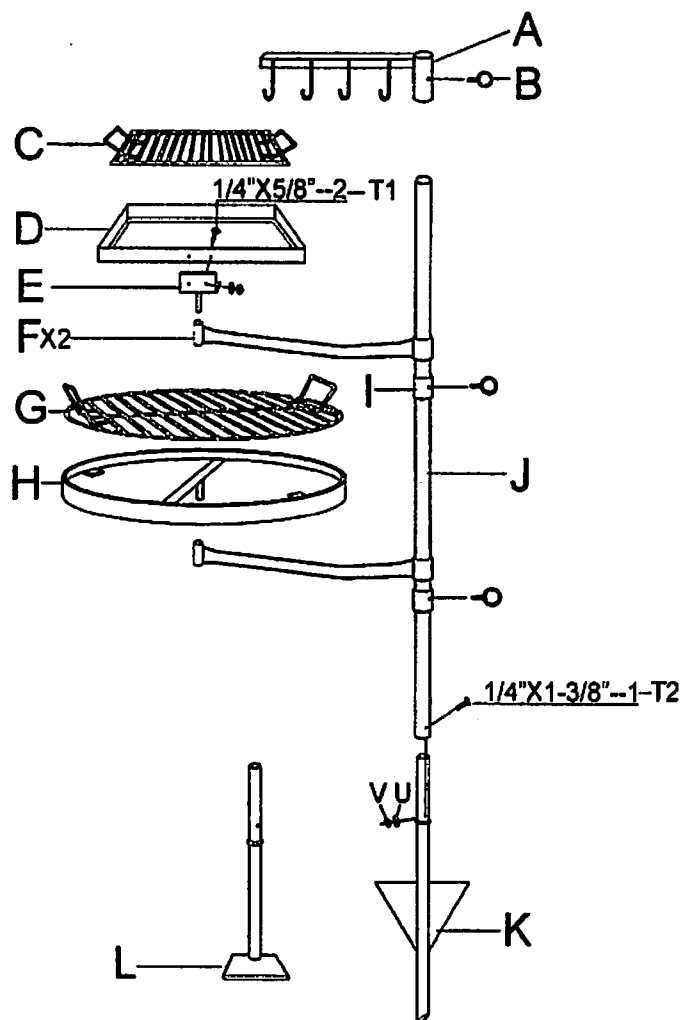

Assembly Instructions:

Step 1

Put K(Triangle base) in to ground or put L(Square base) in to cement

Step 2

 
Insert Main tube(J) into K(Triangle base) or L(Square base), and then locked with 1 bolts(T2), 1 washer(U), 1 nut(V).

Step 3

Insert 2 pcs Adjustable tube(I), 2pcs Arm bar(F), and then use Turning lock screw(B) to adjust the height of the grill. Then insert Round frame(H) into the bottom Arm bar, put Round BBQ grill(G) onto Round frame(H). Assemble bracket(E) onto Rectangle frame(D) with 2 bolts(T1), 2 washers, 2 nuts, and then insert E into bottom arm bar, then put Rectangle frame(D) onto Rectangle frame(D).

Step 4

Insert Top bar & hanger(A) into Main tube(J), then lock with Turning lock screw(B)



Helpful Hints:

- Turn grill slowly to avoid rolling the food off the grill
- Be cautious, the grill will be hot if placed over a fire.
Use hand protection.
- Do not place the grill in an area where it could be easily tripped over

Cleaning instructions

The Adjustable Cooking Grate should be cleaned periodically using hot, soapy water.
Use a wire brush, steel wool or a scouring pad to remove stubborn or loose spots

PLEASE READ AND UNDERSTAND ALL SAFETY RULES BEFORE ASSEMBLY AND USE OF THE ADJUSTABLE COOKING GRATE WITH POST

RULES FOR SAFE OPERATION

- Caution: For outdoor use only
- Use on hard compact surface such as packed dirt or between rocks
- For adult use only - do not allow children to use the grill
- Do not use on lawns, wooden decks, concrete or asphalt
- Do not use indoors or under a patio roof
- Do not use in windy conditions
- Do not use leave unattended at any time
- Do not use under low hanging tree branches, trellis, overhangs of any kind including covered porches.
- Care should be taken to make sure all combustibles, material is far enough away from the fire and grill to not ignite.
- Always use in accordance with all applicable local and state fire codes.
- Failure to follow these instructions could result in a hazardous fire causing property damage or physical injury

Warning! For your safety:

- Operate grill with caution
- Keep children and pets away from the grill and fire while it is in use
- Exercise the same precautions you would with any open fire.
- Do not wear flammable or loose clothing when tending to an open fire
- Avoid touching surfaces, as they will be extremely hot.
- Assure fire is completely extinguished before leaving
- Any modifications to this appliance may be dangerous and are not permitted