


WOODPLAY®

Playsets

SUPER SPIRAL SLIDE Assembly Instructions

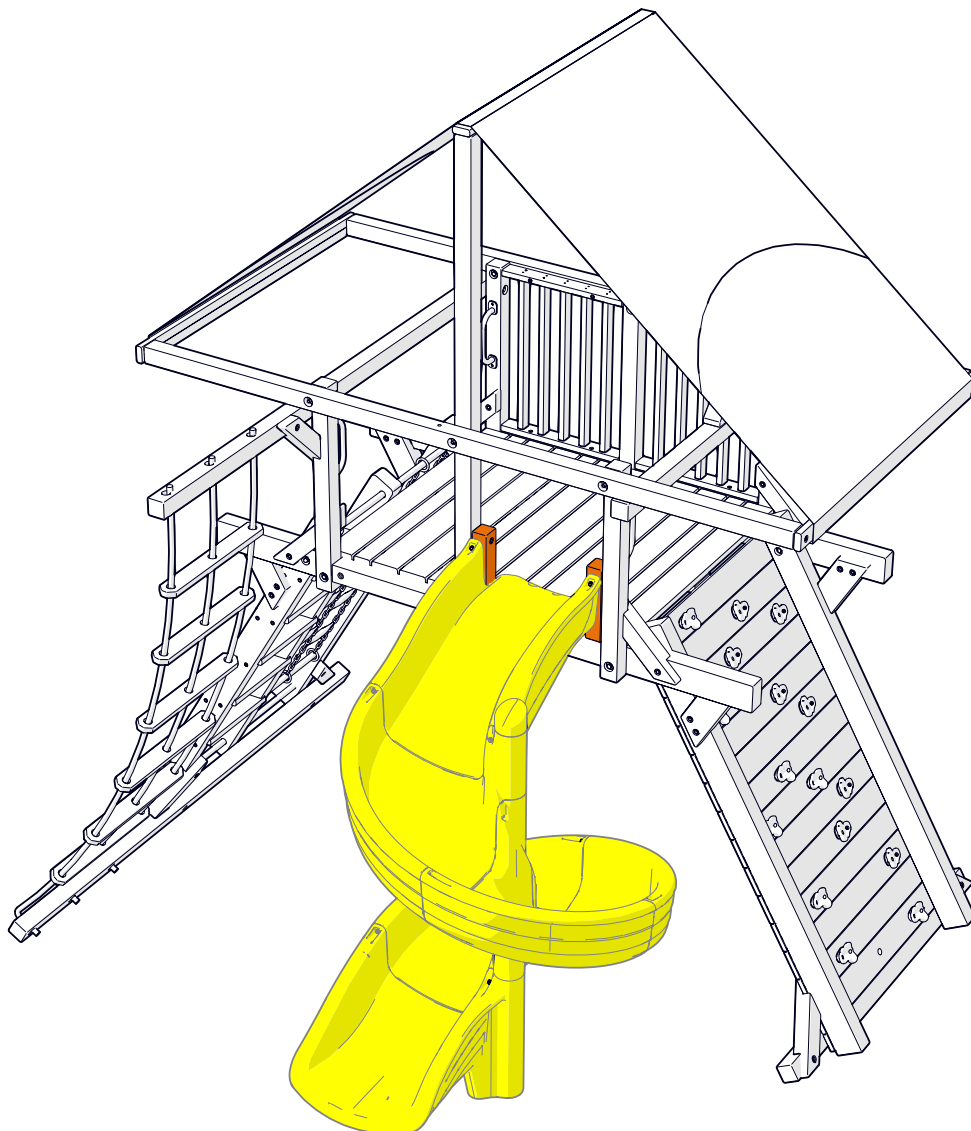

PA-MAN-SSS-00

PART #	DESCRIPTION	QTY.
PG-HW-W004	3/8" FLAT WASHER	2
PG-HW-L011	3/8 X 3" HEX LAG SCREW	2

TOOLS NEEDED (required)
9/16" Socket
Socket Wench

TOOLS (optional)
Cordless impact driver
Socket extension and adapter

SLIDE ASSEMBLY



1. Start by placing the exit section of the slide on the ground.



2. Slide the next curved section into place and fasten it to the exit section using 3/8" x 3" stainless steel lags. Start with bottom outside hole. (DO NOT OVERTIGHTEN!).

PART #	DESCRIPTION	QTY.
PG-HW-W004	3/8" FLAT WASHER	2
PG-HW-L011	3/8 X 3" HEX LAG SCREW	2



3. Attach the next curved section using 3/8"x3" stainless steel lags. Start with the bottom outside hole. (DO NOT OVERTIGHTEN!) Repeat this step until all curved sections are in place.



4. Attach entry section to last curved section using 3/8" x 3" stainless steel lags (DO NOT OVERTIGHTEN!).

PART #	DESCRIPTION	QTY.
PGR-4X4-014-FIL	14" Slide Filler	2
PG-HW-L015	3/8" X 5.5" HEX LAG SCREW	4
PG-HW-L011	3/8 X 3" HEX LAG SCREW	2
PG-HW-L016	3/8 X 2.5" HEX LAG SCREW	3
PG-HW-W004	3/8" FLAT WASHER	9

ATTACHING SLIDE TO PLAYSET

1. Attach Filler Boards to playset as shown in **Detail A**. Make sure Filler boards are flush/ level with the deck.
2. Attach Slide to Fillerboards as shown in **Detail B**.
3. Secure Slide to Deck as shown **Detail C**.

