 


Assembly Guide



Bush
FURNITURE

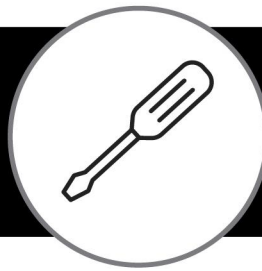 


If you're having any difficulty during assembly of this product, don't hesitate to call us at
1-800-950-4782.

Our customer service experts are trained to provide step-by-step instruction and can easily replace any missing or damaged parts.

**Representatives are available Monday-Friday
from 8:30 a.m. to 7:30 p.m. (ET)**

42W Single Pedestal Return

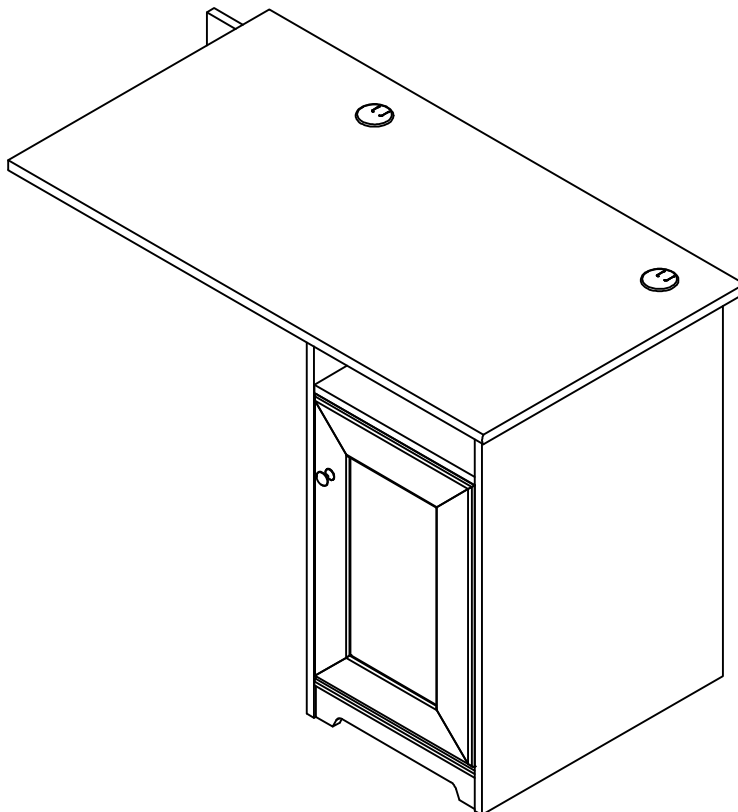

Lot Code #

Instruction Sheet Number A210338C

Keep manual for future reference.

For best results, keep these tips in mind:

- ① We know you want to finish this assembly as quickly as possible, but trust us: you'll have a better experience if you take it one step at a time.
- ② Give yourself some room to work near where you want the fully assembled product.
- ③ If your floor isn't carpeted, assemble this product on the empty carton to avoid scratching.
- ④ Do you have a friend who owes you a favor? Some steps may go a little easier with a second set of hands.

DOs

- ✓ Use a #2 Phillips head screwdriver (or other handheld tools as indicated)
- ✓ Wear safety glasses at all times during assembly
- ✓ Carefully follow the instructions in this guide and complete all steps in order
- ✓ Give us a call if you're having trouble with a particularly tricky step

DON'Ts

- ✗ We know power tools are quick and easy, but you shouldn't use them when assembling this product (unless otherwise specified)
- ✗ Never move your furniture with items inside or resting on the surface
- ✗ Do not attempt to use this product before all steps have been completed



Watch assembly videos right on your phone or computer!



Some steps include QR codes that link to helpful videos. Watch out for the icon on the left! Simply open up your smartphone camera to scan the code.

(Users of older smartphones may need to install a QR Reader.)

SCAN HERE



FOR VIDEOS

Or visit <https://www.bushfurniture.com/CustomerService/HowtoAssemble.aspx>

IMPORTANT SAFETY INFORMATION



PLEASE READ WARNINGS

Improper use can cause safety hazards, or damage to your furniture and household items.

Warning	Do	Don't	Why it's important
Serious injury may occur.	Assemble following all instructions using all indicated parts and hardware provided.	- Do not move unit when loaded. - Do not load with a television or other heavy equipment. - Do not exceed the maximum load limits stated in the instructions.	Improper assembly, use or loading can lead to product instability, tip-over or collapse.

Caution	Do	Don't	Why it's important
Injury may occur.	- Handle glass carefully during assembly. - Use proper eye and hand protection.	Do not sit or stand on glass work surfaces.	Improper handling or loading may result in glass breakage.

IMPORTANT SAFETY INFORMATION



PLEASE READ WARNINGS

Improper use can cause safety hazards, or damage to your furniture and household items.

Advertencia	Hacer	No	Por qué es importante
Se pueden producir lesiones graves.	• Ensamble siguiendo todas las instrucciones utilizando todas las piezas y ferretería indicados provistos.	• No mueva la unidad cuando esté cargada. • No cargue con un televisor u otro equipo pesado. • No exceda los límites máximos de carga establecidos en las instrucciones.	El ensamble, uso o carga inadecuados pueden provocar inestabilidad del producto, vuelco o colapso.

Atención	Hacer	No	Por qué es importante
Se pueden producir lesiones.	• Manipule el vidrio con cuidado durante el montaje. • Use protección adecuada para los ojos y las manos.	• No se siente ni se pare sobre superficies de trabajo de vidrio.	La manipulación o carga inadecuadas pueden provocar la rotura del vidrio.

IMPORTANT SAFETY INFORMATION




PLEASE READ WARNINGS

Improper use can cause safety hazards, or damage to your furniture and household items.

Avertissement	Faire	Ne le fais pas	Pourquoi c'est important
Des blessures graves peuvent survenir.	Assemblez en suivant toutes les instructions en utilisant toutes les pièces et le matériel indiqués fournis.	- Ne déplacez pas l'unité lorsqu'elle est chargée. - Ne chargez pas avec un téléviseur ou un autre équipement lourd. - Ne dépassez pas les limites de charge maximale indiquées dans les instructions.	Un assemblage, une utilisation ou un chargement incorrects peuvent entraîner une instabilité du produit, un renversement ou un effondrement.


Attention	Faire	Ne le fais pas	Pourquoi c'est important
Des blessures peuvent survenir.	- Manipulez le verre avec précaution lors du montage. - Utilisez une protection appropriée pour les yeux et les mains.	Ne vous asseyez pas ou ne vous tenez pas sur des surfaces de travail en verre.	Une manipulation ou un chargement incorrect peut entraîner la rupture du verre.

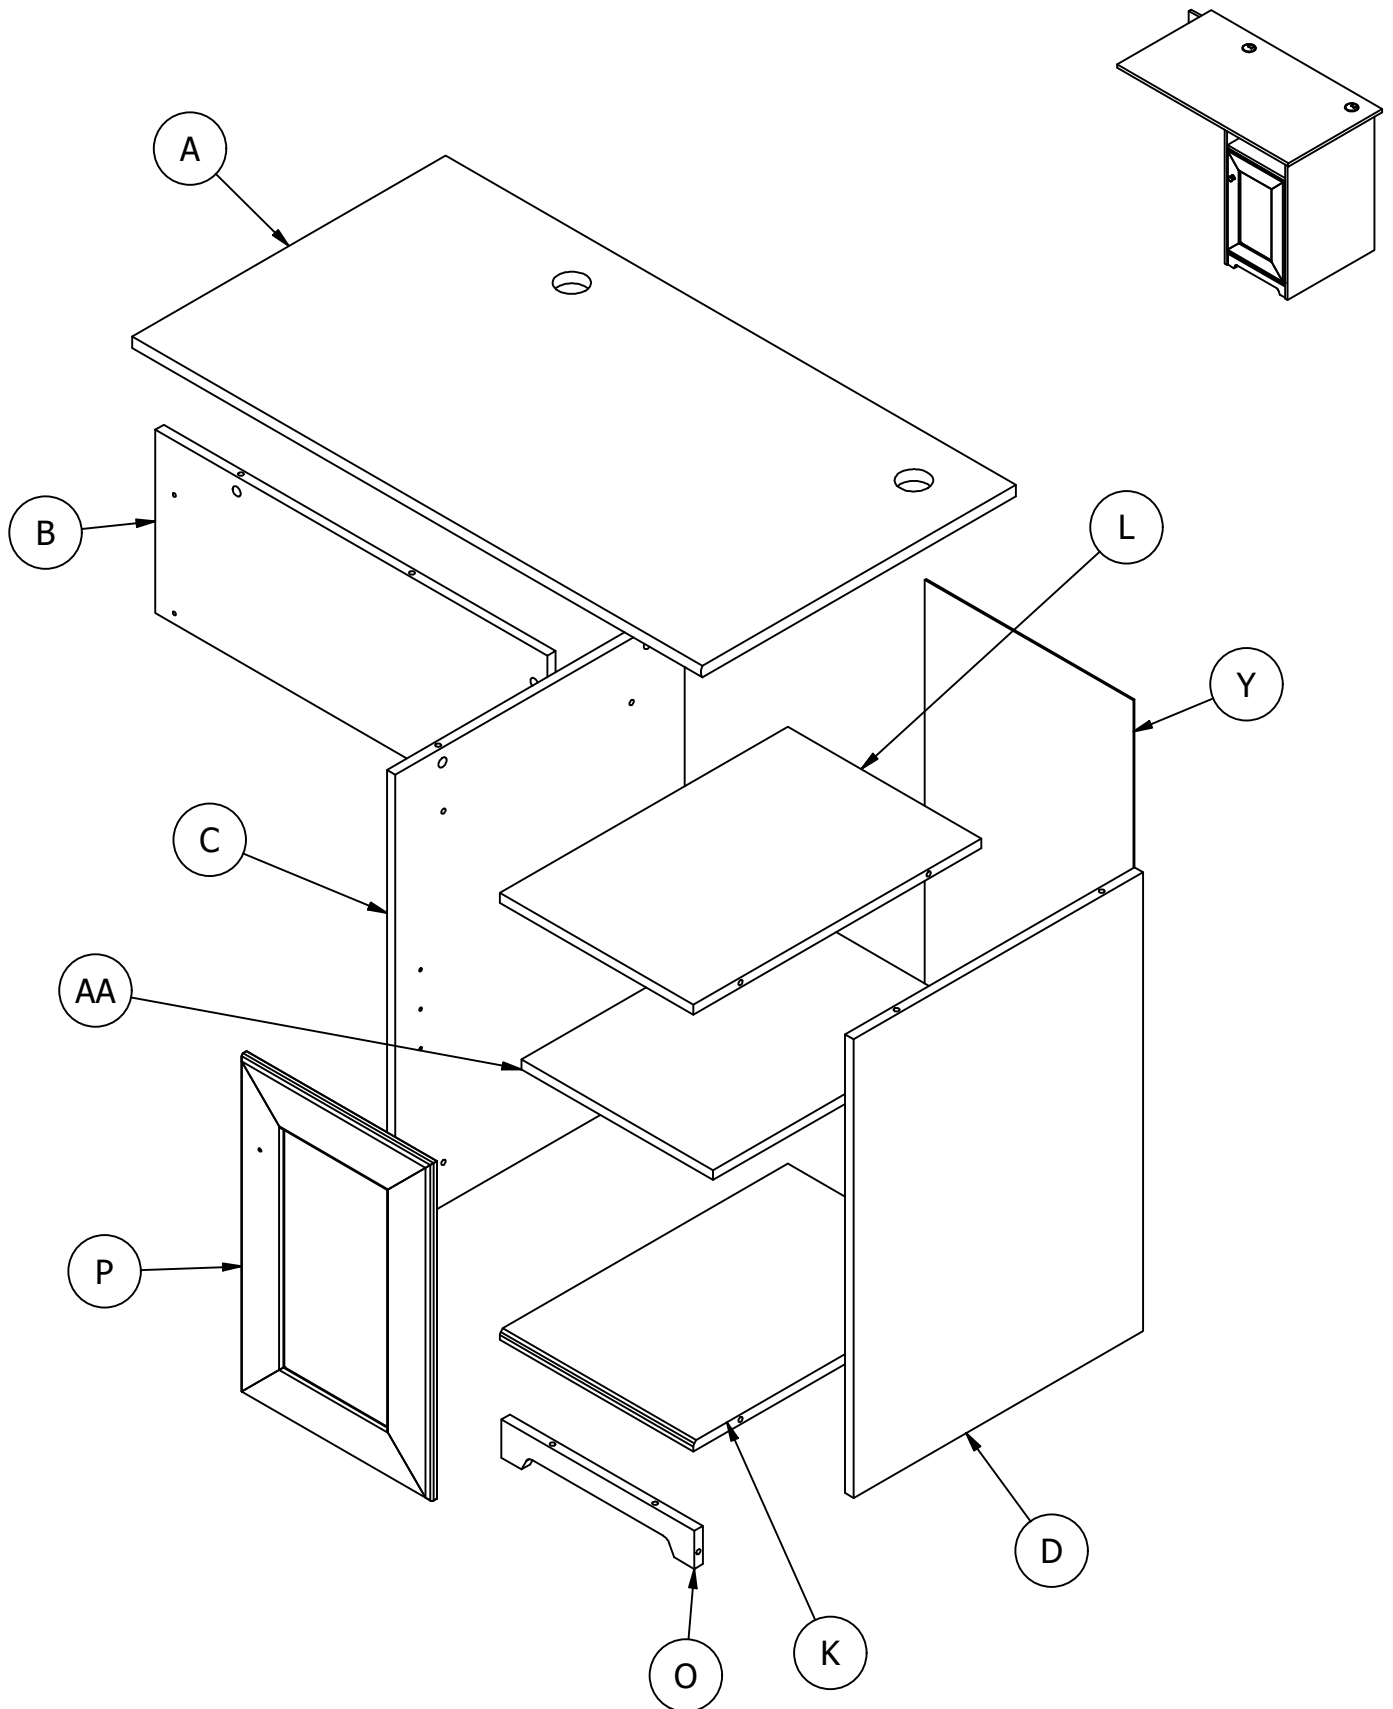 


Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

Fasteners are shown actual size.

 
H27310 [1]
(Silver) #8 x 1/2"



H181468US [16]
KD Cam3000

 


H23119 [8]
(Black) #10 x 5/8"

 


H72988 [6]
KD Bolt



 
H92848 [1]
(Silver) M4 x 25mm



H171556 [10]
Quickfit TL4

 


[2]
#10 x 1"

 

H38169 [4]
Wood Dowel 8 x 30



 Q85389

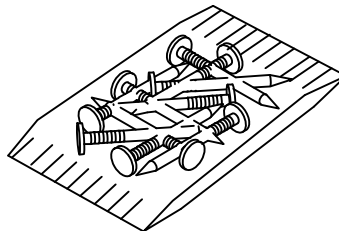


[1]

Nail Bag (20)

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

Hardware not to scale.

 
H32024

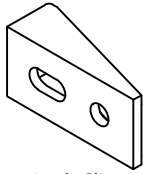

Lock Clip

[1]

 
H214973

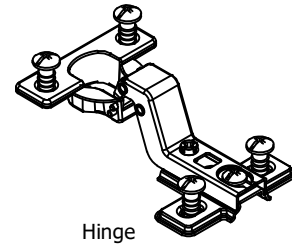

Hinge

[2]

 
H215406

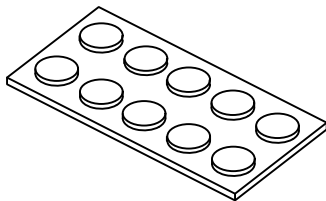

Bumper (10) per pack

[1]

 H39922



Strap

[2]

 
H23604



Shelf Pin


[4]

H126396

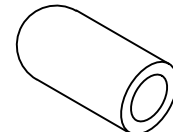


Shelf Pin Sleeve

 [4]

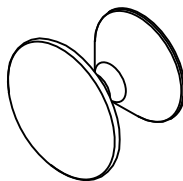


Door Knob

 [1]

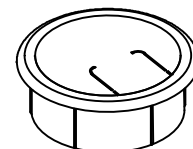

Grommet

 [2]



Cover Cap

[7]

 
Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 1

Prepare Door

A210338C


H214973

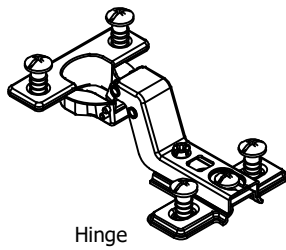

Hinge


[2]

 H92848
(Silver)




M4 x 25mm

 [1]

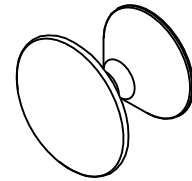

Door Knob

 [1]

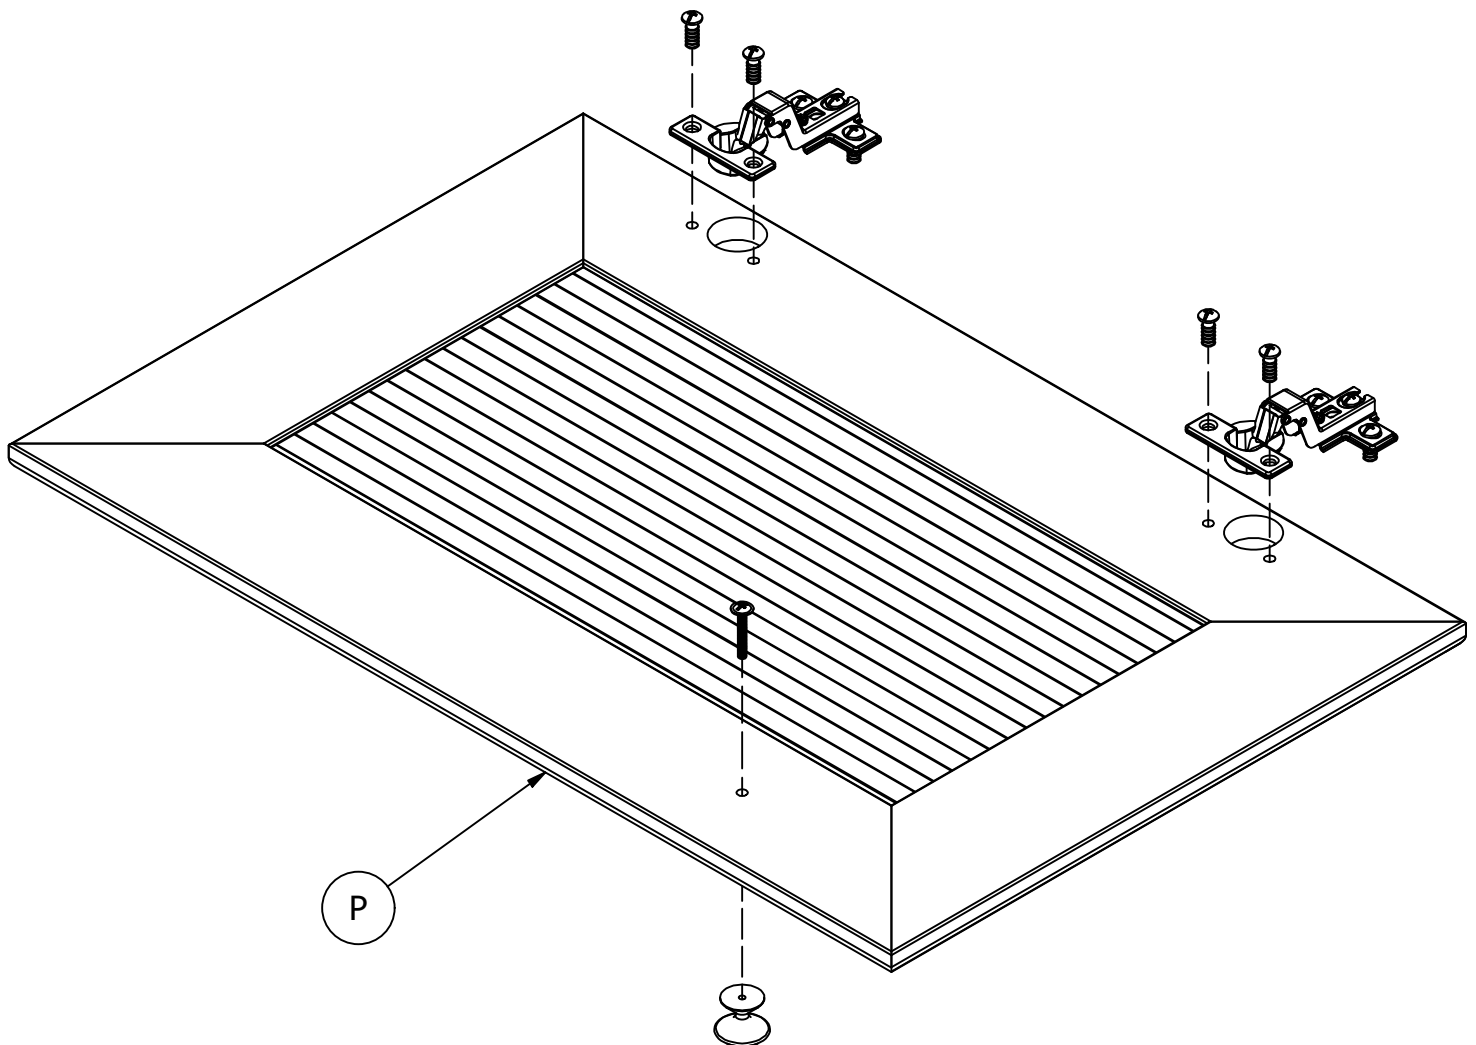

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 2

Prepare Panels

A210338C

H38169



[3]

 
Wood Dowel 8 x 30

H171556






[1]

Quickfit TL4

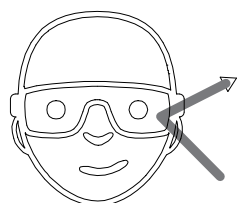

   Safety glasses
Gafas de seguridad
Lunettes de protection

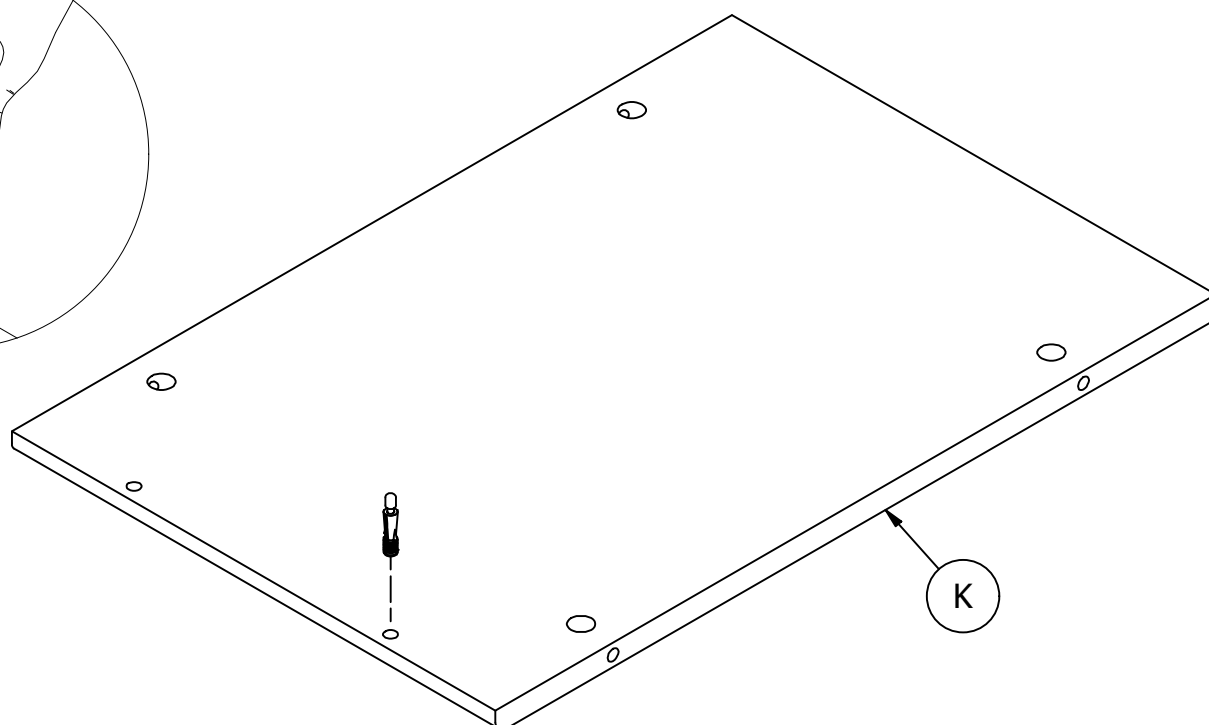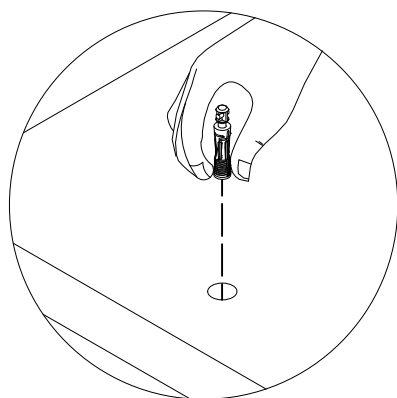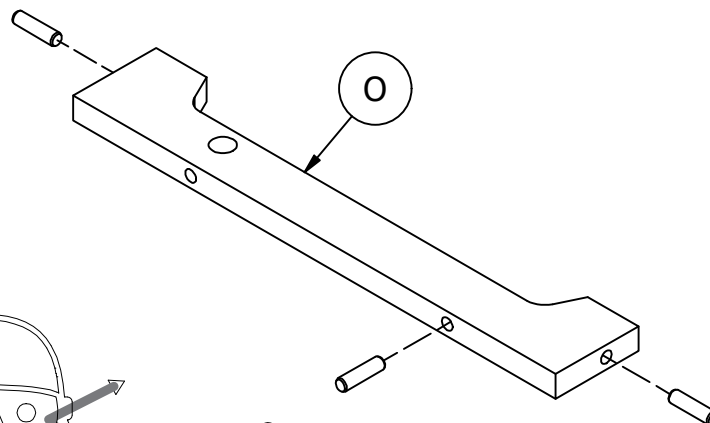

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 3

Assemble Panels

A210338C

Scan QR Code to
Watch Video on:

 
 


How to Tighten
KD Cams

H181468US



[1]

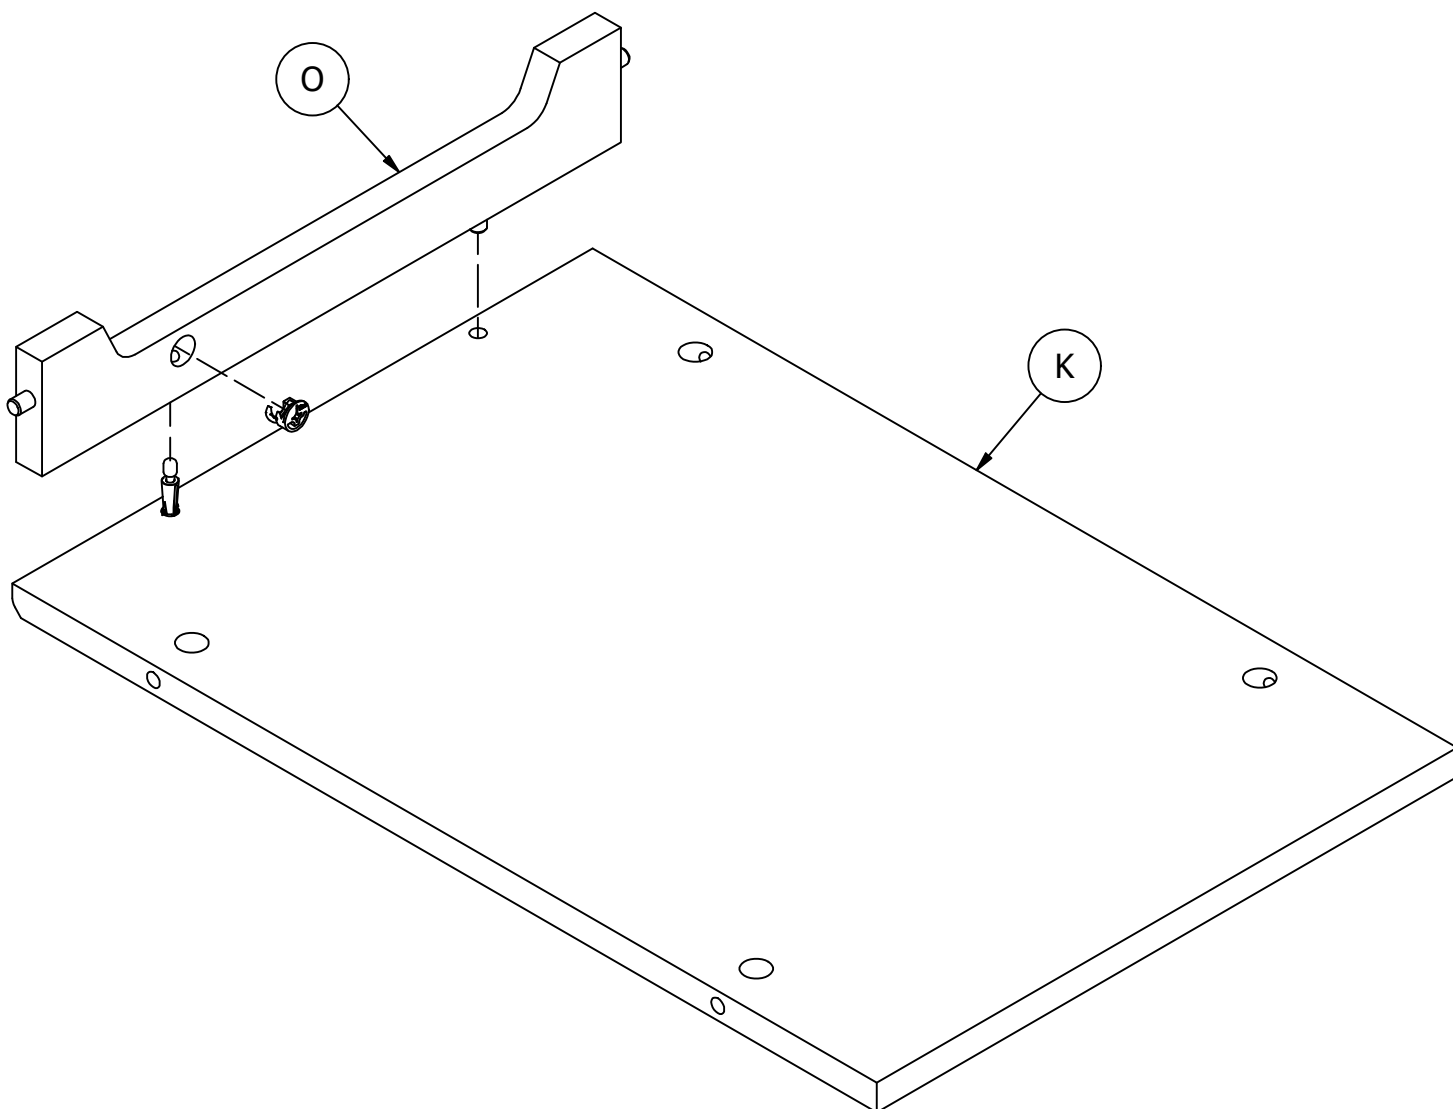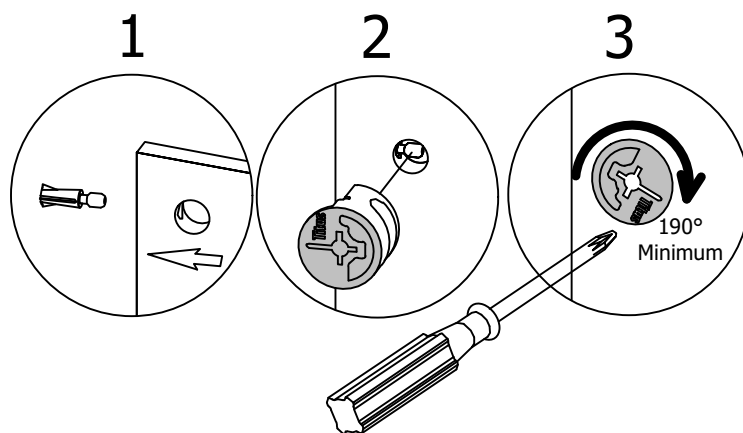

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 4

Prepare Panel

 
 
A210338C

H171556



Quickfit TL4

[4]

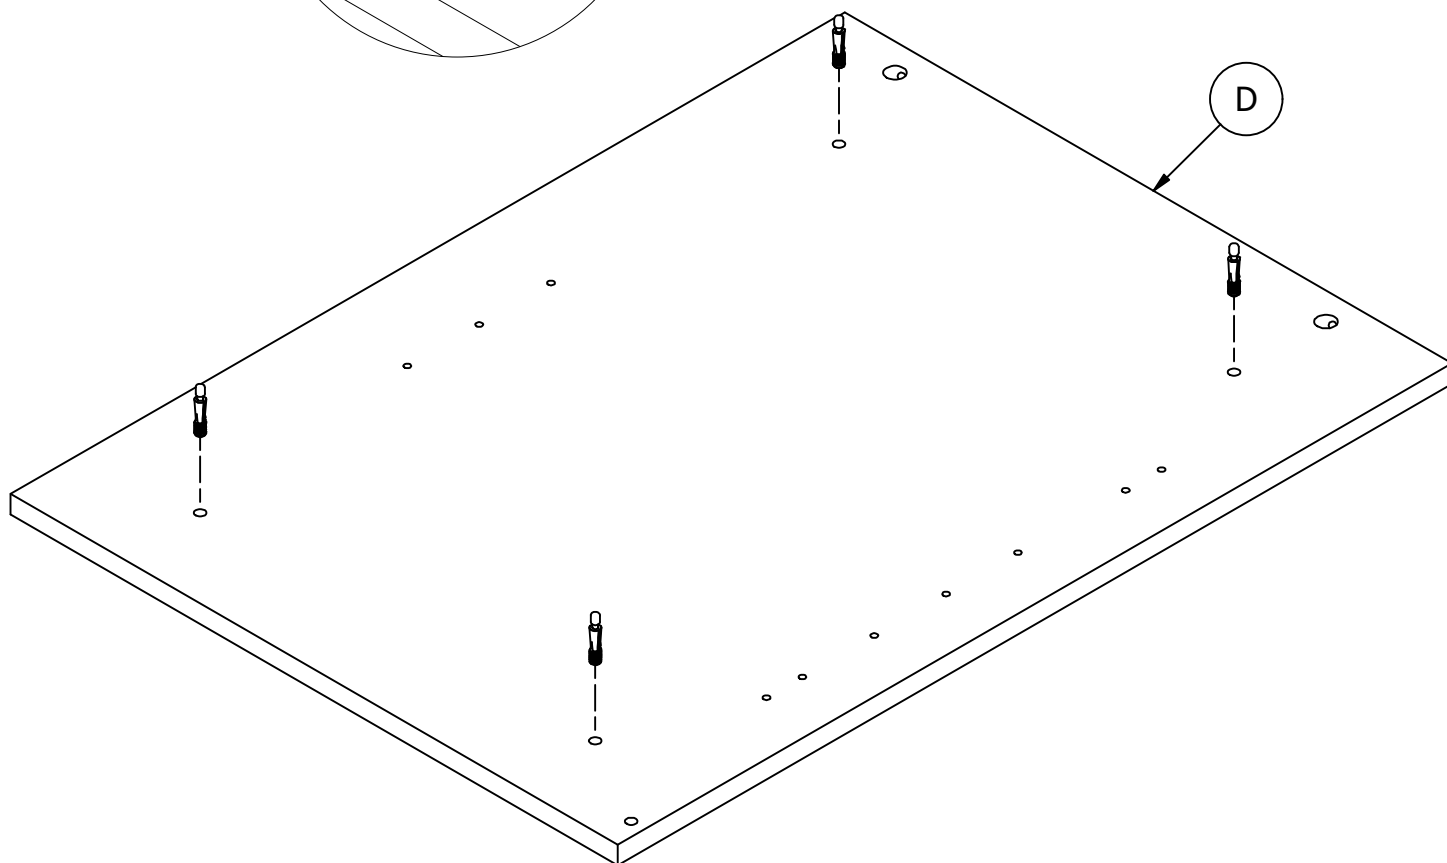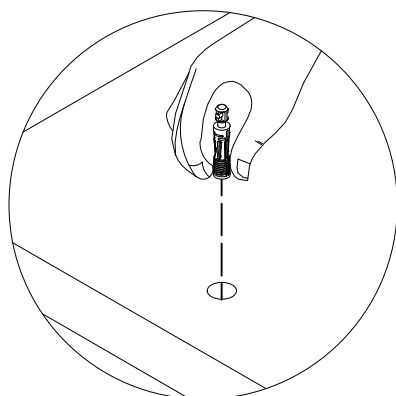


Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 5

Prepare Panel

A210338C

 
H27310
(Silver)



[1]

#8 x 1/2"

 H32024

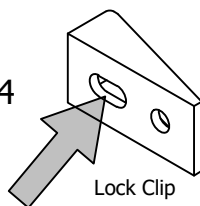


[1]

H215406



[1]

 Bumper

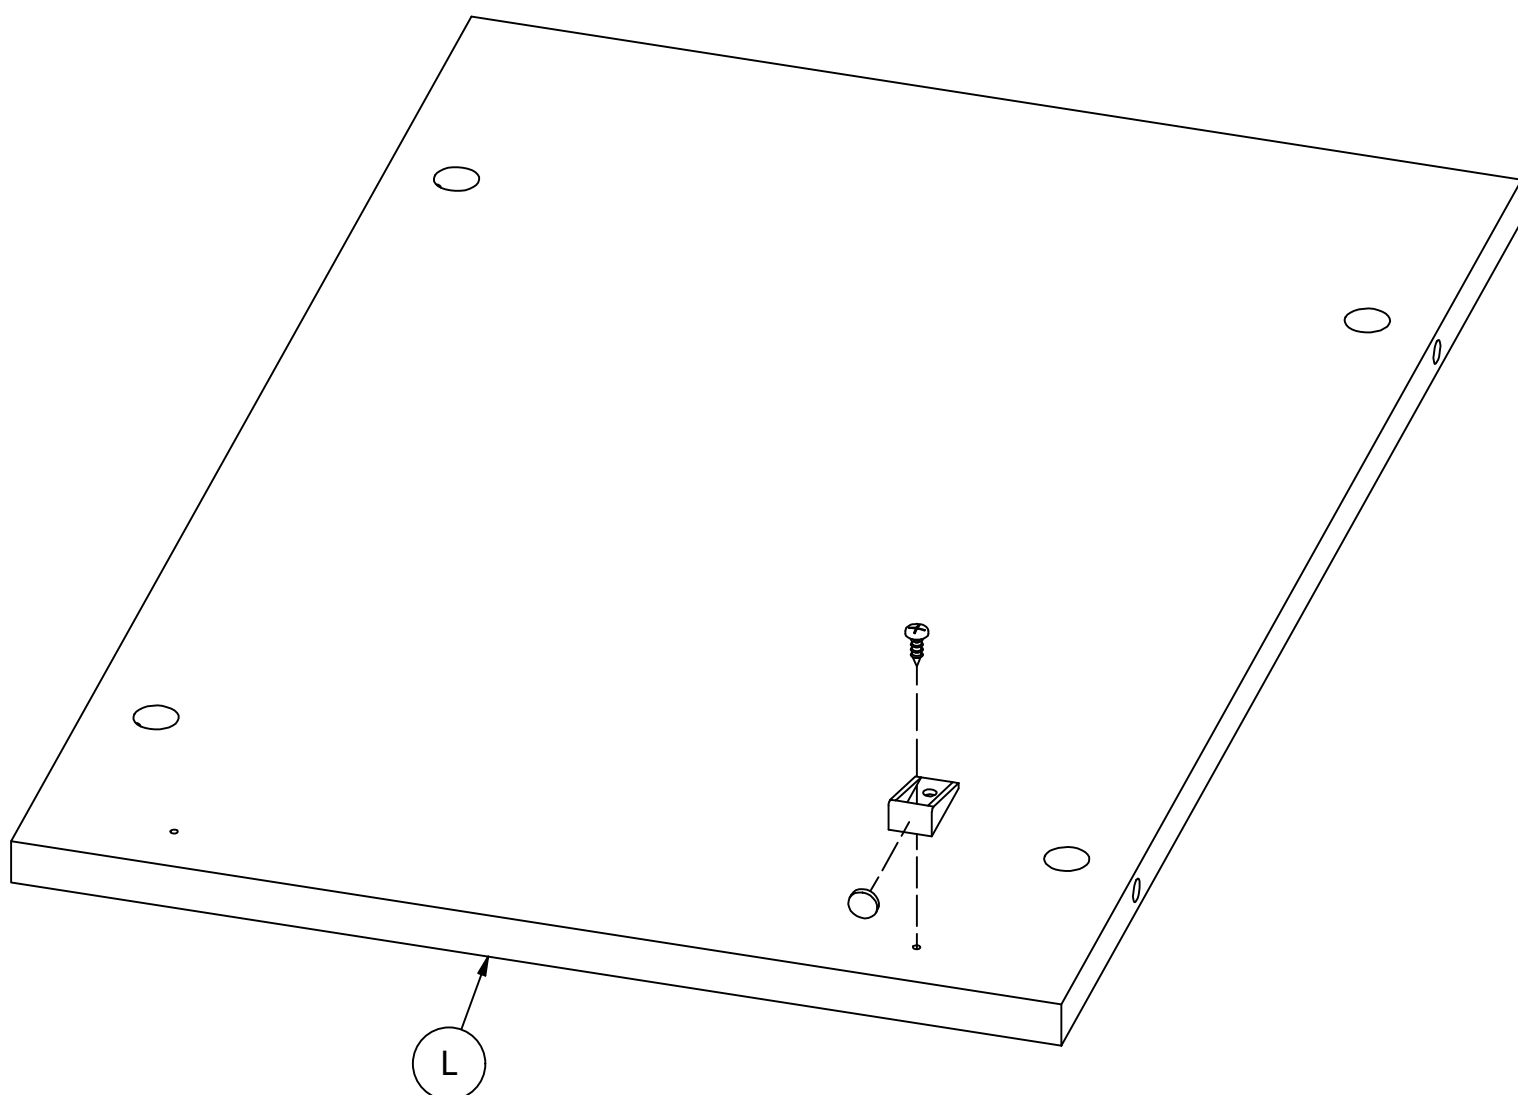

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 6

Assemble Panels

A210338C

Scan QR Code to
Watch Video on:

 
 


How to Tighten
KD Cams

H181468US



[4]

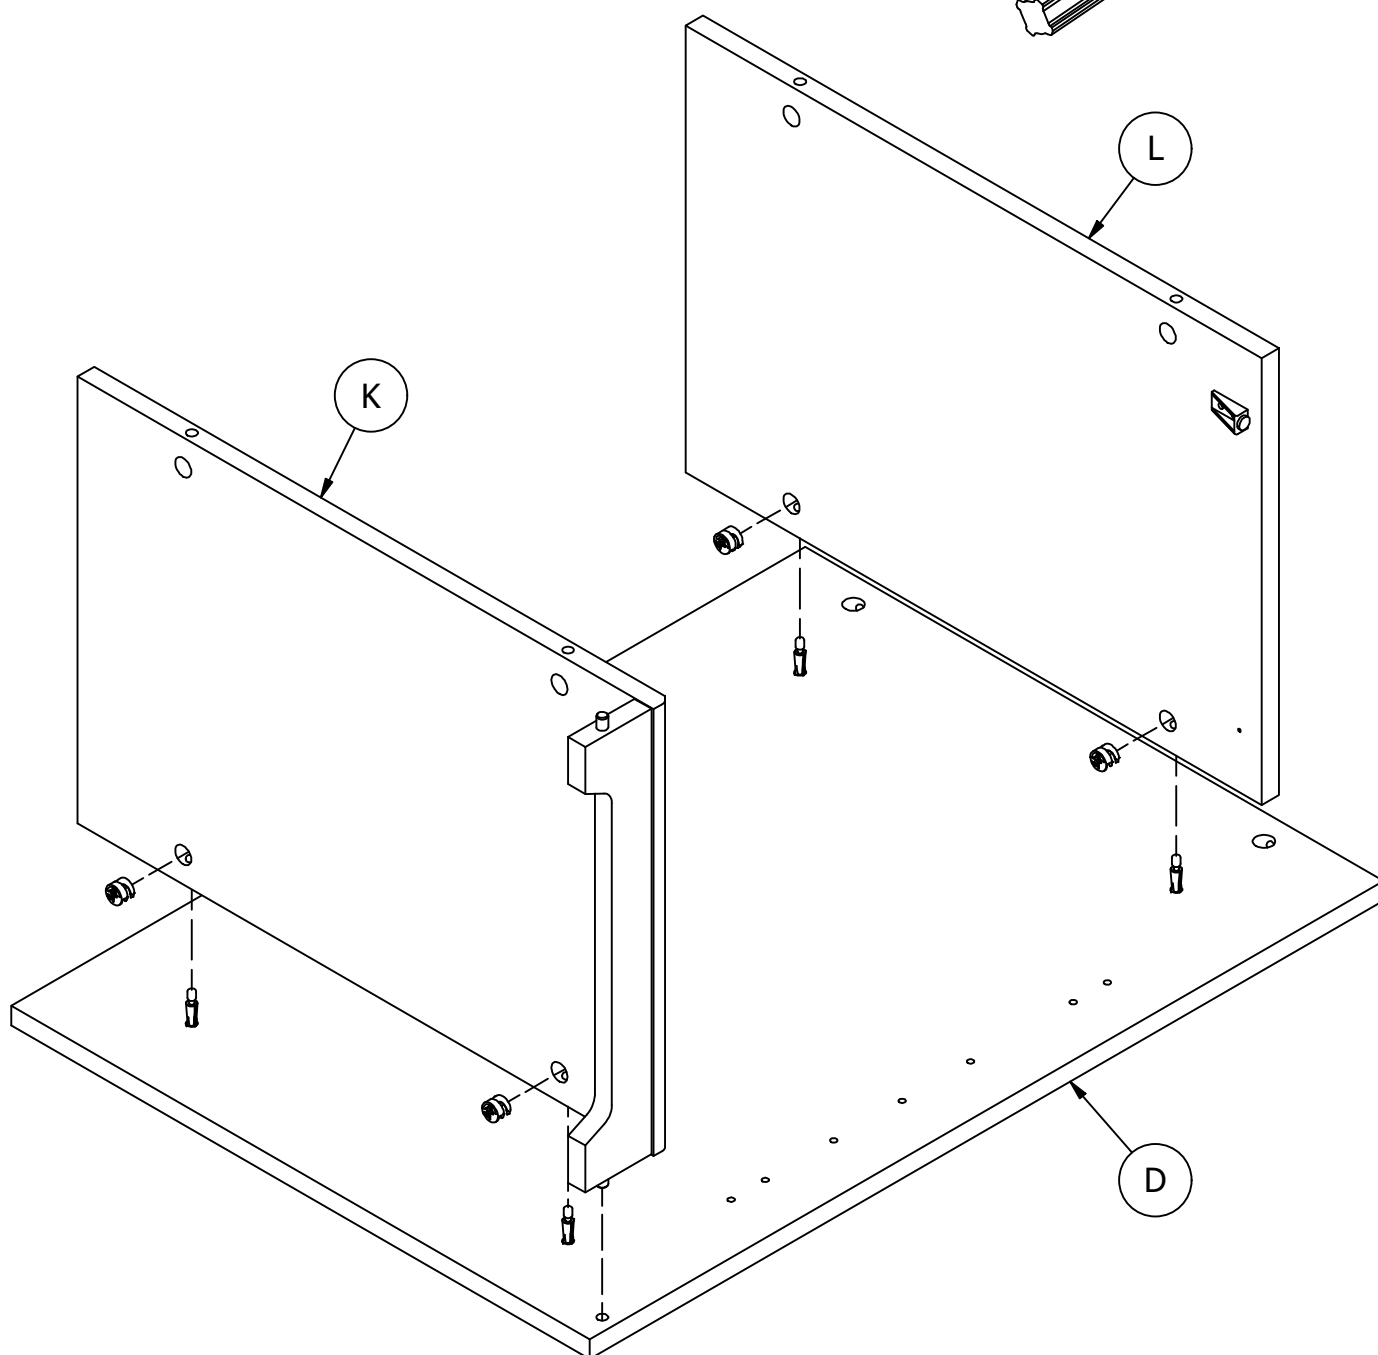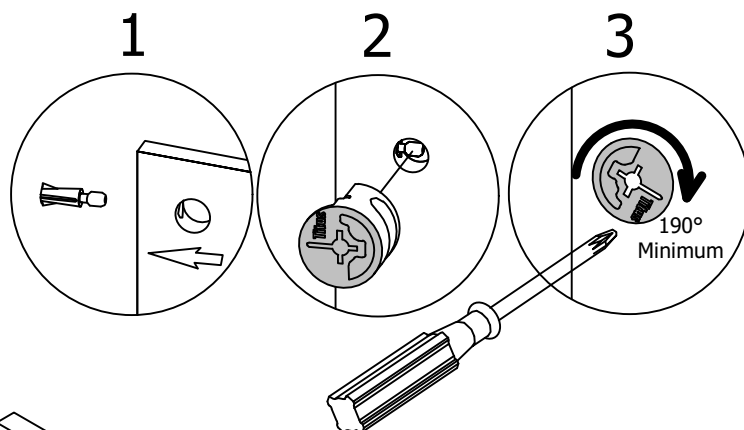

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 7

Prepare Panel

A210338C

H72988



KD Bolt

 
[2]

H171556



Quickfit TL4

[4]

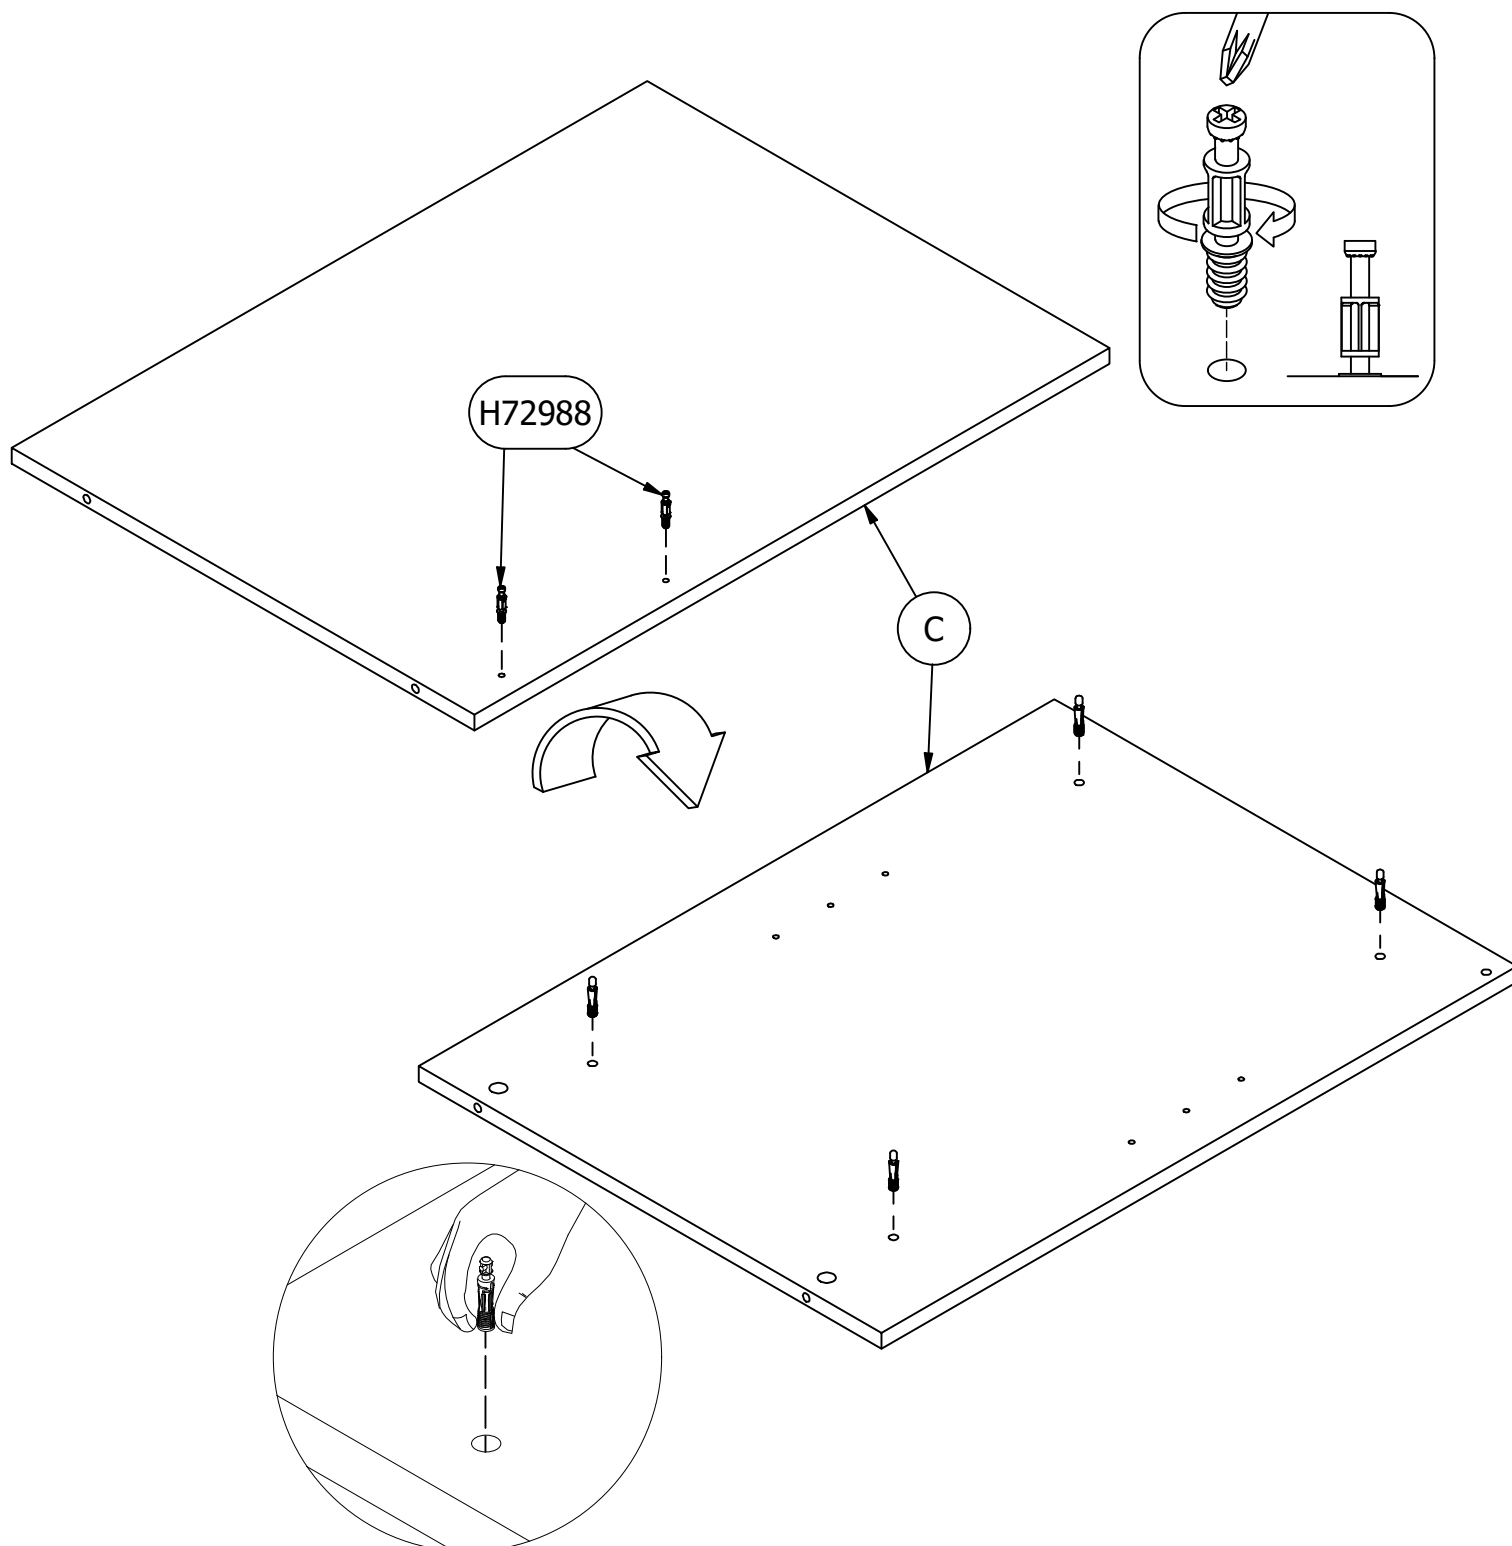

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 8

 
Assemble Panels

A210338C

Scan QR Code to
Watch Video on:



How to Tighten
KD Cams


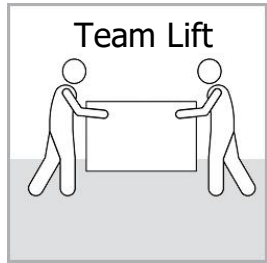


H181468US



KD Cam3000

  [4]

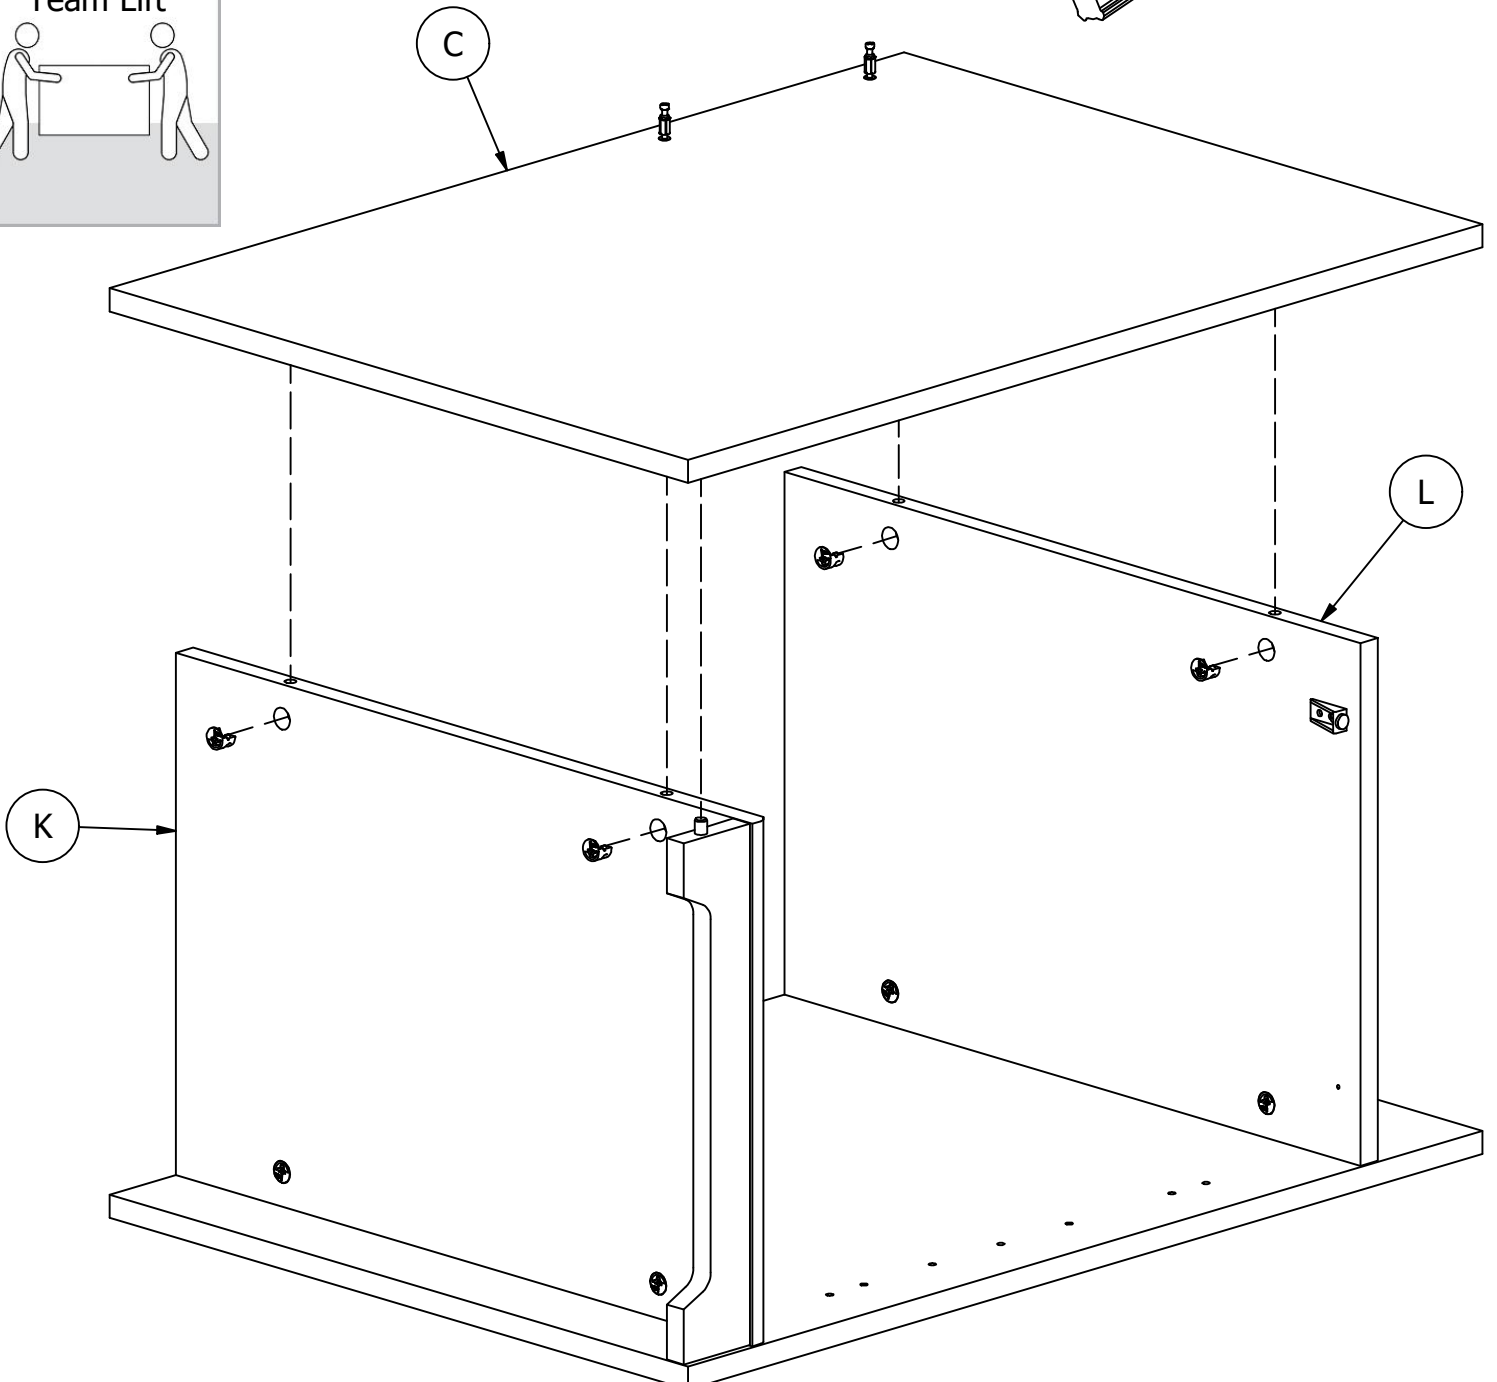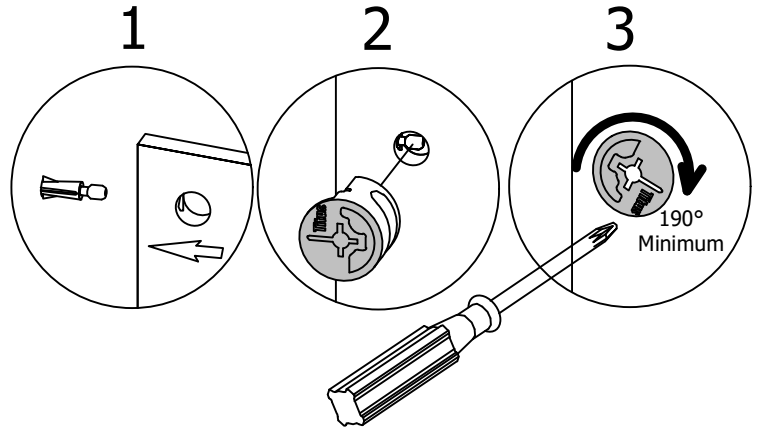


Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.


STEP 9

Assemble Panels


 
A210338C

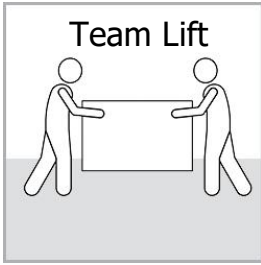



Q85389

 

[17]

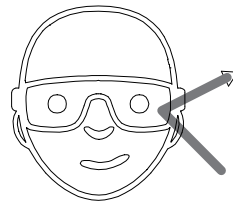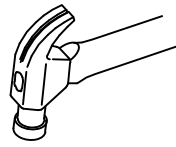  

  Safety glasses
Gafas de seguridad
Lunettes de protection

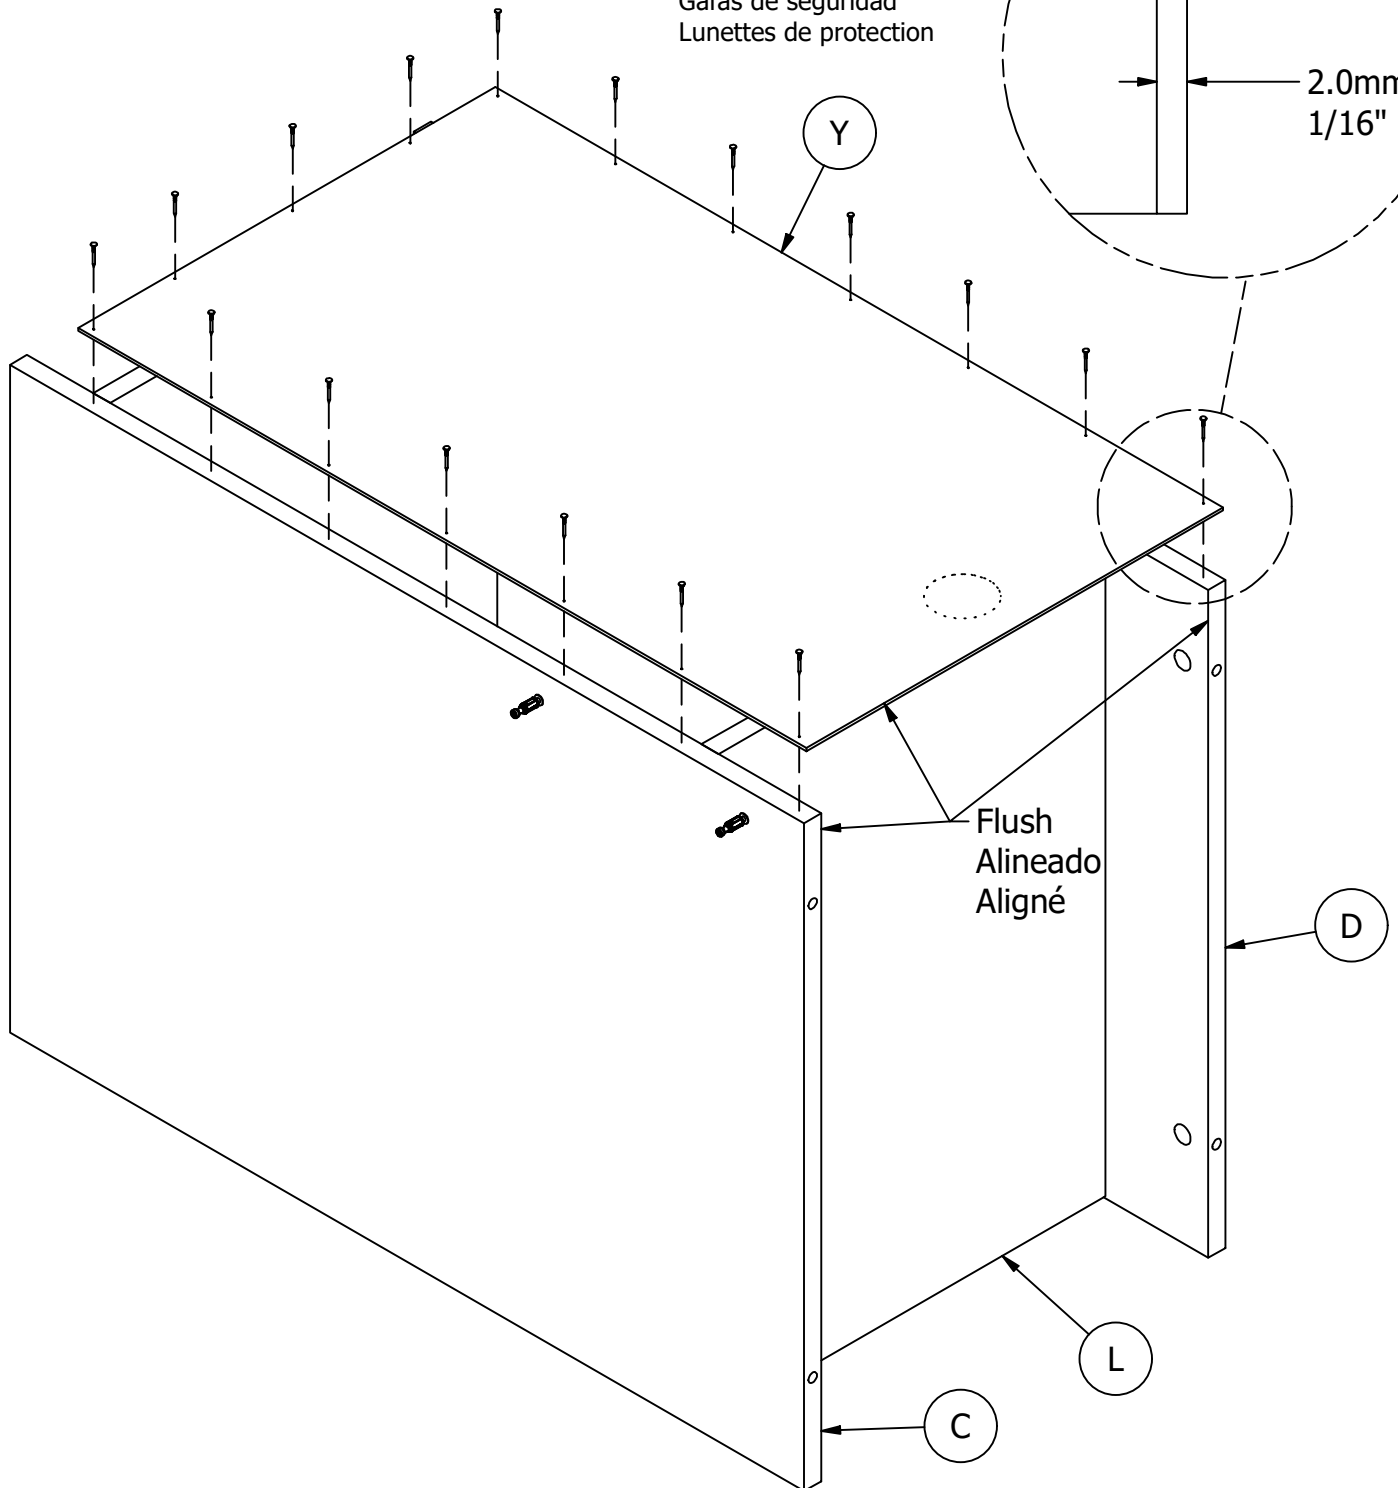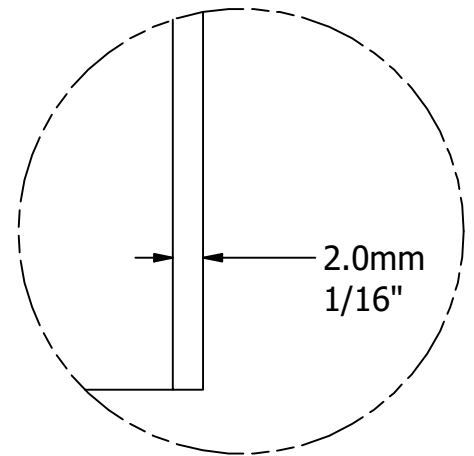

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 10

Prepare Panel

 
A210338C

H38169



Wood Dowel 8 x 30

[1]

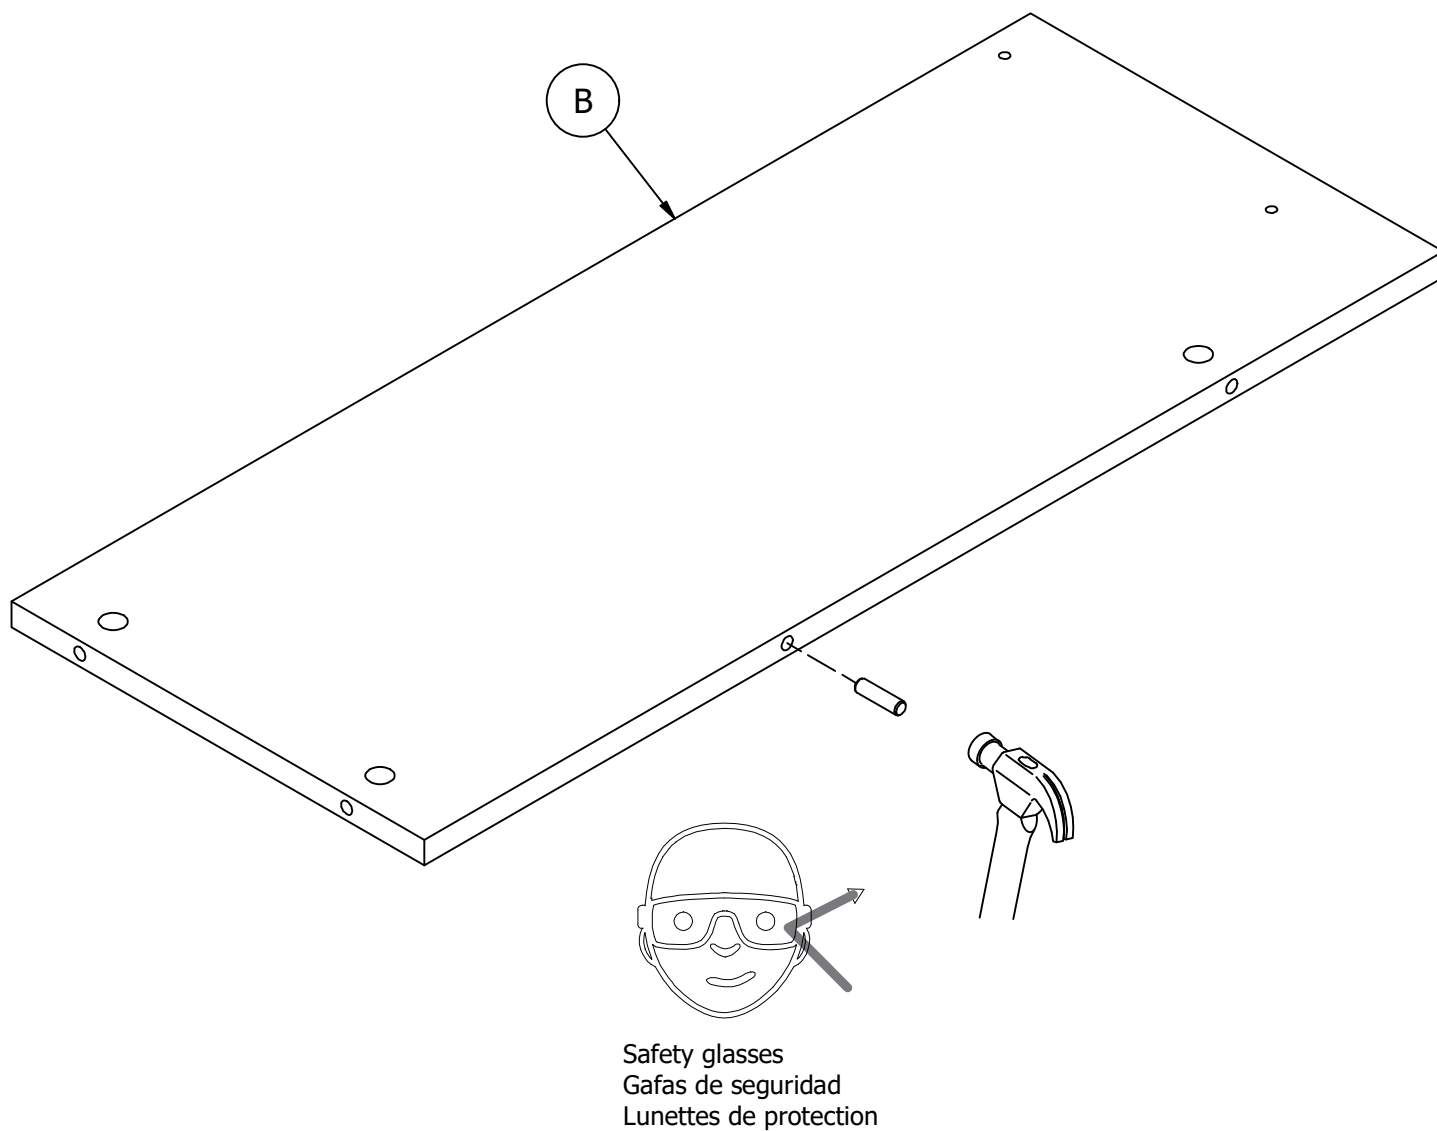

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 11

Assemble Panels

 
A210338C

Scan QR Code to
Watch Video on:



How to Tighten
KD Cams


Team Lift

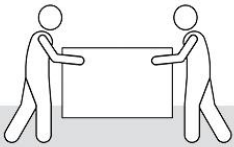



H181468US



 [2]



[2]

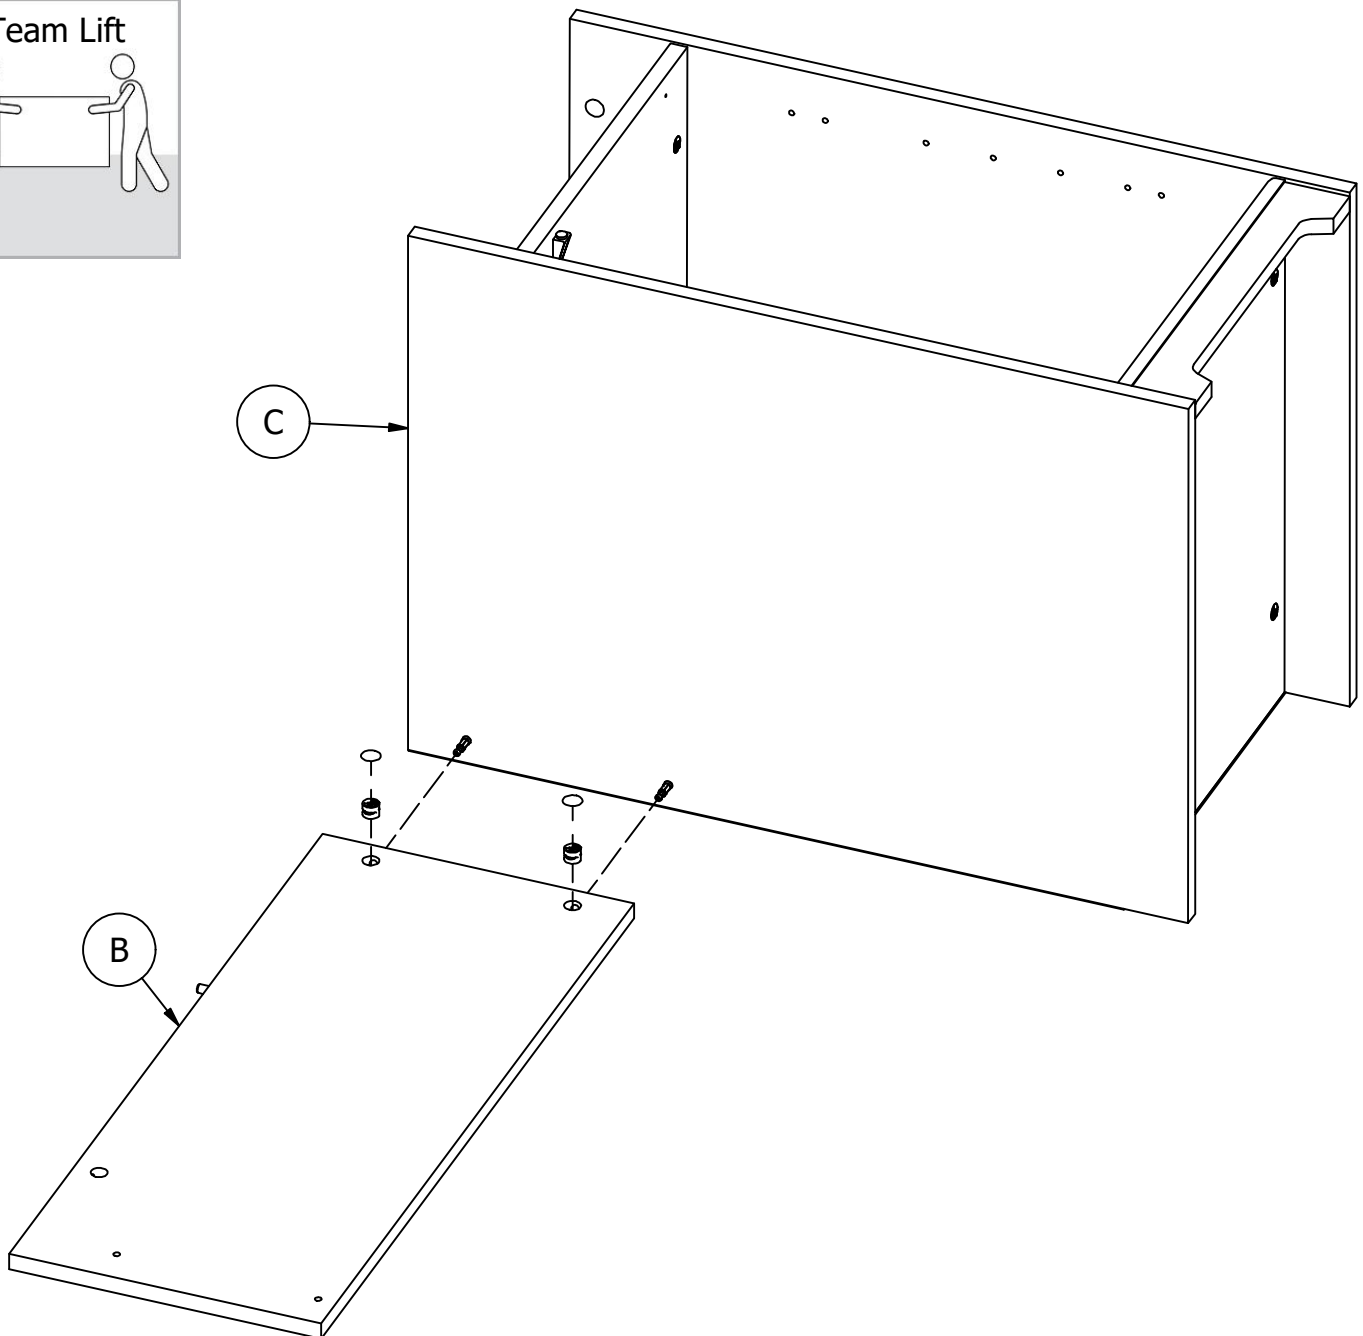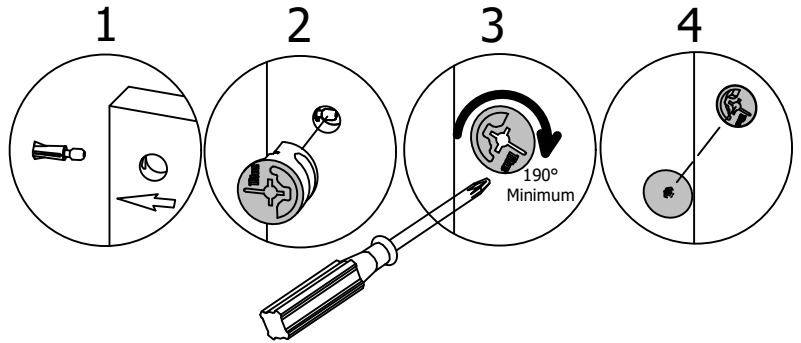  


Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 12

Prepare Panel

A210338C

 H72988



KD Bolt

 
[4]

H171556



Quickfit TL4

[1]

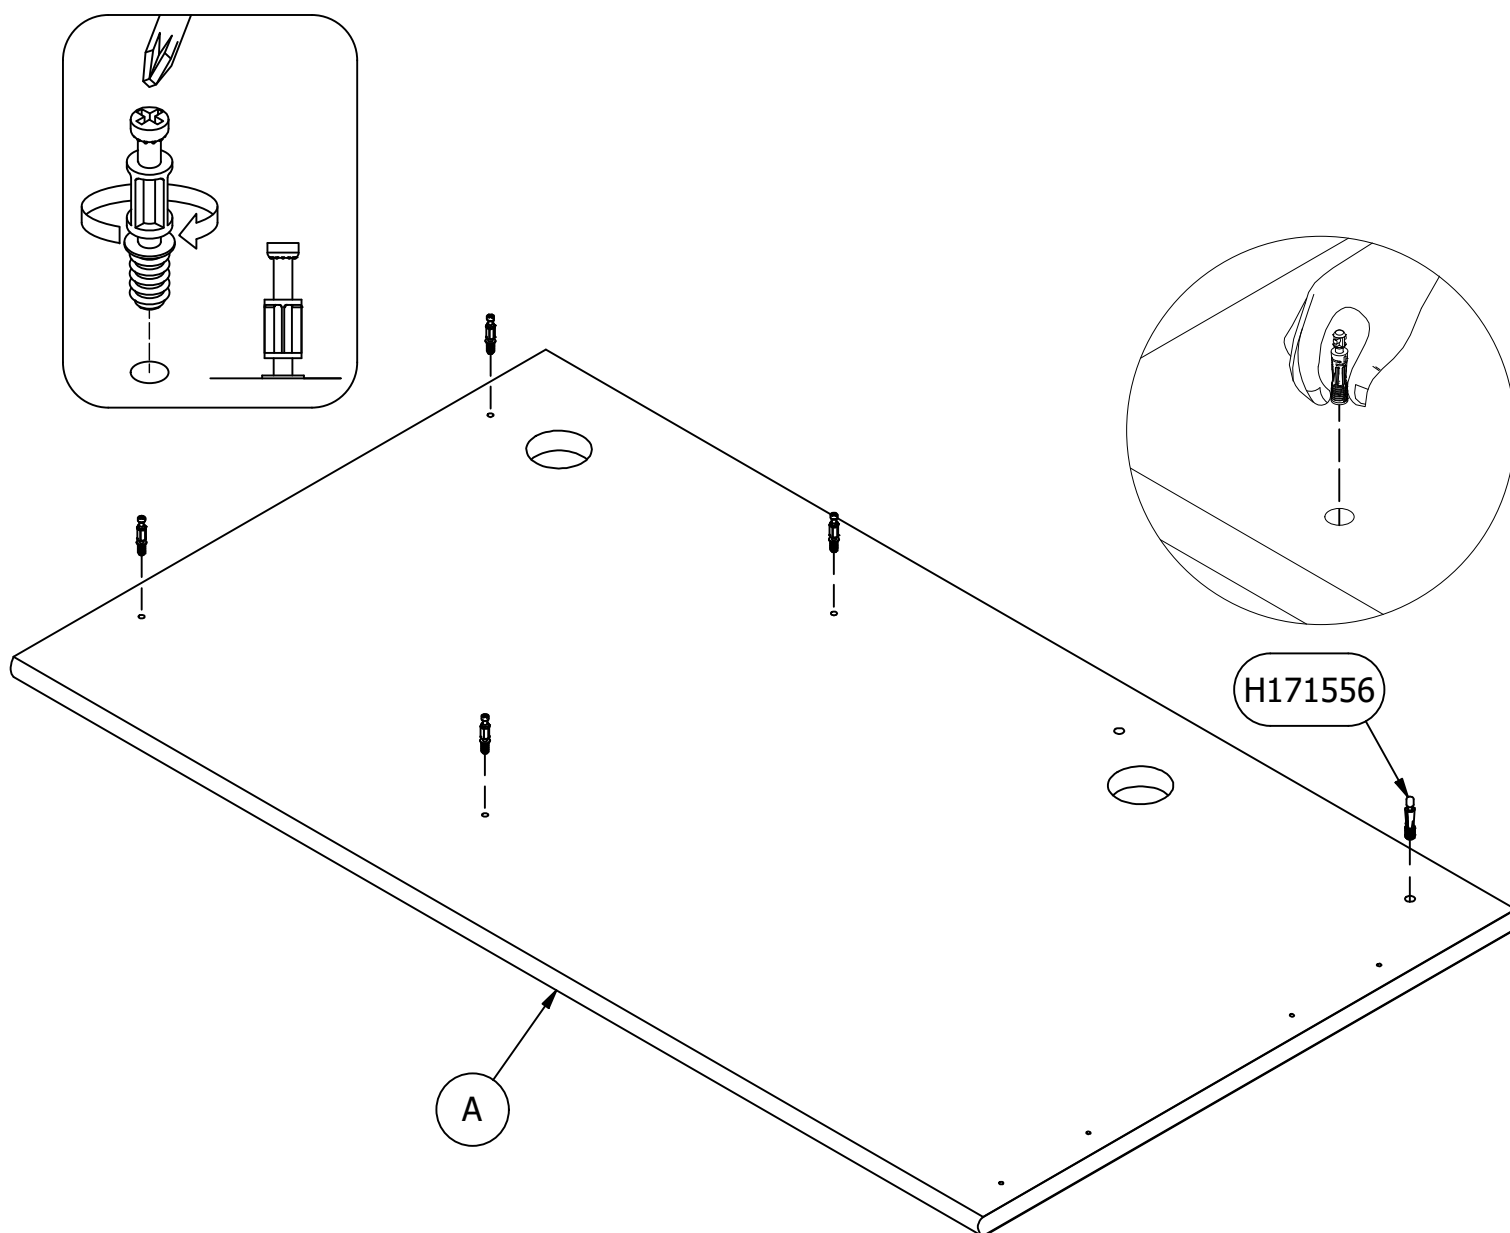

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 13

Assemble Panels

 
A210338C

Scan QR Code to
Watch Video on:




How to Tighten
KD Cams

H181468US





KD Cam3000

 [5]




Cover Cap

  [5]

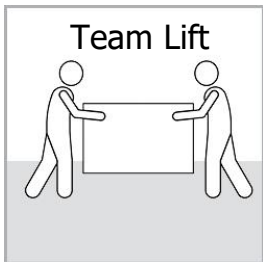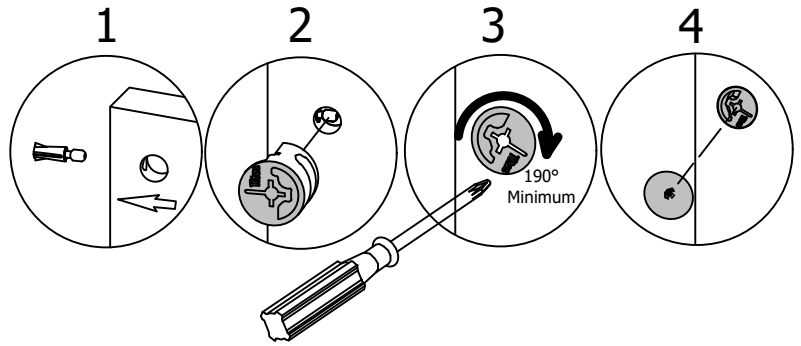

Team Lift

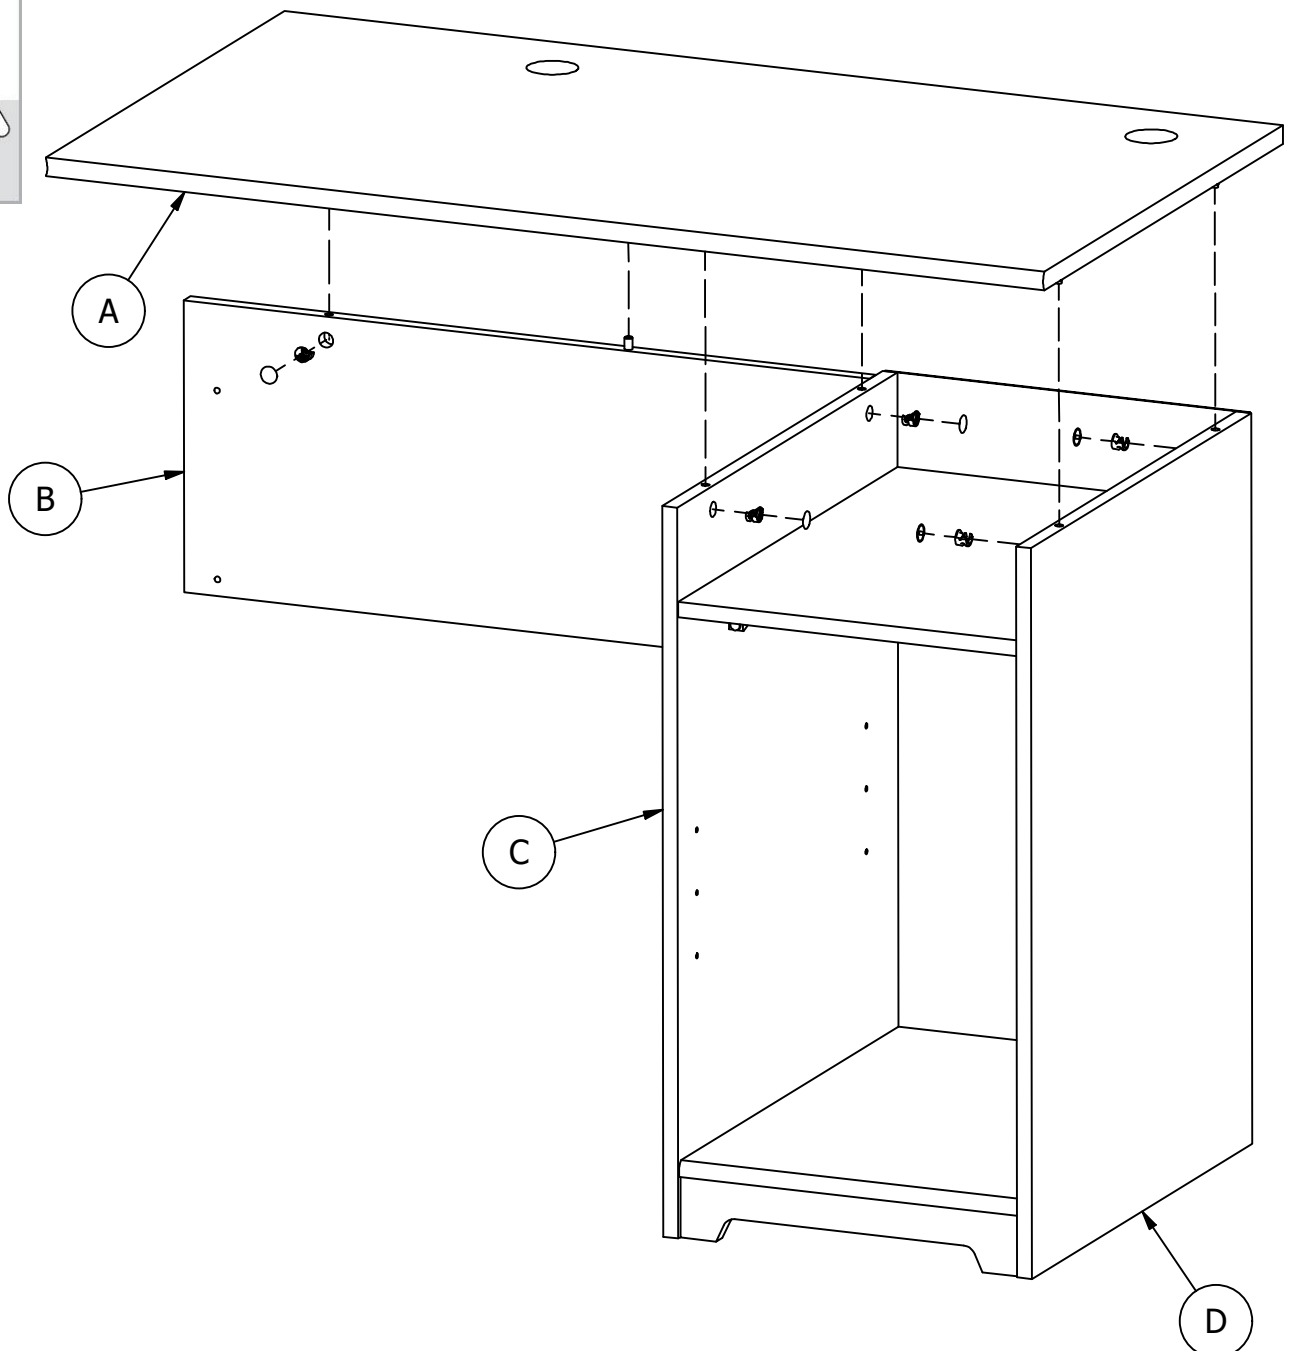 


Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 14

Prepare Desk


A210338C

 H23119
(Black)




[4]

 H39922





[2]

 Strap

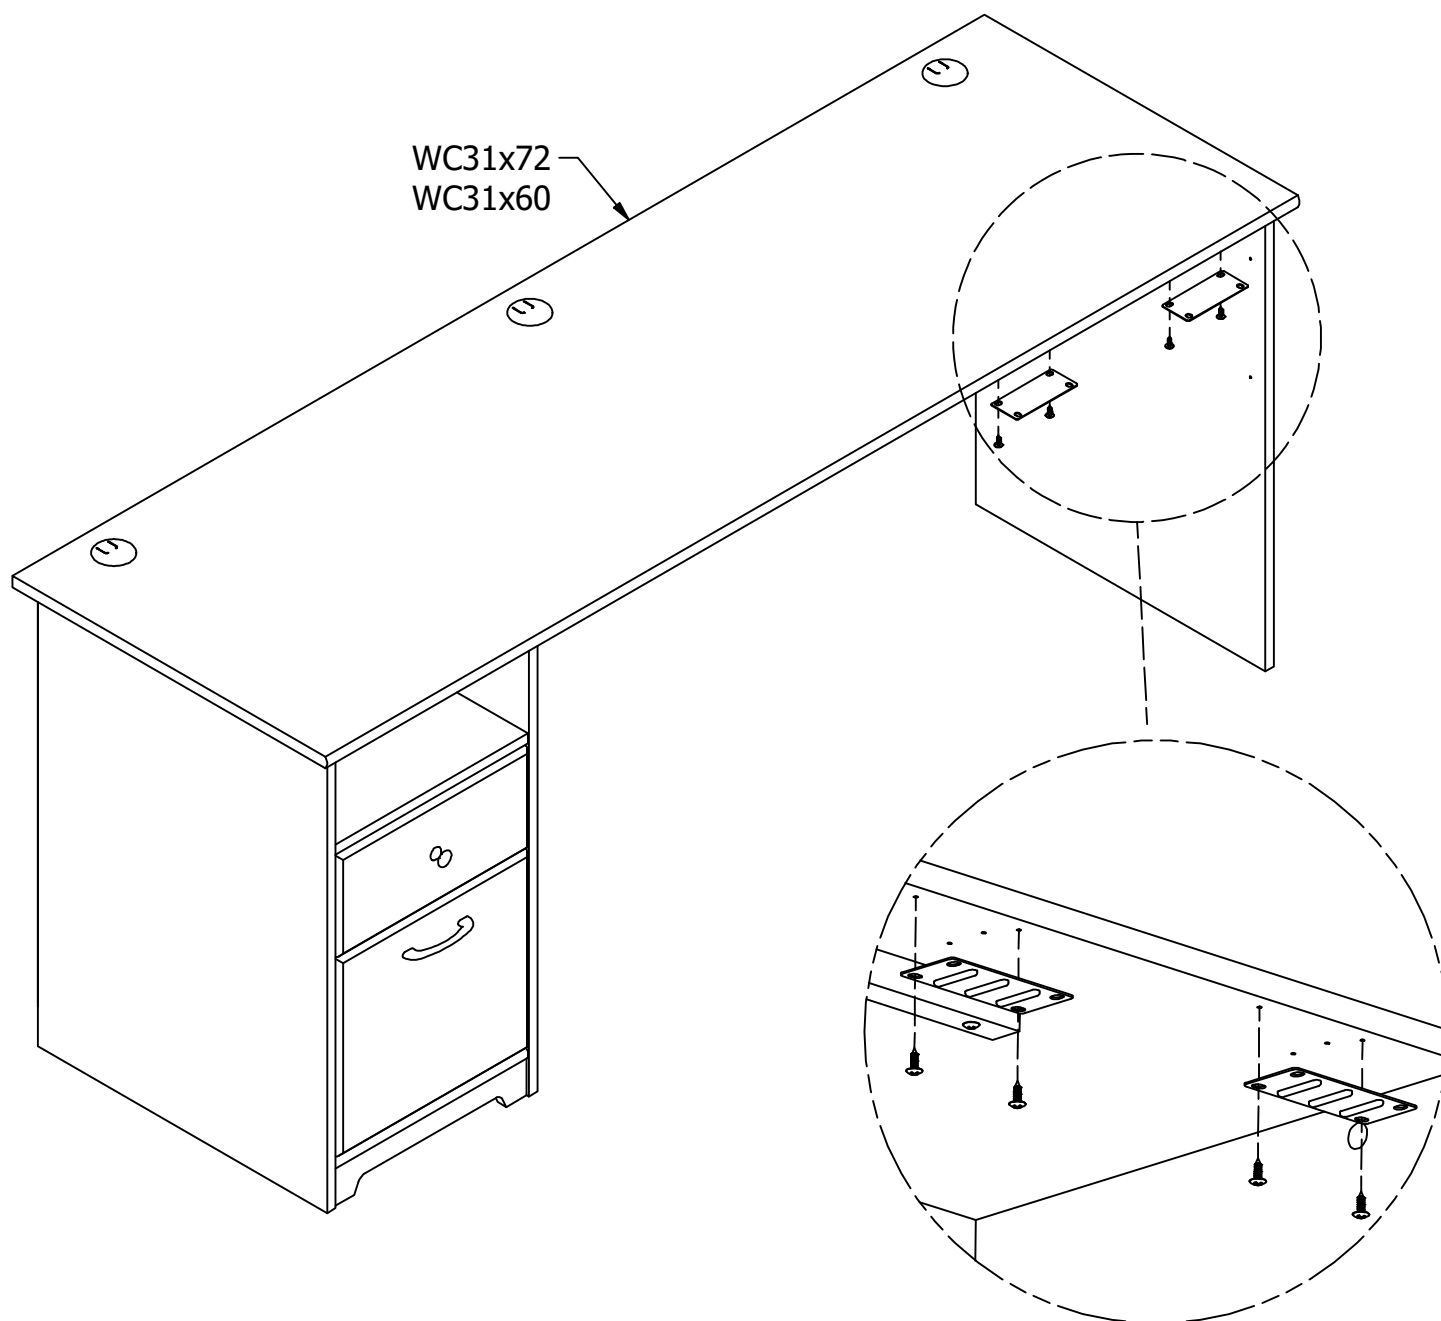

  
Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

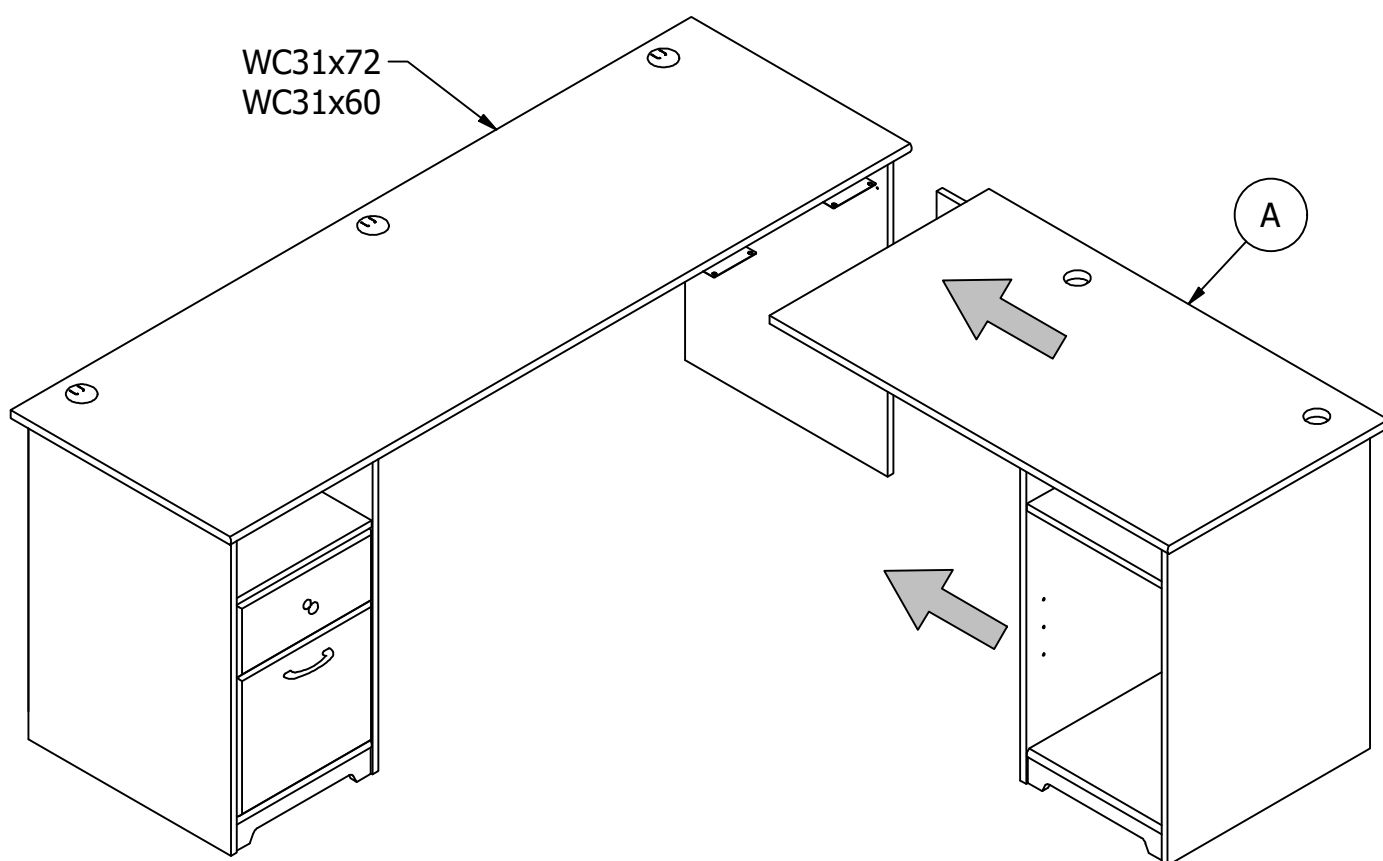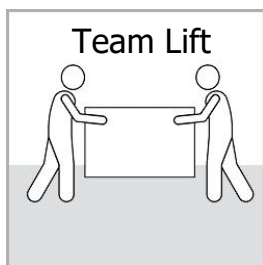




STEP 16

Attach Return

 
A210338C

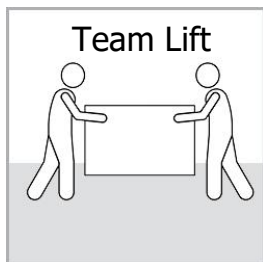





H23119
(Black)

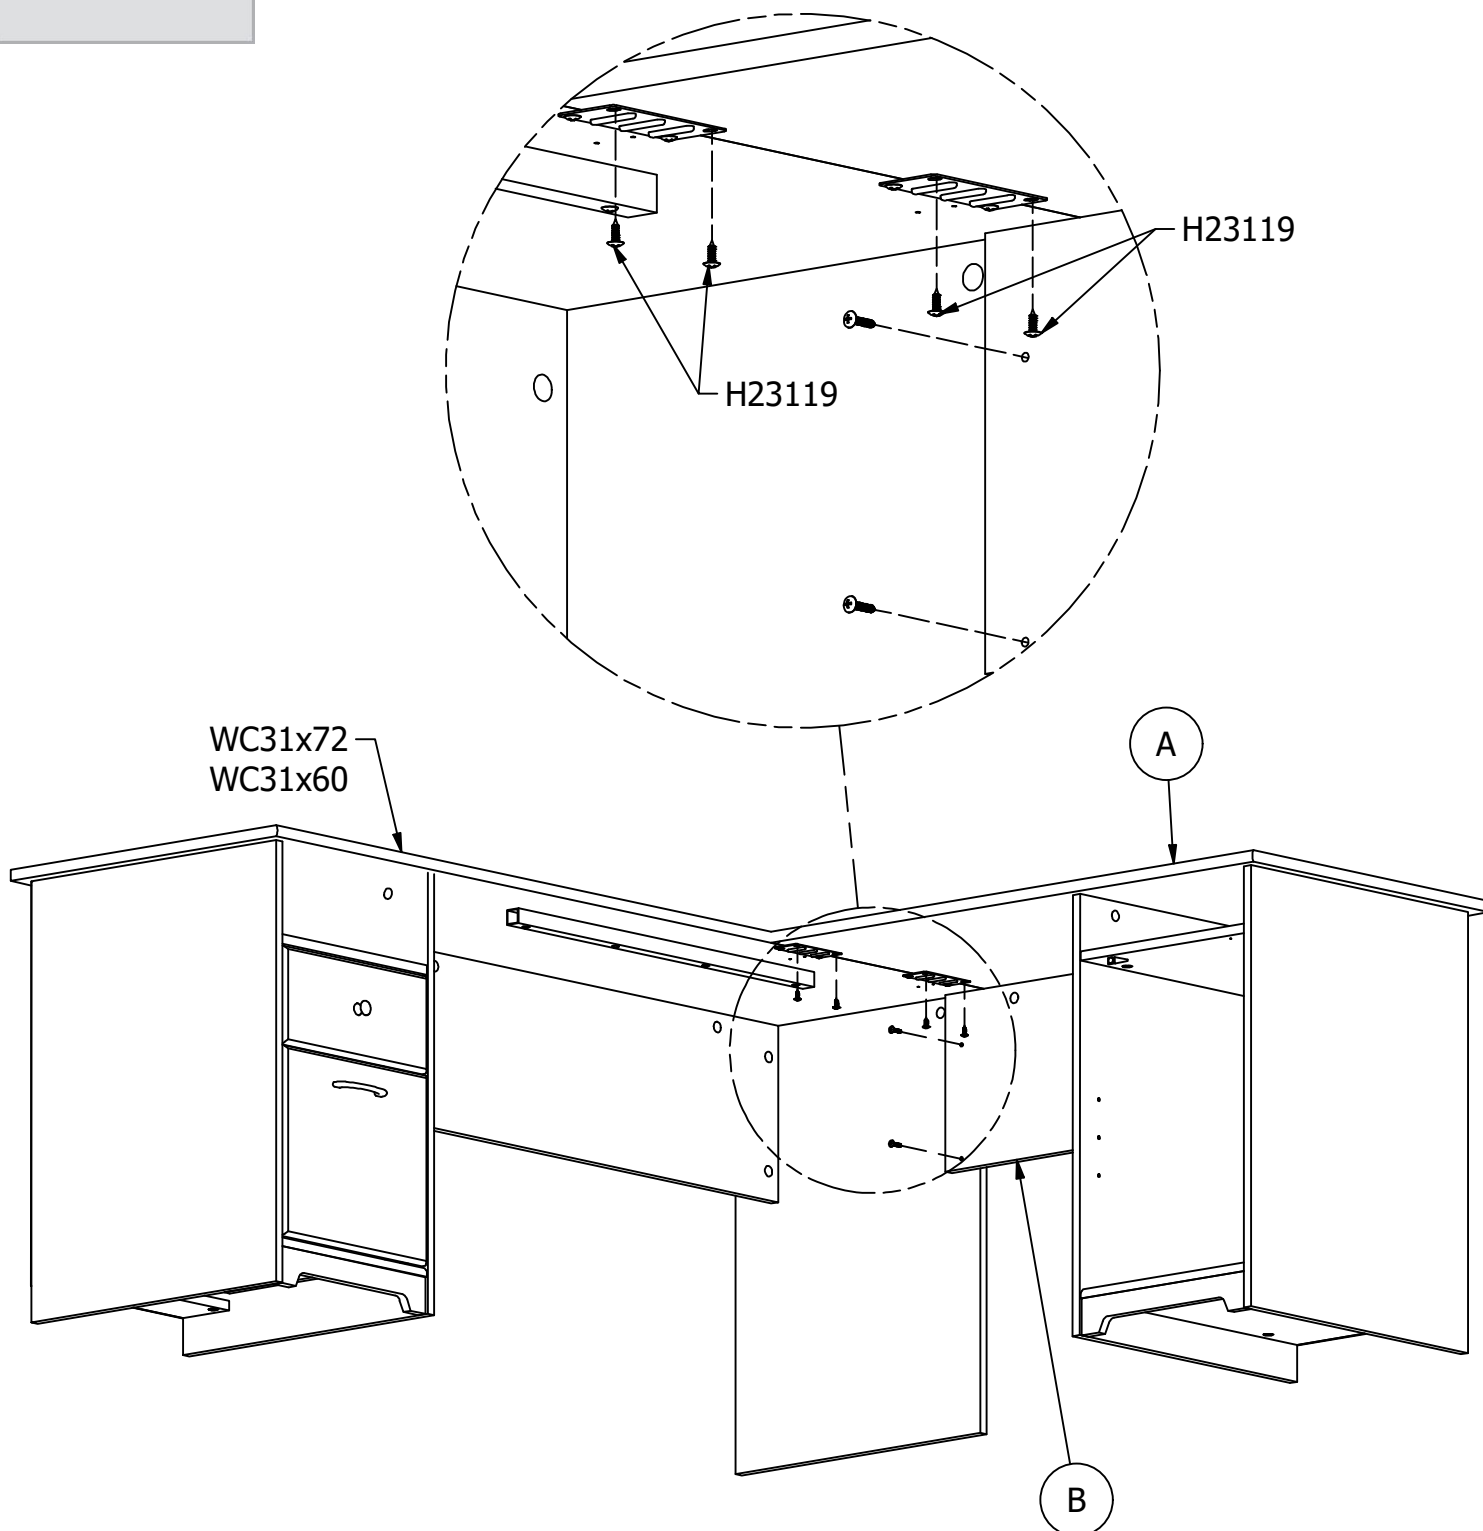   

 Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

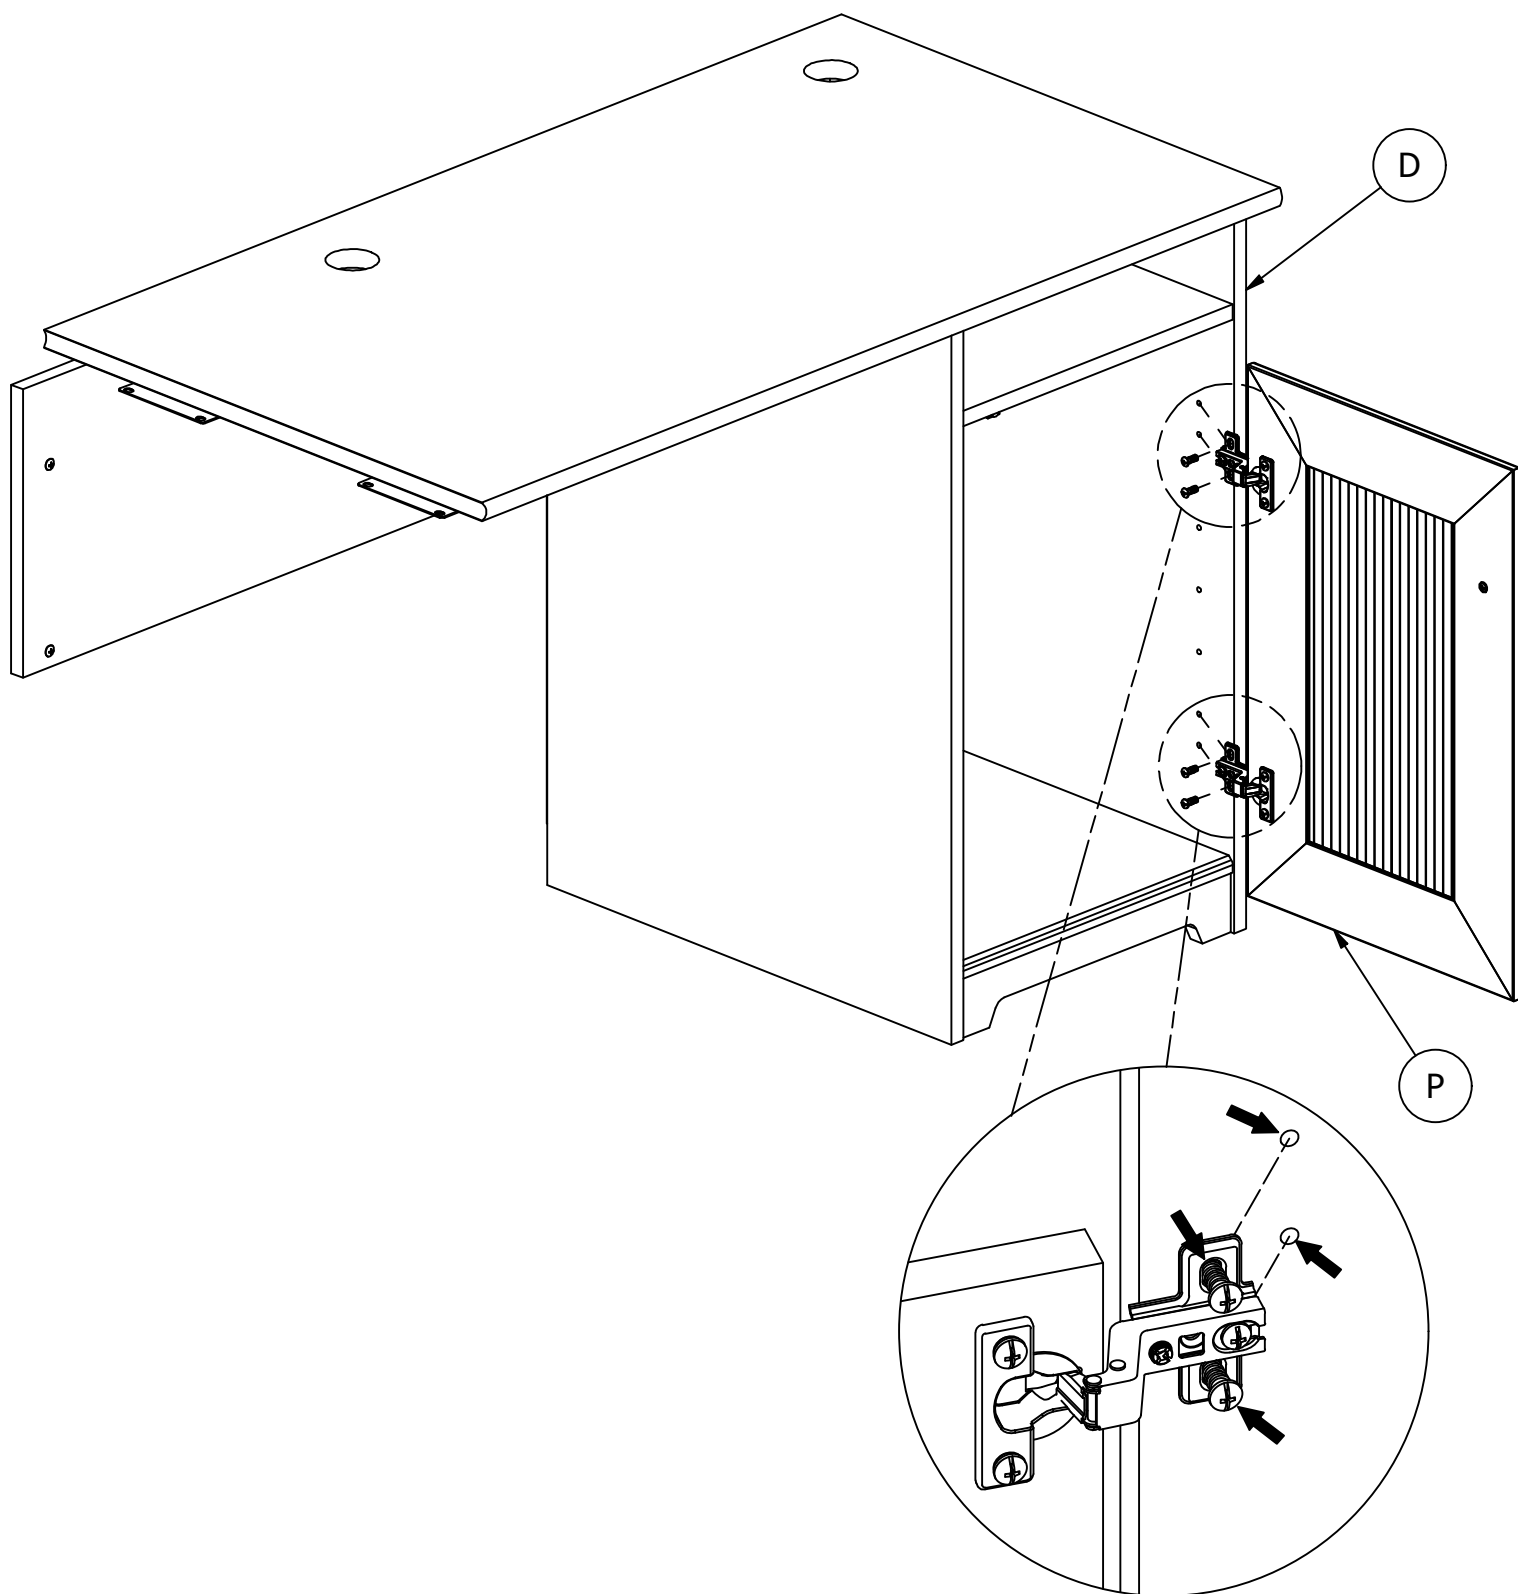

    Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

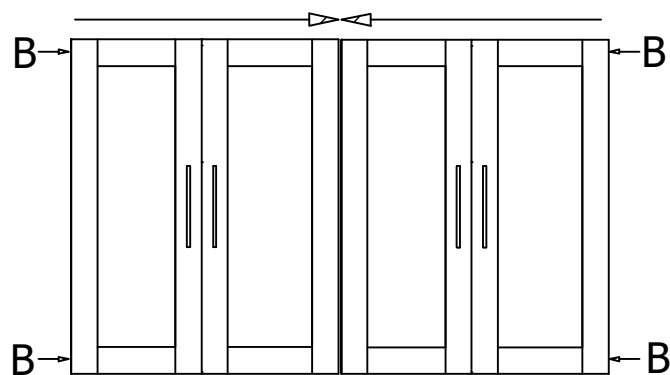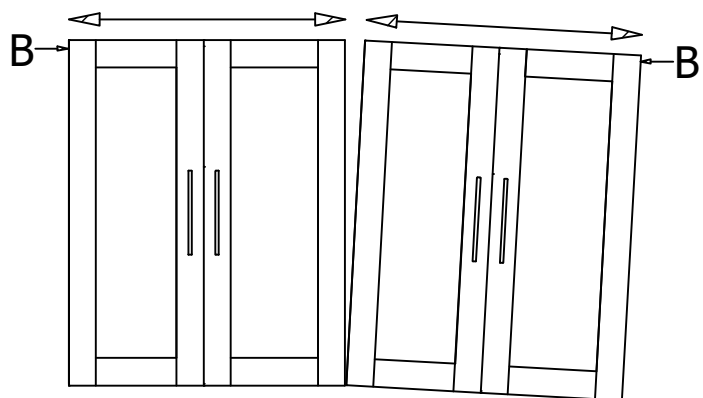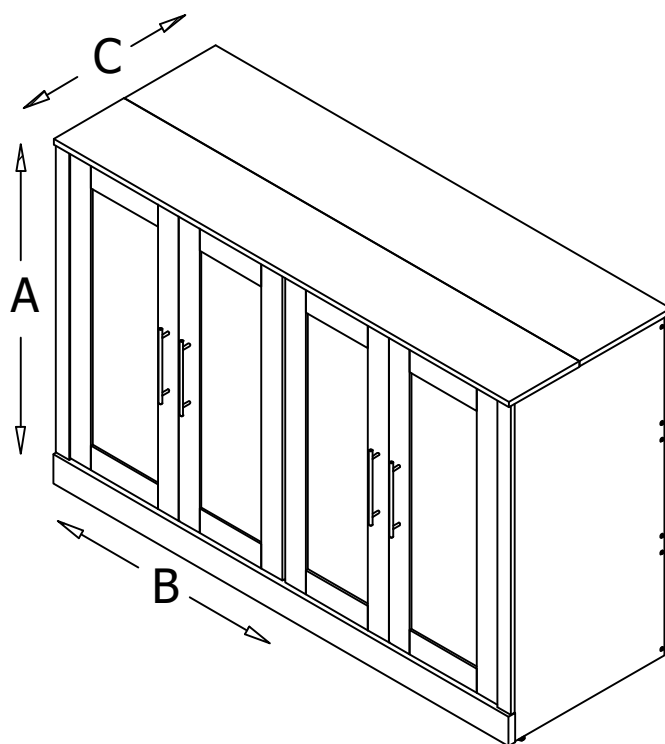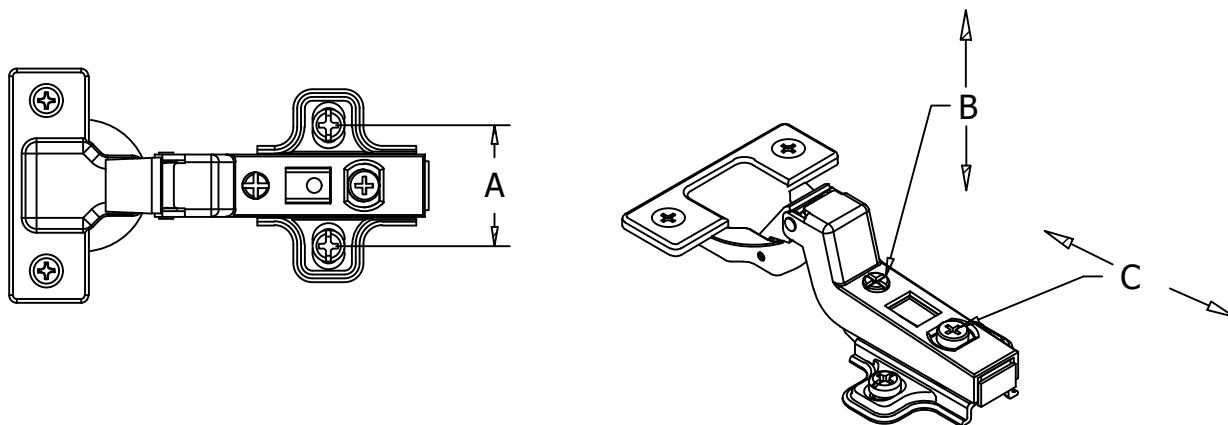


Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

STEP 19

Install Shelf

A210338C

 
H126396

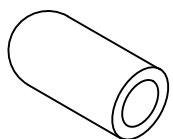

Shelf Pin Sleeve


[4]

 H23604

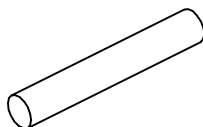


Shelf Pin

 [4]

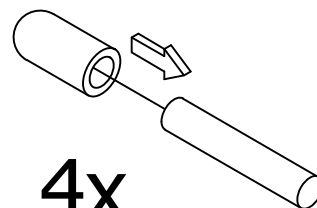

4x

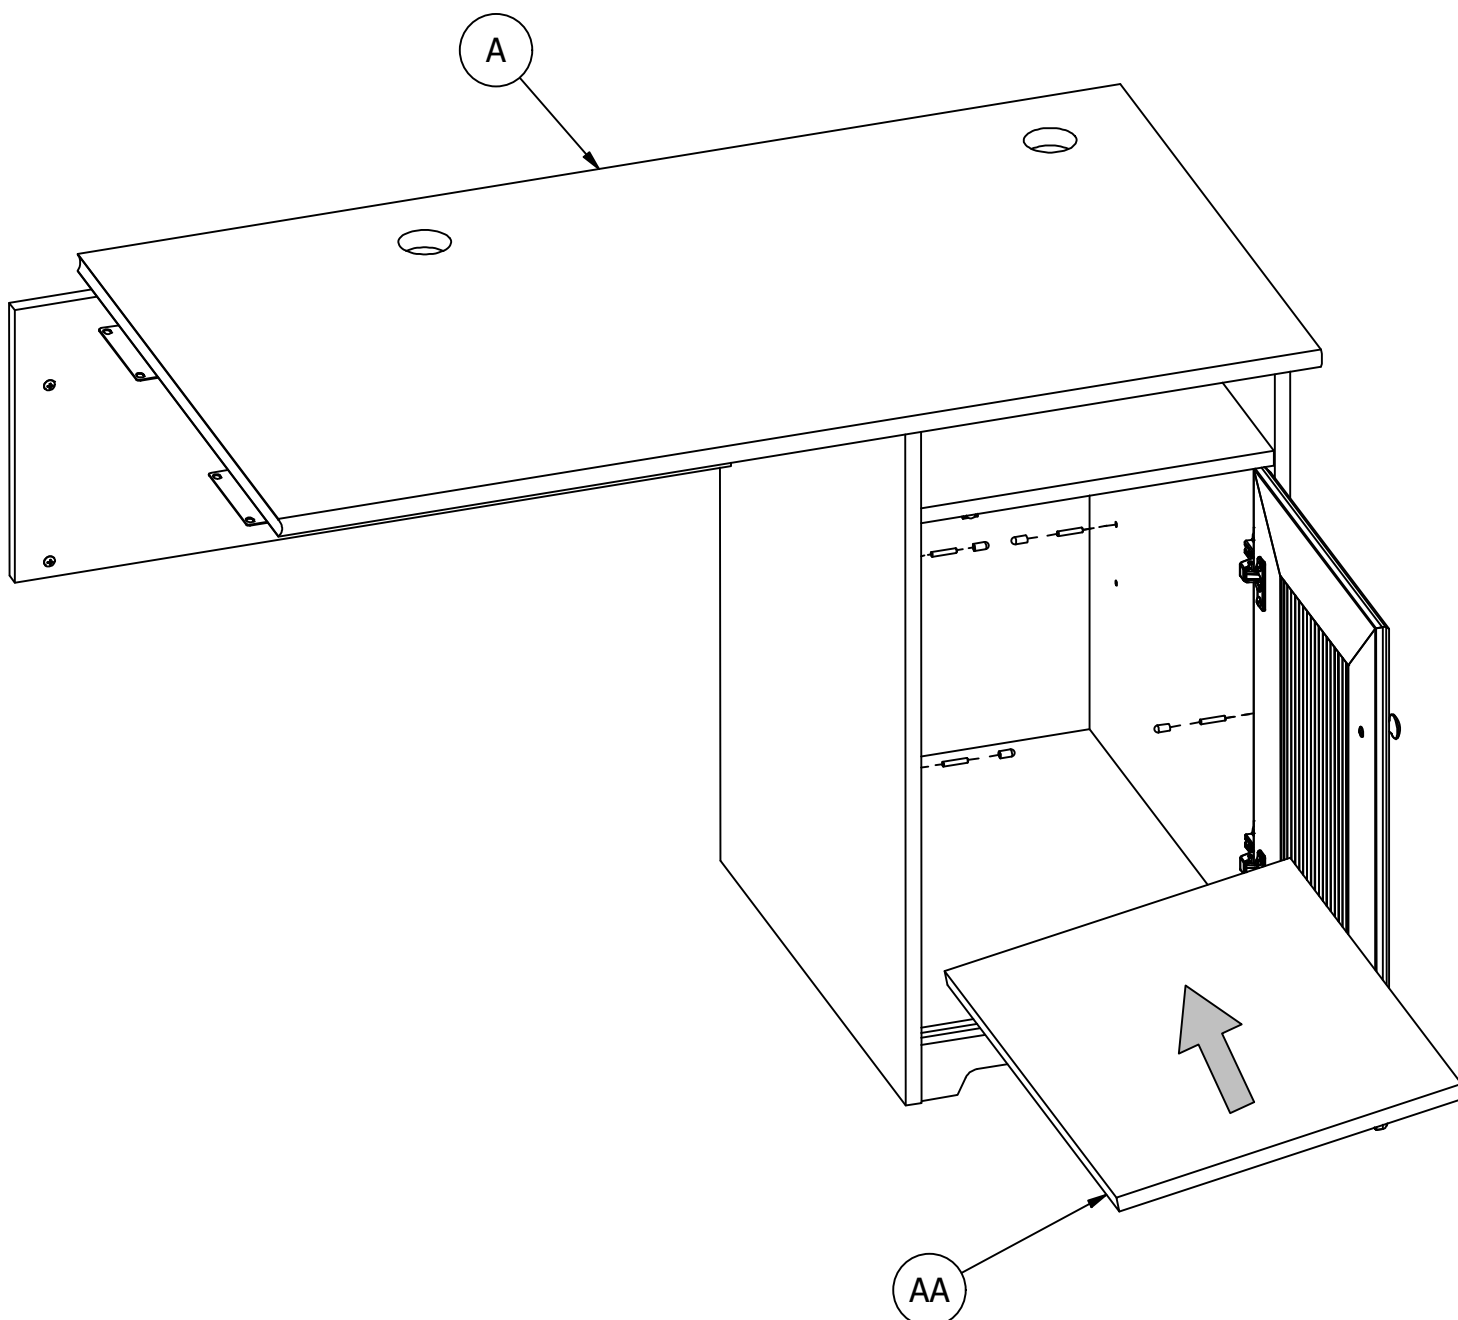 


Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.

Scan QR Code to
Watch Video on:




How to Clean
the Surface

 Gently clean surfaces with a damp sponge eraser.

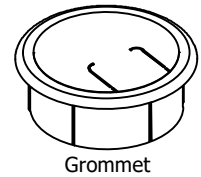

[2]

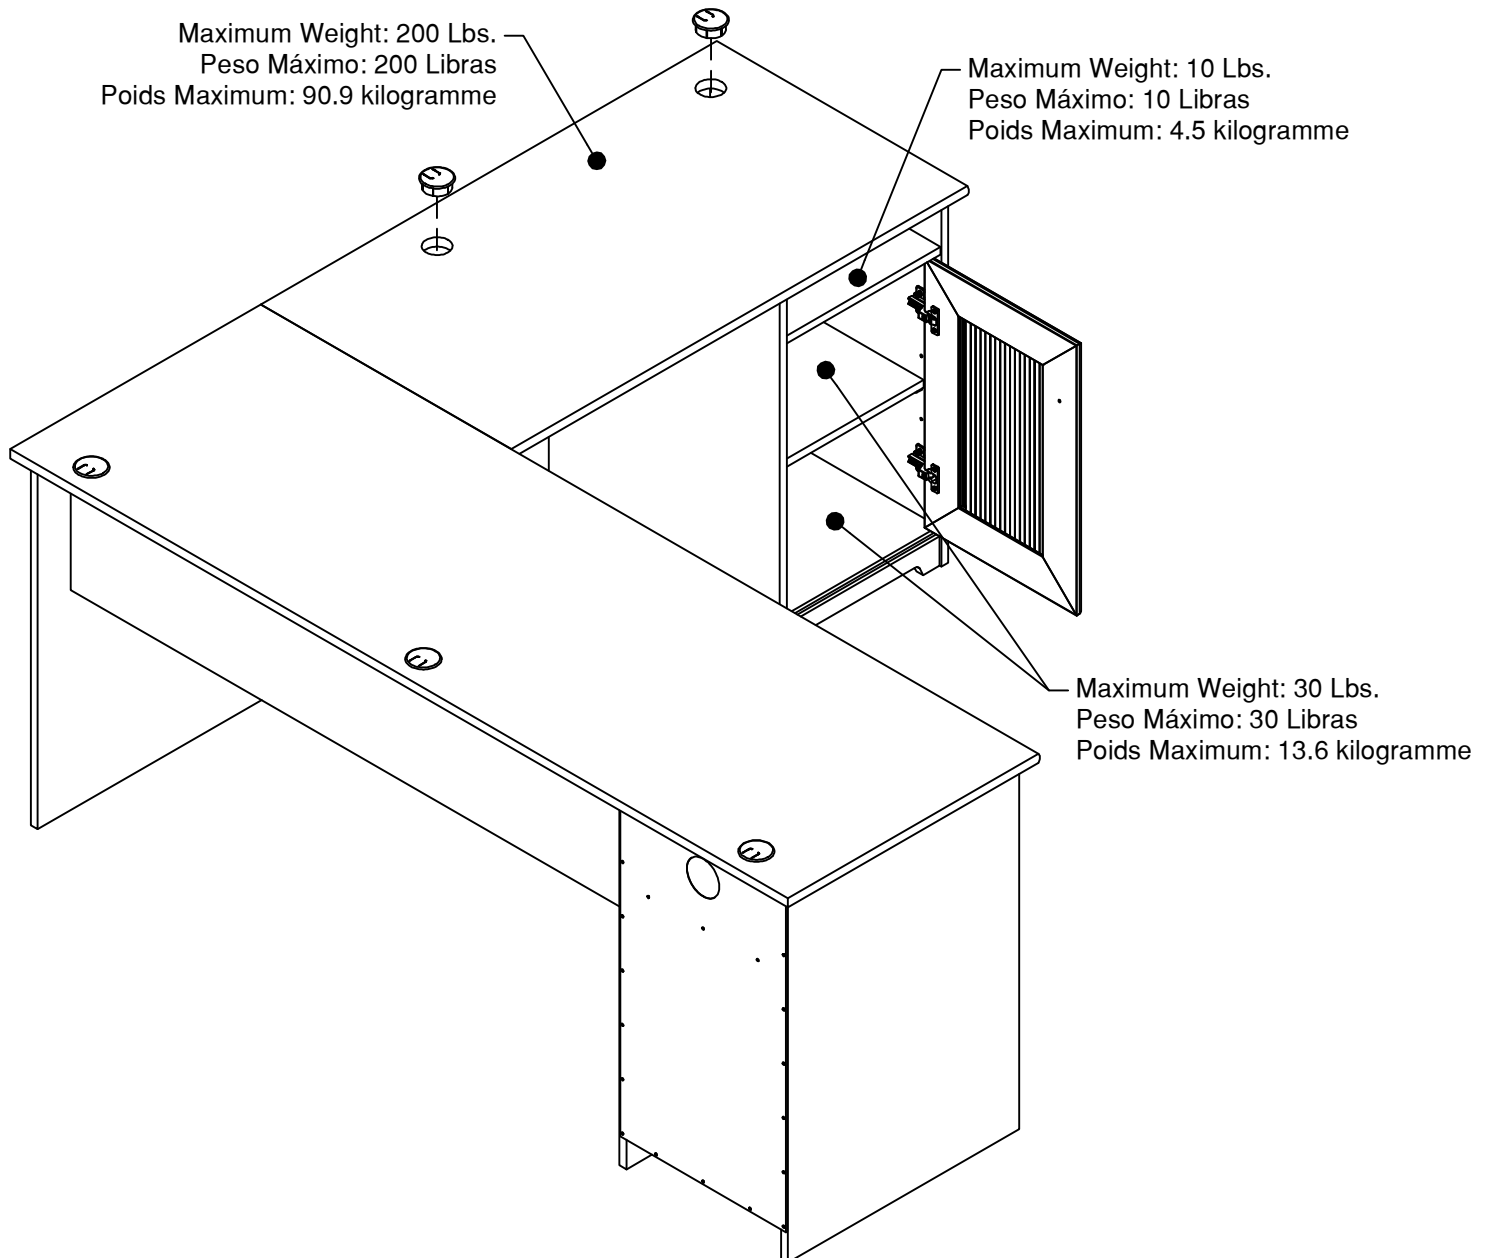 


Congratulations! You are all done. If
you have any questions or concerns,
please call.

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.


PARTS LIST

A210338C


WC31246			
LABEL	PART NUMBER	QTY	DESCRIPTION
A	W210339	1	Top Shelf
B	W210340	1	Modesty Panel
C	W210341	1	Left Side Panel
D	W210342	1	Right Side Panel
K	W210344	1	Bottom Shelf
L	W210343	1	Fixed Shelf
O	W196902	1	Kick Rail
P	S222174	1	Door Assembly
Y	W214297	1	Back Panel
AA	W213041	1	Adjustable Shelf

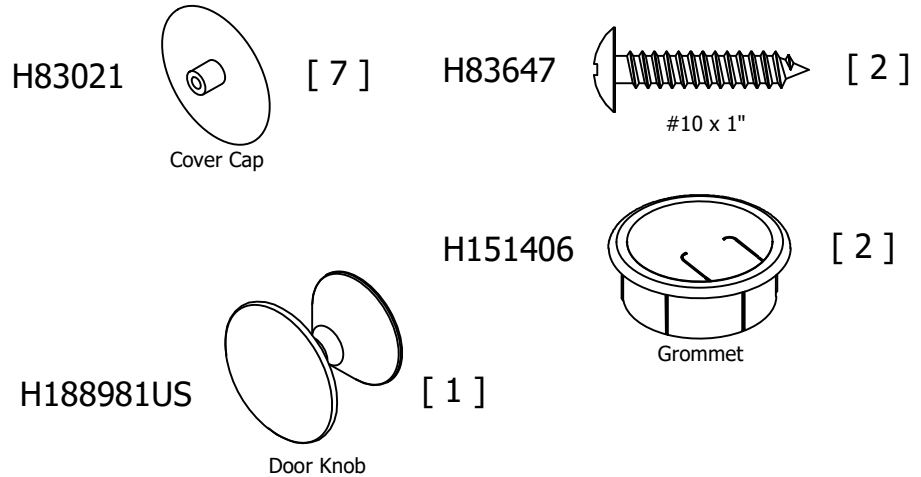 

WC31346			
LABEL	PART NUMBER	QTY	DESCRIPTION
A	W210380	1	Top Shelf
B	W210381	1	Modesty Panel
C	W210382	1	Left Side Panel
D	W210383	1	Right Side Panel
K	W210384	1	Bottom Shelf
L	W210385	1	Fixed Shelf
O	W210386	1	Kick Rail
P	S222175	1	Door Assembly
Y	W214298	1	Back Panel
AA	W213951	1	Adjustable Shelf

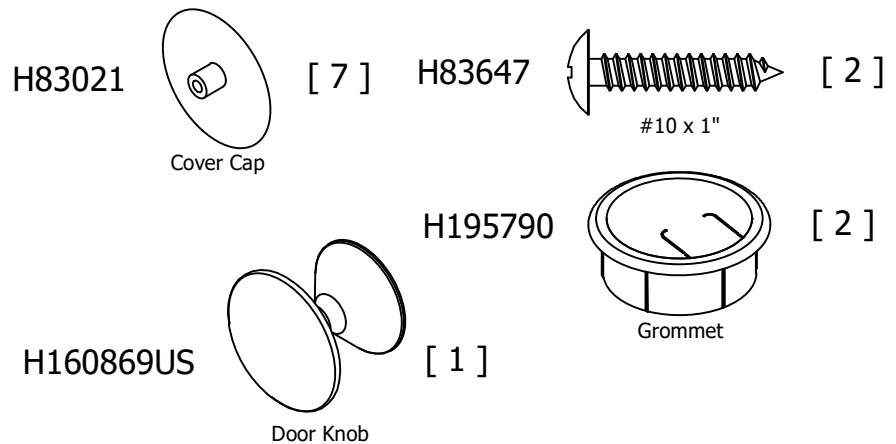 

WC31446			
LABEL	PART NUMBER	QTY	DESCRIPTION
A	W210348	1	Top Shelf
B	W210349	1	Modesty Panel
C	W210350	1	Left Side Panel
D	W210351	1	Right Side Panel
K	W210353	1	Bottom Shelf
L	W210352	1	Fixed Shelf
O	W213067	1	Kick Rail
P	S222176	1	Door Assembly
Y	W214299	1	Back Panel
AA	W213042	1	Adjustable Shelf

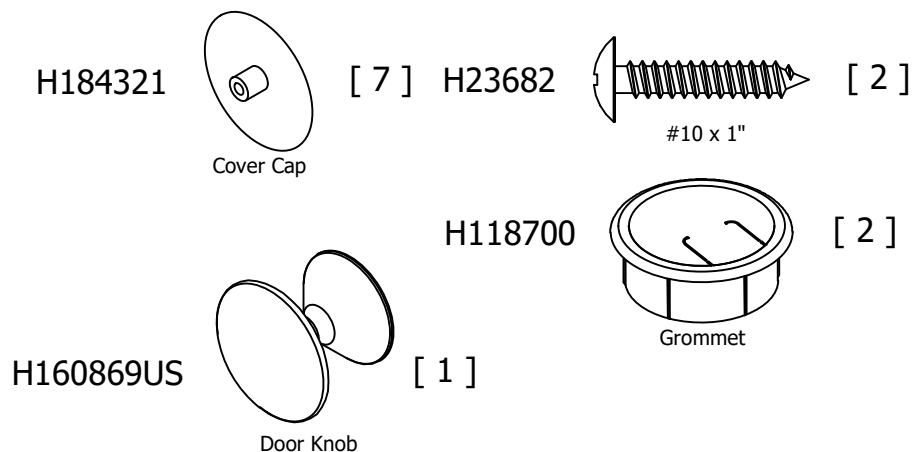 


Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.


PARTS LIST

A210338C

WC31846			
LABEL	PART NUMBER	QTY	DESCRIPTION
A	W210364	1	Top Shelf
B	W210365	1	Modesty Panel
C	W210366	1	Left Side Panel
D	W210367	1	Right Side Panel
K	W210369	1	Bottom Shelf
L	W210368	1	Fixed Shelf
O	W210184	1	Kick Rail
P	S222178	1	Door Assembly
Y	W214302	1	Back Panel
AA	W213044	1	Adjustable Shelf

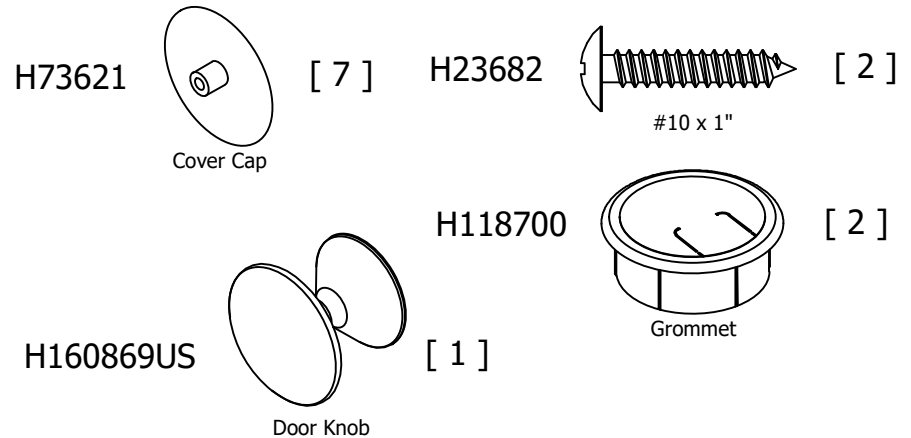 

WC31946			
LABEL	PART NUMBER	QTY	DESCRIPTION
A	W210371	1	Top Shelf
B	W210372	1	Modesty Panel
C	W210373	1	Left Side Panel
D	W210374	1	Right Side Panel
K	W210376	1	Bottom Shelf
L	W210375	1	Fixed Shelf
O	W193717	1	Kick Rail
P	S222179	1	Door Assembly
Y	W214303	1	Back Panel
AA	W213045	1	Adjustable Shelf

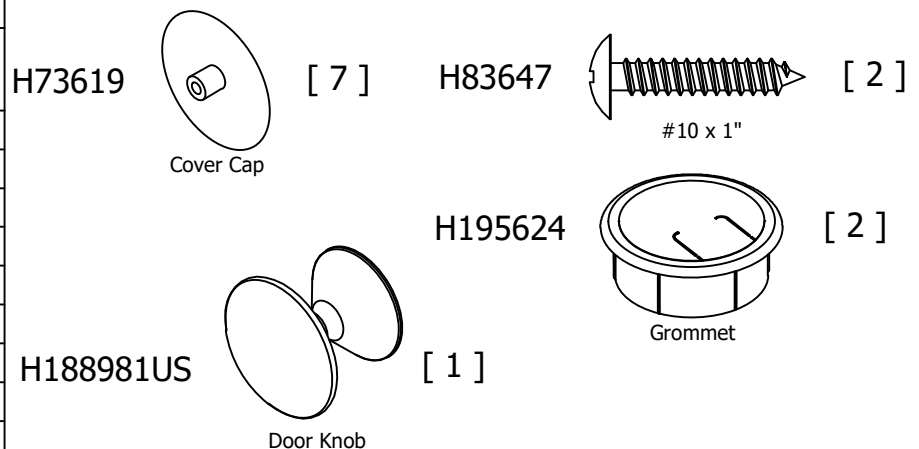 

Have an assembly question or need a replacement part? Just call
1-800-950-4782, we are here to help.