

## 88 5436 101


## **Entertainment Console**


## **IMPORTANT**

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

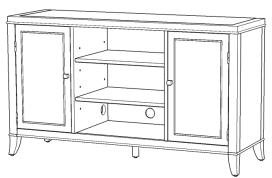

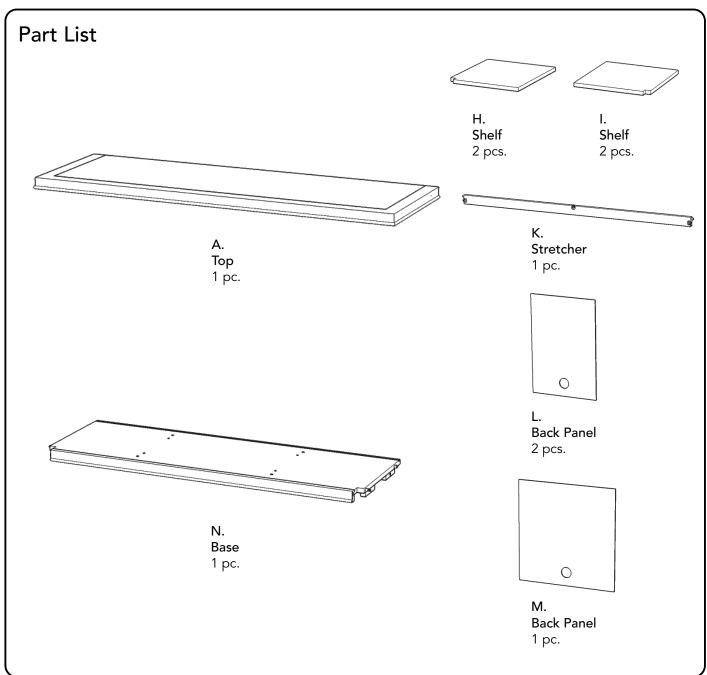

For assembly see instructions in carton 88 5436 102.