

- Use only recommended 3.7V 2.2Ah battery
- Do not leave the spotlight unattended while in unstable support.
- Do not use on a ladder or peaked situations. Do not use on a ladder or enable better control of the spotlight in un-ace at all times. Proper footing and balance
- Do not overreach. Keep proper footing and bal- or malfunction.
- Do not expose spotlight to rain. Water entering a spotlight will increase the risk of electric shock
- Do not operate light while it is being recharged
- Do not use to ensure that it does not completely discharge
- Recharge battery every 3 months even if it is not used to ensure that it does not completely discharge
- Recharge within 48 hours after discharge
- Deep discharge will decrease battery life
- Never completely discharge battery
- Do not leave spotlight charging for more than 24 hours
- Charge battery before use
- Remove battery pack from spotlight before per- forming any routine maintenance or cleaning.
- Do not disassemble the spotlight.
- Do not expose to high heat or fire as it might explode or leak and cause personal injury.
- Do not dispose of worn out battery by inciner- ating, even if it is severely damaged or com- pletely worn out. The battery may explode in fire.
- Do not operate spotlight or charger near flam- mable liquids or in gaseous or explosive atmo- spheres. Internal sparks may ignite fumes.
- Do not store your spotlight in a damp or wet location. Do not store in locations where the tem- perature is less than 50° F or more than 100° F.
- Do not store in outside sheds or in vehicles.
- Keep light dry, clean, and free from oil and grease. Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum- based products, or any strong solvent to clean the spotlight.
- Do not use spotlight in bed, sleeping bags or cover with cloth, paper or any material when in use. This spotlight lens can melt some fabrics and a burn injury could result. To avoid serious personal injury, never allow the spotlight lens to come in contact with anything.
- To avoid damage to the battery or contacts and reduce the risk of electrical shock, do not put spotlight or charger in water or other liquid. Do not place or store spotlight where it can fall or be pulled into a tub or sink.
- Use only the chargers supplied by the manufac- turer to recharge the spotlight.
- Use only recommended 3.7V 2.2Ah battery

**WARNING** Read and understand all instructions before use. Failure to follow instruc- tions can result in personal injury and/or prop- erty damage. Save these instructions for future reference.

**DANGER** Danger indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

**WARNING** Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

**CAUTION** Caution indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury.

**NOTICE** Notice indicates important information, that if not followed, may cause damage to equipment.

## IMPORTANT SAFETY INFORMATION

## SAFETY GUIDELINES / DEFINITIONS



**2,000,000 CANDLEPOWER RECHARGEABLE SPOTLIGHT**

Model No. W2435

# OPERATOR'S MANUAL

Your spotlight has been engineered and manufactured for dependability, ease of operation, and operator safety. When properly cared for, it will give you years of trouble-free performance.



**WARNING**  
Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain this manual for future reference.

**REMINDER:** Keep your dated proof of purchase for warranty purposes! Attach it to this manual or file it for safekeeping.

For assistance with this product call 800-426-1262 between 7 a.m. and 4 p.m. Pacific time.

- Check the receptacle; make sure it is clean and does not operate, check the fuse in the 12-volt receptacle.
- Check the receptacle; make sure it is clean and does not operate, check the fuse in the 12-volt receptacle.
- Before first use, charge the battery using either a 12-volt and 120-volt charger.
- Check to be certain that you have received both a 12-volt and 120-volt charger.
- Household use only.
- Risk of burns - do not touch. Risk of fire - keep away from combustible materials.
- Never leave light unattended with the switch locked in the ON position
- Do not operate light while it is being recharged
- Recharge battery every 3 months even if it is not used to ensure that it does not completely discharge
- Recharge within 48 hours after discharge
- Deep discharge will decrease battery life
- Never completely discharge battery
- Do not leave spotlight charging for more than 24 hours
- Charge battery before use
- Remove battery pack from spotlight before per- forming any routine maintenance or cleaning.
- Do not disassemble the spotlight.
- Do not expose to high heat or fire as it might explode or leak and cause personal injury.
- Do not dispose of worn out battery by inciner- ating, even if it is severely damaged or com- pletely worn out. The battery may explode in fire.
- Do not operate spotlight or charger near flam- mable liquids or in gaseous or explosive atmo- spheres. Internal sparks may ignite fumes.
- Do not store your spotlight in a damp or wet location. Do not store in locations where the tem- perature is less than 50° F or more than 100° F.
- Do not store in outside sheds or in vehicles.
- Keep light dry, clean, and free from oil and grease. Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum- based products, or any strong solvent to clean the spotlight.
- Do not use spotlight in bed, sleeping bags or cover with cloth, paper or any material when in use. This spotlight lens can melt some fabrics and a burn injury could result. To avoid serious personal injury, never allow the spotlight lens to come in contact with anything.
- To avoid damage to the battery or contacts and reduce the risk of electrical shock, do not put spotlight or charger in water or other liquid. Do not place or store spotlight where it can fall or be pulled into a tub or sink.
- Use only the chargers supplied by the manufac- turer to recharge the spotlight.
- Use only recommended 3.7V 2.2Ah battery

## SPOTLIGHT USE AND CARE

- AC and DC chargers included
- AC Charger - Plugs into any 110V outlet; Input 110V AC 60 Hz, output 9V 300mA Charger
- 12V DC charging cord - Plugs into any 12V cigarette lighter
- LED charge indicator light with auto shutoff
- Run time: approx 50-60 minutes
- Charge time: 6-8 hours
- Maximum charge time: 24 hours

## FEATURES

- Bright 2 Million candlepower beam
- High power 4V 25W quartz halogen bulb
- High capacity Lithium Ion rechargeable battery
- High impact ABS housing with protective lens bumper
- Comfort pistol grip with trigger lock and wrist strap
- Locking trigger switch for hands free use

## SPOTLIGHT USE AND CARE

- **WARNING**  
Never use charger to power the light! Never charge battery for more than 24 hours. Do not leave charger plugged in when not in use.
- Battery performance will be greatly improved if unit is used intermittently. Prolonged or continuous use will diminish battery life and continuous use in excess of 10 minutes will put an excessive drain on the battery and may harm unit.
- **Battery disposal:** If this unit is either damaged or, after many years of dependable service, the battery in your rechargeable spotlight will no longer accept a charge, PLEASE exercise good judgment in disposal of this lithium ion battery. DO NOT dispose of battery as household waste. Battery must be disposed of in accordance with local, state and federal regulations

## 90 DAY WARRANTY

**NOTE:** Excluding the bulb and fuse Performance Tool® extends only the following warranties, and only to original retail purchasers. These warranties give specific legal rights. Except where prohibited by local law, the law of the State of Washington governs all warranties and all exclusions and limitations of warranties and remedies. There may be other rights which vary from state to state.

Performance Tool® warrants the product to be free from defects in materials and workmanship under normal use and service. A defective product may be returned for a free replacement within 90 days from the date of purchase, provided that product is returned to place of purchase immediately after discovery of defect. After 90 days and up to one year from date of purchase, Performance Tool® will replace at no charge any parts which our examination shall disclose to be defective and under warranty. These warranties shall be valid only when a sales receipt showing the date of purchase accompanies the defective product or defective part(s) being returned. For part(s) after 90 days, please remit your request, postage prepaid to:

Performance Tool, P.O. Box 88259 Tukwila, WA 98138

These warranties exclude batteries, bulbs, blades, bits, punches, dies, bulbs, fuses, hoses, and other consumables which must be replaced under normal use and service. These warranties shall not apply to any product or part which is used for a purpose for which it is not designed, or which has been repaired or altered in any way so as to affect adversely its performance or reliability, nor shall these warranties apply to any product or part which has been subject to misuse, neglect, accident or wear and tear incident to normal use and service.

Performance Tool® does not authorize any other person to make any warranty or to assume any liability in connection with its products.

Except for warranties of title and the limited express warranties set forth above, Performance Tool® makes no express or implied warranties of any kind with respect to its products. In particular, Performance Tool® makes no implied warranty of merchantability and no implied warranty of fitness for any particular purpose, except that for goods purchased primarily for personal, family or household use and not for commercial or business use, Performance Tool® makes an implied warranty of merchantability (and, if otherwise applicable, an implied warranty of fitness for a particular purpose), but only for the particular qualities or characteristics, and for the duration, expressly warranted above.

The laws on limitation of implied warranties may differ from state to state, so the above limitations may not apply in all cases.

Performance Tool® shall not be liable for consequential, incidental or special damages resulting from or in any manner related to any product, or to the design, use, or any inability to use the product. The sole and exclusive remedy for a defective product or part shall be the repair, or replacement thereof as provided above. The laws on limitation of remedies or on consequential, incidental or special damages may vary from state to state, so the above limitations may not apply in all cases.