



A heavy-duty formulation that works on grease, caked-on foods and other cooking soils. For daytime application or overnight cleaning. This formula penetrates, emulsifies and holds the soils so you can wipe the surface clean with water. The thick foam clings to vertical surfaces - no running, no dripping. This product is also excellent for cleaning grills, rotisseries, stove burners, electric frying pans, and other cookware that is resistant to caustic.

Features & Benefits

Cleans Caked Foods, Grease and Other Foods

Works in Minutes or Overnight whatever is most convenient for you!

NSF Registered

Item Number & Unit of Measure

Item Number	HIL0103855
Unit of Measure	18 oz Can

Specifications

Color	Blue
Fragrance	Alkali
Formula Type	Aerosol
РН	13.00 - 14.00
NSF_Certified	Yes

Safety

Directions for Use

This effective cleaner is safe to use on porcelain, glass, ceramics, stainless steel, and cast iron surfaces. Keep spray or drippings away from the pilot lights, electrical connections, switches, receptacles, thermostats, heating elements, light bulbs, and other surfaces which might be affected by caustics. Avoid contact with painted or varnished surfaces, clothing, floor tile, linoleum, plastics, chrome, copper, aluminum, and coppertone surfaces. Not for use on selfcleaning or continuous cleaning ovens. Place newspaper under oven door to protect floor. Wear rubber gloves to avoid skin contact. 1. Use on empty oven, either cold or preheated to 200°F and turned off. TURN OFF PILOT LIGHT and/or ELECTRIC SWITCH. 2. Hold can upright and point spray button away from face. SHAKE WELL, then spray inside of oven from a distance of 8 to 12 inches, giving it an even coating. 3. Spray top and bottom of oven first; then spray remaining oven surfaces and allow to stand about 30 minutes. (May be left on overnight with oven door closed.) 4. Wipe oven clean with damp cloth, sponge, or paper towel. Spots that are difficult to remove should be retreated and cleaned with a scouring pad. Rinse with potable water. 5. When clean, re-ignite pilot light, or turn on electric switch, and heat oven to 400°F for 10 minutes before using with food again.