


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: [customerservice@sunnydazedecor.com](mailto:customerservice@sunnydazedecor.com), or via our contact us page at <https://tiny.cc/SunnydazeContact>



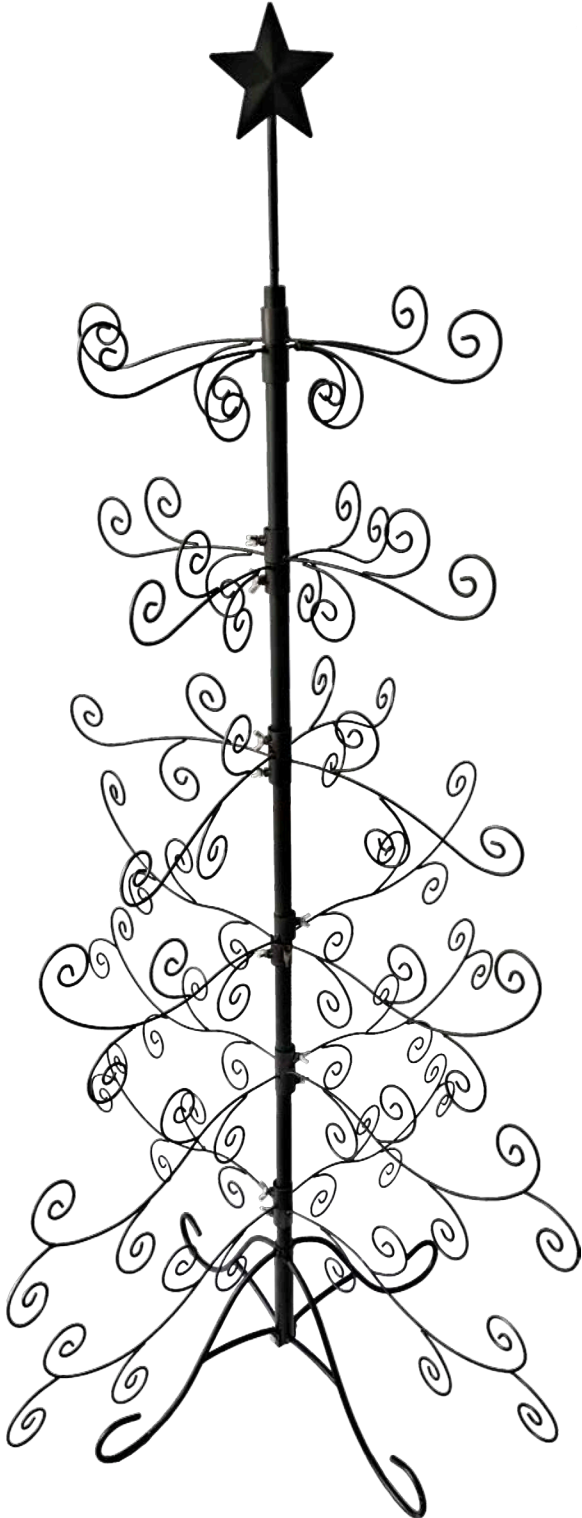


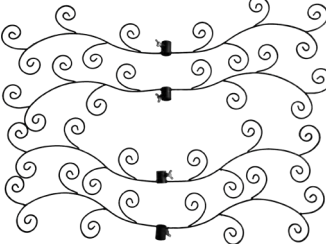
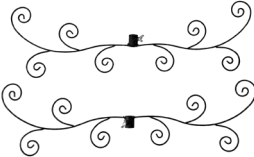
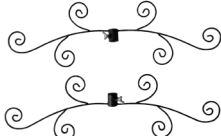
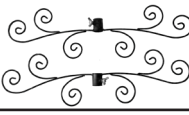

# ORNAMENT TREE

## HMI-665


Read all assembly and care instructions carefully before using this product. Save this manual for future reference.  
**Assemble components on a soft, clean surface to avoid scratching or damaging the finish.**




Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

| No. | PARTS                                                                                |                                                       | QTY.     |
|-----|--------------------------------------------------------------------------------------|-------------------------------------------------------|----------|
| A1  |    | Inner Base Leg**                                      | 1        |
| A2  |    | Base Leg                                              | 1        |
| B1  |    | Center Pole                                           | 1        |
| B2  |    | Center Pole with Star                                 | 1        |
| C   |     | M6x35mm Bolt and M6x10mm Nut<br>**remove from part A1 | 1        |
| D   |   | 32" Branch                                            | 4 PC SET |
| E   |  | 27" Branch                                            | 2 PC SET |
| F   |  | 22" Branch                                            | 2 PC SET |
| G   |  | 19" Branch                                            | 2 PC SET |
| H   |  | 16" Branch                                            | 2 PC SET |

### RECOMMENDED TOOLS (not included)

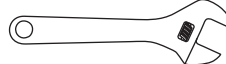

Adjustable Wrench

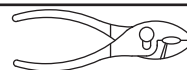

Pliers

# ASSEMBLY

## STEP 1


- A1: 1
- A2: 1
- C: 1



Remove Bolt and Nut (C) from Inner Leg Base (A1). Place Inner Base Leg (A1) through the inside of Base Leg (A2). Align the mounting holes on the bottom and loosely secure using Bolt and Nut (C).

## STEP 2

- B1: 1
- D: 4 PC SET

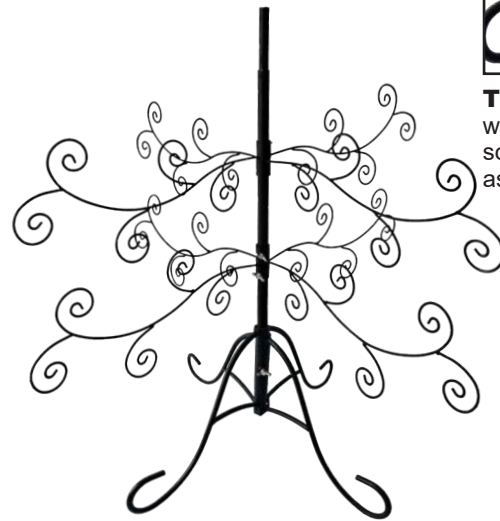


**TIP:** Install branch sets with the inner-most scrolls facing downward, as shown.

Ensuring the tapered end is upward, place Center Pole (B1) into the base. Cross two 32" Branch (D) and loosely affix to the center pole. Repeat to affix the second set of 32" branches.

## STEP 3


- B2: 1
- E: 2 PC SET
- F: 2 PC SET
- G: 2 PC SET
- H: 2 PC SET

**IMPORTANT:** Install branch sets in size order, with the smallest set on top.

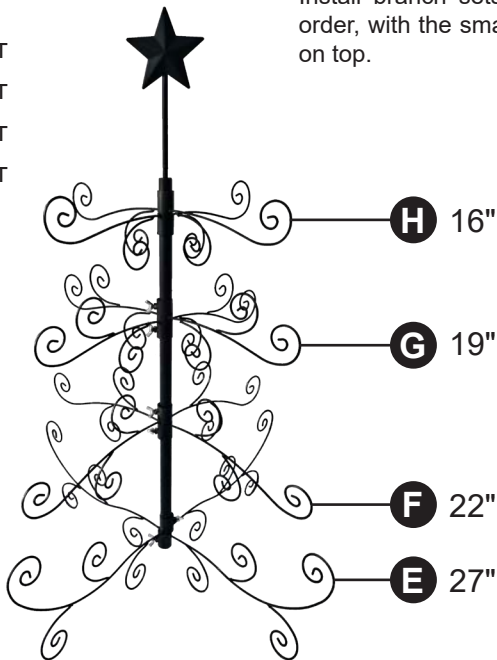

Cross 16" Branch Set (H), slide toward the top of Center Pole with Star (B2) and loosely tighten the wing screws. Repeat (in size order) to affix 19", 22" and 27" Branch Sets (G, F, E) onto the pole.

## STEP 4

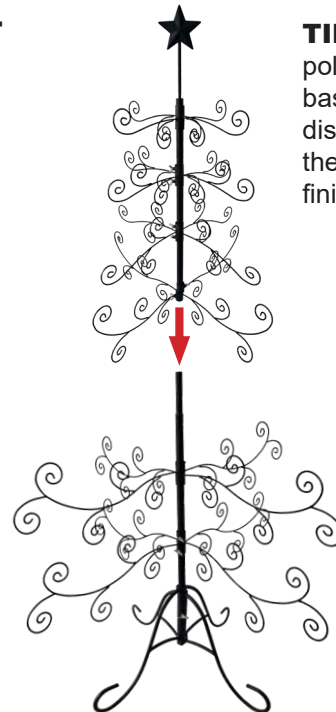

**TIP:** Ensure the center poles are straight, the base legs are evenly distributed, and touching the ground before you finish tightening hardware.

Place the assembled top section onto the bottom. Adjust branch placement and spacing to suit your preference. Then, finish tightening the wing screws. Ensuring the center poles are straight and all feet are touching the ground, finish tightening Bolt and Nut (C).

# Care & Maintenance

Indoor use only. Exposure to outdoor elements will result in erosion of the finish and structure of this unit; water and high moisture may cause the paint to chip or peel. The product warranty does not cover damages caused by exposure to outdoor elements.

Long-term exposure to sunlight may cause the paint finish to mellow in color, crack and peel.

Ensure weight is evenly distributed on the branches. Maximum Weight Capacity per Branch (when evenly distributed):

16", 19", 22" Branch: 1.9 lbs (0.9 kg)

27" Branch: 1.5 lbs (0.7 kg)

32" Branch: 0.8 lbs (0.4 kg)

## LOCATION

Select a flat, level surface to place the decor; avoid high-traffic areas, especially where children and pets play.

## CLEANING

Clean metal decor frequently to prevent dust, dirt and debris from building up.

1. Remove loose dust, dirt, cobwebs, and debris with a clean feather duster or a very soft-bristled brush, like a paintbrush.
2. Use a soft, dry cloth to gently wipe away dirt and debris from larger surfaces. For stuck-on dirt, dampen the cloth slightly and gently wipe soiled surfaces. **Never use cleaners, abrasive materials, or high-pressure sprayers to clean this item.**

# Troubleshooting

## All legs not sitting flat on the floor?

- Ensure the surface is level; shims (not included) may be necessary on uneven surfaces.
- Loosen the nut and bolt at the base and slightly adjust the alignment of the legs.
- The nut and bolt may be too tight; try leaving a 2mm gap between the hardware and base.

## Tree leaning?

- Ensure the base legs are installed straight.
- Ensure weight is distributed evenly. For example, the tree could be leaning if branches are not distributed evenly and/or if ornament weight is not evenly distributed.

## Wing screws difficult to tighten?

- A wrench or pliers may be required to tighten some wing screws. Tools not included.

## SAFETY STATEMENTS & WARNINGS

- Recommended for indoor use only.
- Do not hang heavy objects from the hooks. Do not exceed the weight capacity as noted above.
- Ensure weight is evenly distributed to prevent the tree from tipping over.
- This is not a toy. Always supervise children and pets.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

## WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.