 


AVINGTON / MIA / HAYES

LAUNDRY HAMPER

MODEL # AXCBC-001-WH

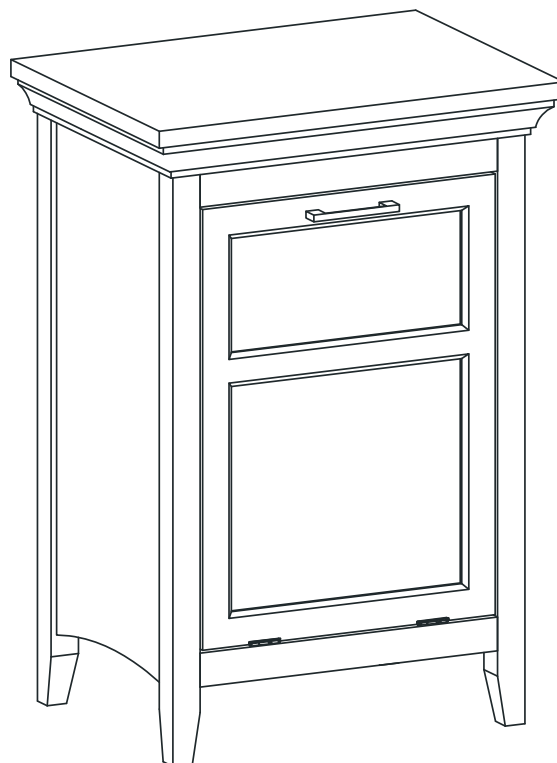



**FOR REPLACEMENT PARTS OR HELP WITH
ASSEMBLY PLEASE CONTACT US AT:**

simpli-home.com/customer-support

**PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR INSTRUCTION BOOKLET**

**TO RETURN THE PRODUCT:
PLEASE CONTACT THE RETAILER
WHERE THE ITEM WAS PURCHASED FROM**



**ENTER
TO WIN**

**Upload an image of our furniture
in your home with a short review
to our facebook page for a chance to**

**Win up to \$3000 of
Simpli Home furniture!!!**

www.facebook.com/simplihomefurnishings



IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish.

 
Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place furniture in direct sunlight.

Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.


PARTS DESCRIPTION

A

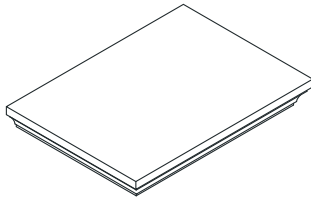


CABINET TOP
QTY 1

 B

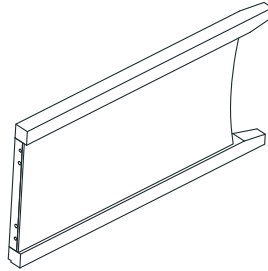


LEFT SIDE PANEL
QTY 1

 C

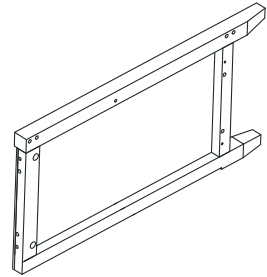


RIGHT SIDE PANEL
QTY 1

 D




FRONT MOLDING
QTY 1

 E

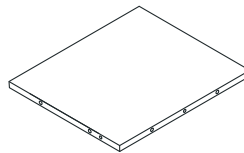


BOTTOM PANEL
QTY 1

 F




CROSS BAR
QTY 1

 G

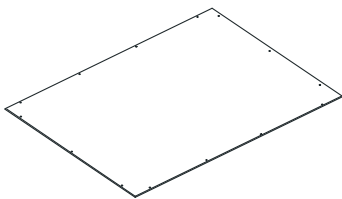


BACK PANEL
QTY 1

 H




INSIDE BACK PANEL
QTY 1

 I

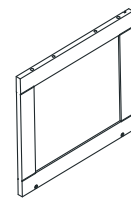


INSIDE LEFT PANEL
QTY 1

 J




INSIDE RIGHT PANEL
QTY 1

 K

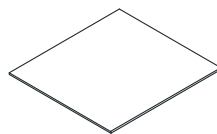

INSIDE BOTTOM PANEL
QTY 1



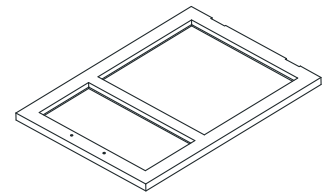 

















L




DOOR
QTY 1


NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

HARDWARE DESCRIPTION


AA  WOOD DOWEL QTY 18	BB  CAM BOLT QTY 13	CC  CAM LOCK QTY 4
DD  SCREW QTY 14	EE  SCREW QTY 6	FF  WASHER QTY 2
GG  SCREW QTY 2	HH  HANDLE QTY 1	II  SCREW QTY 1
JJ  PLASTIC ANCHOR QTY 1	KK  SCREW QTY 8	LL  METAL HINGE QTY 2
MM  DOOR HINGE QTY 1	NN  BRACKET QTY 2	OO  SCREW QTY 1
PP  CABLE QTY 1	QQ  WOOD DOWEL QTY 8	RR  SCREW QTY 4
SS  CAM LOCK QTY 9	TT  DOOR HINGE QTY 1	

 

 
Required -
Flathead screwdriver
Phillips screwdriver
Rubber mallet
Not Included

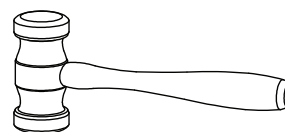

 NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

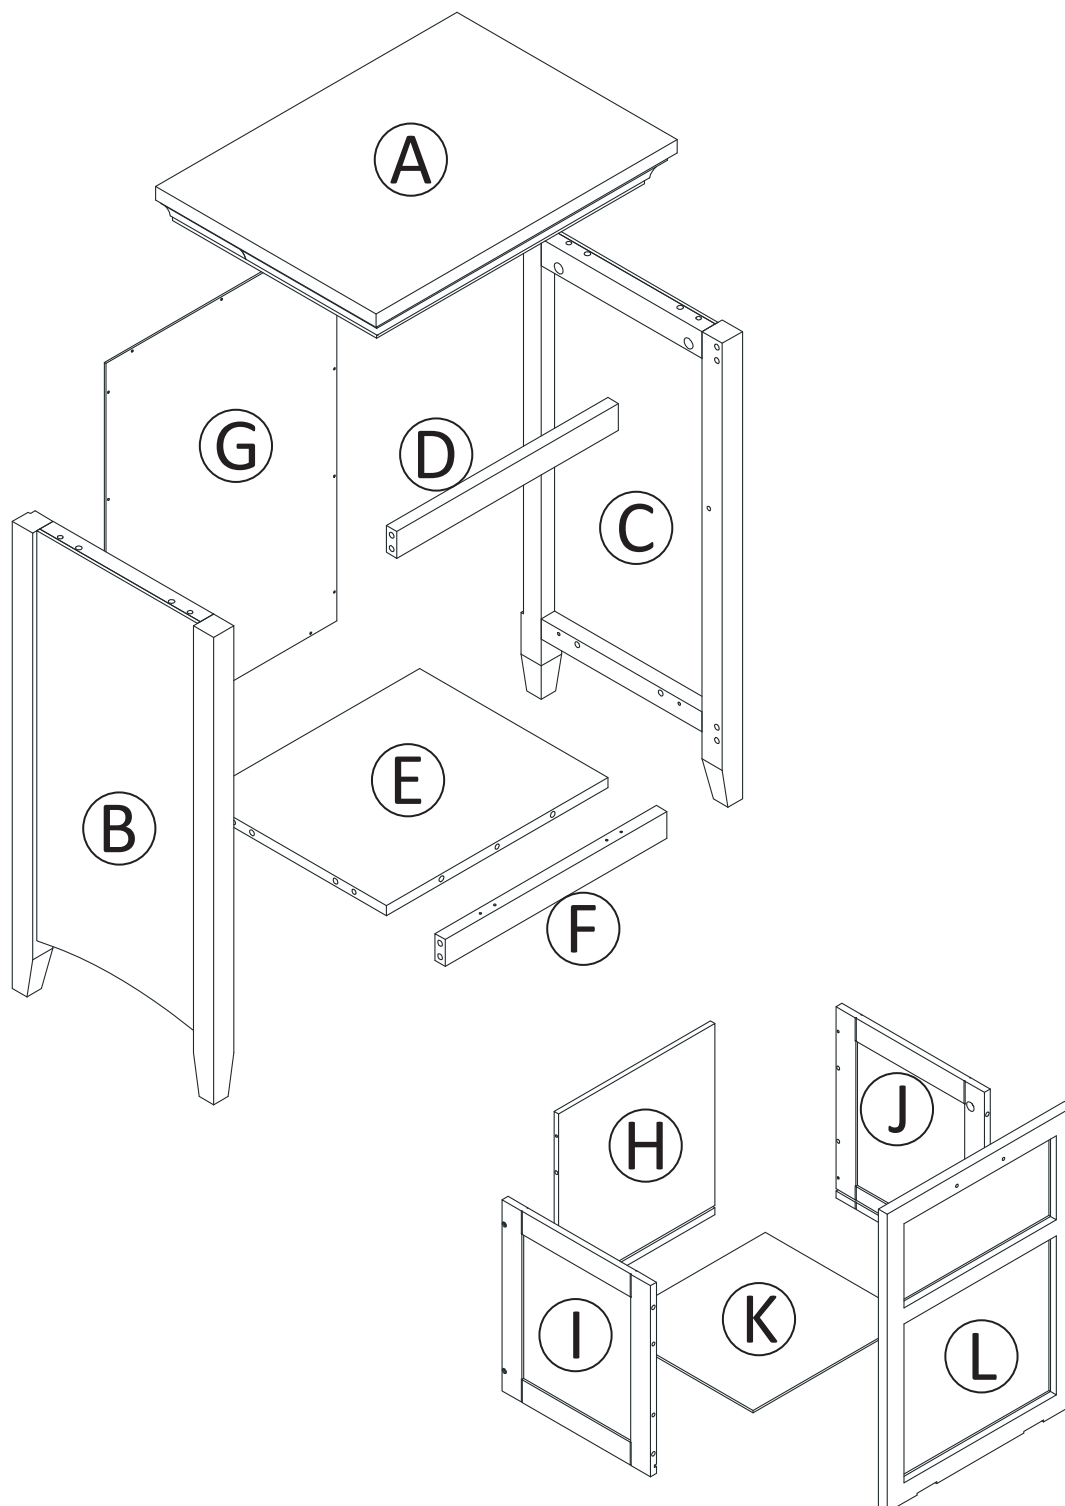

 
STEP 1

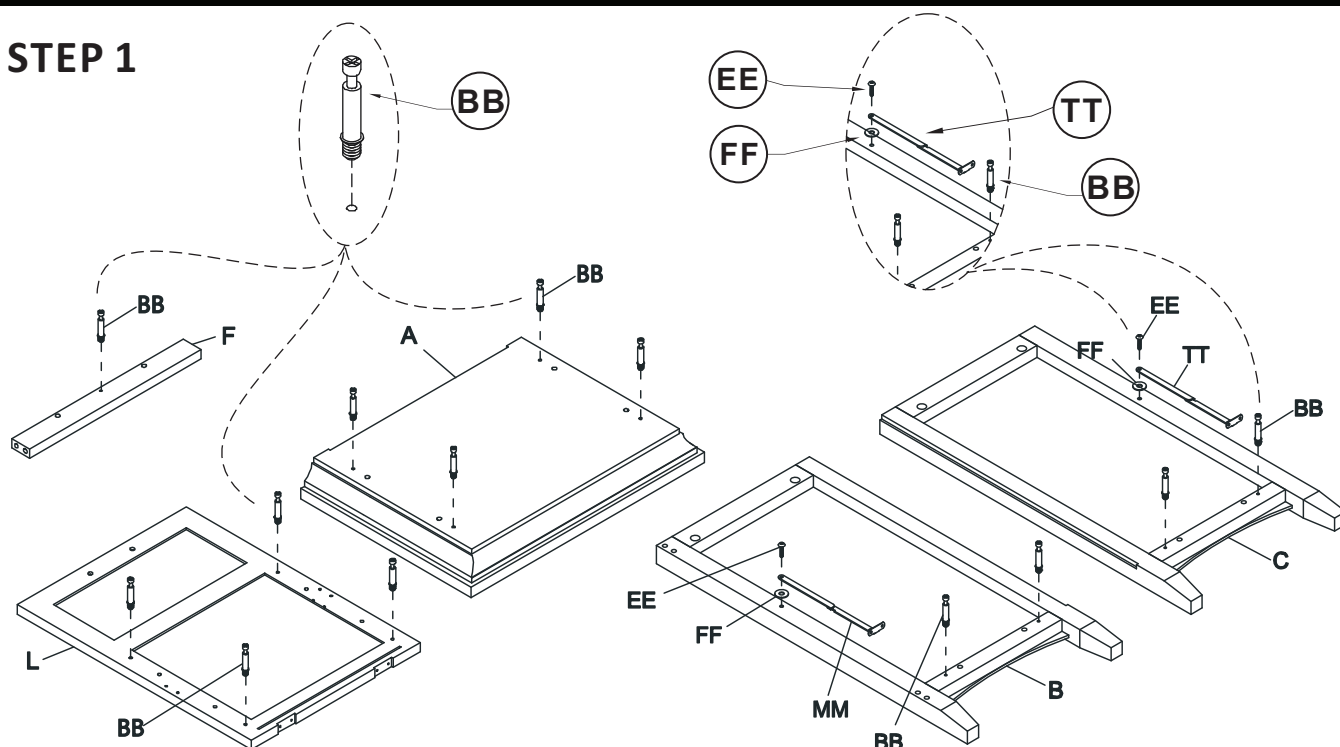

Assembling Cabinet Top, Side Panel, Cross Bar and Door

1. Lay down the left side panel (B), right side panel (C), cabinet top (A), cross bar (F) and door (L).
2. Screw 13 cam bolts (BB) into the pre-drilled holes accordingly on all panels by using a Phillips screwdriver.
3. Attach door hinges (MM) and (TT) to the side panels (B) and (C). Insert two washers (FF) and two screws (EE) through the holes on the door hinges and tighten using a Phillips screwdriver.

 
STEP 2

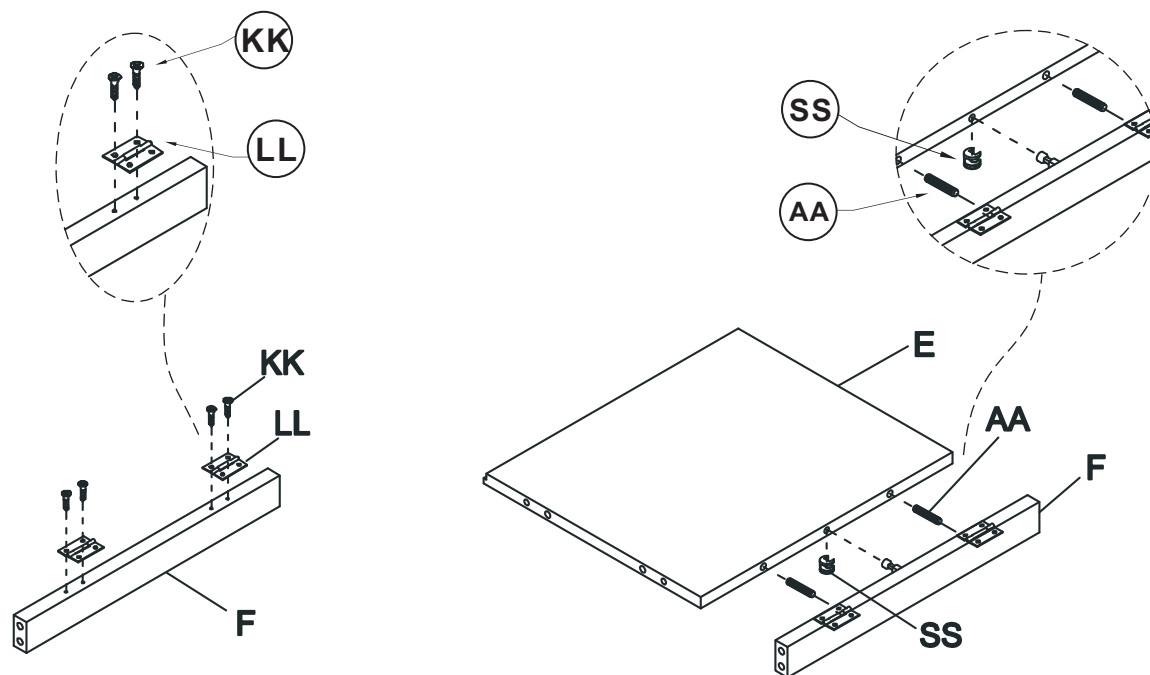

Assembling Front Molding and Bottom Panel

1. Lay down the cross bar (F) and attach two metal hinges (LL) to the cross bar (F) by inserting four screws (KK) through the holes using a Phillips screwdriver.
2. Attach the cross bar (F) to the bottom panel (E) by inserting two wood dowels (AA) and one cam lock (SS) to the bottom panel (E). Rotate clockwise to secure the cam lock (SS) is in place using a Phillips screwdriver.

 
STEP 3

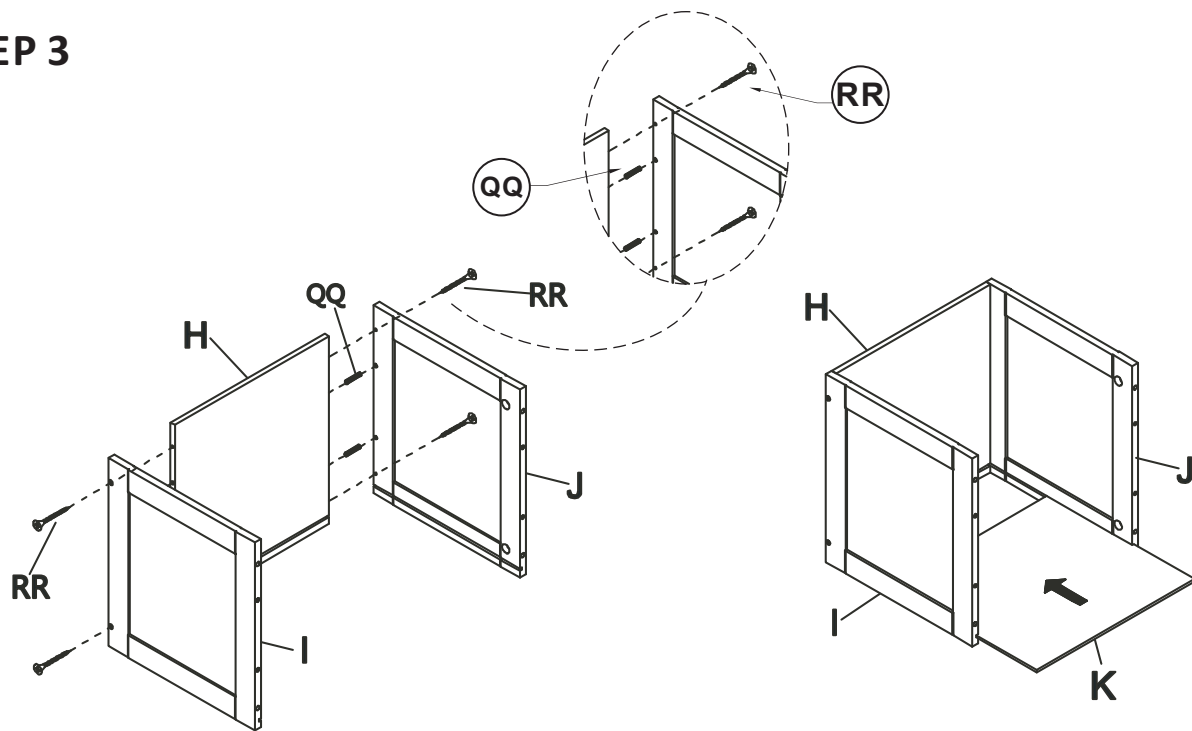

Assembling Inside Side Panel, Inside Back Panel and Inside Bottom Panel

1. Attach the inside side panels (I) and (J) to the inside back panel (H) by inserting four wood dowels (QQ) and inserting four screws (RR) using a Phillips screwdriver.
2. Insert the inside bottom panel (K) into the bottom of this assembly.

 
STEP 4

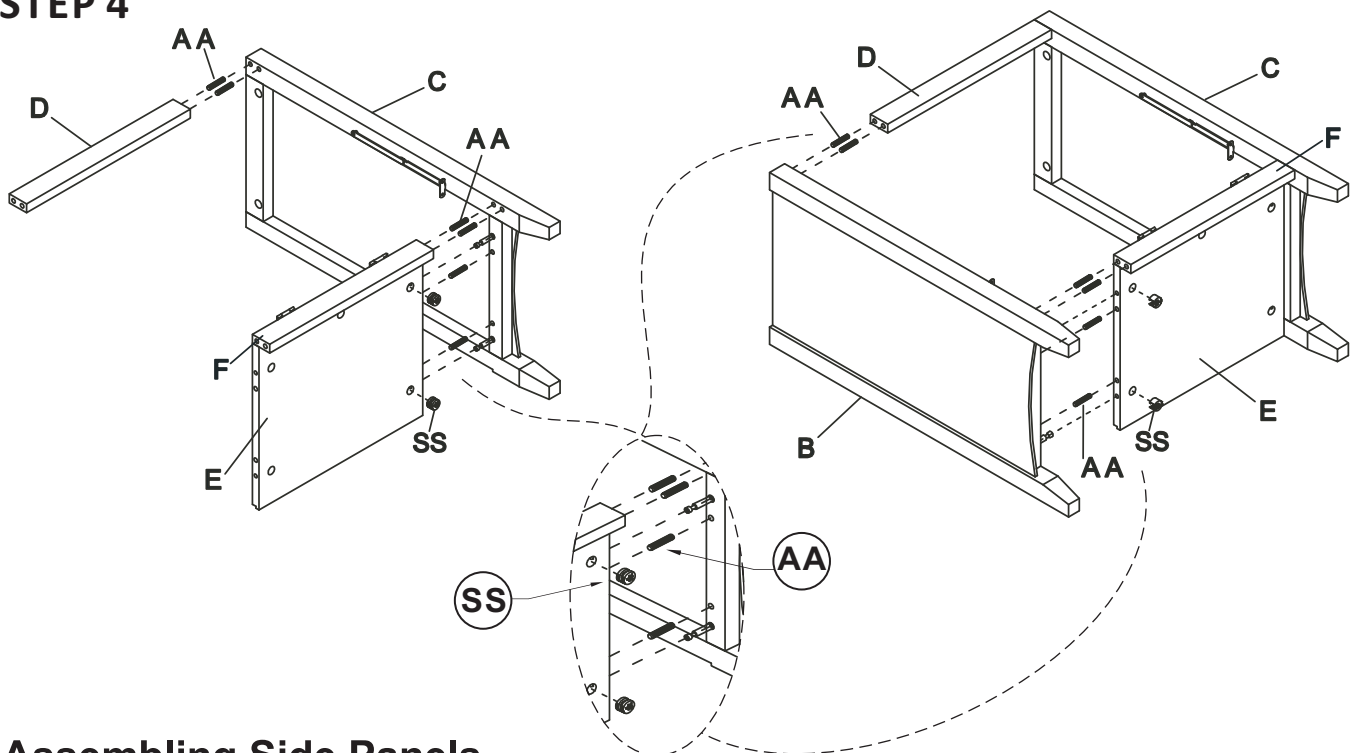

Assembling Side Panels

1. Attach the front molding (D) and bottom panel (E) to the right side panel (C) by inserting six wood dowels (AA) and two cam locks (SS) into the bottom panel (E). Rotate clockwise to secure cam locks (SS) in place using a Phillips screwdriver.
2. Attach the front molding (D) and bottom panel (E) to the left side panel (B) by inserting six wood dowels (AA) and two cam locks (SS) to bottom panel (E). Rotate clockwise to secure cam locks (SS) in place using a Phillips screwdriver.

 
STEP 5

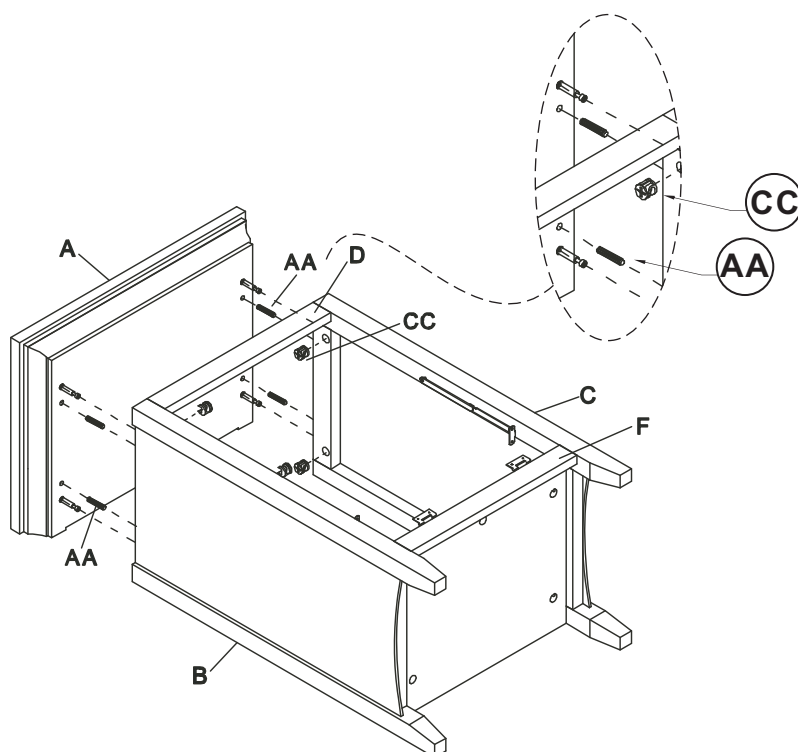

Assembling the Cabinet Top

1. Attach the cabinet top (A) by inserting four wood dowels (AA) into the pre-threaded holes on the side panels (B) and (C) and insert four cam locks (CC) into cam lock holes on the side panels (B) and (C). Rotate clockwise to secure the cam bolts in place using a Phillips screwdriver.

 
STEP 6

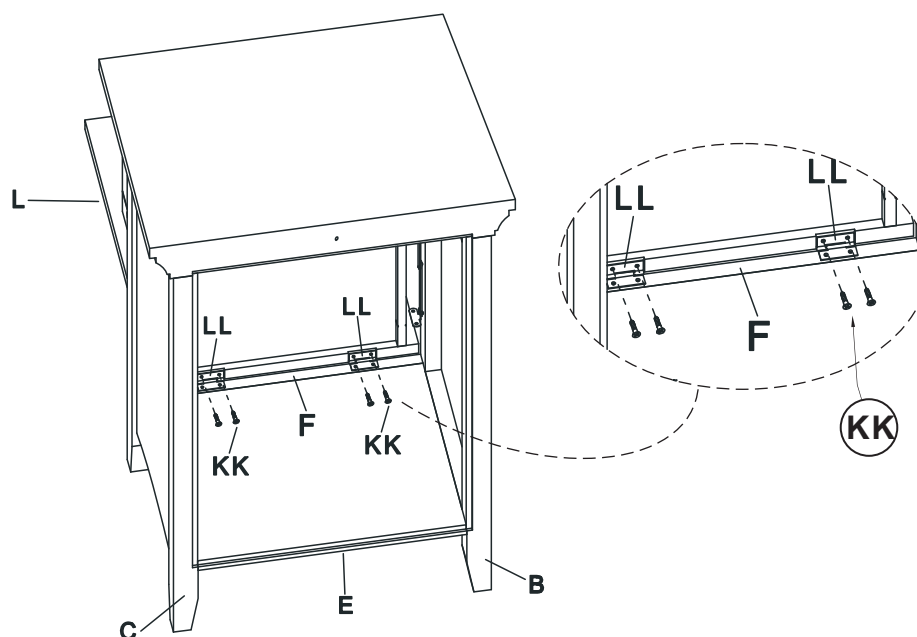

Assembling the Door

1. Attach the door (L) by inserting four screws (KK) through the holes of the hinges into the cross bar (F) using a Phillips screwdriver.

 
STEP 7

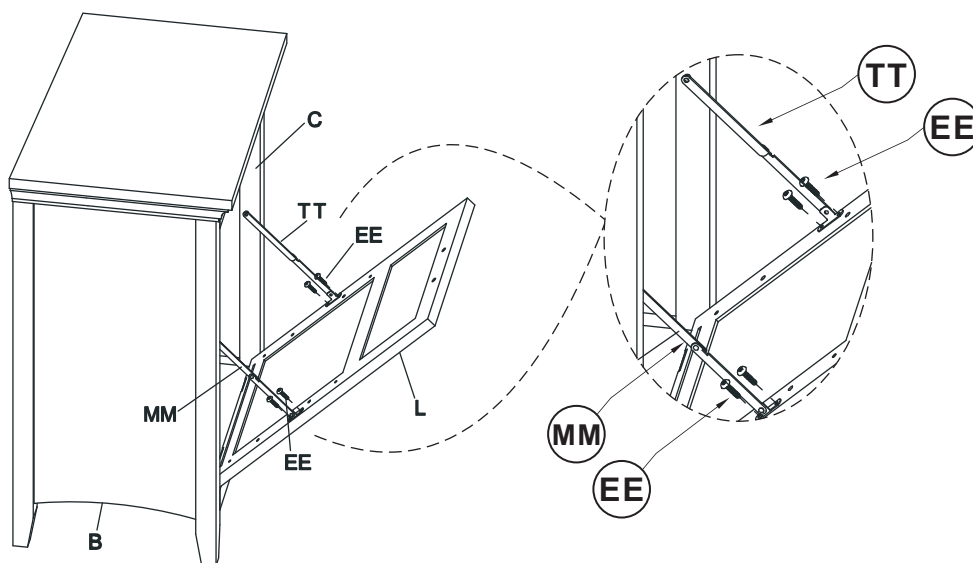

Assembling the Door

1. Connect the door (L) to the side panels (B) and (C) with four screws (EE) through the door hinges (MM) and (TT) using a Phillips screwdriver.

 
STEP 8

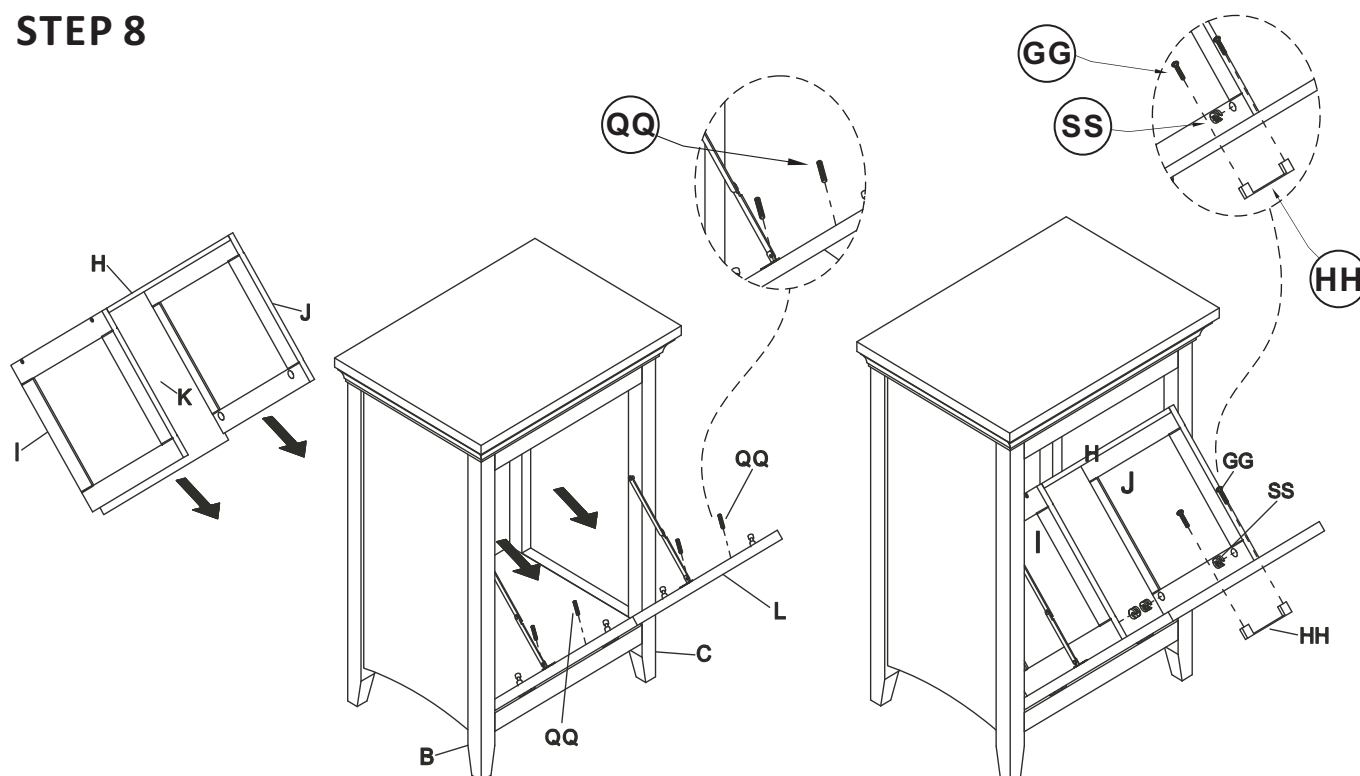

Assembling Inside Cabinet

1. Attach the inside cabinet to the door by inserting four wood dowels (QQ) into the door (L).
2. Insert two cam locks (SS) to the inside left panel (I) and insert two cam locks (SS) to the inside right panel (J). Rotate clockwise to secure cam locks (SS) in place using a Phillips screwdriver.
3. Attach the handle (HH) to the door with two screws (GG) using a Phillips screwdriver.

 
STEP 9

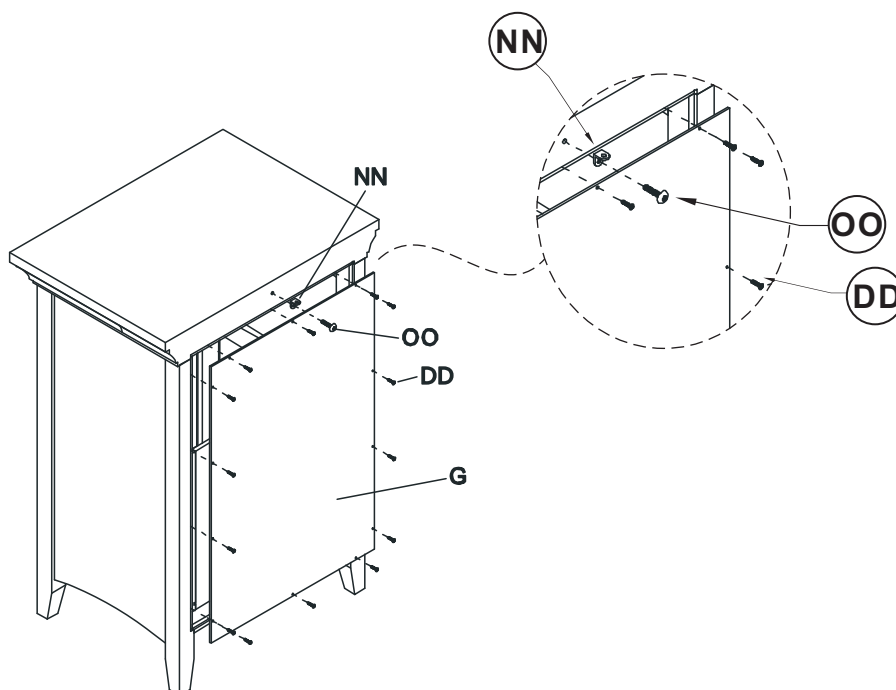

Attaching Back Panel

1. Attach the back panel (G) to the cabinet with 14 screws (DD) using a Phillips screwdriver.
2. Attach the bracket (NN) to the cabinet with one screw (OO) using a Phillips screwdriver.

 STEP 10

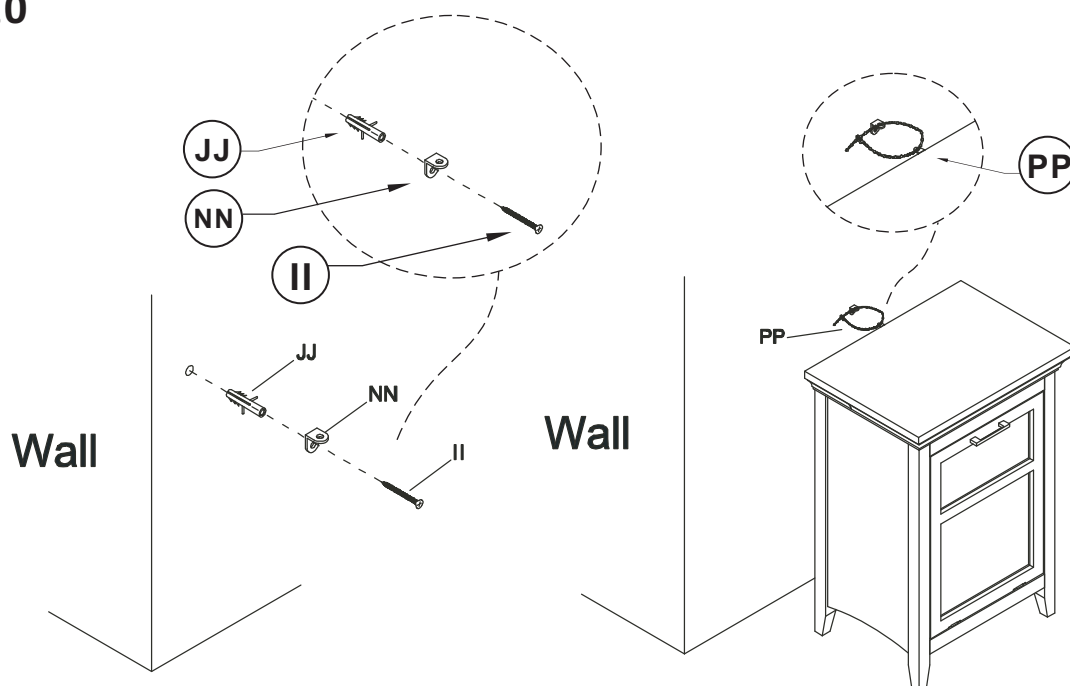

Assembling to the Wall

1. According to the position of the bracket (NN) assembled to the cabinet, drill a hole into the wall.
2. Insert one plastic anchor (JJ) into the hole on the wall and attach another bracket (NN) to the plastic anchor (JJ).
3. Insert one screw (II) through the bracket (NN) and tighten to the plastic anchor (JJ).
4. Place the cabinet against the wall.
5. Insert the cable (PP) through the bracket (NN) on the cabinet then through the bracket (NN) on the wall. Fasten the cable (PP) to affix two brackets (NN) firmly.



WARRANTY

Thank you for purchasing a **Simpli Home – Wyndenhall – Brooklyn + Max** product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at [simpli-home.com/customer-support](https://www.simpli-home.com/customer-support).

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.



Question, problems, missing parts?

Before returning your product
please email Customer Support at
simpli-home.com/customer-support

or call

Customer Support at 1-866-518-0120 ext. 262
Monday to Friday between 9 am – 4 pm EST

For more information visit us on our website
www.simpli-home.com

Like us on facebook
www.facebook.com/simplihomefurnishings