


# SHIMANO

**CURADO S A-RB**

**CU200PGK**

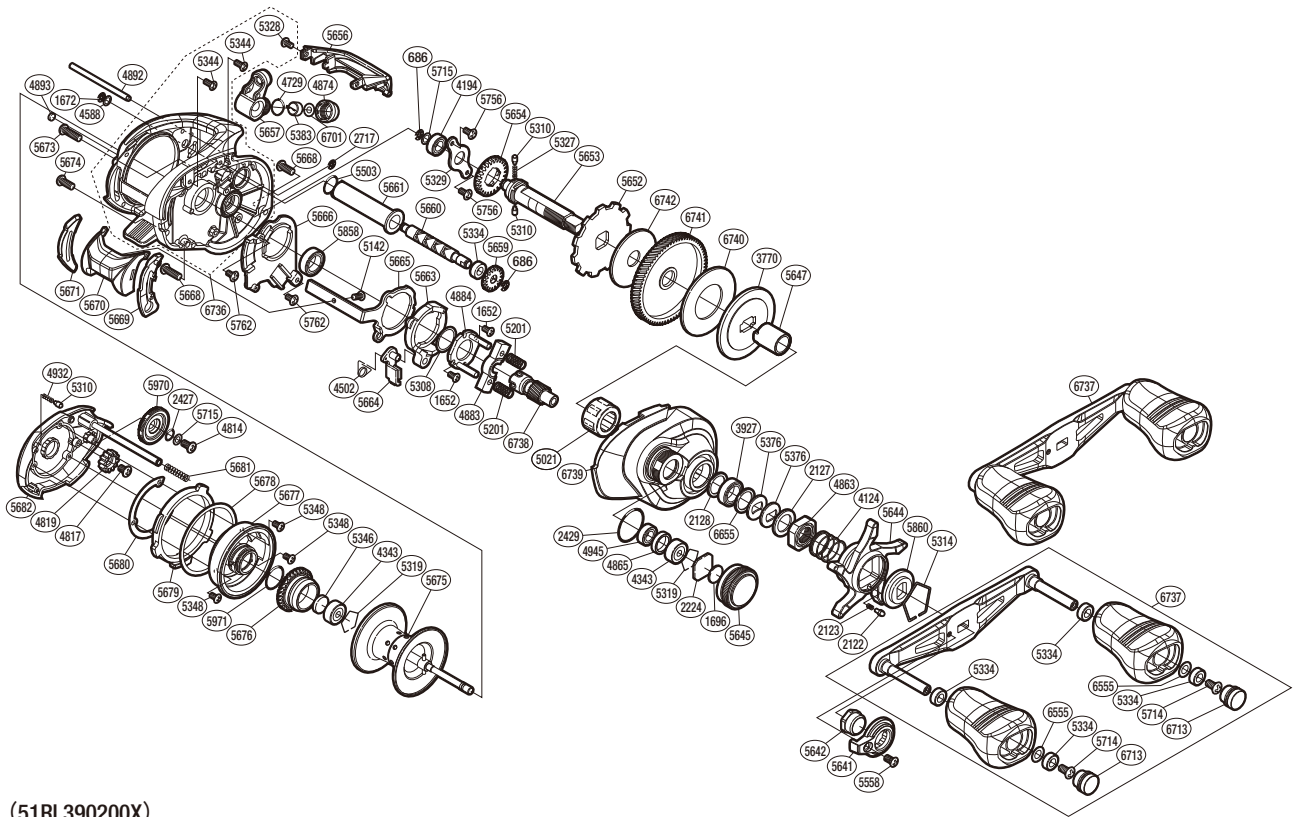

(51RL390200X)

Please note that the number of adjusting washers may not be the same as shown in the exploded views.  
(Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0686	E Lock	BNT5201	Yoke Spring	BNT5669	Clutch Bar Guide B
BNT1652	Screw	BNT5308	Washer	BNT5670	Clutch Button Assembly
BNT1672	E Lock	BNT5310	Idle Gear Pin	BNT5671	Clutch Bar Guide A
BNT1696	Cast Control Spacer (B)	BNT5314	Click Plate Retainer	BNT5673	Screw
BNT2122	Click Pin	BNT5319	Bearing Retainer	BNT5674	Screw
BNT2123	Click Spring	BNT5327	Idle Gear Spring	BNT5675	Spool Assembly
BNT2127	Star Drag Spacer	BNT5328	Screw	BNT5676	Brake Ring Gear Assembly
BNT2128	Washer	BNT5329	Drive Shaft Retainer	BNT5677	Brake Case Assembly
BNT2224	Spool Tension Spacer (A)	BNT5334	Bushing	BNT5678	Washer
BNT2427	O Ring	BNT5344	Screw	BNT5679	Left Side Plate Cam Lever
BNT2429	O Ring	BNT5346	Spacer B	BNT5680	Washer
BNT2717	E Lock	BNT5348	Screw	BNT5681	Spring
BNT3770	Key Washer	BNT5376	Drag Spring Washer	BNT5682	Left Side Plate Assembly
BNT3927	Ball Bearing	BNT5383	Line Guide Pawl	BNT5714	Screw
BNT4124	Star Drag Spring	BNT5503	O Ring	BNT5715	Drive Shaft Washer
BNT4194	Ball Bearing	BNT5558	Screw	BNT5756	Screw
BNT4343	Ball Bearing	BNT5641	Handle Nut Plate	BNT5762	Screw
BNT4502	Clutch Pawl Spring	BNT5642	Handle Nut	BNT5858	Ball Bearing
BNT4588	Washer	BNT5644	Star Drag	BNT5860	Star Drag Click Plate
BNT4729	O Ring	BNT5645	Cast Control Cap	BNT5970	Brake Dial
BNT4814	Screw	BNT5647	Roller Clutch Inner Tube	BNT5971	O Ring
BNT4817	Screw	BNT5652	Anti-reverse Ratchet	BNT6555	Washer
BNT4819	Idle Gear	BNT5653	Drive Shaft	BNT6655	Washer
BNT4863	Star Drag Nut	BNT5654	Idle Gear	BNT6701	Spacer
BNT4865	Bearing Spacer	BNT5656	Level Wind Protector	BNT6713	Handle Knob Seal
BNT4874	Pawl Cap	BNT5657	Line Guide Assembly	BNT6736	Frame Assembly
BNT4883	Yoke	BNT5659	Idle Gear	BNT6737	Handle Assembly
BNT4884	Clutch Cam Retainer	BNT5660	Worm Shaft	BNT6738	Pinion Gear
BNT4892	Stabilizer Bar	BNT5661	Level Wind Guard	BNT6739	Right Side Plate
BNT4893	Washer	BNT5663	Clutch Cam	BNT6740	Drag Washer
BNT4932	Click Spring	BNT5664	Clutch Pawl Assembly	BNT6741	Drive Gear
BNT4945	Ball Bearing	BNT5665	Clutch Plate	BNT6742	Drag Washer
BNT5021	Roller Clutch Bearing	BNT5666	Clutch Guard		
BNT5142	Screw	BNT5668	Screw	BNT4692	B-100 Oil (Accessory)