



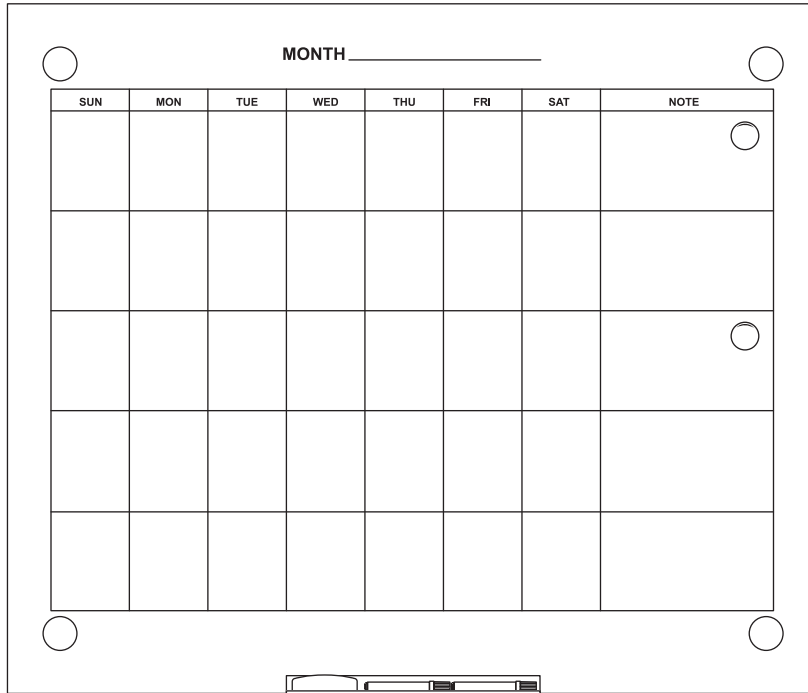

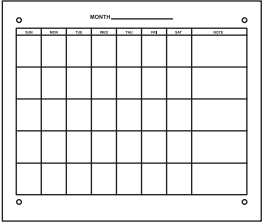






Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: [customerservice@sunnydazedecor.com](mailto:customerservice@sunnydazedecor.com), or via our contact us page at <https://tiny.cc/SunnydazeContact>

# MAGNETIC GLASS DRY ERASE WALL CALENDAR





Review all installation and care information before using this product. Save this manual for future reference.



| PARTS  | QTY. |
|--|------|
|  Glass Board        | 1    |
|  Marker Tray        | 1    |
|  Silicon Pad        | 2    |
|  Marker             | 2    |
|  Eraser             | 1    |
|  Magnet             | 2    |
|  Standoff Screw Set | 4    |
|  M4x40mm Screw      | 4    |
|  Wall Anchor        | 4    |

 Inspect packaging to ensure all parts are accounted for before disposing of packing materials. Save the packing slip.

 2-PERSON INSTALLATION

| TOOLS REQUIRED (not included)  |                                |
|--|--------------------------------|
|  | Phillips Screwdriver           |
|  | Power Drill with 6mm Drill Bit |
|  | Pencil                         |
|  | Level                          |

**! WARNING !**  
**CHOKING HAZARD** — This item contains small parts that can be swallowed. Keep away from children and pets.

**! WARNING:** Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.


# INSTALLATION

## STEP 1

### IMPORTANT:

Before installation, check the suitability of the wall to ensure it can withstand the load.

# x4

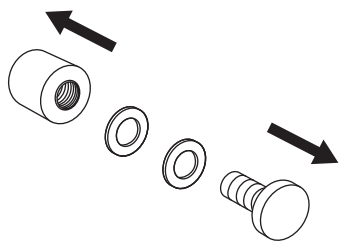


Separate the standoff screw sets.

## STEP 2

### IMPORTANT:

Ensure the board is level before marking.

# x4

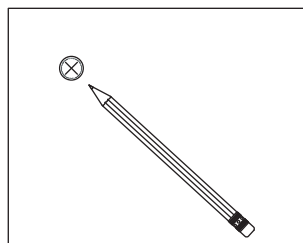


Assistance is recommended for this step.

Hold the glass board against the wall and trace the holes using a pencil. Carefully set board aside.

## STEP 3


# x4

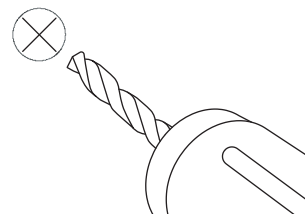

Drill the pilot holes directly in the center of the traced holes.

## STEP 4


# x4

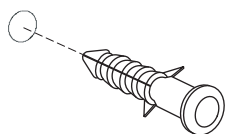

Insert the wall anchors into the pilot holes.

## STEP 5


# x4

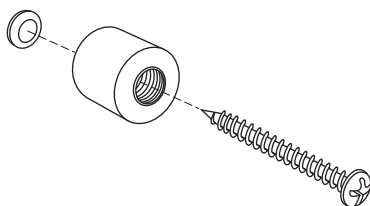

Install the standoff screw barrels over the anchors using M4x40mm screws.

## STEP 6

# x4

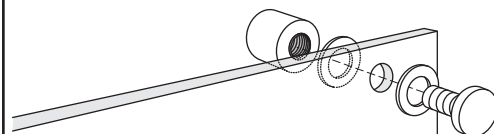

**IMPORTANT:** Do not overtighten the threaded cap. Excessive pressure or uneven pressure could break the glass.




Assistance is required for this step.

Secure the board to the wall using the plastic washers and threaded cap, as shown.

## STEP 7


# x2

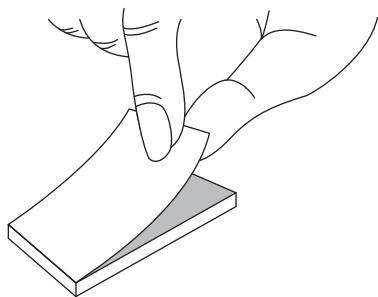

Remove the paper backing from the silicon pads.


## STEP 8

# x2

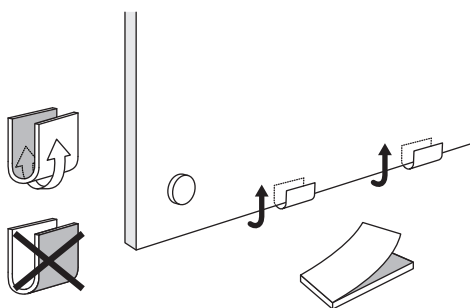

Install the silicon pads onto the bottom of the glass board.

## STEP 9

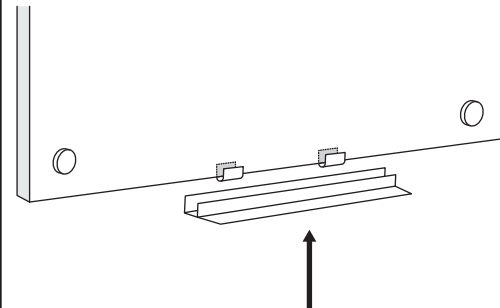

Push the tray onto the silicon pads.

# Care & Maintenance

**SAFE USE:** Always utilize in-wall framing (studs) whenever possible.

Do not lean against or strike the glass board as doing so may cause significant damage. Do not lean on or place heavy objects on the marker tray.

**CARE:** Only use the markers provided on the writing surface. Before using replacement markers, ensure they are suitable for the writing surface. When in doubt, test the marker in a small, inconspicuous spot on the board.

If permanent marker is accidentally used, simply grab a fresh dry erase marker and draw over the permanent marker ink. Allow to dry, then use the provided eraser to remove the fresh markings. Note, this method does not guarantee removal of permanent marker.

**CLEANING:** Do not use abrasive cleaning agents or materials. Avoid multi-surface cleaning products, a dedicated glass cleaner works best.

Use the included eraser to wipe away marker. For basic cleaning, use a soft cloth and suitable glass cleaner. Simply dampen the cloth with the cleaning solution and rub the writing surface. Rinse the cloth with cold water and use it to wipe away any remaining cleaning solution from the writing surface. Allow the surface to thoroughly dry before using.

For stubborn stains, rubbing alcohol, hand sanitizer, vinegar, and glass cleaner are safe to use.

**WARNING:** THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, OR CLEANING PRODUCTS.

## SAFETY STATEMENTS & WARNINGS

- For indoor, residential use only.
- Check the suitability of the wall to ensure it can withstand the weight of the glass board.
- Do not drop the glass board.
- Do not strike or lean on the glass board.
- Do not lean on or overload the marker tray.
- Adults must supervise children at all times when they use the board and markers.
- Periodically check installation fittings to ensure they are tight.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

*If you experience issues or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information ready to expedite response time.*

## WARNING:

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**