

POLY 51" PORCH SWING

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

 
Sign up here:

https://westintrends.com/welcome



OUESTIONS OR COMMENTS?

If you have questions reach out to cs@westintrends.com











PRODUCT REGISTRATION https://westintrends.com/apps/product-registration





ACCESSIBILITY - COMMUNIT V - VALUE - SUSTAINAB

() CARE & MAINTENANCE

Please keep this instruction for your future reference.


- Be careful when assembling, avoid hurting the plating of the surface.
- Clean the chair with lukewarm water, mild detergent & soft cloth.
- Firmly secure all bolts before use, do not use any part of this item as a step ladder.
- Reconfrm that all bolts, screws, and nuts are secure every 90 days..
- Do not use or store this item in the proximity of open flame or glammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Do not overtighten screws (insert all screws before tightening screws).

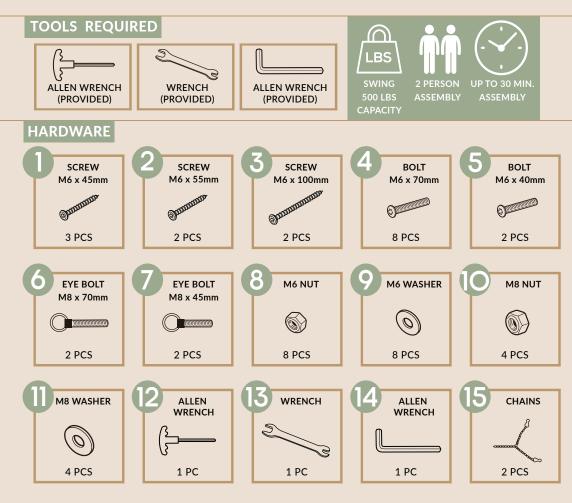

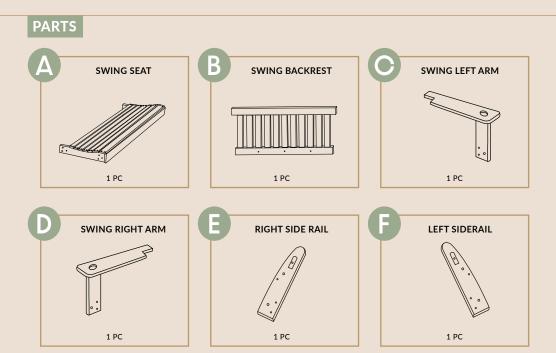

PRODUCT ASSEMBLY - OVERALL VIEW


Look at following overall view of this swing and learn the exact position of each part to be assembled.

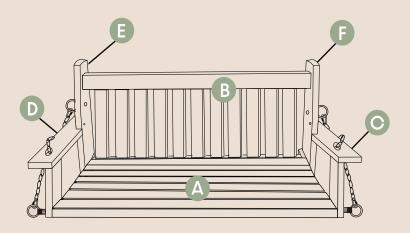

PRODUCT ASSEMBLY




Place Part A Swing Seat on flat surface, attach Part E Right Side Rail to Swing Seat with 2 sets of Hardware #4 Bolt, Hardware #9 (M6) Washer and Hardware #8 Nut (M6).

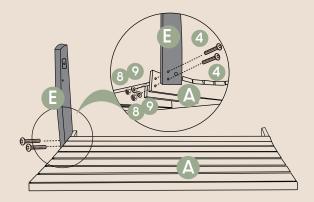



Attach Part F Left Side Rail to Swing Seat with 2 sets of Hardware #4 Bolt, Hardware #9 Washer and Hardware #8 Nut.

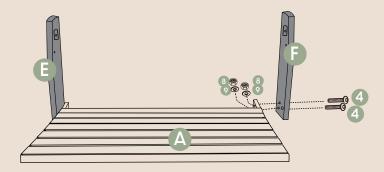


PAGE 3 OF 6



Attach Part D Swing Right Arm to Part A Swing Seat with 2 sets of Hardware #4 Bolt, Hardware #9 Washer and Hardware #8 Nut.


Attach the Arm to Part E Side Rail with 1 pc of Hardware #2 Screw.

Do the same to attach Part C Left Swing Arm to Part A Swing Seat and Part F Side Rail.

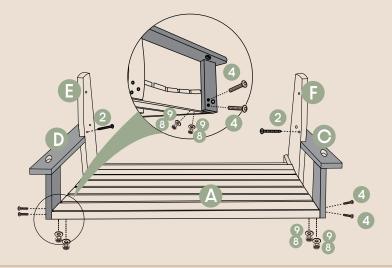




Place 2 pcs of Hardware #6 Eyebolt to combined Part (C+A) and (D+A), attach with 2 sets of Hardware #11 Washer (M8) and Hardware #10 Nut (M8) as below.

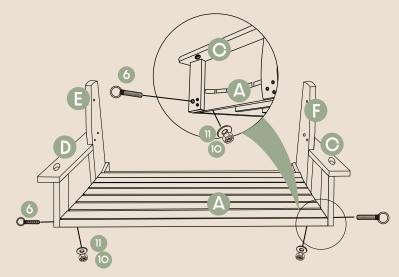




Attach **Part B Swing Backrest** to **Part E&F Side Rails** with 2 pcs of **Hardware #5 Bolt** as below. Attach it to **Part A Swing Seat** with 3 pcs of **Hardware #1 Screw**.

Attach it to the combined Part (A+E) and (A+F) with 2 pcs of Hardware #3 Screw.

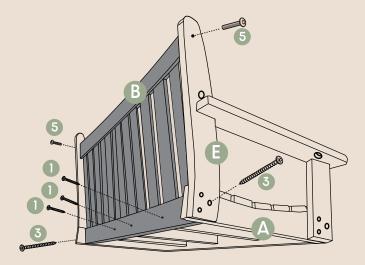



Attach 2 pcs of Hardware #7 Eyebolt to Part E And F Side Rails and tighten with 2 sets of Hardware #11 Washer (M8) and Hardware #10 Nut (M8) as below.

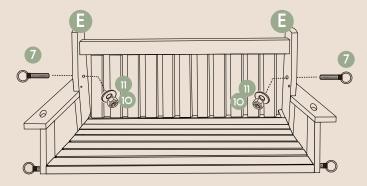


PRODUCT ASSEMBLY




Turn the thread lock to open the carabiner, attach it to the eyebolt on the swing. make **Hardware #15 The Longer Chain** go through the hole in the arm and lock it to the carabiner. lock another end to the eyebolt on the side rail.

Do the same to assemble another chain to the other side.

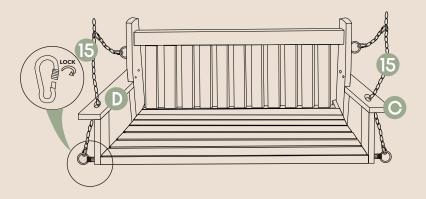



Tighten all the bolts and nuts again to ensure the swing is steady enough to use.

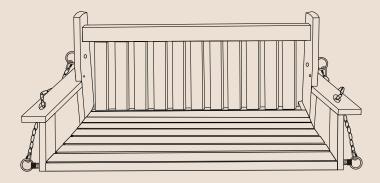

PAGE 6 OF 6

REGISTRATION & REFUND POLICY

https://westintrends.com/apps/product-registration



https://westintrends.com/policies/refund-policy



HAVING TROUBLE

• Not sure how to assemble or missing pieces? Please contact our Customer Service Team for assistance at *cs@westintrends.com*

Have Order #, Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning -<u>DO NOT exceed 1500 PSI</u> - this will remove any debris and dirt.