


**IMPORTANT**

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.


Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.


**Part List**

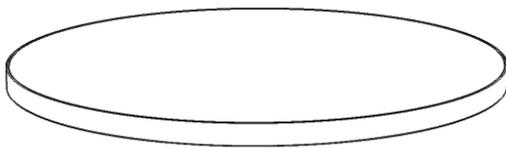

 A.  
Top  
1 pc.




B.  
Leg  
4 pcs.

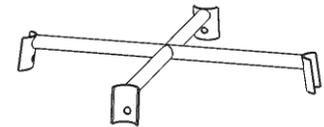

C.  
Stretcher  
1 pc.

**Hardware List**

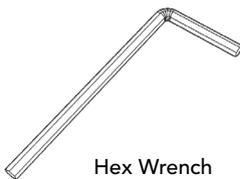

Hex Wrench  
1 pc.



Small Hex Wrench  
1 pc.



M8x20  
Head Cap Bolt  
16 pcs. (+1 extra)



Flat Washer  
16 pcs. (+1 extra)

**Care Instructions**

The tile top contains natural stone materials with naturally occurring fissures and cavities. A sealer has been applied to reduce the absorption of liquids. Even with sealer applied, liquids can still absorb into the surface causing permanent stains and can damage the top by cracking the tiles if the absorbed liquid freezes.

- Never allow liquids to remain on the top.
- Apply a stone sealer to the top annually.
- Store inside in freezing weather.

Tool(s) required for assembly: Level

# Assembly Instructions 2/3

## IMPORTANT

- Use a soft cloth between these parts and the floor.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

## STEP 1

Attach Legs (B) to Stretcher (C) with Flat Washers and Head Cap Bolts, tightening bolts only halfway. (See Figure 1)

Note: Arrow label indicates top of Stretcher (C).



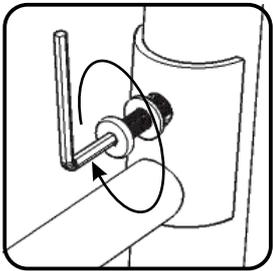


Figure 1

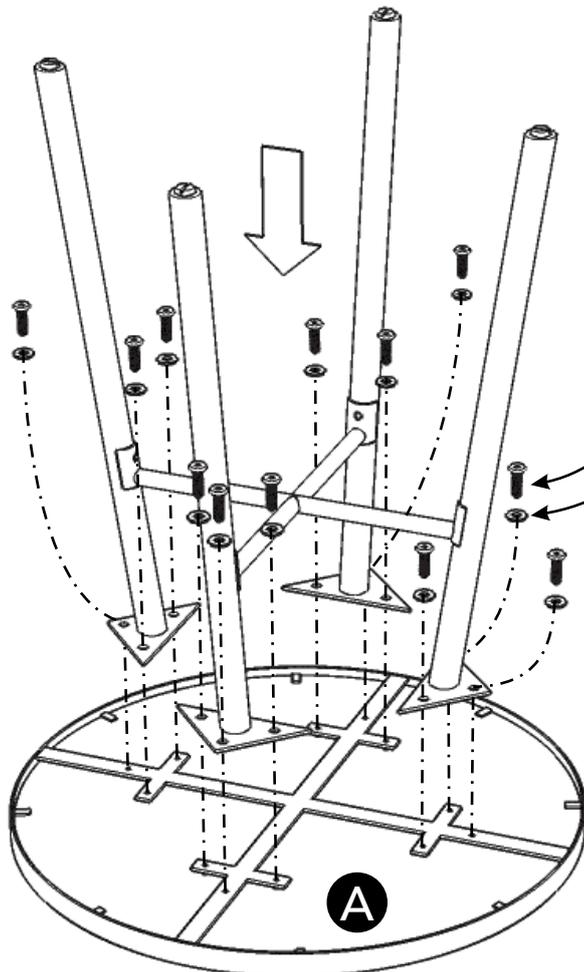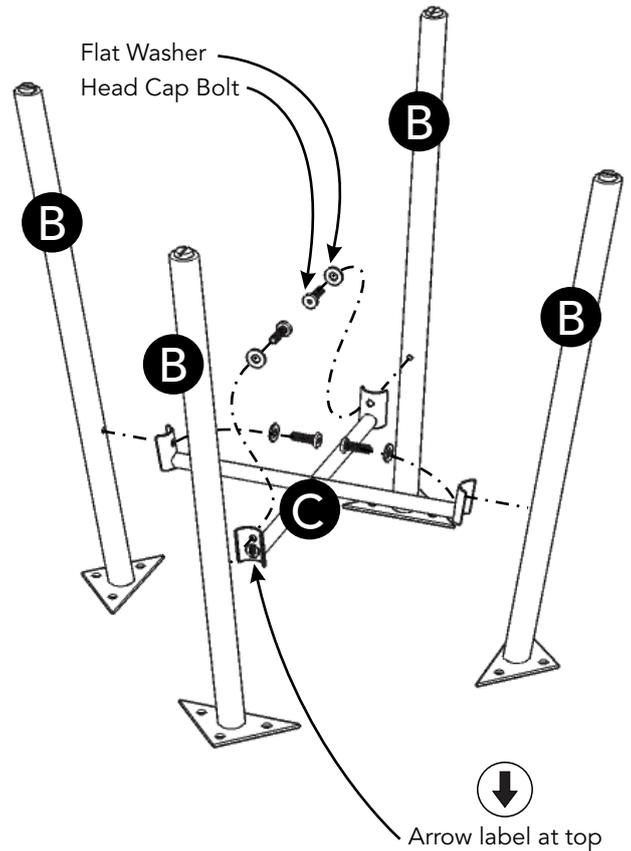


## STEP 2

Place Top (A) upside down on a soft cloth.

Attach unit to Top (A) with Flat Washers and Head Cap Bolts, tightening bolts only halfway.

Tighten all bolts.

## Assembly Instructions 3/3

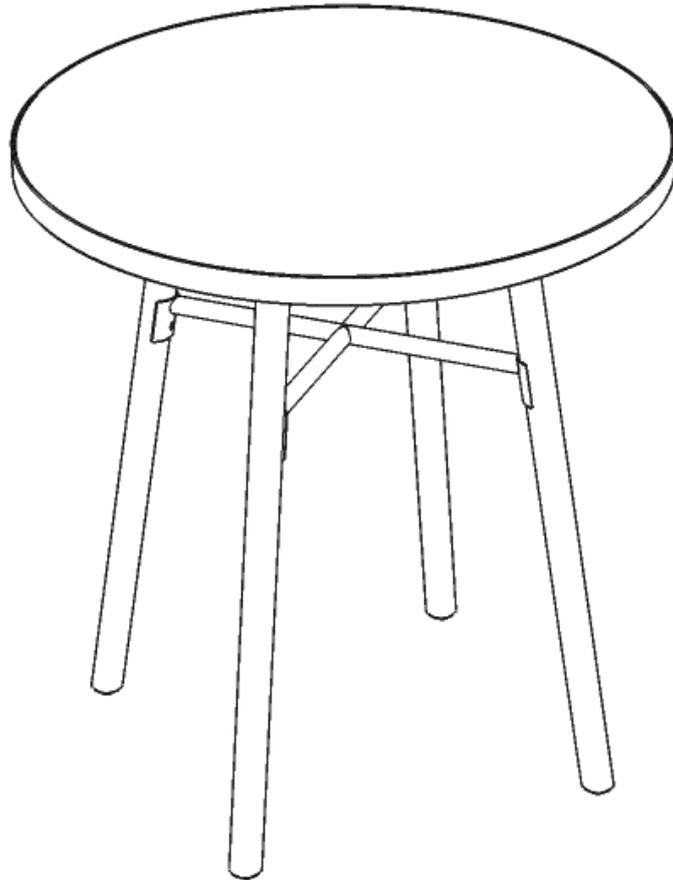

### STEP 3

Turn table over to its upright position.

Level table by adjusting the adjustable levelers on bottom of legs.  
(See Figure 2)

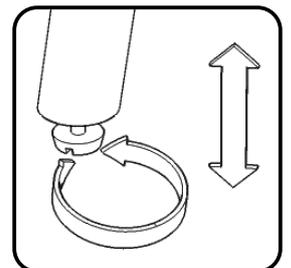


Figure 2

# CARE INSTRUCTIONS

## NEVER

allow liquids to remain on furniture.  
Absorption causes parts to warp  
and split and finishes to delaminate.

## NEVER

use glass cleaners on  
finished furniture. Ammonia  
chemically attacks the finish.



Do not use power tools  
above 8 volts to assemble.

**PREVENT  
CRACKING**



Do not place  
in direct sunlight.

**PREVENT  
FADING**



Do not write  
directly on surface.

**PREVENT  
MARKING**



Do not place hot  
objects on surface.

**PREVENT  
FINISH DAMAGE**



Do not use rubber  
based placemats.

**PREVENT  
DISCOLORING**



Do not use commercial  
waxes and polishes.

**PREVENT  
YELLOWING**

## CLEAN

with a soft cloth moistened  
in lukewarm soap and water.  
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

[www.homestyles-furniture.com/customer-service/replacement-parts](http://www.homestyles-furniture.com/customer-service/replacement-parts)

Home Styles Customer Service: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319