homestyles[®]

20 05064 0049

Hall Tree


IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



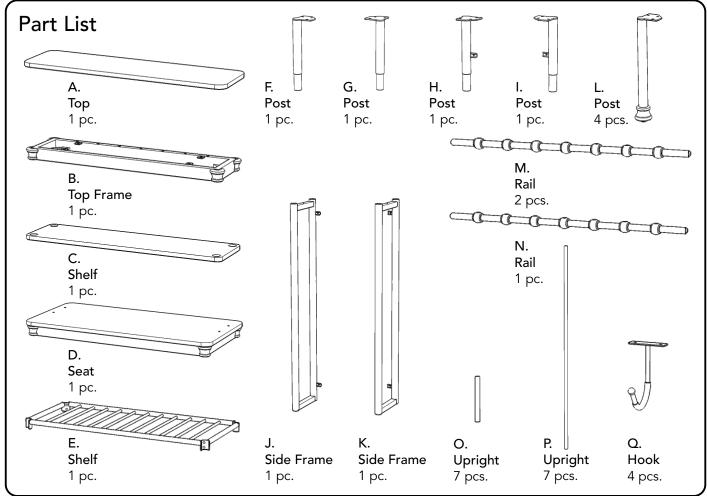

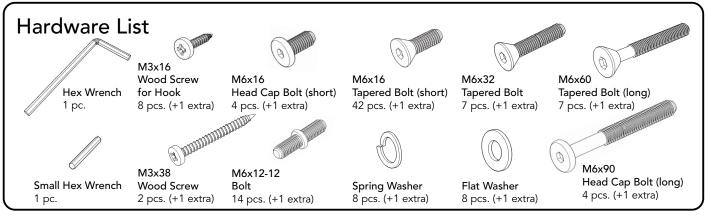


Tool(s) required for assembly: Phillips screwdriver, Level, Drill (8 volts or less), 3/8" Drill Bit

Assembly Instructions 2/7


IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

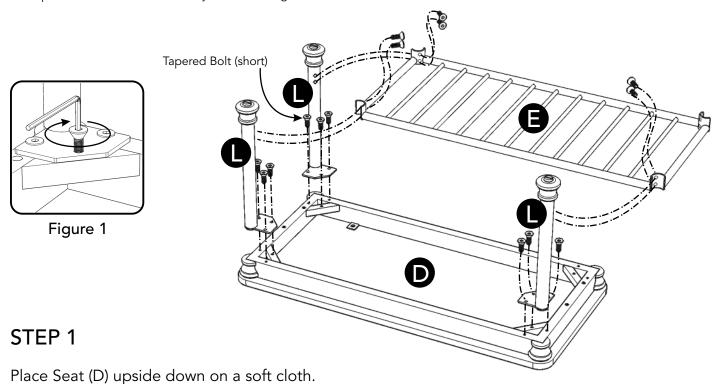

Attach Posts (L) to Seat (D) with Tapered Bolts (short), tightening bolts only halfway. (See Figure 1)

Attach Shelf (E) to unit with Tapered Bolts (short), tightening bolts only halfway.

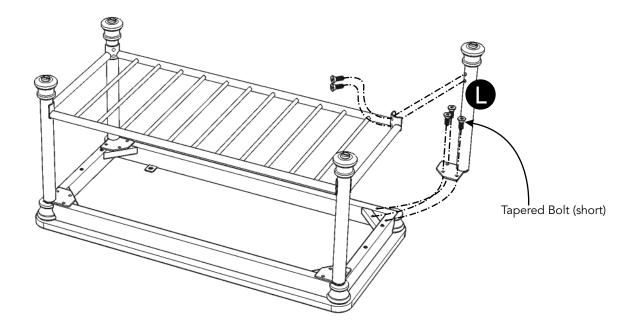

Attach Post (L) to unit with Tapered Bolts (short), tightening bolts only halfway.


Tighten all bolts used in Steps 1 and 2.

Turn unit over to it's upright position.


STEP 2

Assembly Instructions 3/7

STEP 3

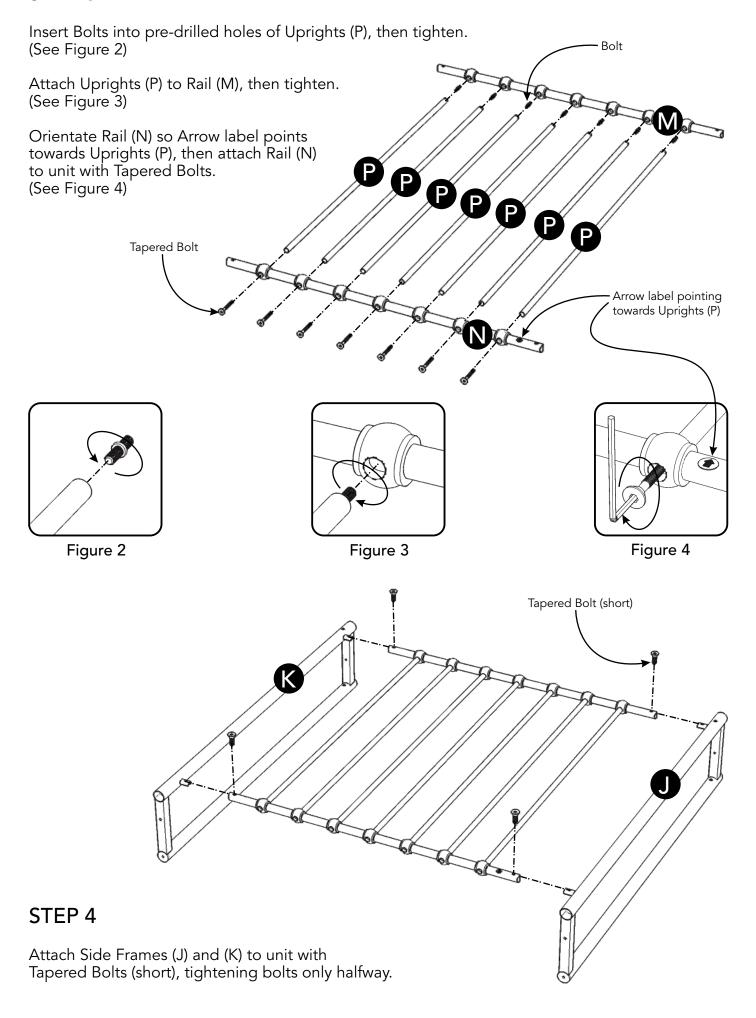


Assembly Instructions 4/7

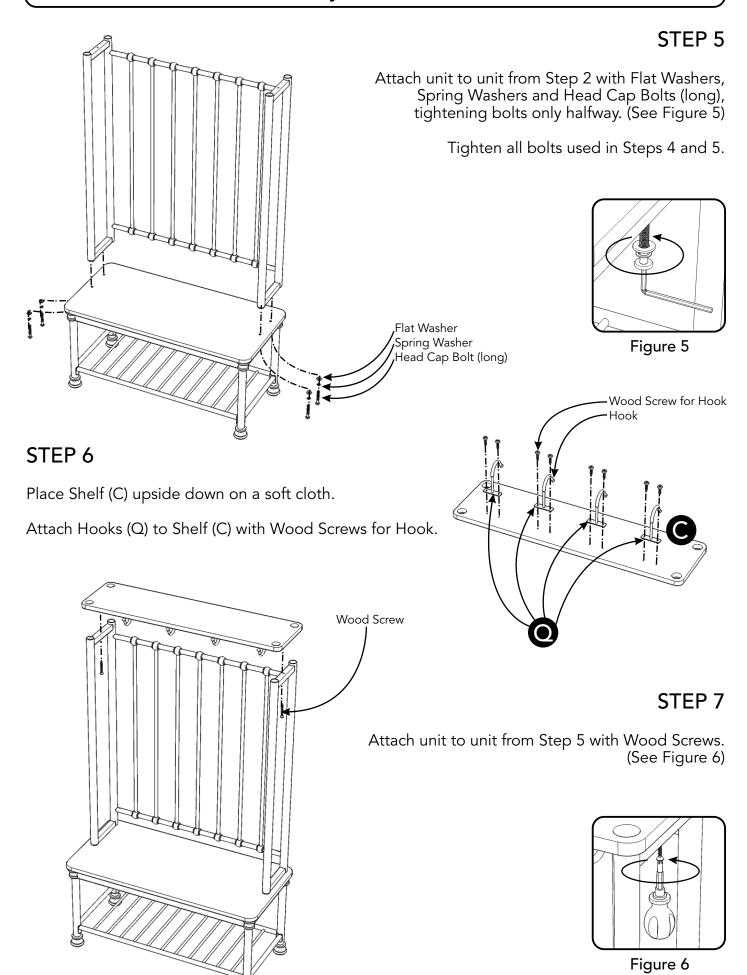

Assembly Instructions 5/7

STEP 8

Insert Bolts into pre-drilled holes of Uprights (O), then tighten.

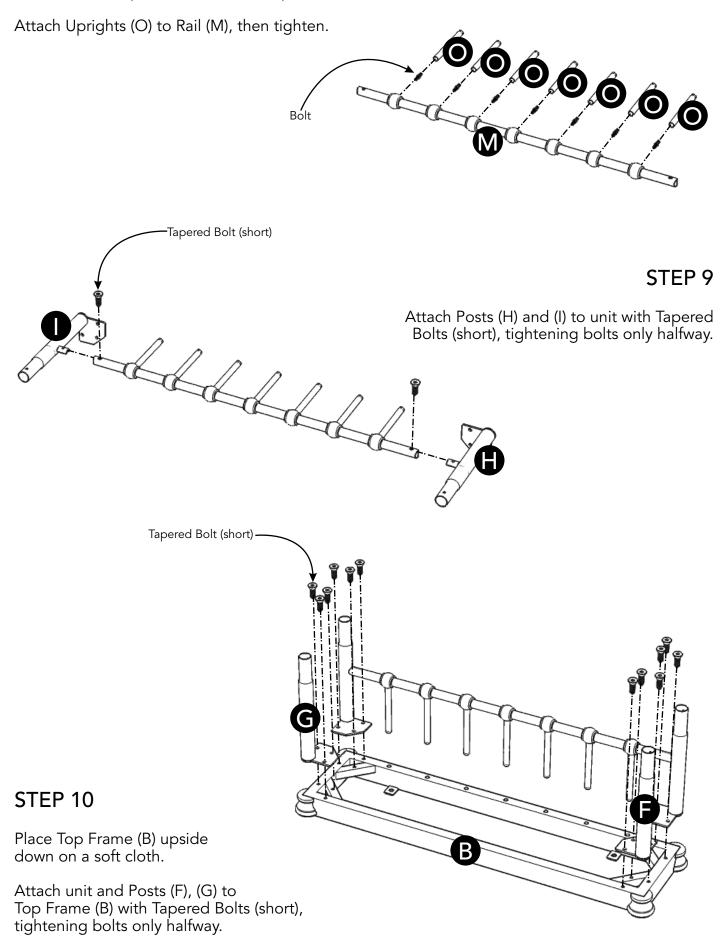


Assembly Instructions 6/7

STEP 11

Turn unit over to it's upright position.

Insert Tapered Bolts (long) into pre-drilled holes of unit, tightening bolts only halfway.

Tighten all bolts used in Steps 9, 10 and 11.

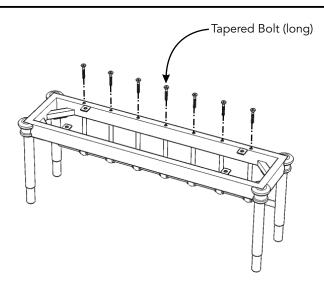


STEP 12

Place Top (A) upside down on a soft cloth.

Attach unit to Top (A) with Flat Washers, Spring Washers and Head Cap Bolts (short), tightening bolts only halfway.

Tighten all bolts.

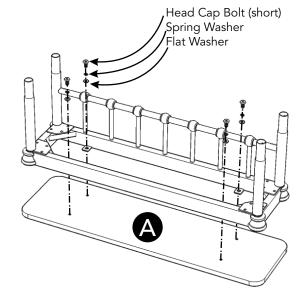

Tapered Bolt (short)

STEP 13

Attach unit to unit from Step 7 with Tapered Bolts (short), tightening bolts only halfway.

Tighten all bolts.

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 7)


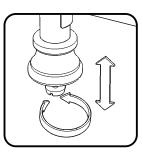


Figure 7

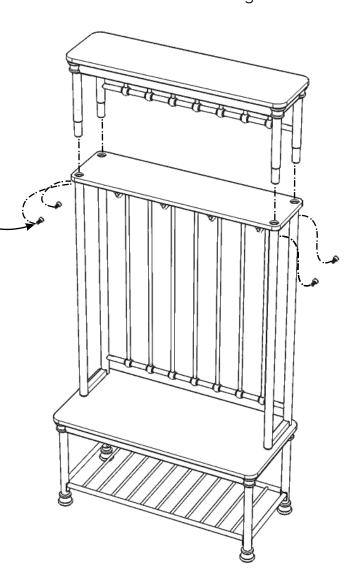

Assembly Instructions 7/7

IMPORTANT

• To help reduce the risk of the unit tipping over, the Tip-over Restraint must be installed following these instructions exactly.

STEP 14

Place unit at desired location.

Drill a 3/8" hole in wall in-line with pre-drilled hole at top of unit.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.

Attach Bracket at pre-drilled hole at top of unit with Machine Screw.

Move unit back into place.

Slide Tip-over Restraint through Bracket on wall and Bracket on unit. (See Figure 8)

Put tie end of Tip-over Restraint into lock end of Tip-over Restraint and pull until tight.



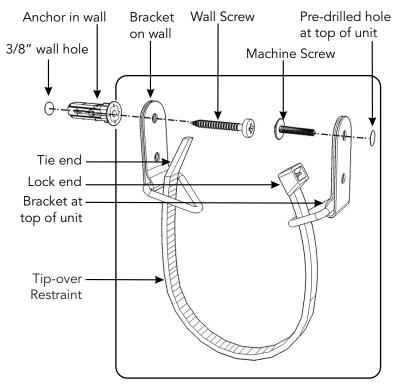


Figure 8

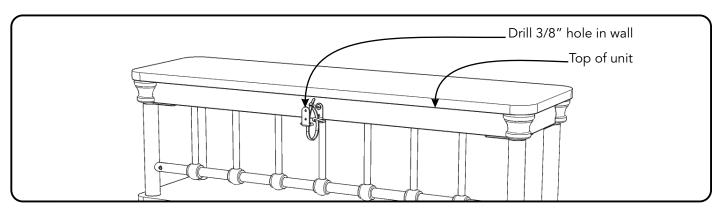

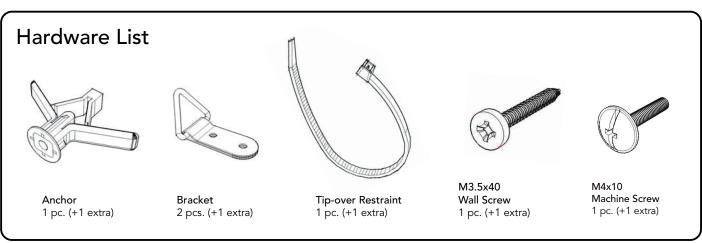

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight.

PREVENT

PREVENT FADING



Do not write directly on surface.

PREVENT

MARKING



Do not place hot objects on surface.

PREVENT

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319