Assembly Guide








If you're having any difficulty during assembly of this product, don't hesitate to call us at 1-800-950-4782.

Our customer service experts are trained to provide step-by-step instruction and can easily replace any missing or damaged parts.

Representatives are available Monday-Friday from 8:30 a.m. to 7:30 p.m. (ET)

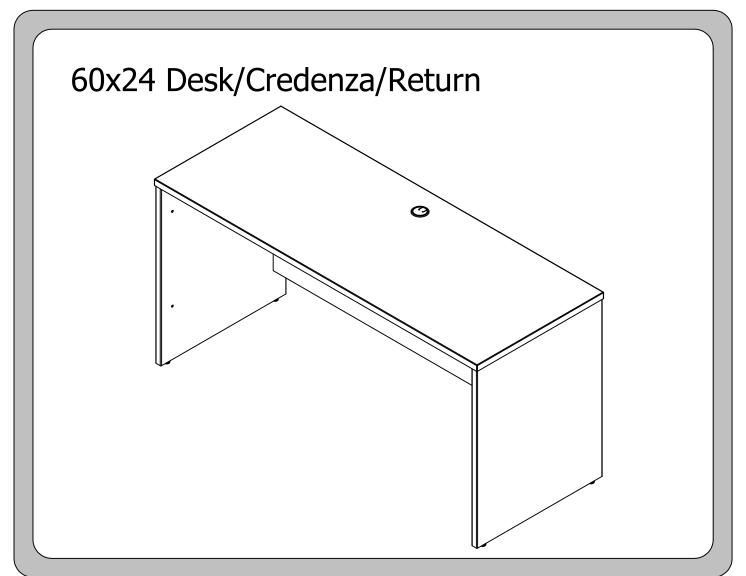

Lot Code #

For best results, keep these tips in mind:

- 1 We know you want to finish this assembly as quickly as possible, but trust us: you'll have a better experience if you take it one step at a time.
- Q Give yourself some room to work near where you want the fully assembled product.
- If your floor isn't carpeted, assemble this product on the empty carton to avoid scratching.
- 4 Do you have a friend who owes you a favor? Some steps may go a little easier with a second set of hands.

DOs

- Use a #2 Phillips head screwdriver (or other handheld tools as indicated)
- Wear safety glasses at all times during assembly
- Carefully follow the instructions in this guide and complete all steps in order
- Give us a call if you're having trouble with a particularly tricky step

DON'Ts

- We know power tools are quick and easy, but you shouldn't use them when assembling this product (unless otherwise specified)
- Never move your furniture with items inside or resting on the surface
- Do not attempt to use this product before all steps have been completed



Watch assembly videos right on your phone or computer!



Some steps include QR codes that link to helpful videos. Watch out for the icon below! Simply open up your smartphone camera to scan the code.

(Users of older smartphones may need to install a QR Reader.)

SCAN HERE



FOR VIDEOS

Or visit https://www.bushbusinessfurniture.com/ CustomerService/HowtoAssemble.aspx

IMPORTANT SAFETY INFORMATION




PLEASE READ WARNINGS

Improper use can cause safety hazards, or damage to your furniture and household items.

Warning	Do	Don't	Why it's important
Serious injury may occur.	Assemble following all instructions using all indicated parts and hardware provided.	 Do not move unit when loaded. Do not load with a television or other heavy equipment. Do not exceed the maximum load limits stated in the instructions. 	Improper assembly, use or loading can lead to product instability, tipover, or collapse.

Advertencia	Hacer	No	Por qué es importante
Pueden producirse lesiones graves.	Realice el montaje siguiendo todas las instrucciones y utilizando todas las piezas indicadas y los herrajes suministrados.	 No mueva la unidad cuando esté cargada. No cargue el mueble con un televisor u otro equipo pesado. No supere los límites máximos de carga indicados en las instrucciones. 	El montaje, uso o carga inadecuados pueden provocar inestabilidad, vuelco o colapso del producto.

Avertissement	À faire	À ne pas faire	Pourquoi c'est important
Peut entraîner des blessures graves.	Assembler en suivant toutes les instructions et en utilisant toutes les pièces et la quincaillerie incluses.	 Ne pas déplacer le meuble lorsqu'il est chargé. Ne pas charger le meuble avec un téléviseur ou tout autre équipement lourd. Ne pas dépasser les limites de poids maximales indiquées dans les instructions. 	Un assemblage, une utilisation ou un chargement incorrects peuvent entraîner l'instabilité, le basculement ou l'effondrement du produit.

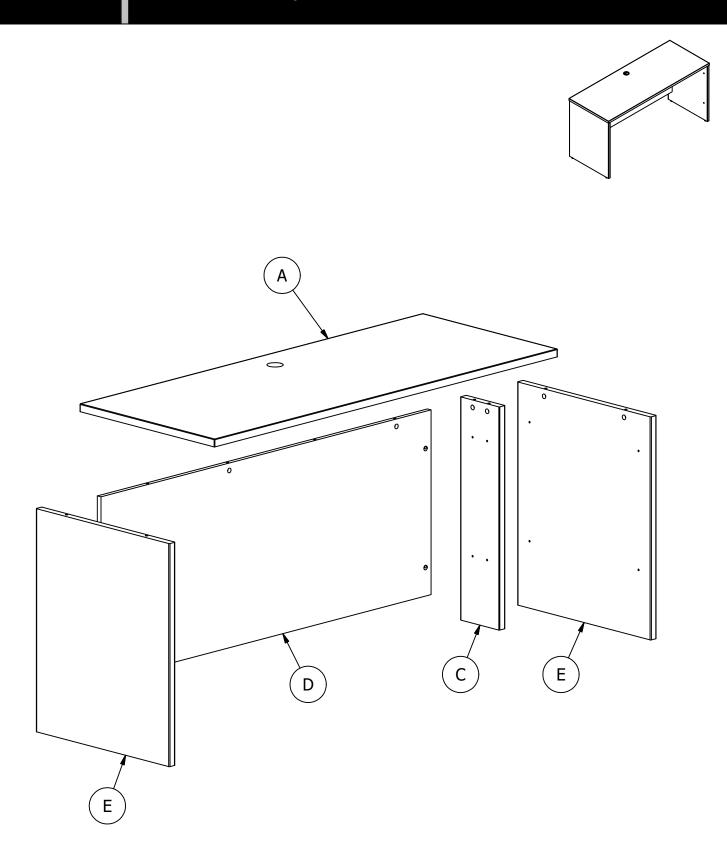


Fasteners are shown actual size.





 Hardware not to scale.







WC12961, WC24461, WC36761, WC60361, WC72461, SCD360WH SCD360PG, SCD360SG, SCD360CS SCD360AC, SCD360BW, SCD360MH, SCD360NE

Go to Step 2. Proceda al paso 2. Allez à l'étape 2.

WC12961, WC24461, WC36761, WC60361, WC72461, SCD360WH SCD360PG, SCD360SG, SCD360CS SCD360AC, SCD360BW, SCD360MH, SCD360NE


WC12961, WC24461, WC36761, WC60361, WC72461, SCD360WH SCD360PG, SCD360SG, SCD360CS SCD360AC, SCD360SO, SCD360HC, SCD360BW, SCD360MH, SCD360NE

Go to Step 7. Proceda al paso 7. Allez à l'étape 7.


WC12961, WC24461, WC36761, WC60361, WC72461, SCD360WH SCD360PG, SCD360SG, SCD360CS SCD360AC, SCD360BW, SCD360MH, SCD360NE


WC12961, WC24461, WC36761, WC60361, WC72461, SCD360WH SCD360PG, SCD360SG, SCD360CS SCD360AC, SCD360BW, SCD360MH, SCD360NE

Go to Step 13. Proceda al paso 13. Allez à l'étape 13.

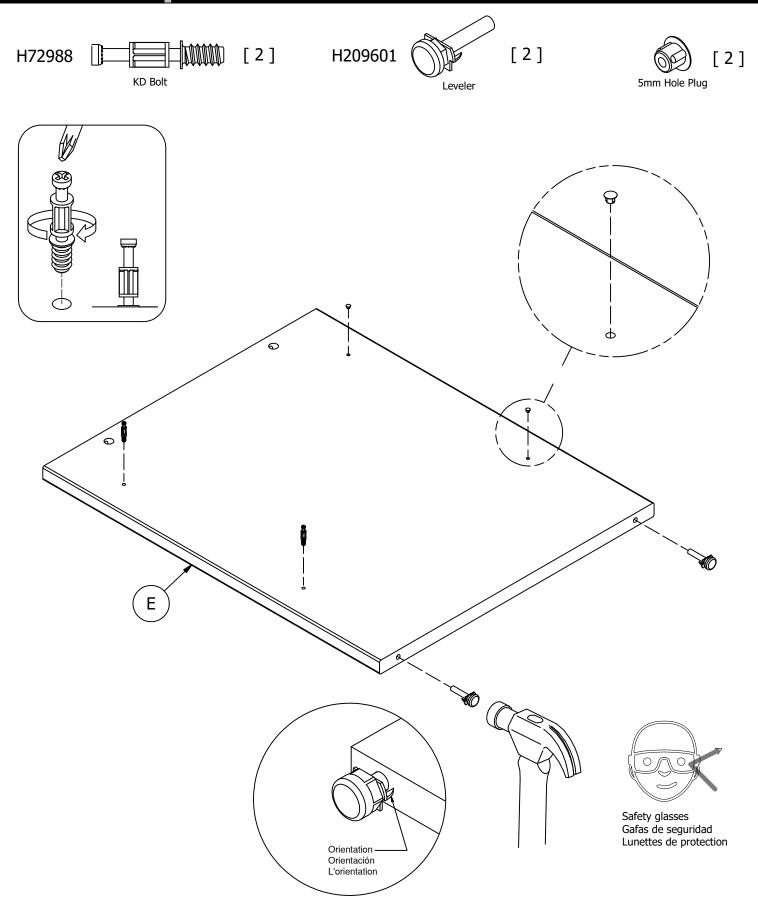



Orientación L'orientation

 


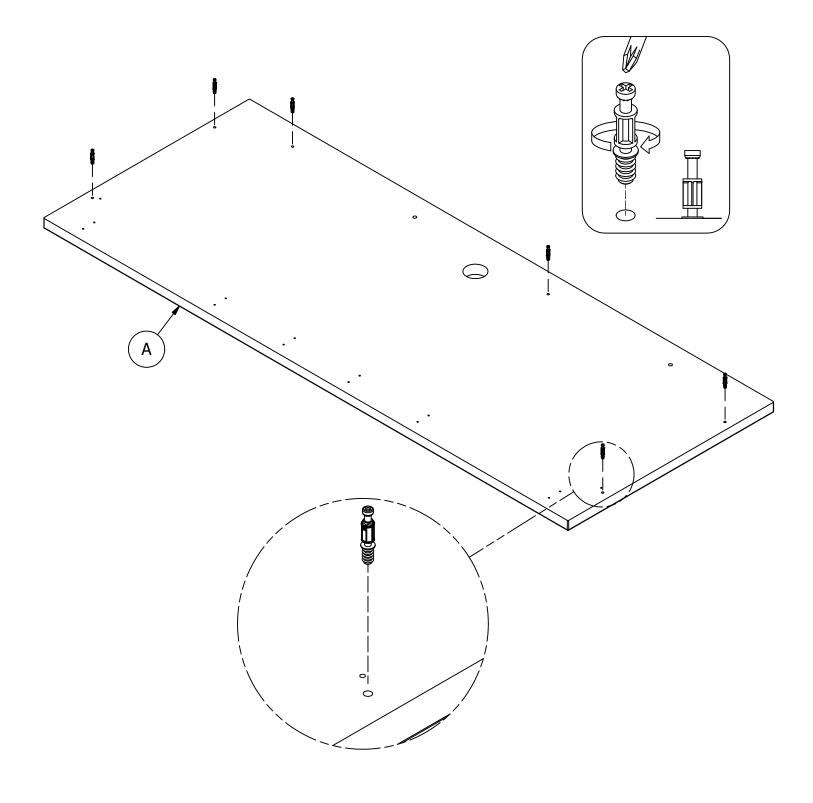


L'orientation

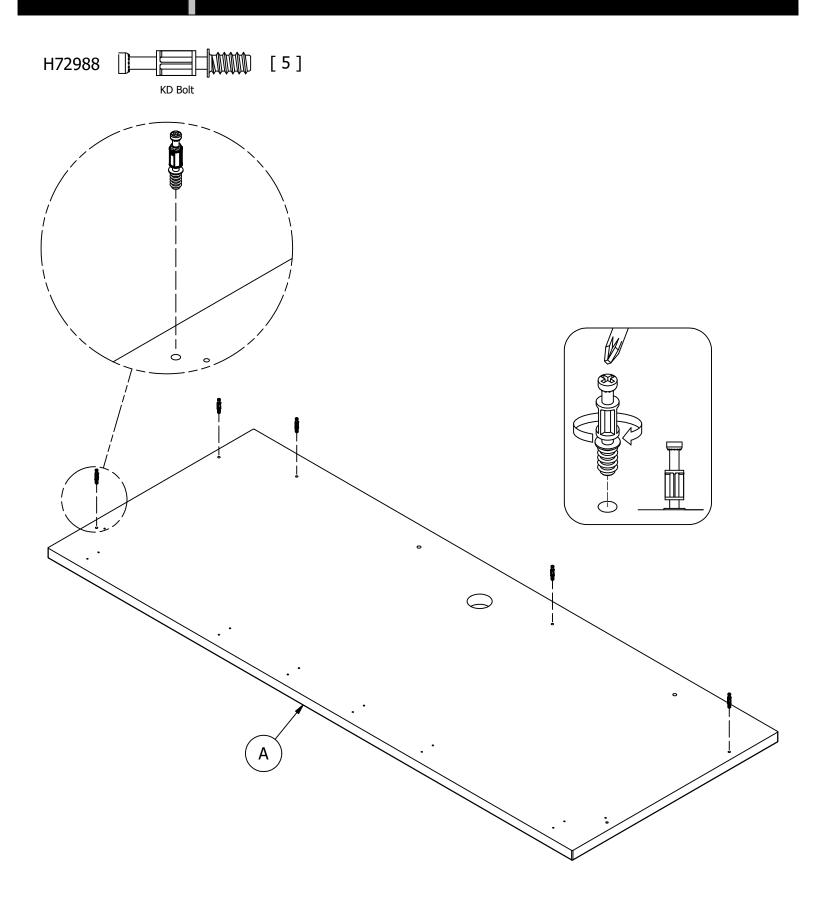

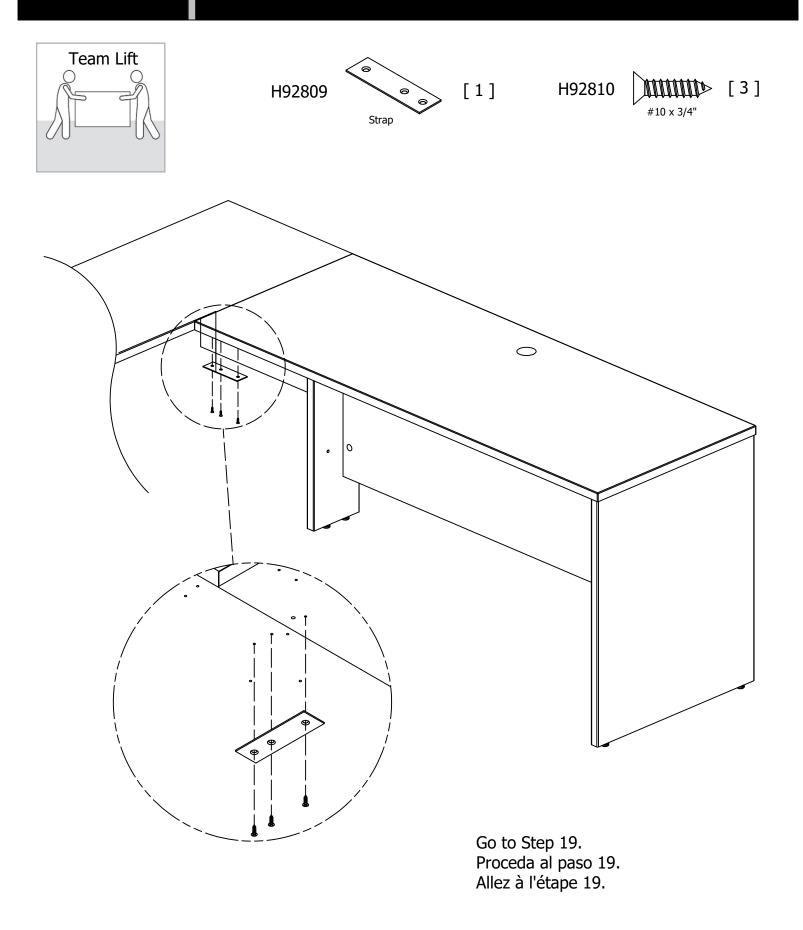


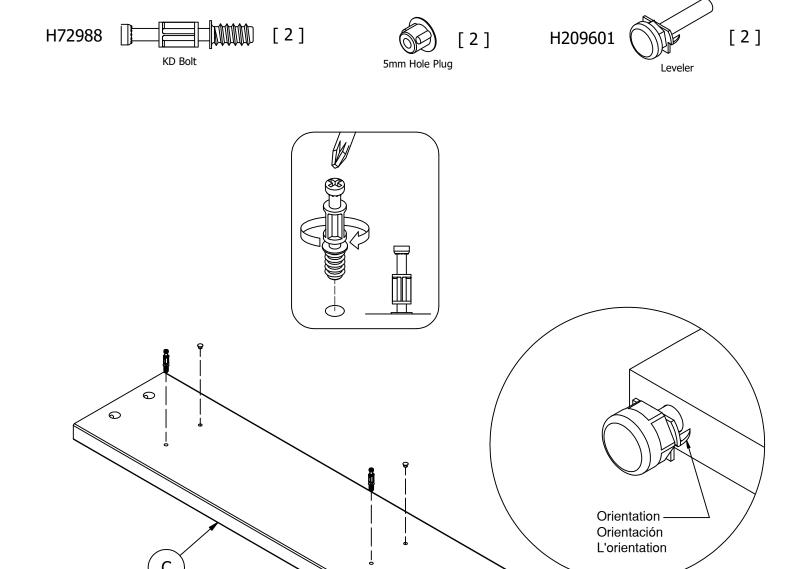



Safety glasses Gafas de seguridad Lunettes de protection

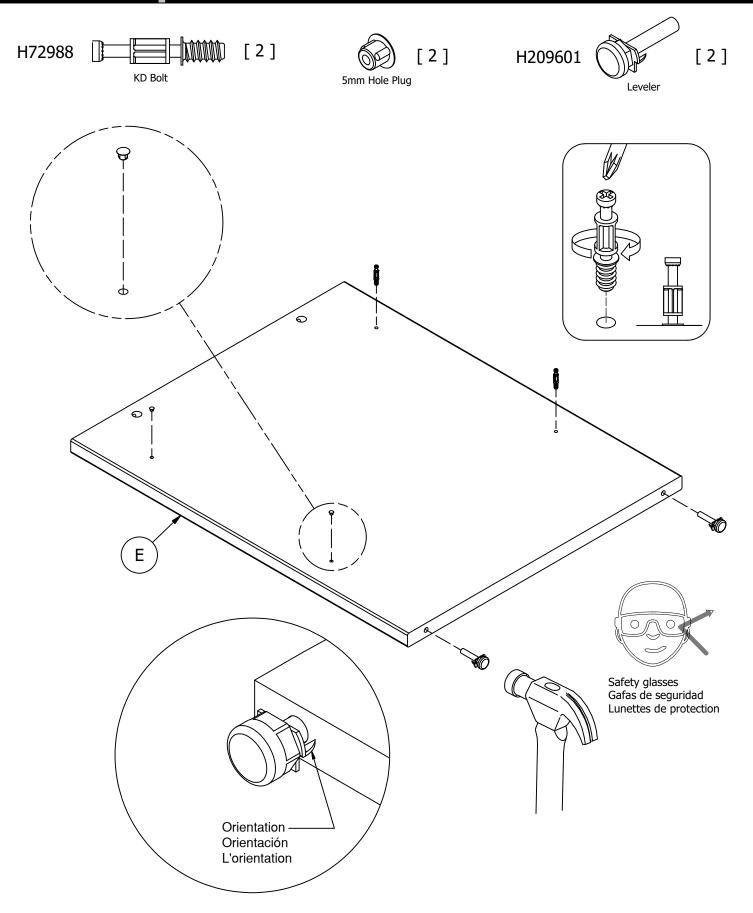

 Have an assembly question or need a replacement part? Just call **1-800-950-4782**, we are here to help.



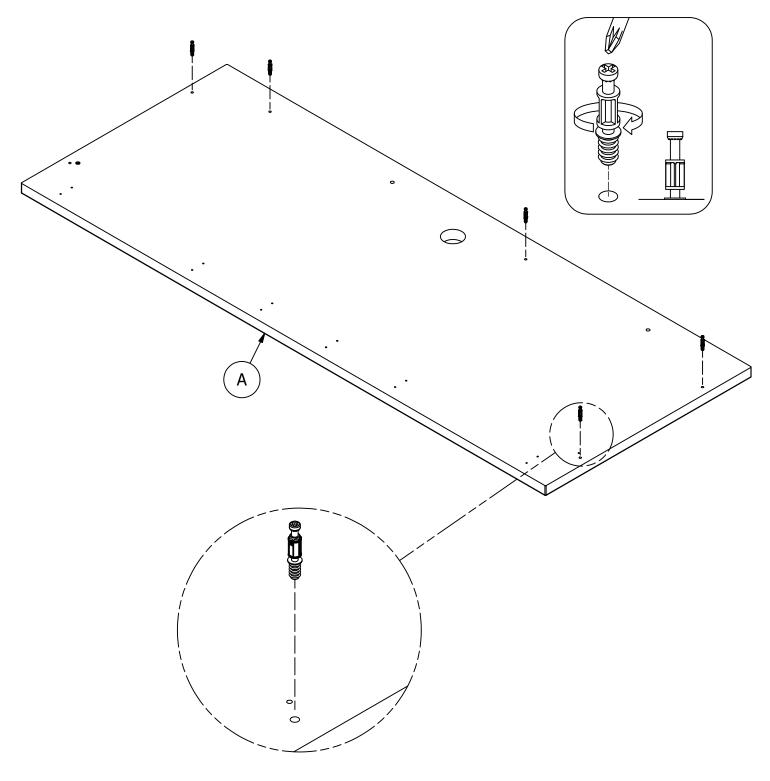


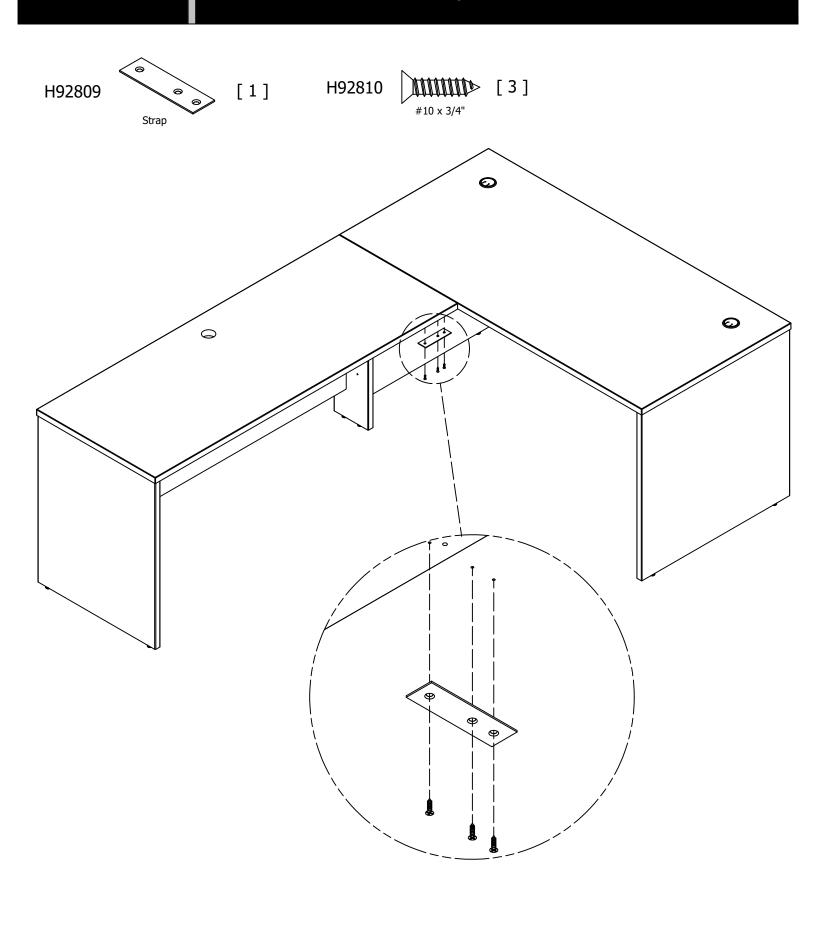






 Gently clean surfaces with a damp sponge eraser.



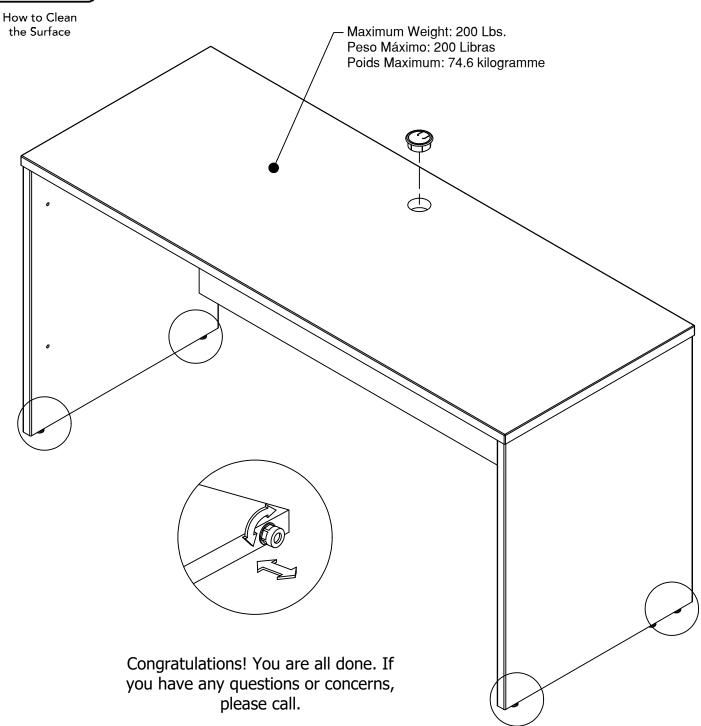

WC12961

A [1] W206244

C [1] W186421

D [1] W177028

E [2] W206269

 
H63904



[4]

5mm Hole Plug





WC24461

A [1] W206239

C [1] W186424

D [1] W177030

E [2] W206264

H92523



 
[4]

5mm Hole Plug

H92521 (6) [10]

Cover Cap

H118700



WC36761

A [1] W206245

C [1] W186423

D [1] W177032

E [2] W206270

H107309



[4]

5mm Hole Plug

H107306 (6) [10]

Cover Cap

Grommet

H118700 [1]

WC72461

A [1] W206247

C [1] W186424 D [1] W177030

L [3] W206264

E [2] W206264

 
H92523

[4]

5mm Hole Plug



H118700



[1]

SCD360WH

A [1] W206243

C [1] W191879

D [1] W191870

E [2] W206268

H184428



[4]

5mm Hole Plug



H184440



Cover Cap

[1]

SCD360PG

A [1] W206240

C [1] W191647

D [1] W191636

E [2] W206265

H112099



[4]

5mm Hole Plug

H83021 (a) [10]

H151407



[1]

SCD360SG

A [1] W206241

C [1] W189353

D [1] W189319

E [2] W206266

H92523



[4]

5mm Hole Plug

H92521 \



[10]

H184440



[1]

SCD360BW

A [1] W205510

C [1] W191814

D [1] W205511

E [2] W205500

H63904

5mm Hole Plug

[4]



H118700 [1]

Grommet

SCD360MH

A [1] W205512

C [1] W193110

D [1] W205513

E [2] W205504

H112099 (4)

5mm Hole Plug

H83021 (6) [10]

Cover Cap

SCD360NE

A [1] W215996

C [1] W215995

D [1] W215992

E [2] W215997

H216047

[4]

5mm Hole Plug

H216046 (6) [10]

H216048 [1]

Grommet

Cover Cap