
 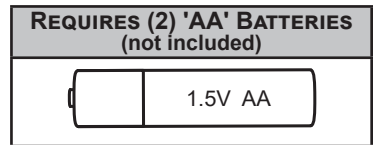



Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: [customerservice@sunnydazedecor.com](mailto:customerservice@sunnydazedecor.com), or via our contact us page at <https://tiny.cc/SunnydazeContact>


# 360-DEGREE LIGHT-UP REMOTE CONTROL STUNT CAR STZ-7271

Review all information before using this product. Save this manual for future reference.

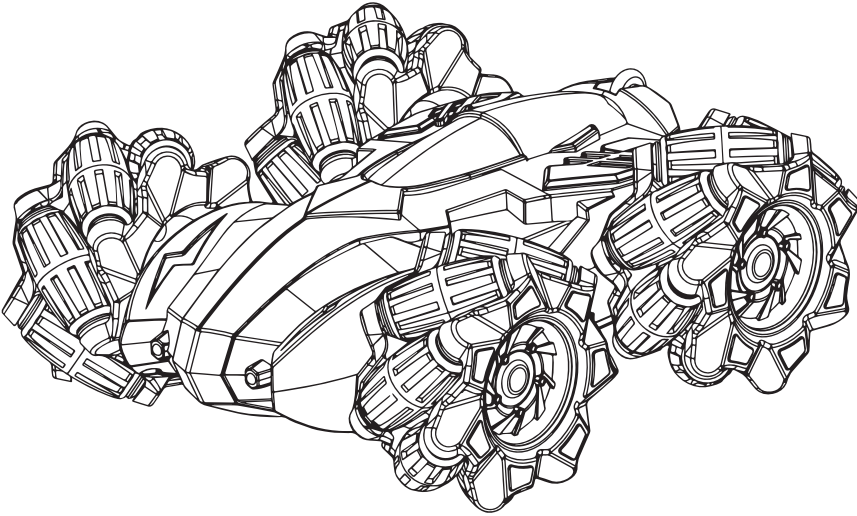

**WARNING**  
CHOKING HAZARD — Small parts.

## BATTERY CHARGING & INSTALLATION

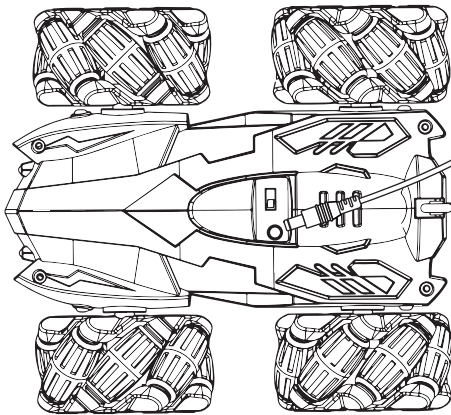


### RC CAR

Connect the charging cable to the car.

Connect the USB charging cable to the wall adapter and plug it into a properly grounded GFCI outlet.

Charge time approximately 1 hour (charging time may vary).

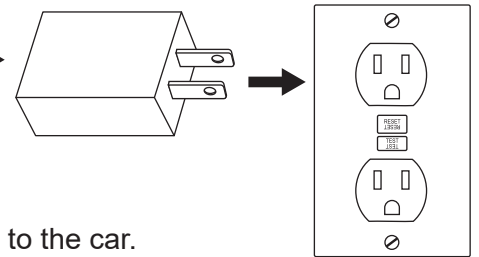


### REMOTE

Remove the battery cover.

Paying close attention to the positive and negative terminals, insert two 'AA' batteries (not included).

Replace the battery cover.


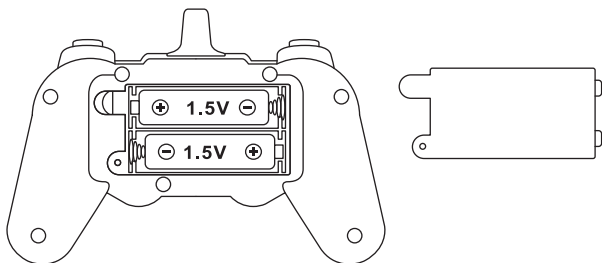


**TIP:** Use quality batteries for maximum operating time; low-quality batteries will need to be replaced more frequently. Do not mix new and old batteries. Do not mix alkaline, standard, or rechargeable batteries.

# OPERATION



**RISK OF ELECTRIC SHOCK! NO USER-SERVICEABLE PARTS INSIDE!**  
**ALWAYS** turn the remote and RC vehicle **OFF** before changing batteries.  
 Failure to do so could result in electric shock.

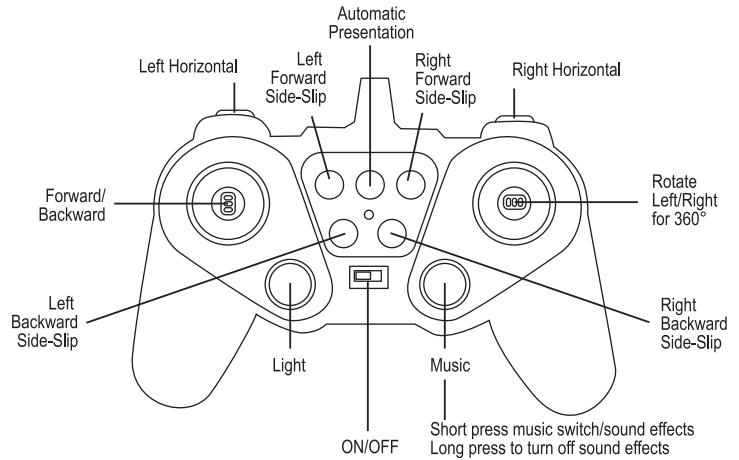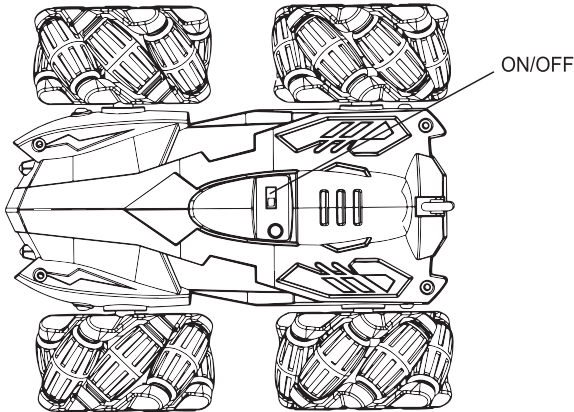


Turn the vehicle power switch to the ON position.

Turn the remote control ON and use the remote to operate the vehicle.

When the vehicle starts to lose performance, power, or function, it may be time to charge the vehicle battery and/or replace the remote batteries.


**! NOTE:** If the vehicle is not responding to the remote control, the frequency signal may need to be reset. Turn the power switches on the remote and vehicle **OFF**. Remove and re-install the remote batteries. Turn the power switches on the vehicle and remote control **ON**.

## Forward/Backward

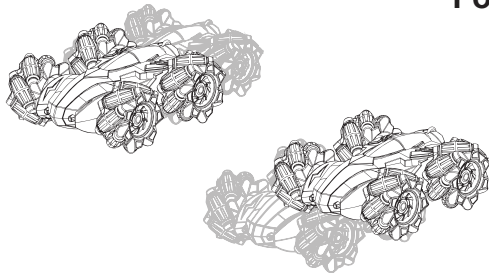


Controls forward and backward movement

## Rotate Left/Right for 360°

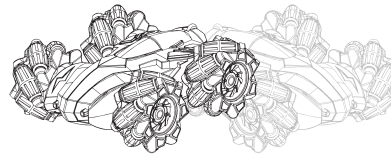


Rotates the car 360° left/360° right

## Left/Right Forward/Backward Side-Slip

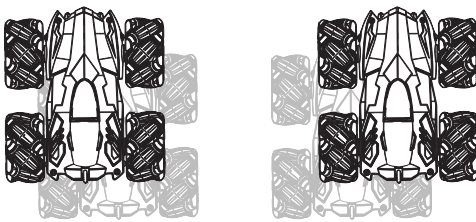


Moves the car diagonally left/right forward/backward

## Left/Right Forward + Left/Right Backward Turn

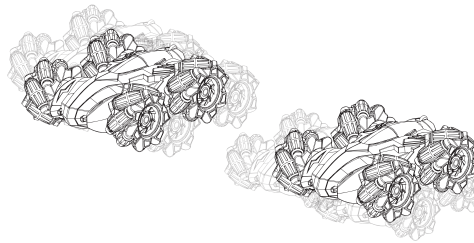


Combined use of forward/backward controls propels the car in a zig-zag pattern

## Left Sideways/Right Sideways

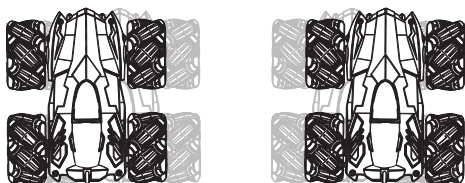

Car drifts left/right

## Automatic Presentation

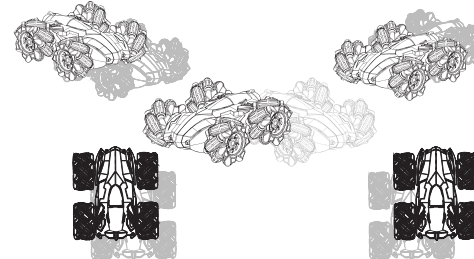

Activates demonstration mode to show all movements

# CARE & MAINTENANCE

**SAFE USE:** Carefully review and follow all safety information.

**CARE:** Do not operate the vehicle in sand, water or snow. Do not submerge in water. Do not crash the vehicle into hard objects. Frequently inspect the vehicle and remote for damage; immediately dispose of damaged and broken components.

**CLEANING:** Wipe soiled surfaces with a damp cloth. Do not use harsh chemicals or abrasive materials.

## TROUBLESHOOTING

### RC vehicle is not running.

Ensure the vehicle and remote power switches are turned ON. Make sure the vehicle battery pack is charged and the remote has good, fresh batteries that are installed following proper (+) and (-) battery placement.

### RC vehicle is running intermittently.

Weak batteries will reduce the normal transmitting range of the remote control. Replace batteries in the remote control and charge the vehicle battery pack.

### RC vehicle does not react, or reacts poorly to operation by controller.

High-frequency interference occurs near high-voltage lines, transformers and some types of buildings. Avoid areas that can cause frequency interference, choose another place to operate the RC vehicle.


### Loss of control.

The RC vehicle is out of control range distance. Another RC vehicle using the same frequency is operating near your vehicle; avoid using two RC vehicles near each other.

Move to another place where radio frequency interference from another device or vehicle is not present.

## SAFETY STATEMENTS & WARNINGS

- Not suitable for children under 6 years of age.
- To be used under direct supervision of a competent adult.
- Frequently inspect to ensure all components are in proper working order. Do not allow children to play with damaged or broken equipment.
- Do not allow children to change the batteries.
- Never use chemicals or abrasive materials to clean the unit.
- Store indoors when not in use.
- Promptly remove expelled batteries. Do not mix old and new batteries. Mixing batteries could cause leakage of the acid inside batteries, damaging the unit.
- Remove remote control batteries before the unit is stored or if it will not be used for a long period of time.
- Only use compatible batteries. Incompatible batteries may damage the unit and void the warranty.

 This product uses a rechargeable battery. When the battery can no longer be used, all components should be recycled in accordance with local laws and regulations. Components must not be incinerated or composted.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

*If you experience issues with the product or it was damaged during shipping, please contact our customer service team directly through one of the methods mentioned at the top of page 1.*

*Please have the item number and order information ready to expedite response time.*

## WARNING:

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**