
ITEM #84360

60" Ender TV Stand

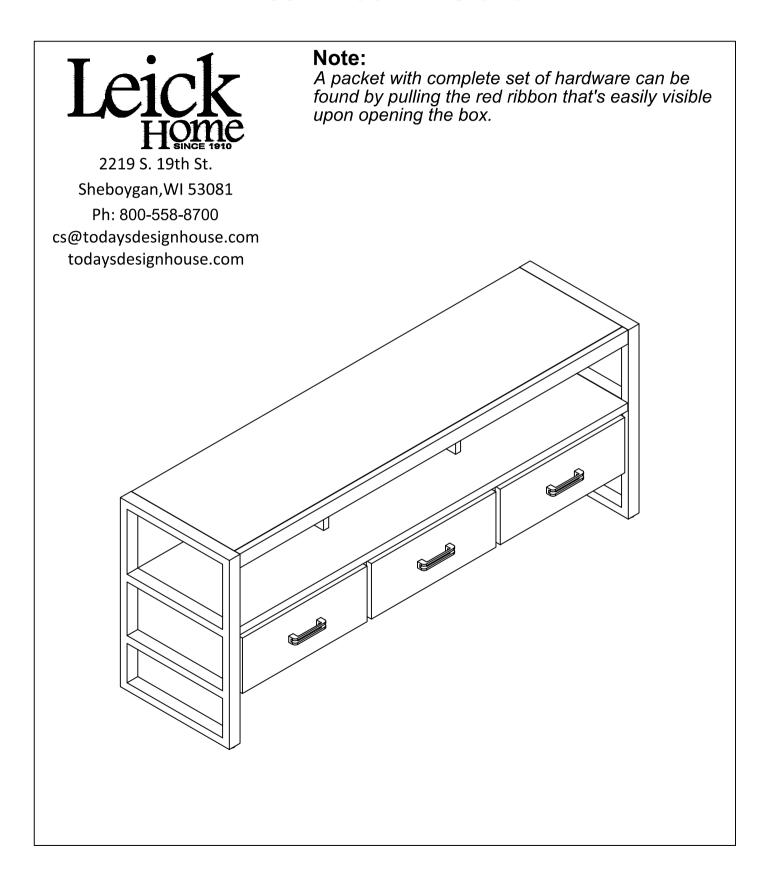

Hardware List

Item	Hardware	Description	Quantity
1		Long Bolt 1/4"x1-1/8"	6PCS
2		Short Bolt 1/4"x1/2"	4PCS
3		Flat Washer 1/4"x12mm	10PCS
4		Allen Wrench	1PC
5		Machine Screw M4x35mm	6PCS
6		Drawer Pull	3PCS

----1----

Parts List

Item	Parts	Description	Quantity
А		Top Panel	1PC
В		Left Side Frame	1PC
С		Right Side Frame	1PC
D		Center Partition	2PCS
E		Back Panel	1PC
F		Drawer Box	1PC

Assembly Steps

Two person assembly recommended. Step 1 1.1 Lay drawer box (F) on its back. 1.2 Fasten left and right side frames (B & C) to the drawer box with four long bolts and flat washers. Please make sure the threaed insert on each side frame faces to the back side of unit. Do not tighten. Notes: Make some the threaded insert here on side frame is at the back side of TV unit as per Step 2 **2.1** Place the assembled unit upright. 2.2 Insert back panel (E) into the groove on back upper surface of drawer box (F) . Fasten with two long bolts and flat washers onto side frames while the front of back panel is flushed with back side frame posts' front edge. 2.3 Insert two center partitions' wooden dowels (B) (D) onto holes at the top surface of drawer box (F).

Assembly Steps

Two person assembly recommended.


Step 3

partition's wood dowels are fully inserted onto the holes.

3.2 Push side frame's upper edge inward as shown by the arrow and fasten the top panel (A) with four short bolts and


3.1 Place the top panel (A) on the assembled unit with all the

flat washers. Tighten four short bolts.

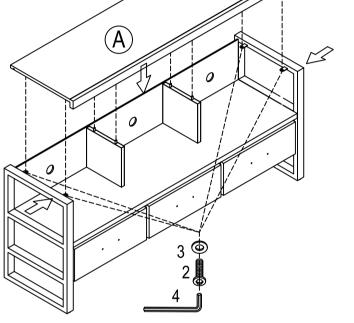

Step 4

4.1 Open all three drawers from bottom with fingers and fasten the drawer pulls with machine screws.

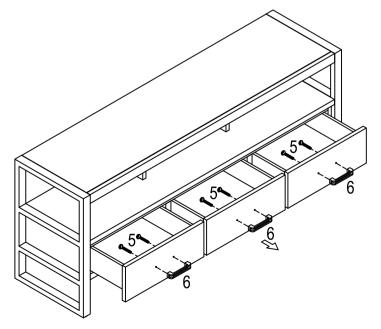

Assembly Steps

Two person assembly recommended.

Step 5

5.1 Lay the TV unit on its back, tighten four bolts in step 1.2

5.2 Place the TV unit upright, adjust the levelers on the bottom of side frame if needed.

