



# The Epic Mesh Quick Install Guide

Setting up your Epic Mesh in 3 easy steps:

1. Download the Luxul Easy Setup App  
(initial set up must be done using the app)
2. Install your router node
3. Install satellite node(s) as needed

1

Download the Luxul Easy Setup App



or search "Luxul Easy Setup App" on:




## Node Installation

The first node you install in your mesh network will automatically be designated as the router node.

2

Router Node

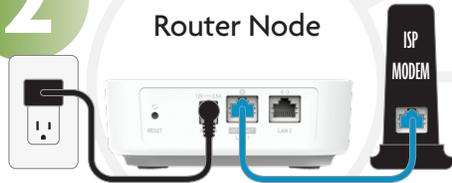

3

Satellite Node



Antennas are optimized for horizontal node placement for best client connections.

## Connecting Nodes

Wireless



Wired





## What if...

### I need to restore factory default settings?

To restore factory default settings to your Epic Mesh node, press and hold the button labeled 'Reset' for six seconds.

### I need to restart my Epic Mesh node?

To restart your Epic Mesh node, press and quickly release the button labeled 'Reset.'

### I want to perform advanced configuration?

1. Open a web browser and go to 192.168.0.1 or the IP address you specified in the Easy Setup App during the setup process.
2. Enter the login credentials you created during setup in the Easy Setup App.

#### Copyright and Trademark Notices

No part of this document may be modified or adapted in any way, for any purposes without permission in writing from Luxul. The material in this document is subject to change without notice. Luxul reserves the right to make changes to any product to improve reliability, function, or design. No license is granted, either expressly or by implication or otherwise under any Luxul intellectual property rights. An implied license only exists for equipment, circuits and subsystems contained in this or any Luxul product.

© Copyright 2019 Legrand AV Inc. All rights reserved. The name Luxul, the Luxul logo, the Luxul logo mark and Simply Connected are all trademarks and or registered trademarks of Legrand AV Inc. All other trademarks and registered trademarks are property of their respective holders.



## What does the LED on the front indicate?

Color	Pattern	Description
Green	Blinking	Device is booting up
White	Solid	Setup complete; normal operation
Red	Slow blink	Device has lost internet (WAN) connection
Green	Fast blink	Factory default is in process
Blue	Solid	Device is in factory default state
Red	Solid	Error condition; contact support

### Technical Support

P: 801-822-5450

E: [support@luxul.com](mailto:support@luxul.com)

For support chat go to:  
[luxul.com](http://luxul.com)

### Sales

P: 801-822-5450

E: [sales@luxul.com](mailto:sales@luxul.com)