

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

GOLDEN CRANE METAL STATUES

 
XCA-122


Read this manual carefully before use and save it for future reference.
 Assemble components on a soft, clean surface to avoid scratching or damaging the finish.


 

 



CAUTION:

SHARP EDGES USE EXTREME CAUTION

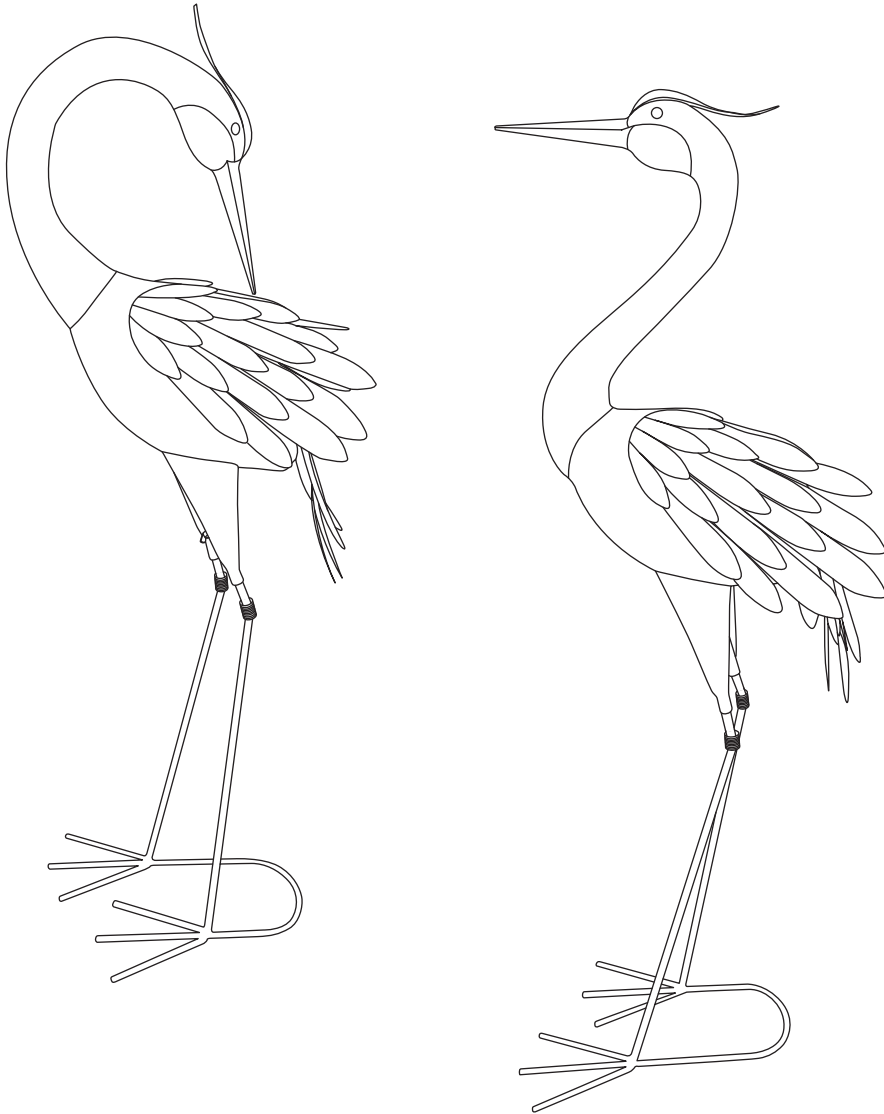

 Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

 
No.	PARTS	QTY.
A	 Alert Crane Body	1
B	 Alert Crane Legs	1
C	 Turned Crane Body	1
D	 Turned Crane Legs	1
E	 Ground Stake	4

NOTE: This statue is hand-painted metal. Imperfections in the paint and some rust spots are a natural part of the manufacturing process and are not cause for return.

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

ASSEMBLY

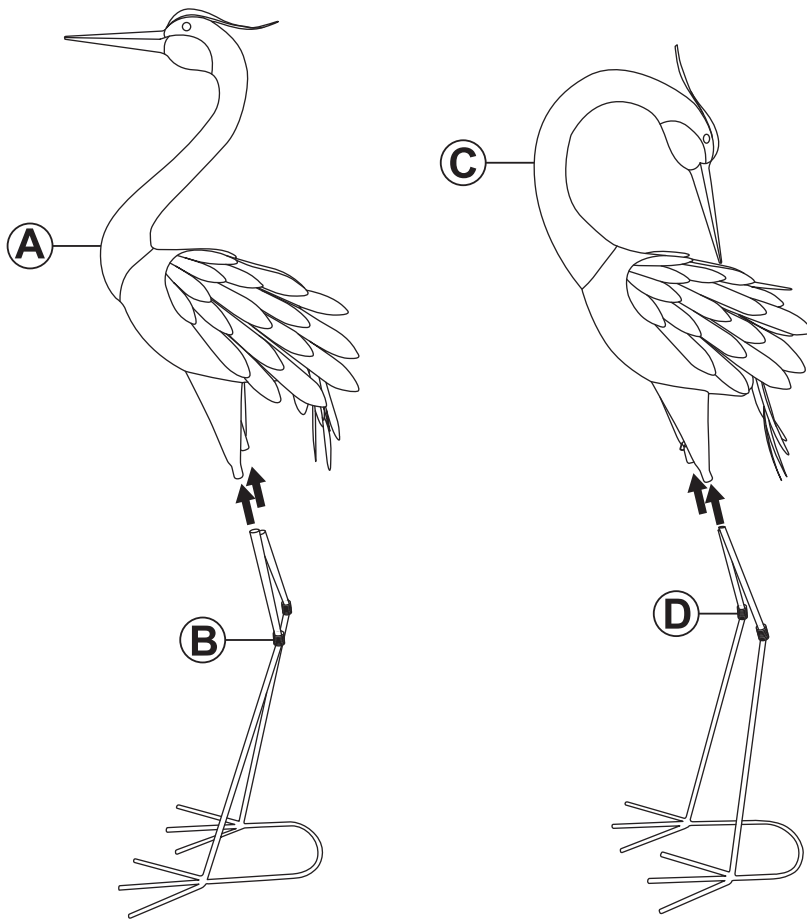

1. Insert Alert Crane Legs (B) upward into the bottom of Alert Crane Body (A) and tighten the wingnut on the leg of the body.
2. Insert Turned Crane Legs (D) upward into the bottom of Turned Crane Body (C) and tighten the wingnut on the leg of the body.
3. Place the statues on a flat, level surface. If placing the statues on grass or firm soil, use the included Ground Stakes (E) to anchor the bottom of the legs.

IMPORTANT: Do not place statues in high-traffic areas such as locations where children and pets play. If placing statues on a wood or brick patio, use a heavy object such as a brick or stone (not included) to anchor the statues; this will help prevent them from tipping over during windy conditions.

CARE & MAINTENANCE

CLEANING: Use a soft, dry cloth to gently wipe away dirt and debris. For stuck-on dirt, dampen a soft cloth and gently wipe soiled surfaces. Do not scrub, use cleaners, or abrasive materials as doing so will damage the finish and void the product warranty.

SUN EXPOSURE: As with any product, sun exposure will gradually fade and discolor finishes over time.

WATER DAMAGE: Over time, water will cause natural erosion to the finish and structure of this unit. Damage and degradation from exposure to water and weather elements are not covered under the product warranty.

WINTER CARE & STORAGE: Store in a dry, indoor location. This item was not manufactured to withstand extreme temperature changes. Do not allow water to pool or freeze on or inside the unit.

⚠ SAFETY STATEMENTS & WARNINGS ⚠

- For decorative purposes only. This item is not a toy.
- Bending the metal may cause permanent damage or breakage, and could result in serious injury.
- Do not use harsh chemicals or abrasive materials to clean this item.
- Manufacturer is not liable for damage or personal injury caused by improper use, inadequate maintenance or neglect of this product.

Any modification to the product or failure to follow recommended care will void the product warranty.

⚠ WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.