

SPEAKMAN®

S-8700-CA, S-8700-CA-E

Installation, Maintenance & Operation Instructions

SENSORFLO® BATTERY POWERED LOW SPOUT LAVATORY FAUCET

DESCRIPTION

Speakman SENSORFLO® faucet. Battery powered low spout lavatory sensor faucet. All metal spout assembly consists of polished chrome plated removable cover and black powder coated chassis. Sensor module powered by two (2) 3-volt DC lithium batteries with waterproof connectors housed above counter in faucet body. Low battery warning light. Solenoid with built-in filter. Vandal resistant 60 second time out feature. Water conserving vandal resistant recessed aerator reduces water flow to 1.5 GPM / 5.7 LPM to meet requirements of ANSI A112.18.1M for flow rates. ADA compliant. Note: 3/8" Stainless Steel Hoses are optional.

SPECIFICATIONS

INLET SUPPLY: 3/8" COMPRESSION WITH MALE THREADS

FLOW RATE: 1.5 GPM / 5.7 LPM or 0.5 GPM / 1.9 LPM

SHIPPING WEIGHT: 4.1 LBS

OPTIONS:

BO	Vandal Resistant 0.5 GPM Flow Control
HS	3 Stainless Steel Hoses for use with Tee or Mixer
HTS	1 Stainless Steel Flexible Hose
GB	Vandal Resistant 1.5 GPM Aerator Outlet Device
E	Vandal Resistant 0.5 GPM Spray Outlet

LF	Vandal Resistant Laminar 1.5 GPM Flow Control
T	Tee with check valves
TMV	Under-Counter Thermostatic Mixing Valve with check valves
VRS	Vandal Resistant Screws with Wrench

INSTALLATION

Remove cover from faucet body. Disconnect sensor module wires and remove module from faucet. Remove battery cover from module and install new batteries, taking care to ensure correct polarity. Reassemble in reverse order as above. Make sure module wire is plugged in and clipped into place on top of the module. Wires should be on the inside of cover screw bosses of chassis to prevent pinching. Reattach cover to faucet with screws and wrench provided. Install vandal resistant aerator with wrench provided. Ensure gasket is properly seated on bottom of faucet chassis. Carefully feed wire from faucet through deck hole, mounting faucet on fixture. Attach notched wire guard (notched end up) washer and lock nut onto faucet shank and secure faucet to fixture. CAUTION: Sensor module wire must be inside channel of rubber wire guard to keep wire from being pinched or cut when tightening washer and lock nut. Attach outlet of solenoid valve to shank of faucet. Attach supply to solenoid valve using 3/8" compression fittings. DRY CONNECTIONS ONLY. Connect wire from faucet to solenoid valve. With drain installed, turn on water and activate the faucet, checking for proper operation and all connections for leaks.

SPEAKMAN®

400 Anchor Mill Rd. New Castle, DE 19720 Phone: 800-537-2107 Fax: 800-977-2747
11/23/15 www.speakman.com 92-S-8700-06




OPERATION

Speakman SENSORFLO faucets are thoughtfully designed for all in mind. Require no handles to turn, lift or push, water flows only when hands are in the lavatory basin. Built in vandal resistant circuitry shuts off the water after continuous flow of approximately 60 seconds. This feature prevents flooding; water is easily turned on again by placing one's hands under the lavatory spout.

MAINTENANCE

Your SENSORFLO faucet is designed and engineered in accordance with the highest quality and performance standards. With proper care it will provide years of trouble free service. Periodically the faucet will require some minor maintenance to keep it performing at peak performance. The sensor module has a built-in low battery indicator light located in the center of the rectangle infrared lens. This red light will come on when the faucet has approximately 30,000 on/off cycles remaining or 10% of battery life. To replace the batteries follow the first portion of the installation instructions above. Periodically check the solenoid filter for debris. If debris is present clean the filter toughly. The polished chrome finish of your faucet should be cleaned using mild soap and warm water. Dry immediately with a soft, clean cloth for best results.

S-8700 SERIES

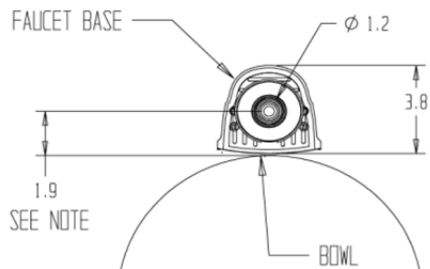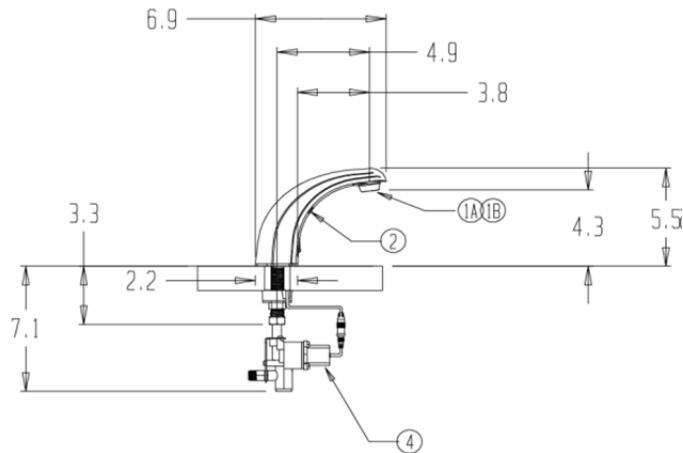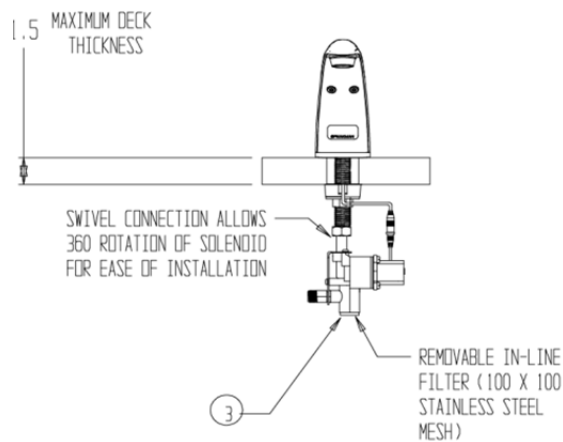

NOTES:

1. INLET IS 3/8" COMPRESSION WITH MALE THREADS.
2. ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED AND ARE SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: *

POSITION FAUCET AS CLOSE TO THE EDGE OF THE SINK AS POSSIBLE. ENSURE ADEQUATE CLEARANCE FOR WIRE PROTECTOR, WIRES, WASHERS, AND NUT.

SPEAKMAN®

REPAIR PARTS

ITEM	REPAIR PART	DESCRIPTION
1A	RPG05-0837-PC	1.5GPM AERATOR
1B	RPG38-0128-PC	0.5GPM SPRAY OUTLET
1C	RPG05-40005	1.2GPM AERATOR
1D	RPG05-40015	1.2GPM LAMINAR FLOW OUTLET
2	RPG10-0068-PC	COVER WITH SCREWS
3	RPG66-0044	SOLENOID FILTER SCREEN
4	RPG76-0033	SOLENOID VALVE ASSEMBLY
5	RPG66-0142	LAVATORY SENSOR MODULE WITH BATTERIES
6	RPG76-0039	SOLENOID DIAPHRAGM & O-RING REPAIR KIT
7	RPG76-0041	3 VOLT LITHIUM BATTERIES (QTY 2)

SPEAKMAN®

400 Anchor Mill Rd. New Castle, DE 19720 Phone: 800-537-2107 Fax: 800-977-2747
11/23/15 www.speakman.com 92-S-8700-06