


# SHIMANO

**CURADO DC** S A-RB

**CUDC150**

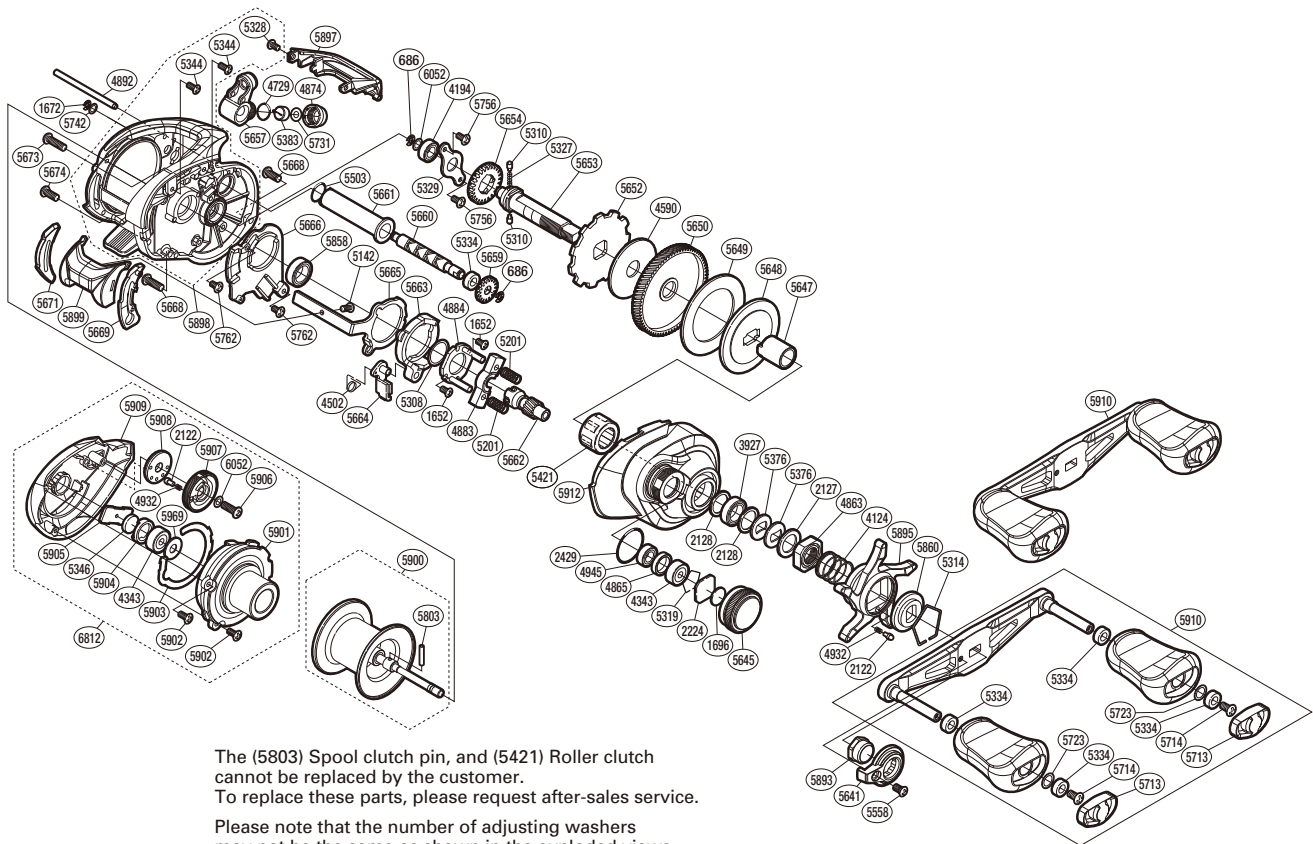

The (5803) Spool clutch pin, and (5421) Roller clutch cannot be replaced by the customer.  
To replace these parts, please request after-sales service.

Please note that the number of adjusting washers may not be the same as shown in the exploded views.  
(Adjustment will vary with each individual product.)

(51RH39M150X)

| Part No. | Description          | Part No. | Description              | Part No. | Description              |
|----------|----------------------|----------|--------------------------|----------|--------------------------|
| BNT0686  | E Lock               | BNT5329  | Drive Shaft Retainer     | BNT5713  | Handle Knob Seal         |
| BNT1652  | Screw                | BNT5334  | Bushing                  | BNT5714  | Screw                    |
| BNT1672  | E Lock               | BNT5344  | Screw                    | BNT5723  | Washer                   |
| BNT1696  | Cast Control Spacer  | BNT5346  | Spacer B                 | BNT5731  | Spacer                   |
| BNT2122  | Click Pin            | BNT5376  | Drag Spring Washer       | BNT5742  | Washer                   |
| BNT2127  | Star Drag Spacer     | BNT5383  | Line Guide Pawl          | BNT5756  | Screw                    |
| BNT2128  | Washer               | BNT5421  | Roller Clutch Bearing    | BNT5762  | Screw                    |
| BNT2224  | Spool Tension Spacer | BNT5503  | O Ring                   | BNT5803  | Spool Clutch Pin         |
| BNT2429  | O Ring               | BNT5558  | Screw                    | BNT5858  | Ball Bearing             |
| BNT3927  | Ball Bearing         | BNT5641  | Handle Nut Plate         | BNT5860  | Star Drag Click Plate    |
| BNT4124  | Star Drag Spring     | BNT5645  | Cast Control Cap         | BNT5893  | Handle Nut               |
| BNT4194  | Ball Bearing         | BNT5647  | Roller Clutch Inner Tube | BNT5895  | Star Drag                |
| BNT4343  | Ball Bearing         | BNT5648  | Key Washer               | BNT5897  | Level Wind Protector     |
| BNT4502  | Clutch Pawl Spring   | BNT5649  | Drag Washer              | BNT5898  | Frame Assembly           |
| BNT4590  | Drag Washer          | BNT5650  | Drive Gear               | BNT5899  | Clutch Button            |
| BNT4729  | O Ring               | BNT5652  | Anti-Reverse Ratchet     | BNT5900  | Spool Assembly           |
| BNT4863  | Star Drag Nut        | BNT5653  | Drive Shaft              | BNT5901  | B Side Plate Substrate   |
| BNT4865  | Bearing Spacer       | BNT5654  | Idle Gear                | BNT5902  | Screw                    |
| BNT4874  | Pawl Cap             | BNT5657  | Line Guide Assembly      | BNT5903  | Washer                   |
| BNT4883  | Yoke                 | BNT5659  | Idle Gear                | BNT5904  | Bearing Retainer         |
| BNT4884  | Clutch Cam Retainer  | BNT5660  | Worm Shaft               | BNT5905  | Spool Shaft Spacer       |
| BNT4892  | Stabilizer Bar       | BNT5661  | Level Wind Guard         | BNT5906  | Screw                    |
| BNT4932  | Click Spring         | BNT5662  | Pinion Gear              | BNT5907  | Brake Dial               |
| BNT4945  | Ball Bearing         | BNT5663  | Clutch Cam               | BNT5908  | Click Ring               |
| BNT5142  | Screw                | BNT5664  | Clutch Pawl Assembly     | BNT5909  | Left Side Plate          |
| BNT5201  | Yoke Spring          | BNT5665  | Clutch Plate             | BNT5910  | Handle Assembly          |
| BNT5308  | Washer               | BNT5666  | Clutch Guard             | BNT5912  | Right Side Plate         |
| BNT5310  | Idle Gear Pin        | BNT5668  | Screw                    | BNT5969  | Bearing Seal             |
| BNT5314  | Click Plate Retainer | BNT5669  | Clutch Bar Guide B       | BNT6052  | Washer                   |
| BNT5319  | Bearing Retainer     | BNT5671  | Clutch Bar Guide A       | BNT6812  | Left Side Plate Assembly |
| BNT5327  | Idle Gear Spring     | BNT5673  | Screw                    |          |                          |
| BNT5328  | Screw                | BNT5674  | Screw                    | BNT4692  | B-100 Oil (Accessory)    |