



FOR REPLACEMENT PARTS OR HELP WITH ASSEMBLY PLEASE CONTACT US AT: <u>simpli-home.com/customer-support</u> PLEASE ENSURE TO HAVE THE MODEL # FROM THE PACKAGING OR INSTRUCTION BOOKLET

TO RETURN THE PRODUCT: PLEASE CONTACT THE RETAILER WHERE THE ITEM WAS PURCHASED FROM





brooklyn + max



Upload an image of our furniture in your home with a short review to our facebook page for a chance to

Win up to \$3000 of **Simpli Home** furniture!!!

www.facebook.com/simplihomefurnishings



IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place furniture in direct sunlight.


Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.







EASTWOOD / COLBURN / HALSTEAD


66 x 40 INCH RECTANGULAR DINING TABLE

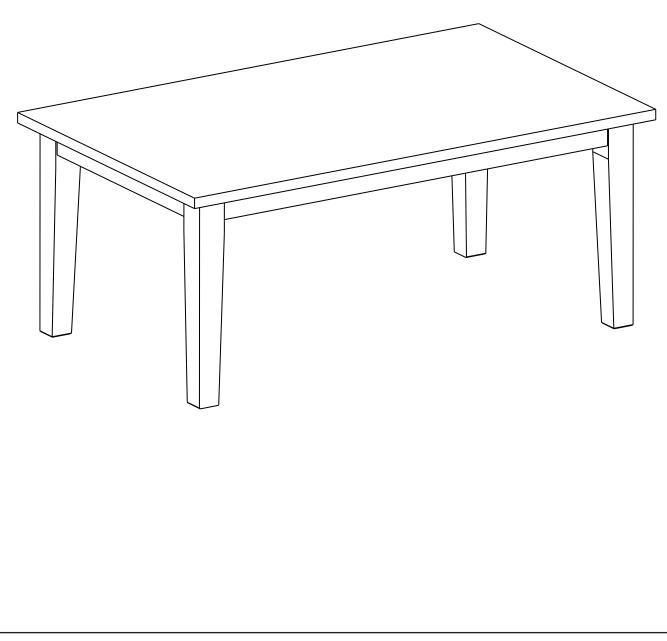


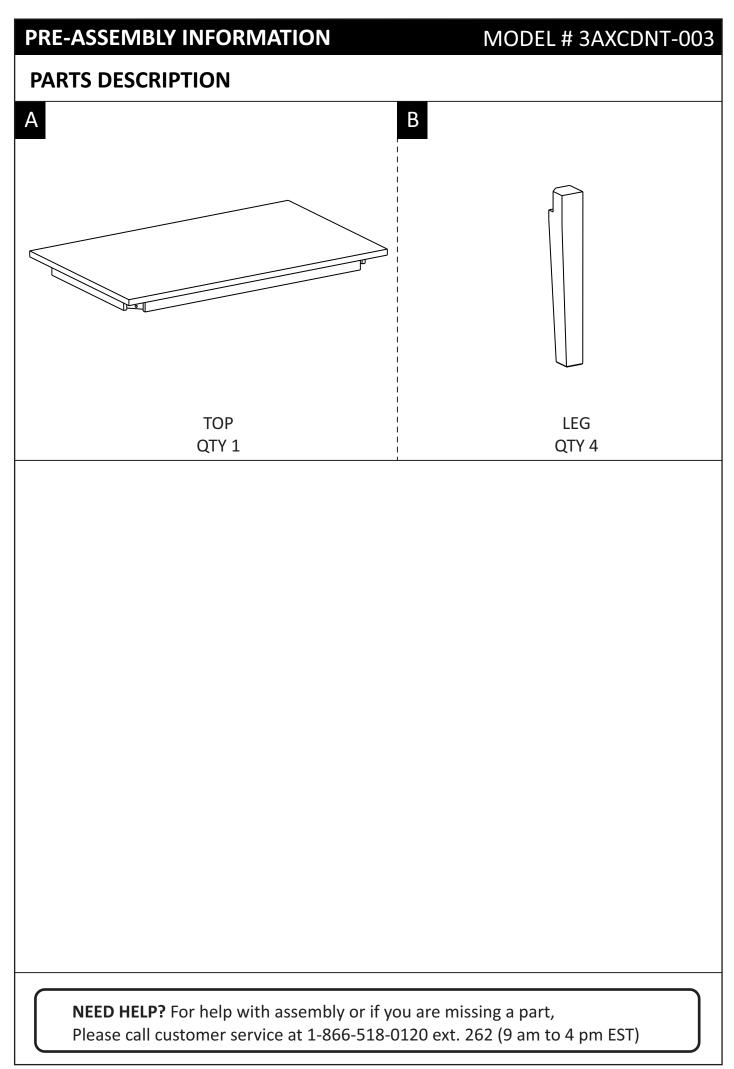


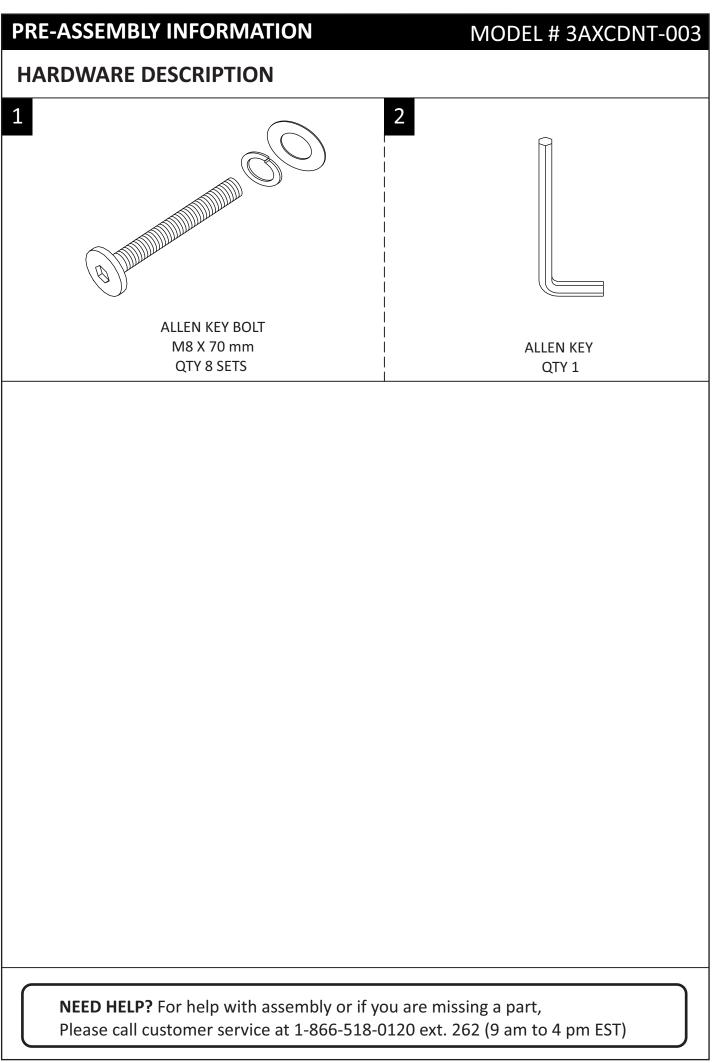

COMPONENTS – KEY DIAGRAM

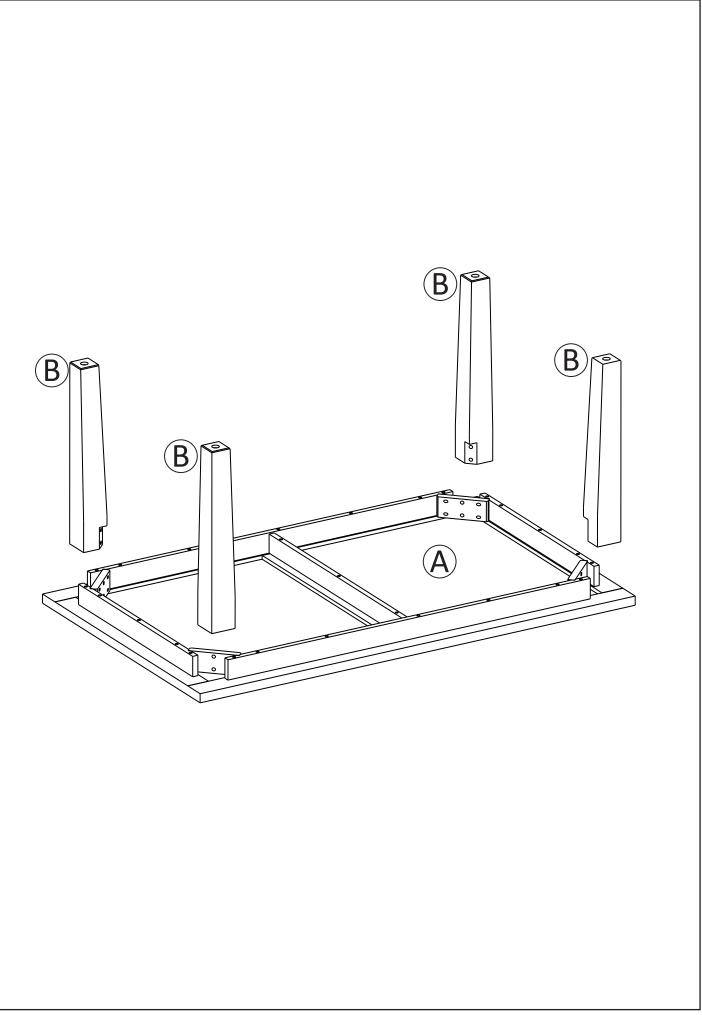

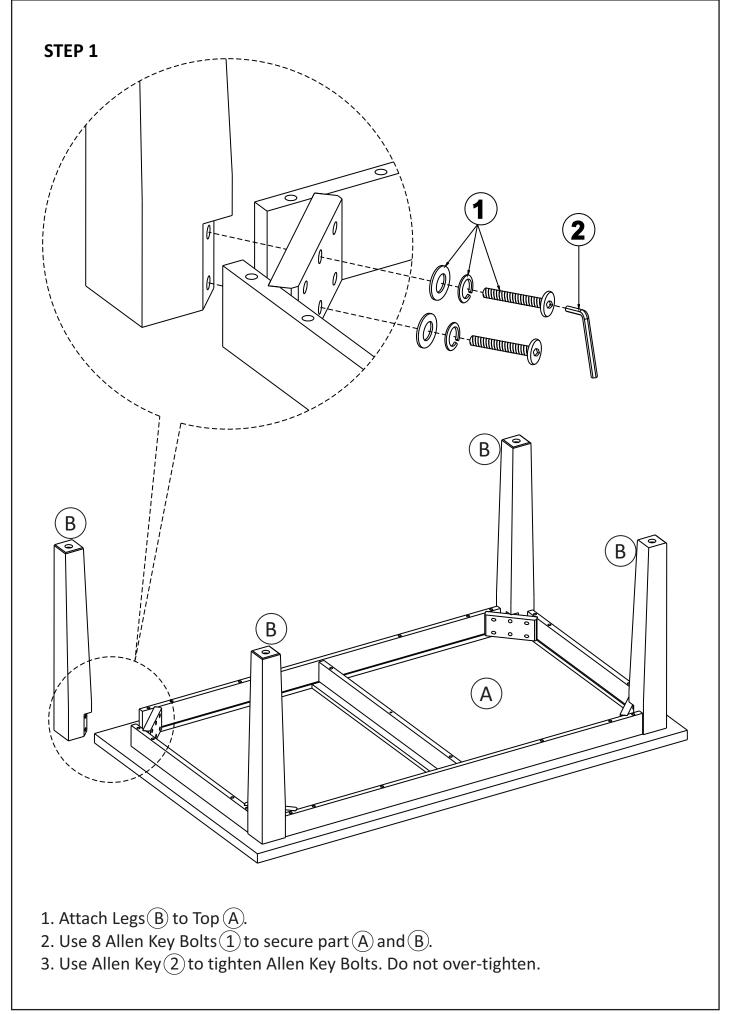

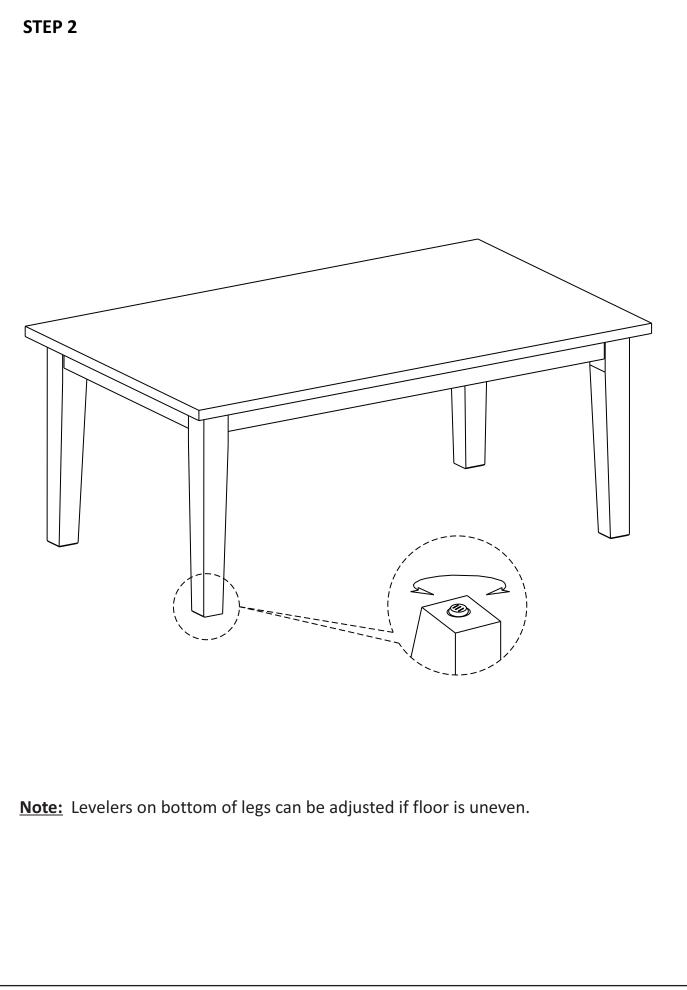




Ψ




brooklyn + max™

EZRA / HAWTHORNE / KENTVILLE

DINING CHAIR MODEL # AXCDCHR-003-GL

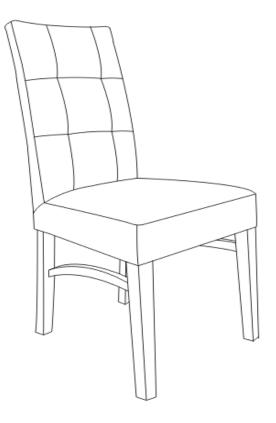


PARTS DESCRIPTION

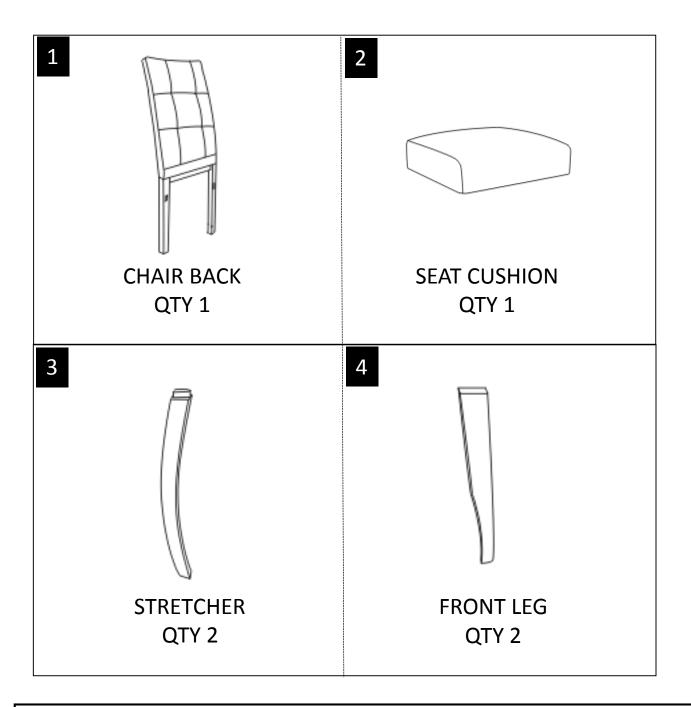


NEED HELP? For help with assembly or if you are missing a part, Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

HARDWARE DESCRIPTION

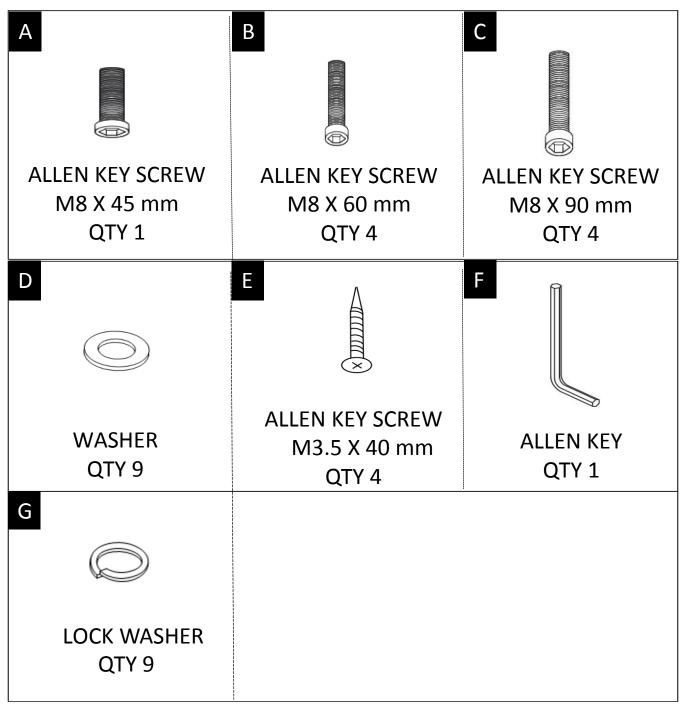

NEED HELP? For help with assembly or if you are missing a part, Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)


STEP 1

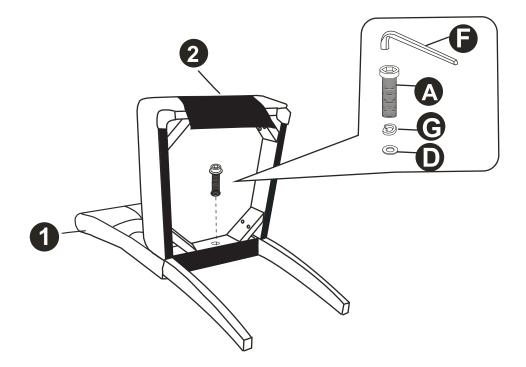

Align Seat Cushion (2) into pre-drilled holes on Chair Back (1). Attach Seat Cushion (2) to Chair Back (1) using Allen Key Screw (A) and one Washer each of (D) and (G).


Use Allen Key (F) to tighten. Do not over-tighten.

STEP 2

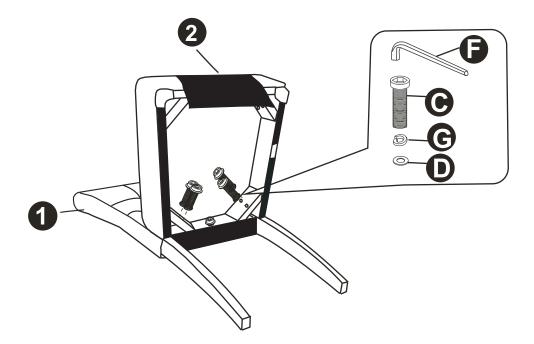

Attach Seat Cushion (2) to Chair Back (1) using Allen Key Screws (C) and four Washers each of (D) and (G). Use Allen Key (F) to tighten. Do not over-tighten.

STEP 3

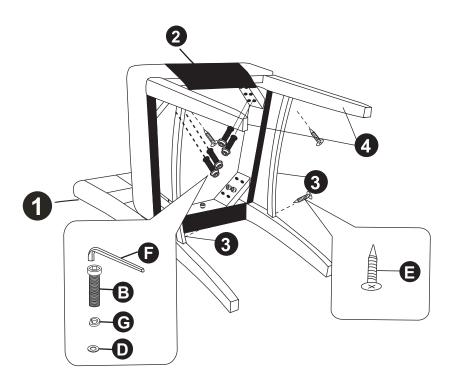

Insert Front Legs (4) into Seat Cushion (2) slots.

Align the Stretcher (3) into Chair Back (1) and Front Leg (4).


Attach Front Legs (4) using Allen Key Screws (B) and four Washers each of (D) and (G).

Use Allen Key (F) to tighten. Do not over-tighten.

Attach Stretcher (3) using Allen Key Screws (E) to Front Leg (4) and Chair Back leg (1).


Use Allen Key (F) to tighten. Do not over-tighten.

STEP 4

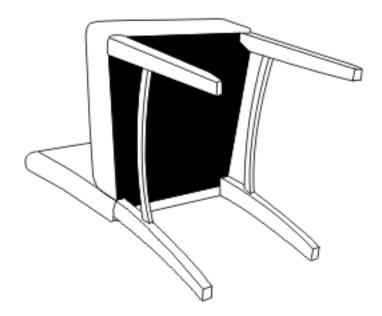

Use the zipper to close the fabric on the bottom of the Chair.

STEP 5

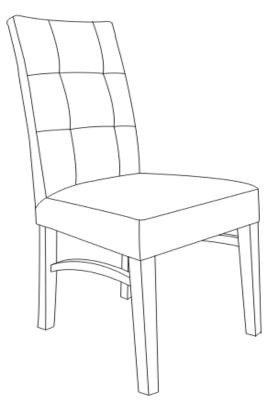

Turn Chair right side up.





Wynden Hal HOME DECC brooklyn + max

WARRANTY

Thank you for purchasing a Simpli Home – Wyndenhall – Brooklyn + Max product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at simpli-home.com/customer-support.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.





brooklyn + max™

Questions, problems, missing parts?

Before returning your product

please email Customer Support at <u>simpli-home.com/customer-support</u>

or call

Customer Support at 1-866-518 - 0120 ext. 262 Monday to Friday between 9 am – 4 pm EST

For more information visit us on our website <u>www.simpli-home.com</u>

Like us on facebook <u>www.facebook.com/simplihomefurnishings</u>