
INSTRUCTION MANUAL

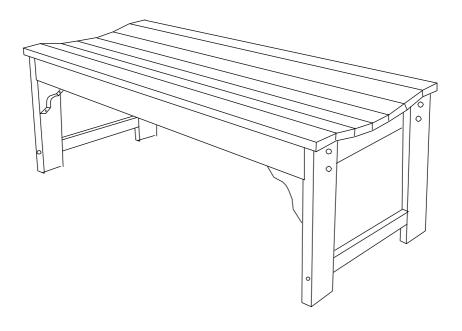

Laguna Poly Garden 48" Backless Bench SKU: OP2001-BN


(!) NOTICE

Do not overtighten screws. (Insert all screws before tighten screws.)


- · Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- · Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- · Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- · Be aware that some parts are heavy and have sharp edges.

ALLEN WRENCH (PROVIDED) WRENCH (PROVIDED) WRENCH (PROVIDED) BENCH 1 PERSON UP TO 30 MIN. ASSEMBLY ASSEMBLY CAPACITY


HARDWARE

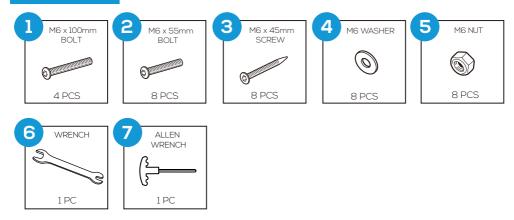


PARTS

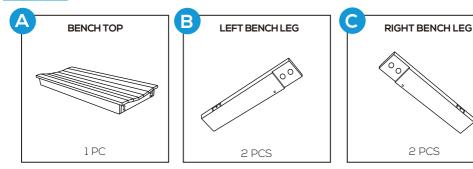

PARTS

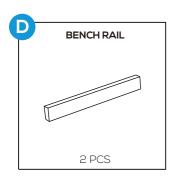

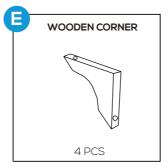


PRODUCT ASSEMBLY

1


Attach part D Bench Rail to part B Left Bench leg and part C Right Bench Leg with 2 PCS of hardware 1 Bolt.

Do the same to another Bench Rail and the other two Legs.


Do not tighten bolts too much at this stage.

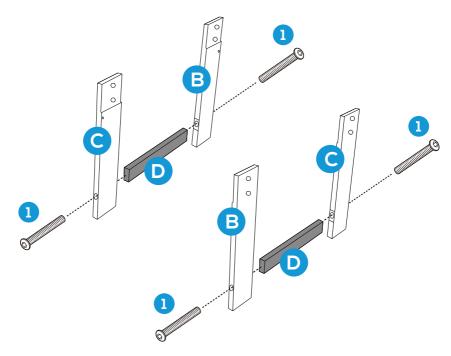

PRODUCT ASSEMBLY

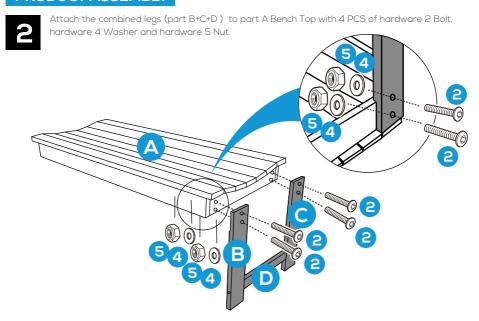


Attach another combined legs (part B+C+D) to part A Bench Top with 4 PCS of hardware 2 Bolt, hardware 4 Washer and hardware 5 Nut.

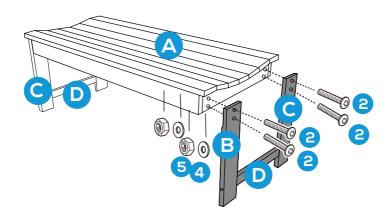

PRODUCT ASSEMBLY



Fix 4 PCS of part E wooden corners to the combined legs (part B+C+D) and the rail of part A Bench Top with 8 PCS of hardware 3 Screw as below.

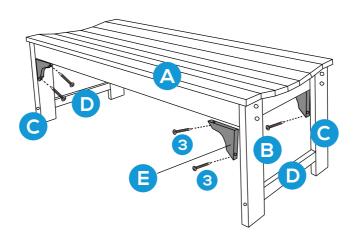

5

Tighten all the bolts and nuts again for your secure usage. Avoid over tightening, doing as can cause damage to the product.

Thanks for purchasing this bench, enjoy it.

