


Corner Entertainment

IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

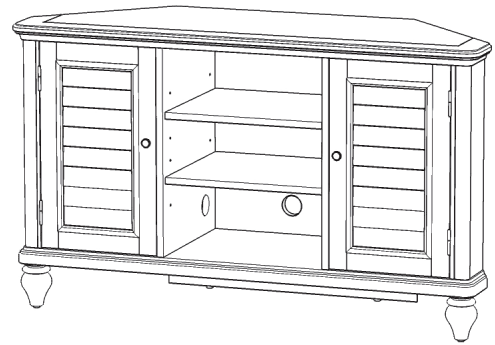


Part List



C.
Foot
2 pcs.



 D.
Shelf
4 pcs.




E.
Shelf
2 pcs.




F.
Side Panel
1 pc.



 
G.
Side Panel
1 pc.



 
H.
Middle Panel
1 pc.



 
I.
Middle Panel
1 pc.



 
J.
Back Panel
1 pc.




K.
Back Panel
1 pc.

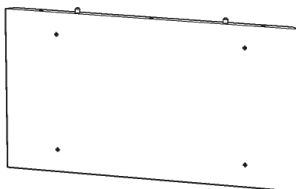


L.
Back Panel
1 pc.

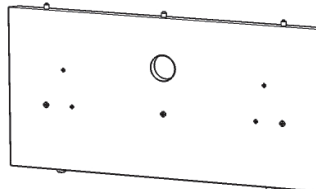

M.
Back Panel
1 pc.

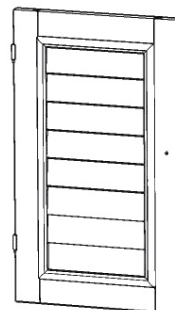

N.
Door
1 pc.

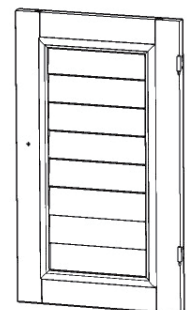

O.
Door
1 pc.

For assembly see instructions in carton 20 05503 0071.