


# SHIMANO

*Metanium* S A-RB

ME-151

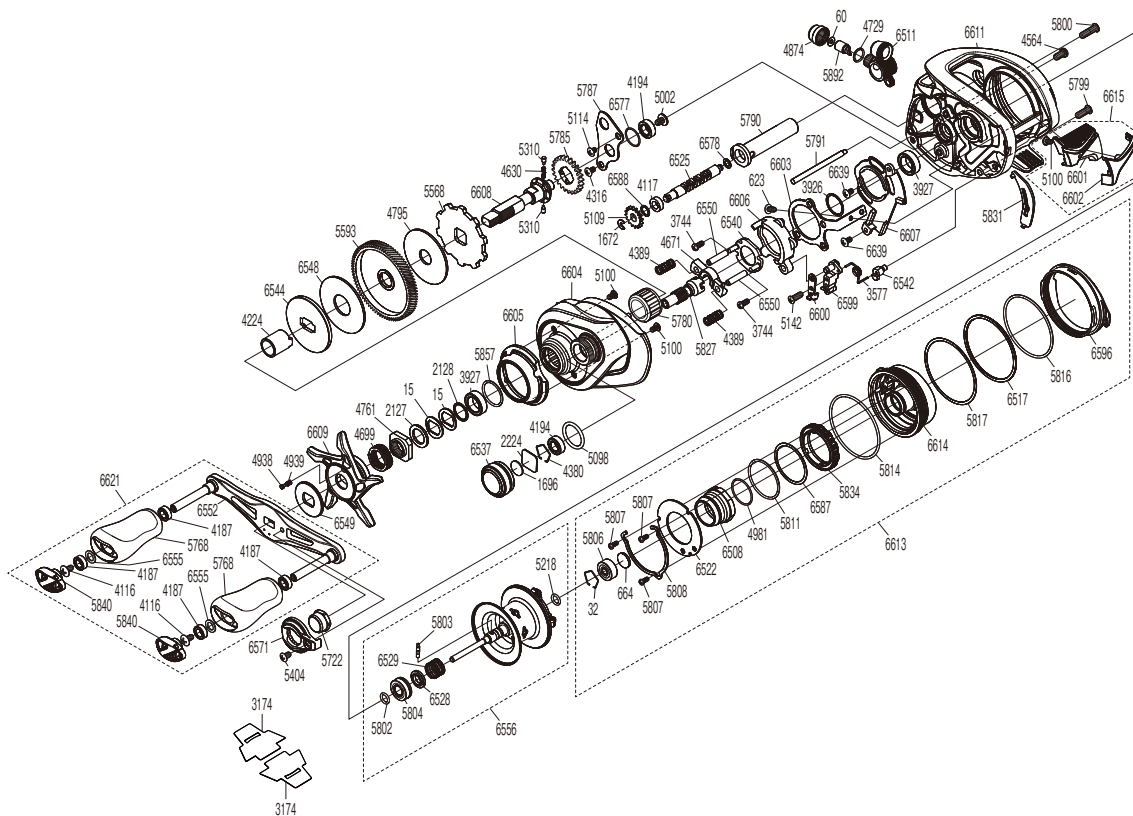

The (5804) Bearing, (5803) Spool clutch pin, and (5780) Roller clutch cannot be replaced by the customer.  
To replace these parts, please request after-sales service.

Please note that the number of adjusting washers may not be the same as shown in the exploded views.  
(Adjustment will vary with each individual product.)

(51RL280151X)

| Part No. | Description              | Part No. | Description                     | Part No. | Description                  |
|----------|--------------------------|----------|---------------------------------|----------|------------------------------|
| BNT0015  | Drag Spring Washer       | BNT5142  | Screw                           | BNT6537  | Cast Control Cap             |
| BNT0032  | Bearing Retainer         | BNT5218  | O Ring                          | BNT6540  | Clutch Cam Retainer          |
| BNT0060  | Spacer                   | BNT5310  | Idle Gear Pin                   | BNT6542  | Clutch Spring Holder         |
| BNT0623  | Screw                    | BNT5404  | Screw                           | BNT6544  | Pressure Plate               |
| BNT0664  | Spacer B                 | BNT5568  | Anti-Reverse Ratchet            | BNT6548  | Drag Washer                  |
| BNT1672  | E Lock                   | BNT5593  | Drive Gear                      | BNT6549  | Star Drag Click Plate        |
| BNT1696  | Cast Control Spacer      | BNT5722  | Handle Nut                      | BNT6550  | Clutch Cam Retainer Cover    |
| BNT2127  | Star Drag Spacer         | BNT5768  | Handle Knob                     | BNT6552  | Handle Shank Assembly        |
| BNT2128  | Bearing Washer           | BNT5780  | Roller Clutch Bearing           | BNT6555  | Washer                       |
| BNT2224  | Spool Tension Spacer     | BNT5785  | Idle Gear                       | BNT6556  | Spool Assembly(With Bearing) |
| BNT3577  | Clutch Pawl Spring       | BNT5787  | Drive Shaft Retainer            | BNT6571  | Handle Nut Plate             |
| BNT3744  | Screw                    | BNT5790  | Level Wind Guard                | BNT6577  | O Ring                       |
| BNT3926  | Washer                   | BNT5791  | Level Wind Guide                | BNT6578  | Washer                       |
| BNT3927  | Ball Bearing             | BNT5799  | Screw                           | BNT6587  | Washer                       |
| BNT4116  | Screw                    | BNT5800  | Screw                           | BNT6588  | Washer                       |
| BNT4117  | Bushing                  | BNT5802  | O Ring                          | BNT6596  | Right Side Plate Cam Lever   |
| BNT4187  | Ball Bearing             | BNT5803  | Spool Clutch Pin                | BNT6599  | Clutch Pawl A                |
| BNT4194  | Ball Bearing             | BNT5804  | Ball Bearing                    | BNT6600  | Clutch Pawl B                |
| BNT4224  | Roller Clutch Inner Tube | BNT5806  | Ball Bearing                    | BNT6601  | Clutch Button                |
| BNT4316  | Screw                    | BNT5807  | Screw                           | BNT6602  | Clutch Button Cover          |
| BNT4380  | Retainer                 | BNT5808  | Cam Lever Retainer              | BNT6603  | Clutch Plate                 |
| BNT4389  | Yoke Spring              | BNT5811  | O Ring                          | BNT6604  | Left Side Plate              |
| BNT4564  | Screw                    | BNT5814  | O Ring                          | BNT6605  | Clutch Button Attachment     |
| BNT4630  | Idle Gear Spring         | BNT5816  | O Ring                          | BNT6606  | Clutch Cam                   |
| BNT4671  | Yoke                     | BNT5817  | Washer                          | BNT6607  | Clutch Guard                 |
| BNT4699  | Star Drag Spring         | BNT5827  | Pinion Gear                     | BNT6608  | Drive Shaft                  |
| BNT4729  | O Ring                   | BNT5831  | Clutch Bar Guide B              | BNT6609  | Star Drag                    |
| BNT4761  | Star Drag Nut            | BNT5834  | Br Dial                         | BNT6611  | Frame Assembly               |
| BNT4795  | Drag Washer              | BNT5840  | Handle Knob Seal                | BNT6613  | Right Side Plate Assembly    |
| BNT4874  | Pawl Cap                 | BNT5857  | O Ring                          | BNT6614  | Dial Case Assembly           |
| BNT4938  | Click Pin                | BNT5892  | Line Guide Pawl                 | BNT6615  | Clutch Button Assembly       |
| BNT4939  | Click Spring             | BNT6508  | Brake Pipe Gear Assembly        | BNT6621  | Handle Assembly              |
| BNT4981  | O Ring                   | BNT6511  | Line Guide Pawl Holder Assembly | BNT6639  | Screw                        |
| BNT5002  | Screw                    | BNT6517  | Washer                          |          |                              |
| BNT5098  | O Ring                   | BNT6522  | Br Dial Retainer Plate          |          |                              |
| BNT5100  | Screw                    | BNT6525  | Worm Shaft                      | BNT3174  | Reel Seat Spacer (accessory) |
| BNT5109  | Idle Gear                | BNT6528  | Bushing                         |          |                              |
| BNT5114  | Screw                    | BNT6529  | Bearing Pressure Spring         | BNT4692  | B-100 Oil (accessory)        |