



# OPERATION INSTRUCTIONS

## FOOD WARMER WITH DRAIN

### MODEL: GFW-100D

#### Specification

Capacity:	25Qt/24L
Voltage:	110V/60Hz AC / 220V/50-60Hz AC
Power:	1200W
Weight:	17.2Lb/7.8Kg

#### Operating and Maintenance:

- \* Plug unit into correct electrical socket.
- \* Use with WET HEAT ONLY. Add water in the stainless steel container. Never overfill with water. Remove any excess water immediately.
- \* The temperature control should be set between 1 and 3 and always be set to the lowest setting to maintain the correct serving temperature. Hold at high temperature by setting the control between 3 and 5.
- \* A neon light will glow when the unit is turned on. Turn the dial to 0 to switch off.  
Unplug from the wall socket when not in use.
- \* Never move or carry the appliance when unit is switched on, or when containing hot soup or food.
- \* Spilled soup or food should be removed immediately from all exterior surfaces. The stainless steel should be wiped with a damp soapy cloth.
- \* Ensure unit is unplugged when not in use, when filling and when being cleaned.
- \* The appliance can not be cleaned with a high pressure jet.

**IMPORTANT: NEVER IMMERSE KETTLE IN WATER OR OTHER LIQUID AS DAMAGE TO THE UNIT WILL RESULT AND ALL WARRANTIES WILL BE VOIDED.**

**WARNING: THIS APPLIANCE MUST BE GROUNDED.**

**WARNING: DO NOT OPERATE KETTLE EMPTY.**

#### General Foodservice

Weston, FL 33331, U.S.A. - Phone:(954) 202-7419 · Fax:(954) 202-7337 - [www.generalfoodservice.com](http://www.generalfoodservice.com)